 


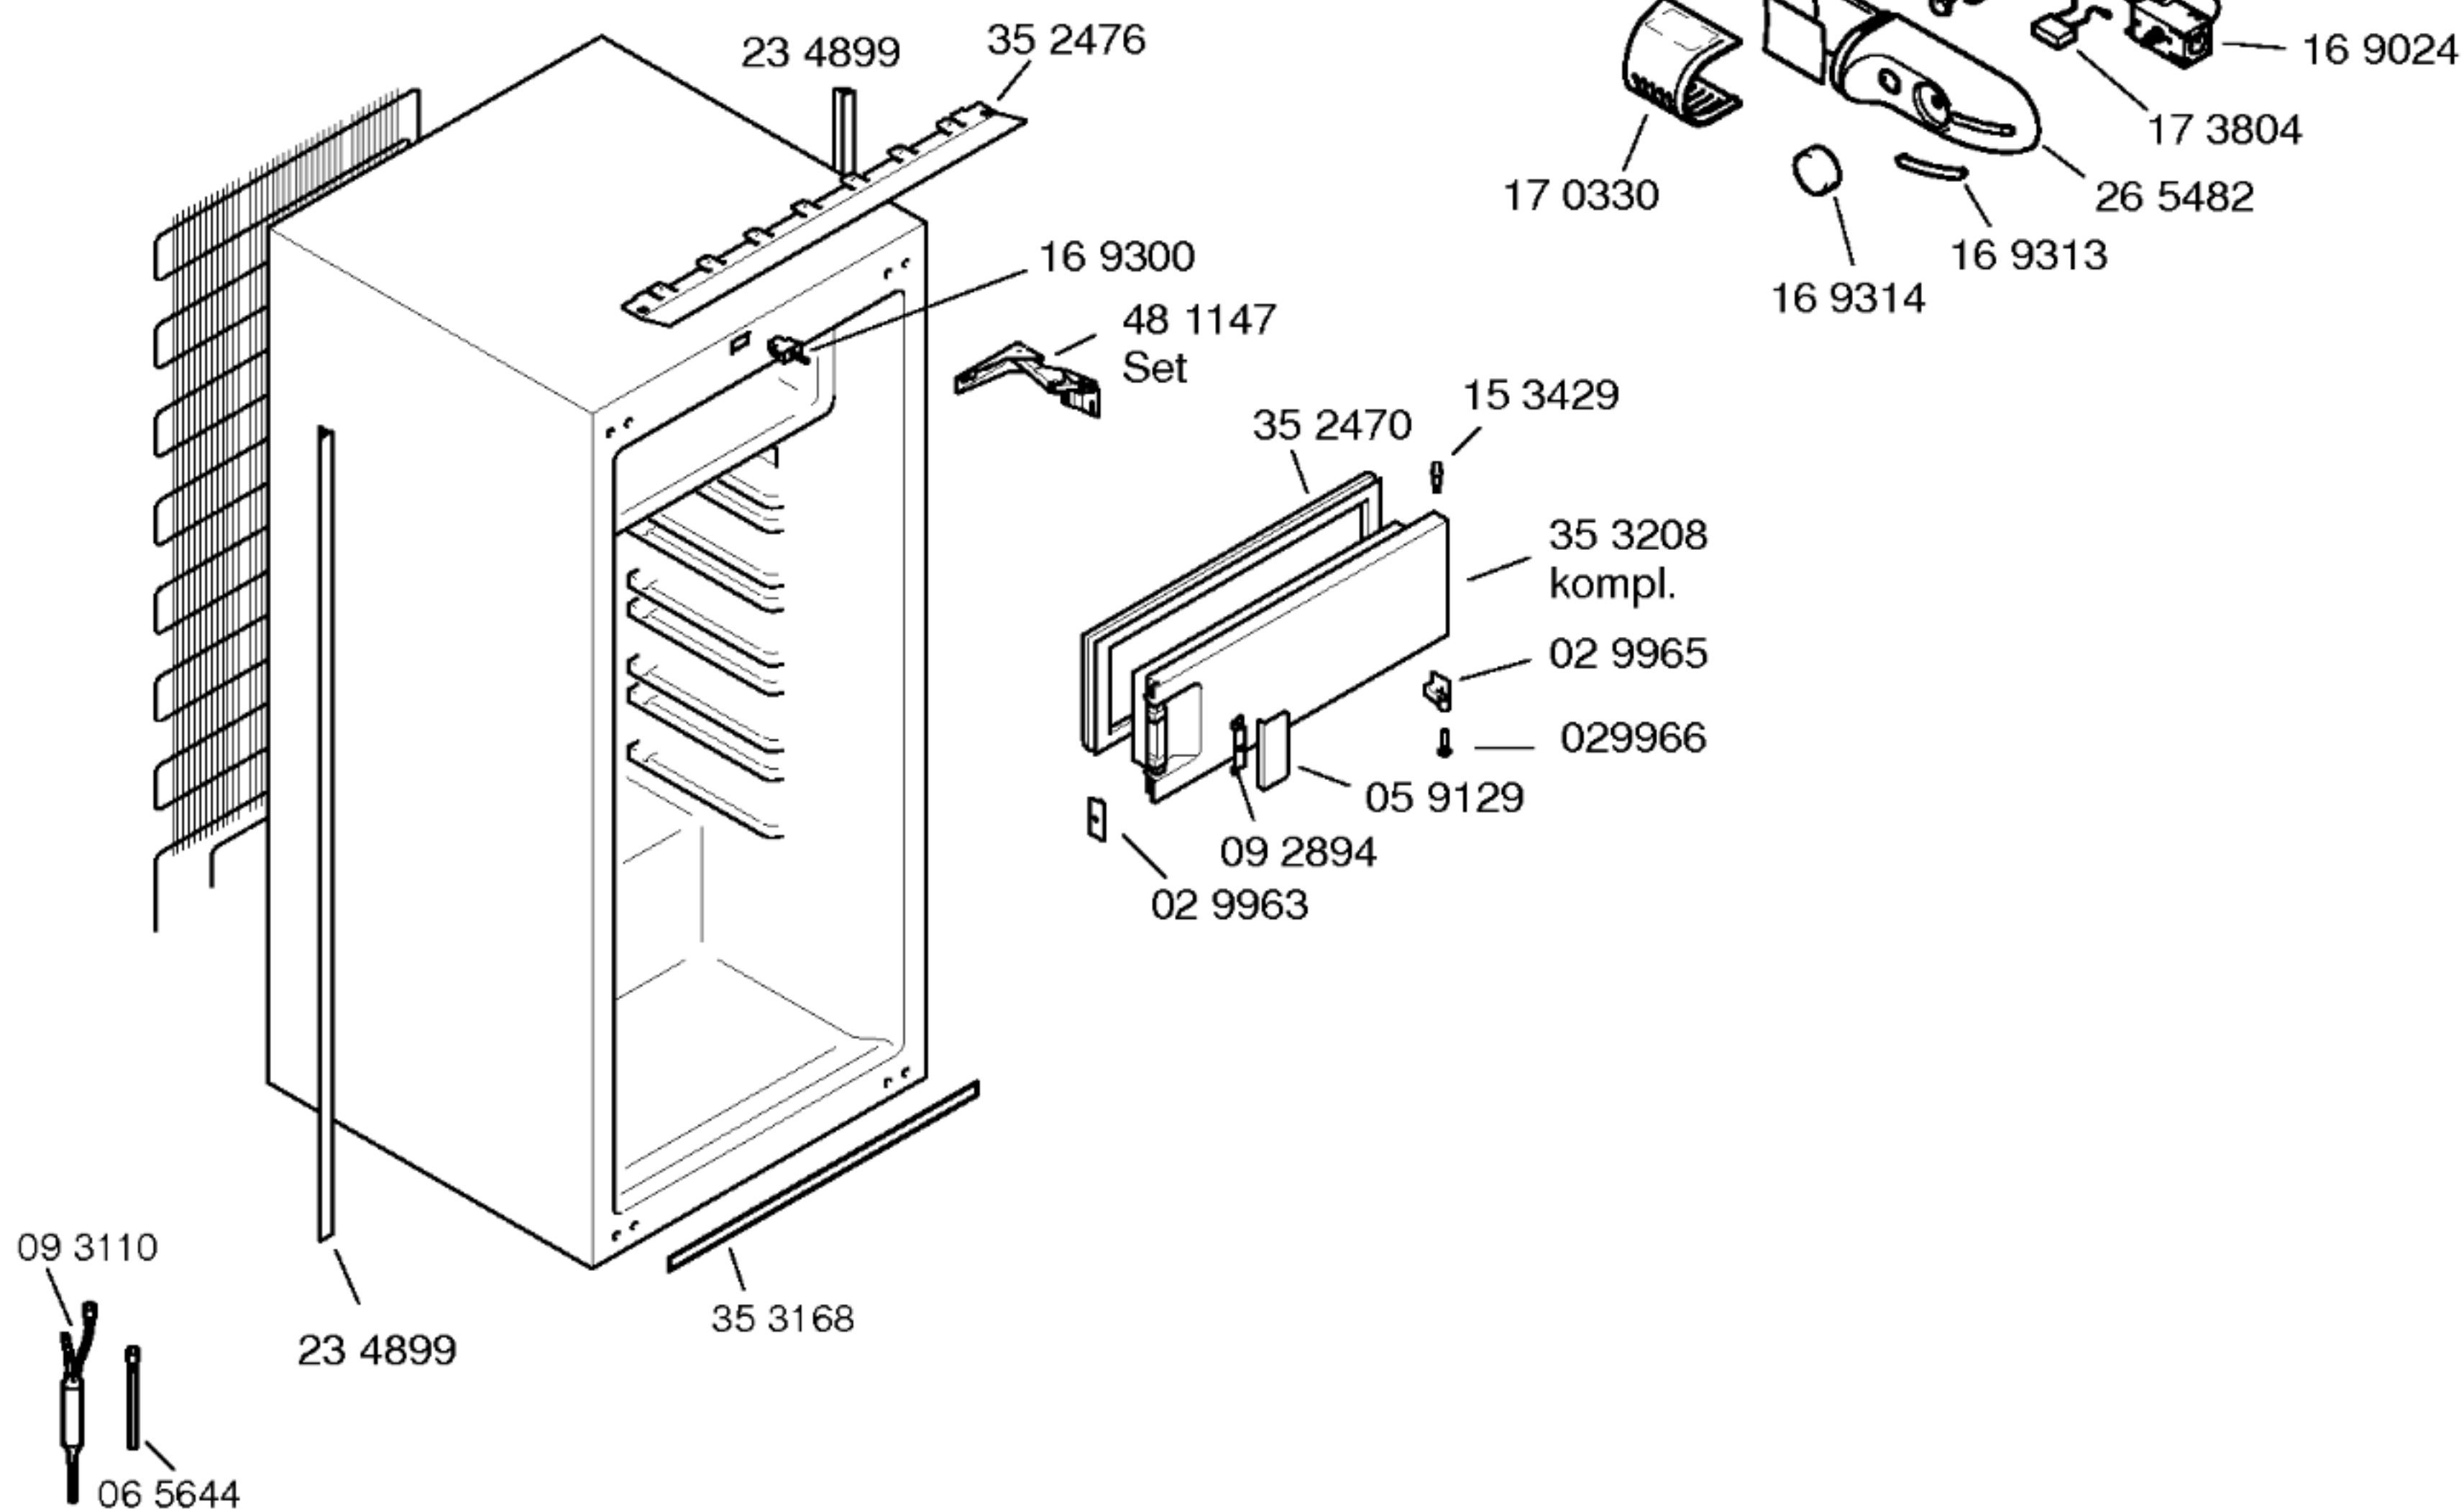


07 4445



Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
52 2548
(de,en,fr,it,nl)

Montageanleitung
52 2494

  Beistellsatz
26 5163

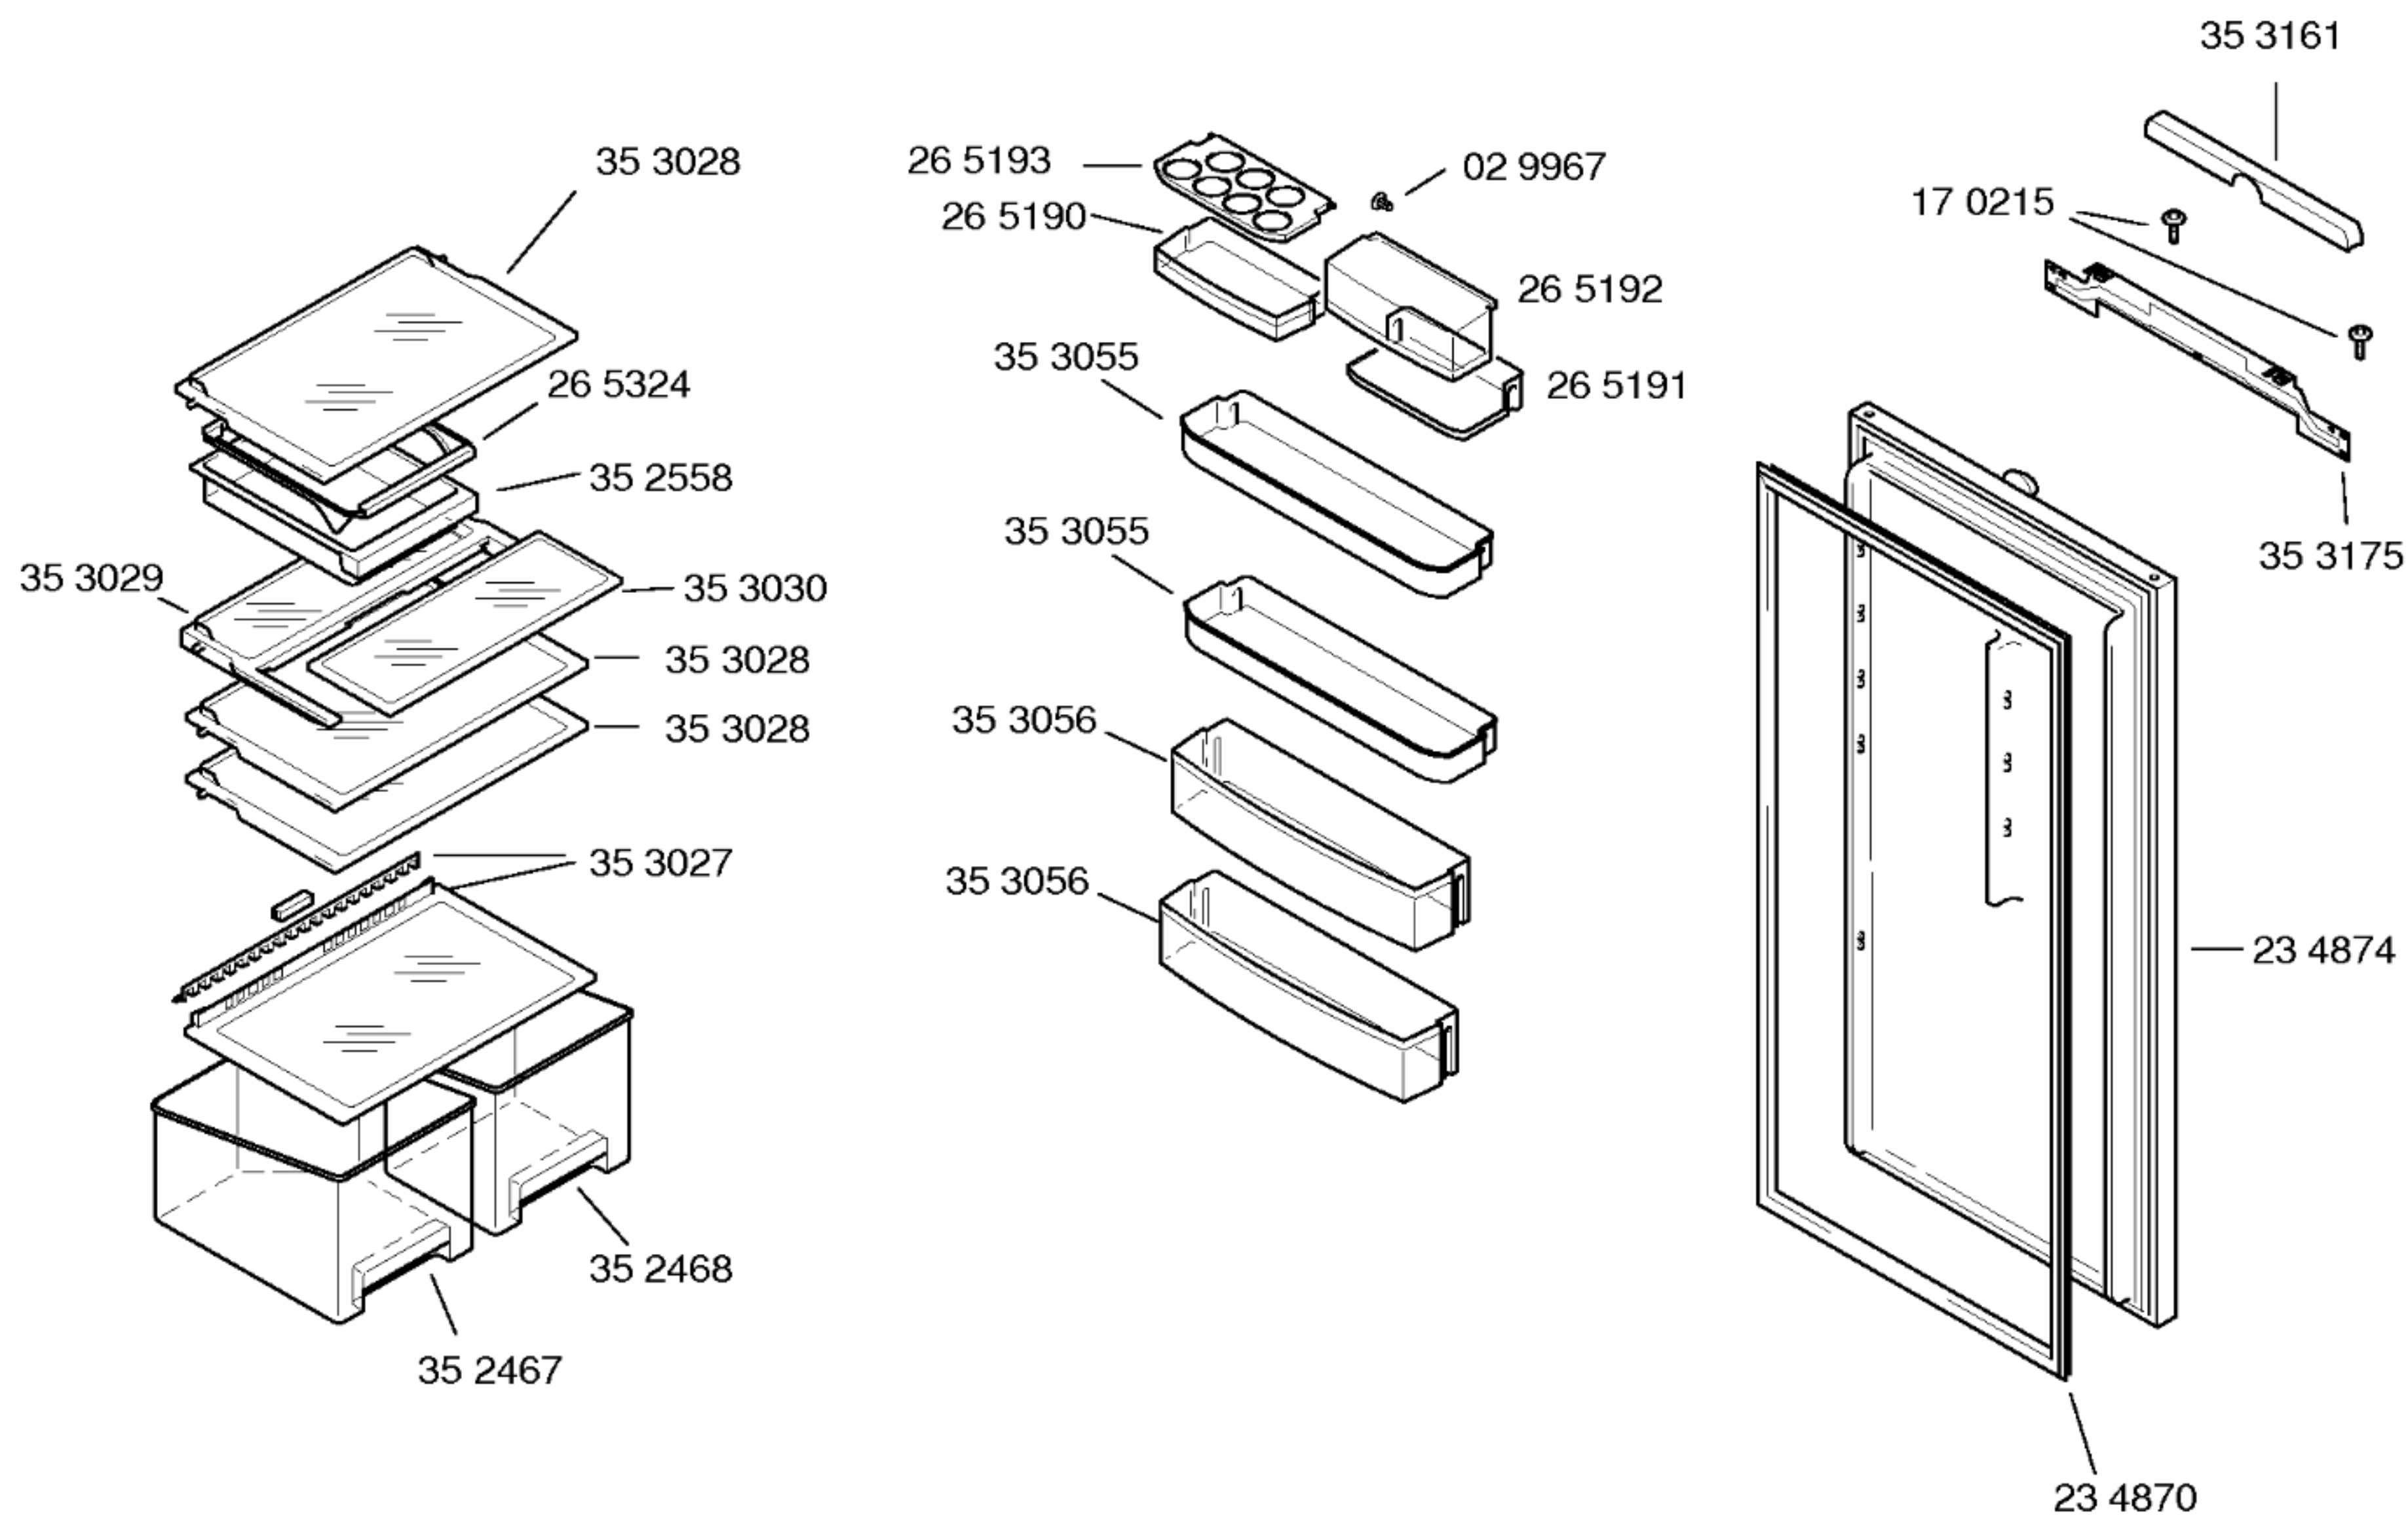

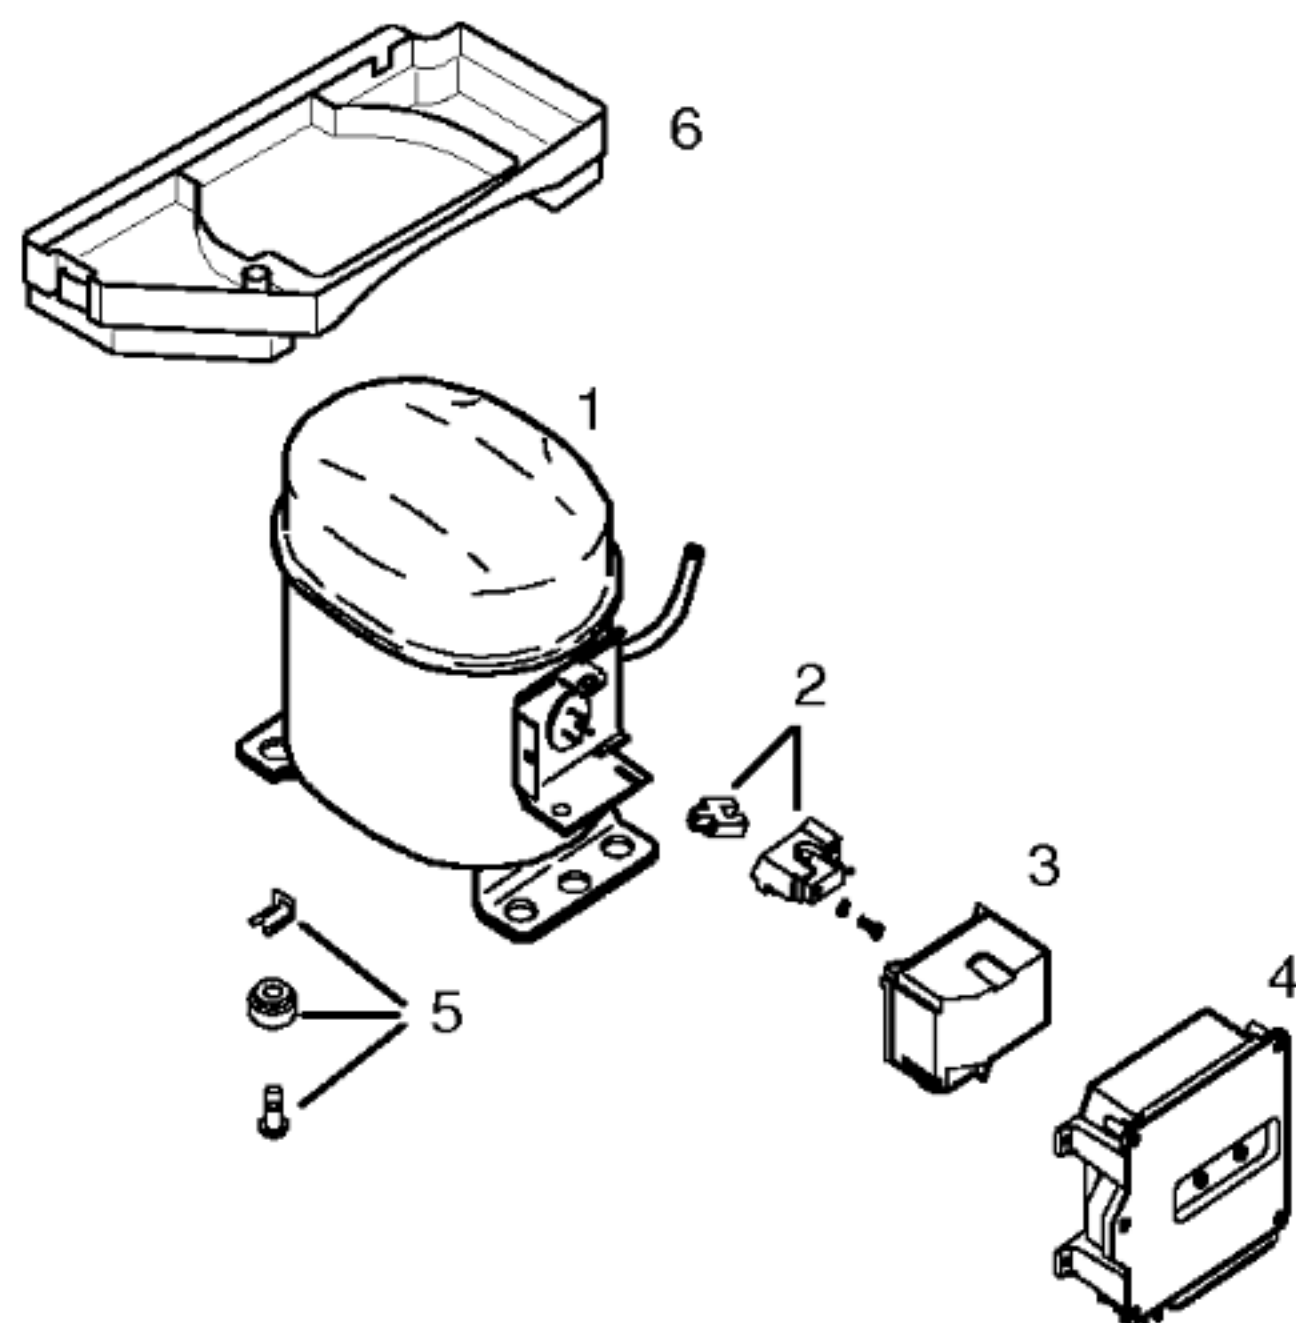

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit Anlaufstrom/Starting current/Cour de démarrage Widerstand/Resistance/Résistance	Zanussi HQT 90RSA l/h A Ha/main/prin. Hi/aux	Ω	
Temp.-Regler/Thermostat Typ/Type Reglerstellung/Position Schaltwerte/Switching values/ Valeurs de commutation („abtauen“ od.)	„ein“ „aus“ „alarm“	$^{\circ}\text{C}$	
Füllmenge/Fill.quantity/Charge	R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée		W	
Heizung/Heater/Chauffage Widerstand/Resistance/Résistance Leistung/Power/Puissance		Ω W	
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance		Ω	
Schaltuhr/Timer/Minuterie de contact Widerstand/Resistance/Résistance		Ω	
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Spannung/Voltage/Tension		Ω V	

* siehe Typenschild

	V01		
	Zanussi		
Pos.	HQT 90RSA		
1	14 2359		
2	17 5277		
3	17 5276		
4	48 4032		
5	05 0166		
6	36 5099		
7			
8			
9			
10			
11			
12			