



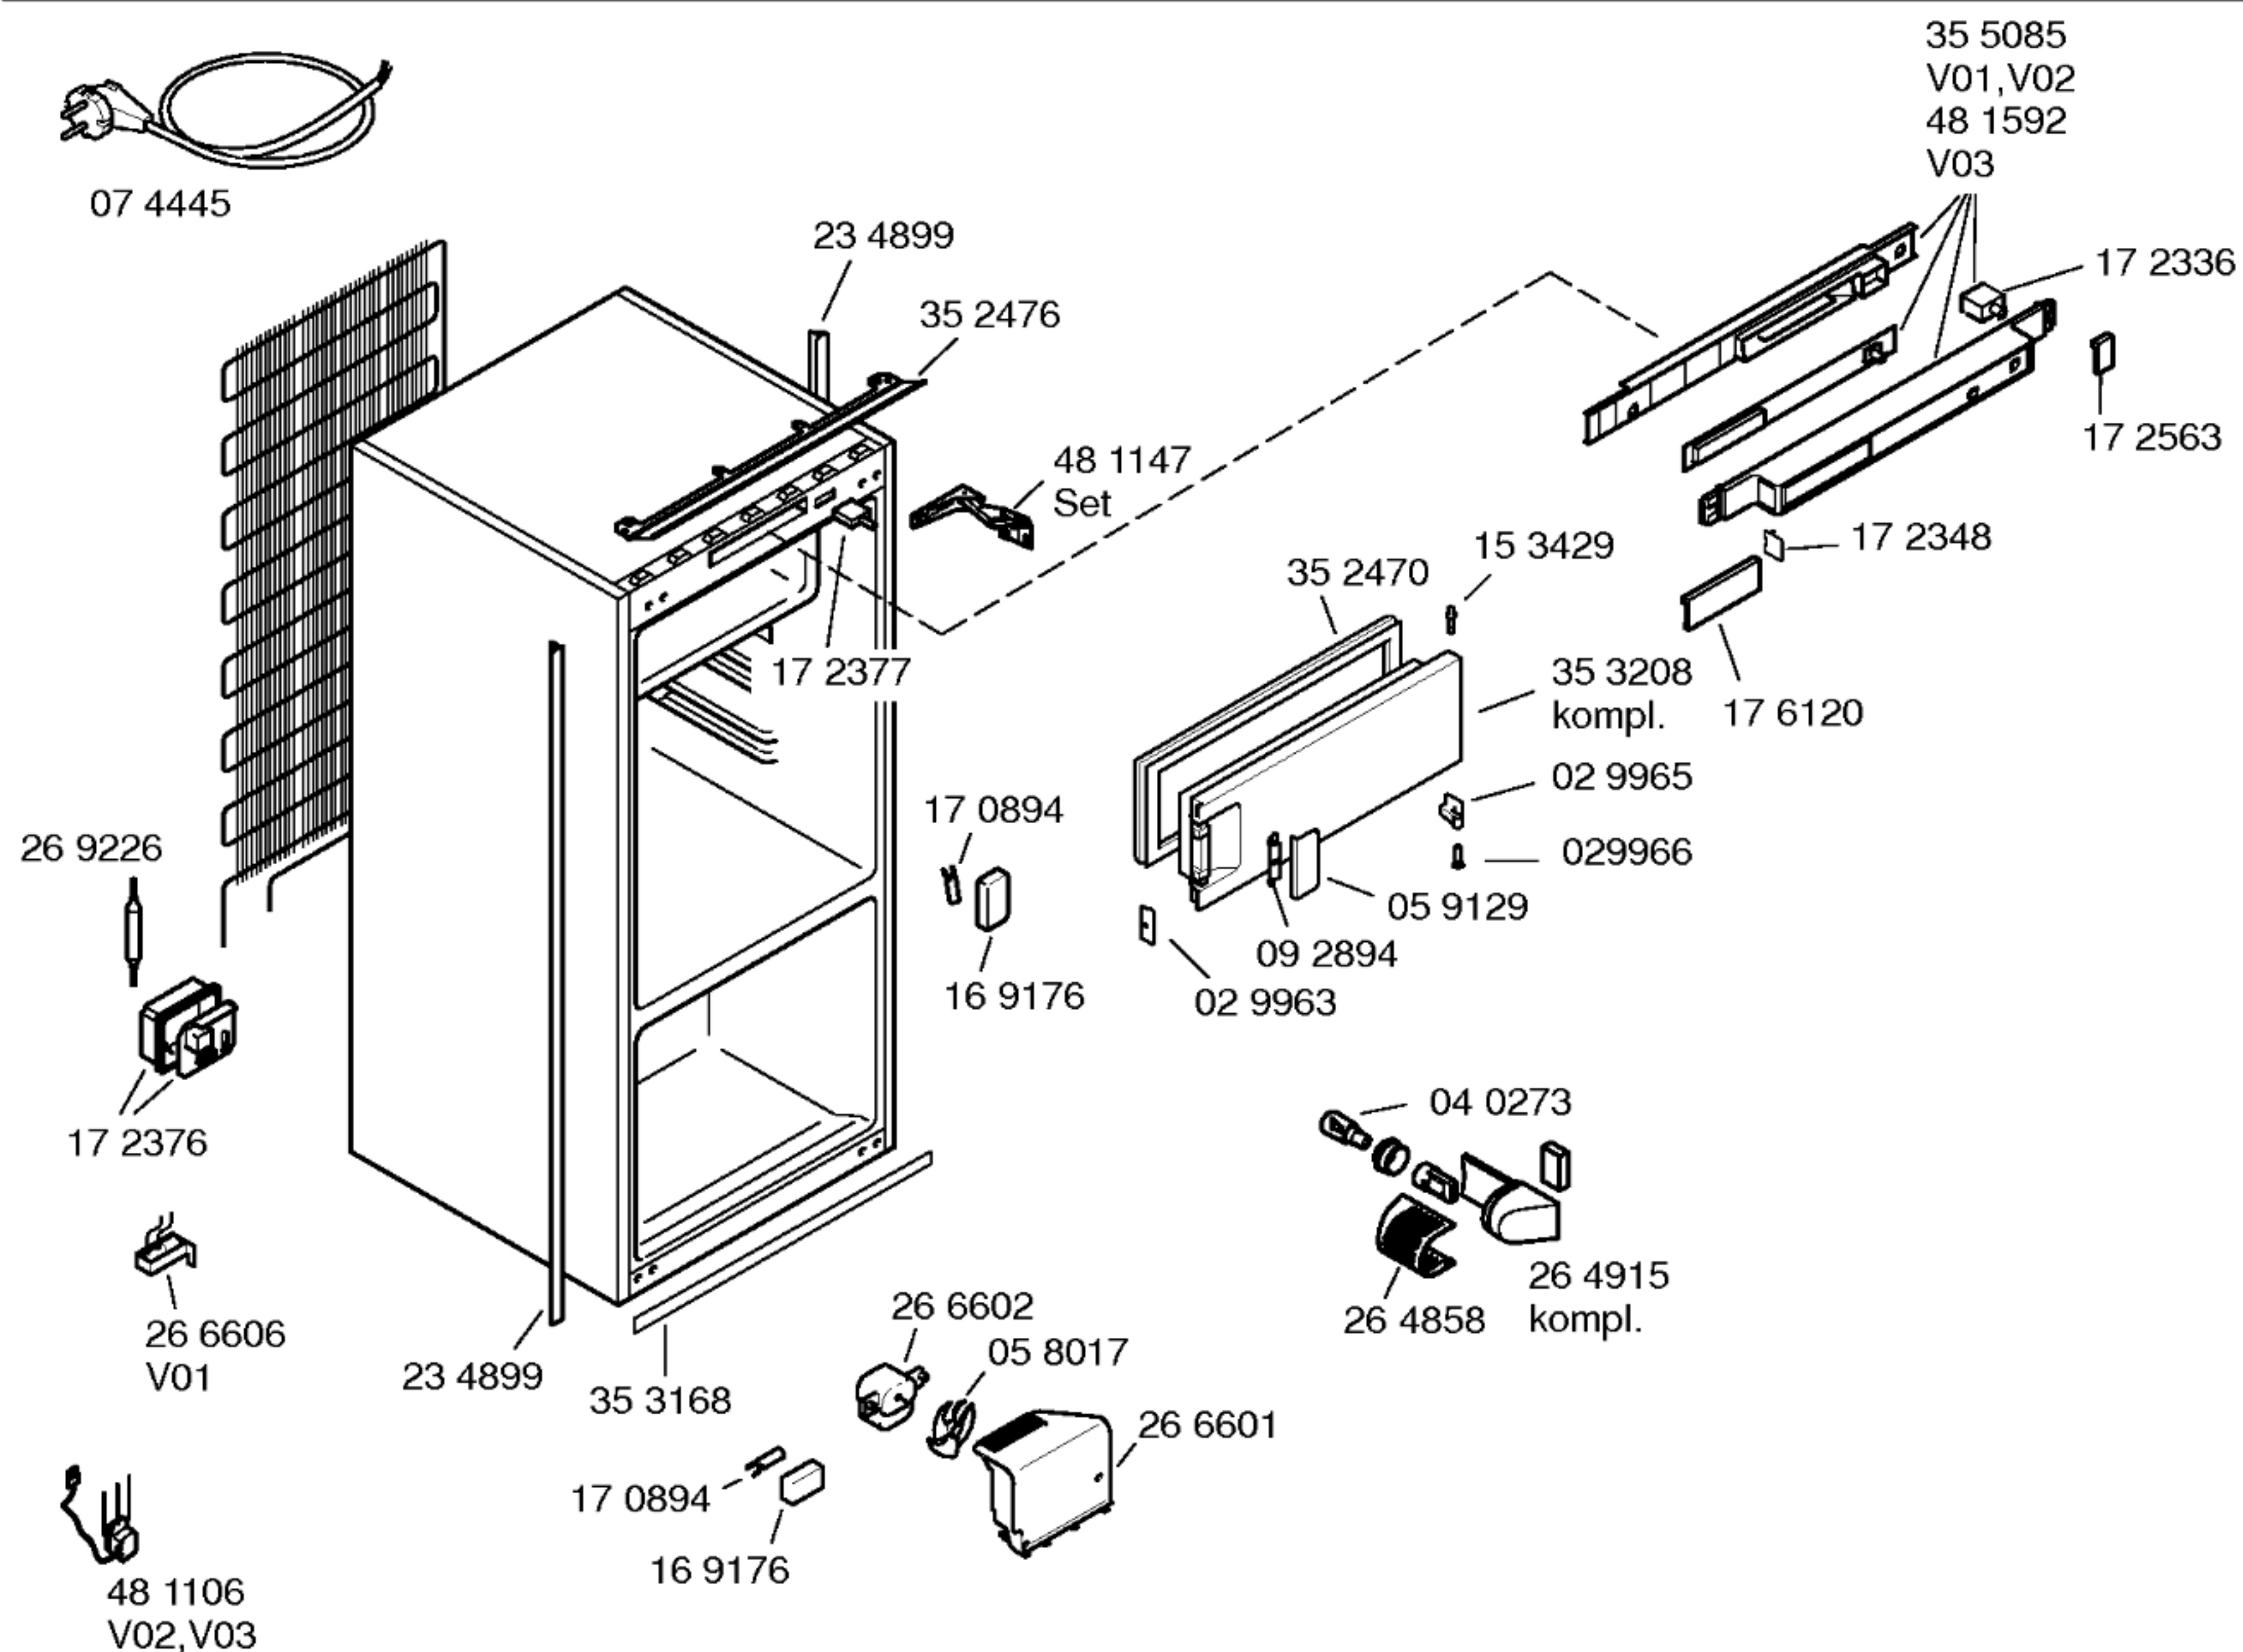


Gebrauchsanweisung
52 3544

Montageanleitung
52 2494

Beistellsatz
26 5163

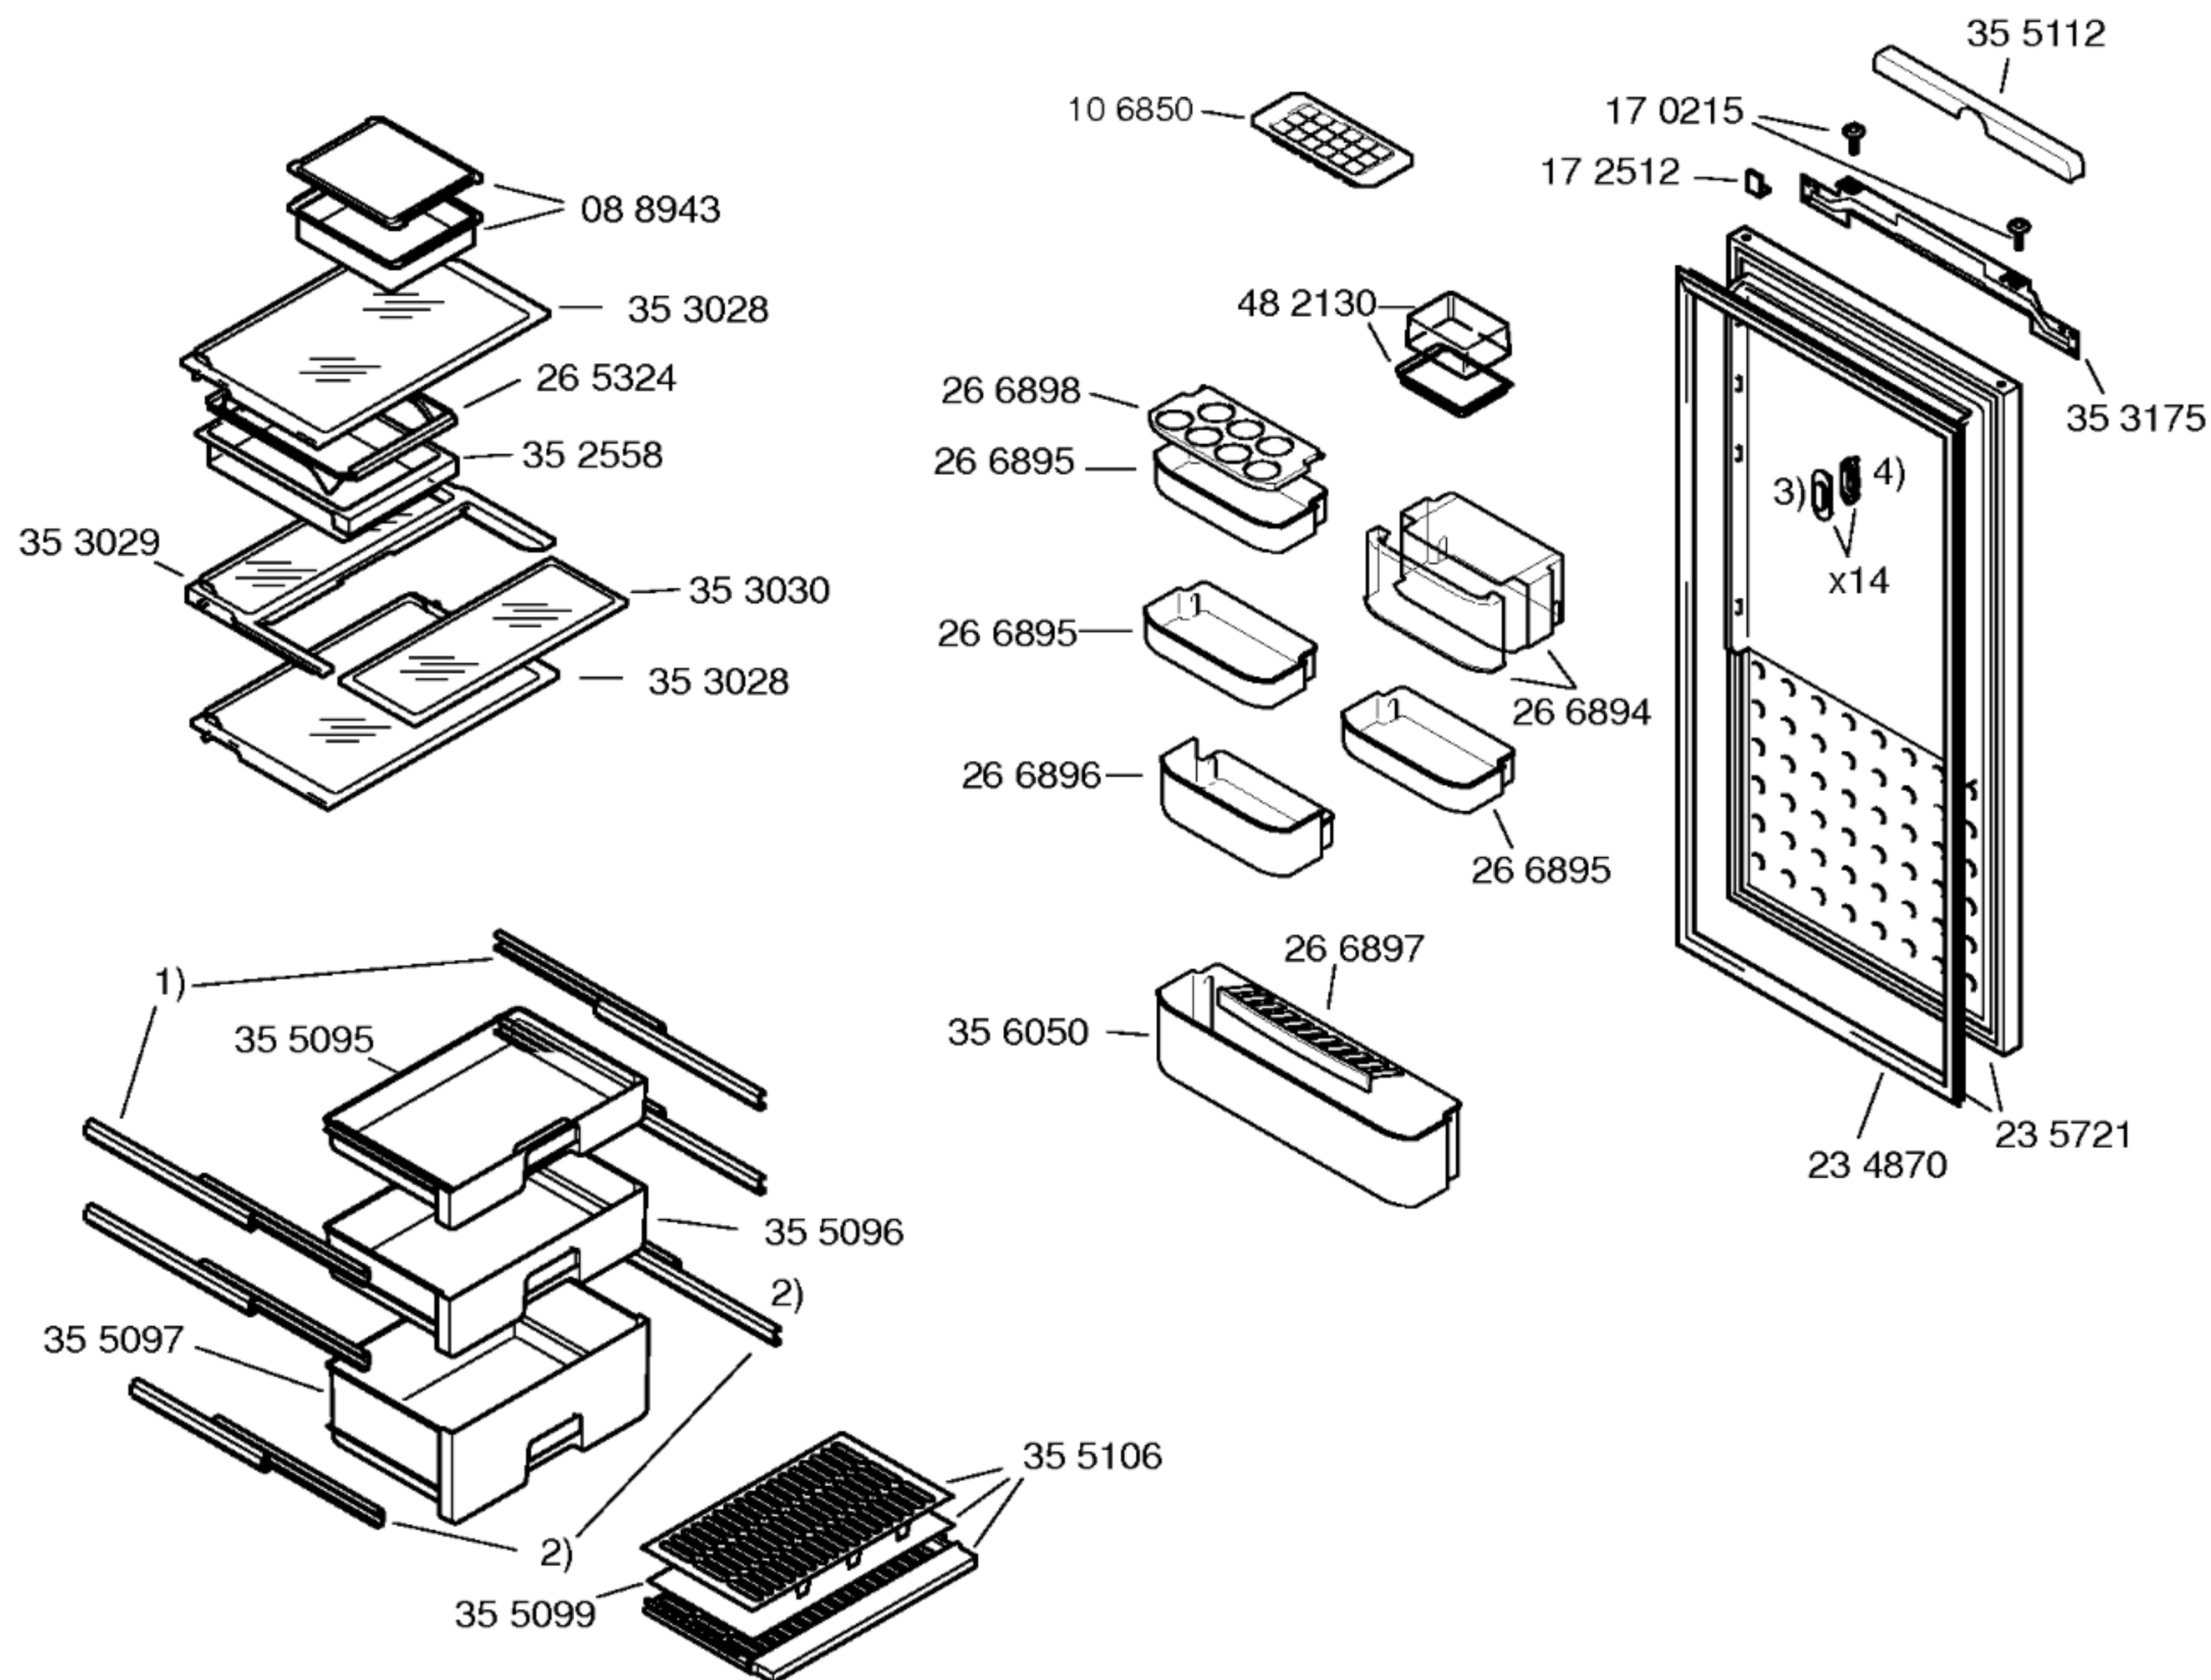

- 1) 35 5088
- 2) 35 5090
- 3) 17 3039
- 4) 17 3038

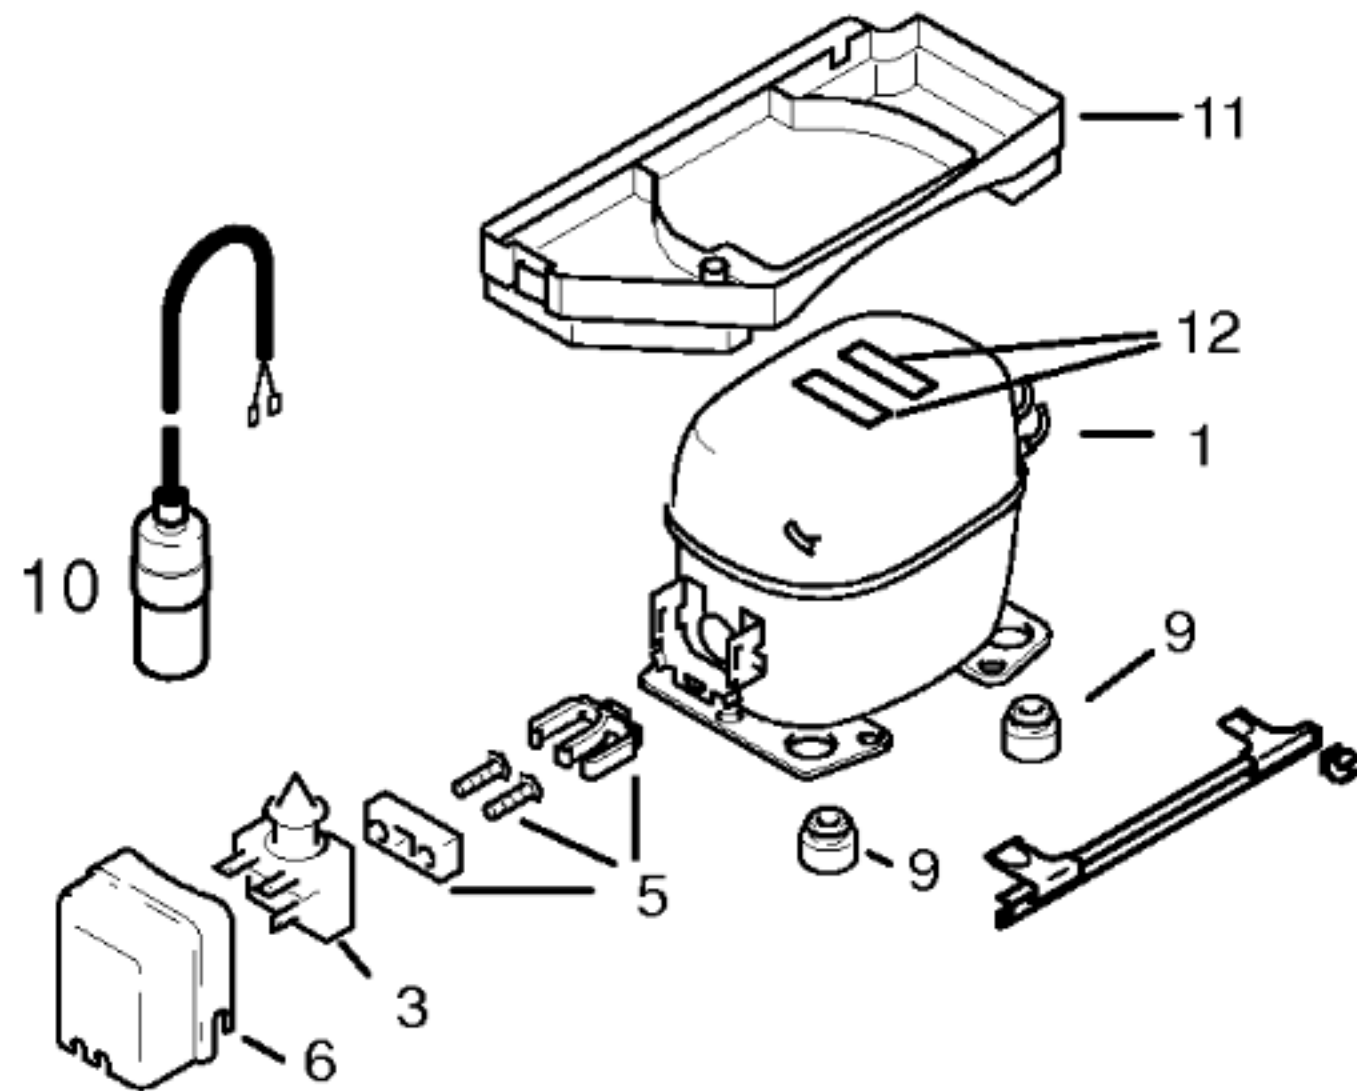

Pos.	Danfoss		
	TLY 8 K		
1	14 1881		
2			
3	15 1055		
4	15 1053		
5	15 0760		
6	15 1072		
7	16 9319		
8	26 4879		
9	05 0166		
10	16 5852		
11	26 4878		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLY 8 K		
Förderleistung/Delivery/Débit		l/h	1404	
Anlaufstrom/Starting current/Cour de démarrage		A	6,4	
Widerstand/Resistance/Résistance Ha/main/prin		W	21,6	
Hi/aux		W	26,0	
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	90	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		W		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		W		
NTC-Fühler / Sensor		°C	kW	°C kW
		+10	9,95 □ 0,18	-18 43,31 □ 1,10
		+5	12,70 □ 0,18	-22 54,66 □ 1,59
		0	16,33 □ 0,16	-26 69,42 □ 2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		W		
Spannung/Voltage/Tension		V		

* siehe Typenschild