



07 4445
V01
09 6572
V02
09 6325
V03

21 0238
kompl.

02 9973

16 3106

05 8876

03 1243

15 3464

09 6270

03 1245

03 1246

15 1885

15 3459

34 1534

1) - 3

23 4448

02 6826

27 1931

15 2784

03 1240

10 3102

27 1334

03 1239

05 6866

09 3110

23 3072

06 5644

15 4364
15 4366

02 9968

28 9651

15 4365

21 4086

15 0719

21 0197

05 6874

29 0372

35 5794
V01-V03


35 5795
V01-V03

16 2661
Sicherung 13A
V06

Gebrauchsanweisung
51 7998
(D,GB,F,I,NL,SF)

Montageanweisung
26 1542
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

1) 01 9829

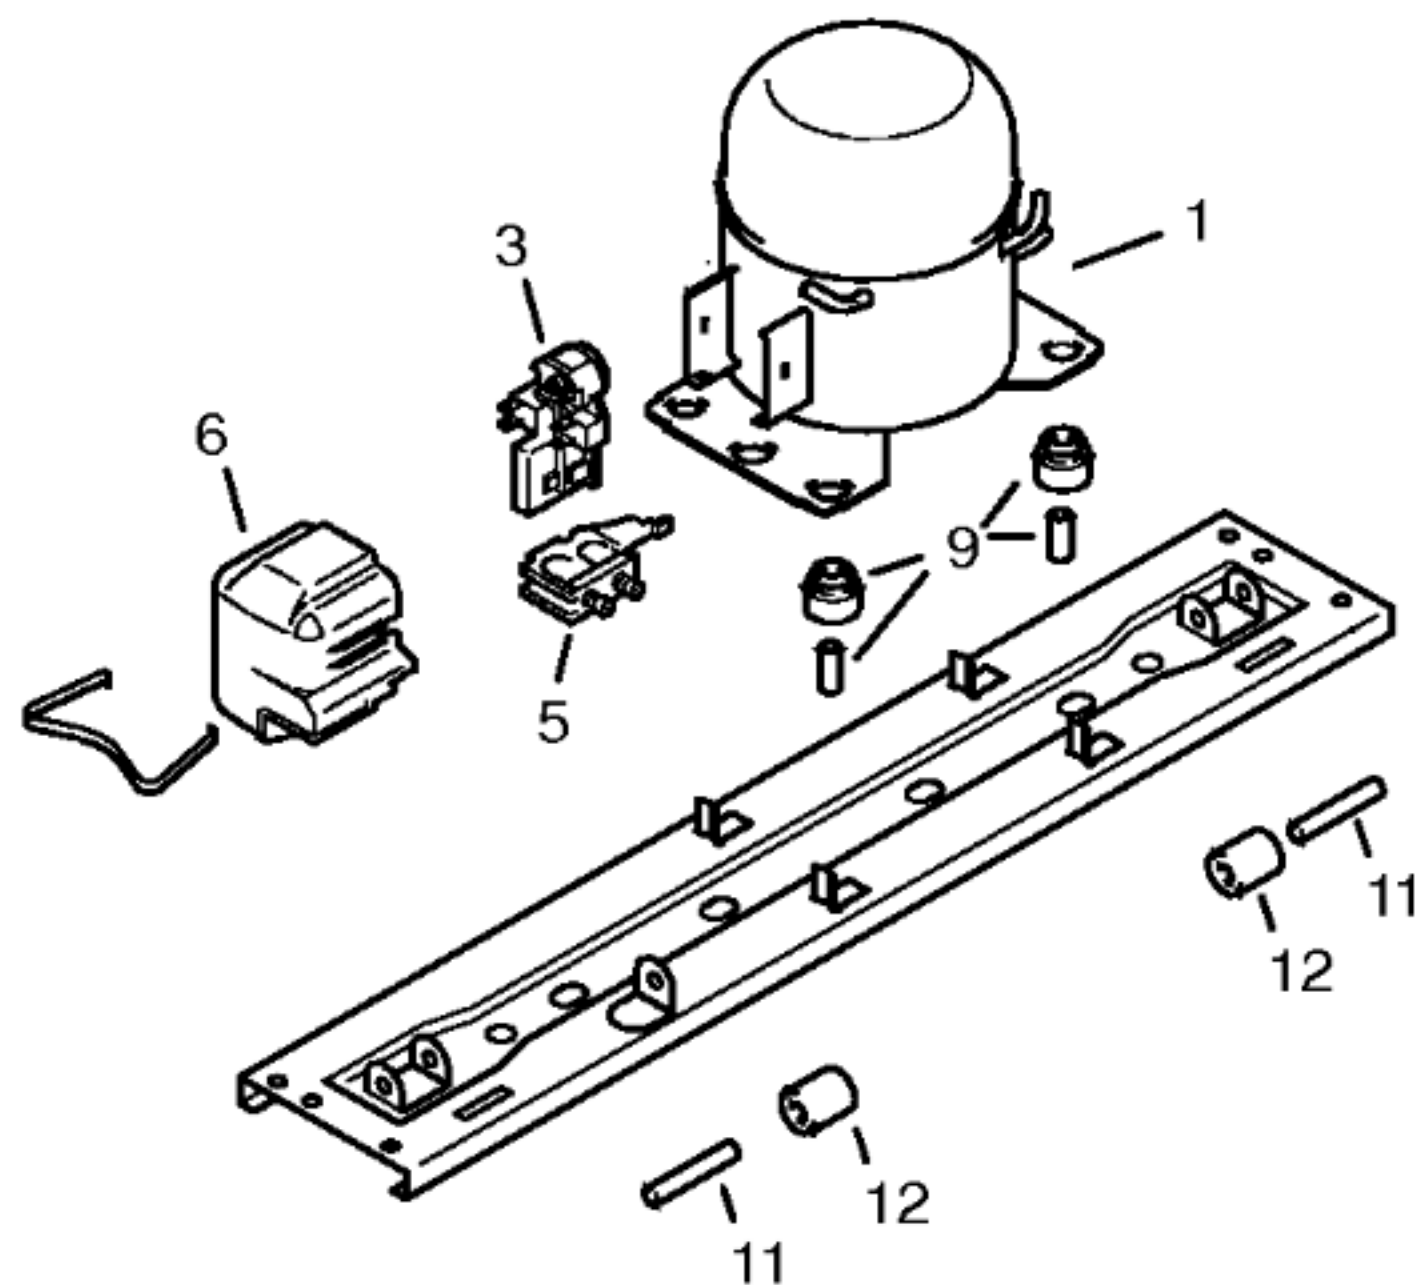

Pos.	V01–V03		
	Goldstar		
	ND69NAEM		
1	14 1999		
2			
3	17 0743		
4	17 0746		
5	17 0745		
6	17 0744		
7			
8	27 0833		
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Goldstar			
Typ/Type		ND69NAEM			
Förderleistung/Delivery/Débit		l/h	1242		
Anlaufstrom/Starting current/Cour de démarrage		A	2,2		
Widerstand/Resistance/Résistance		Ha/main/prin	Ω 29,5		
		Hi/aux	Ω 21,0		
Temp.–Regler/Thermostat		KER			
Typ/Type		RCO			
Regelstellung/Position		kalt	warm		
Schaltwerte/Switching values		ein"	–23,0	–15,0	
		aus"	–31,0	–21,0	
Valeurs de commutation		"alarm"			
Füllmenge/Fill.quantity/Charge		R600a	*		
Anschlußwert/Conn.load/Puiss. connectée		W	83		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Temp.–Regler/Thermostat					
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			

* siehe Typenschild