

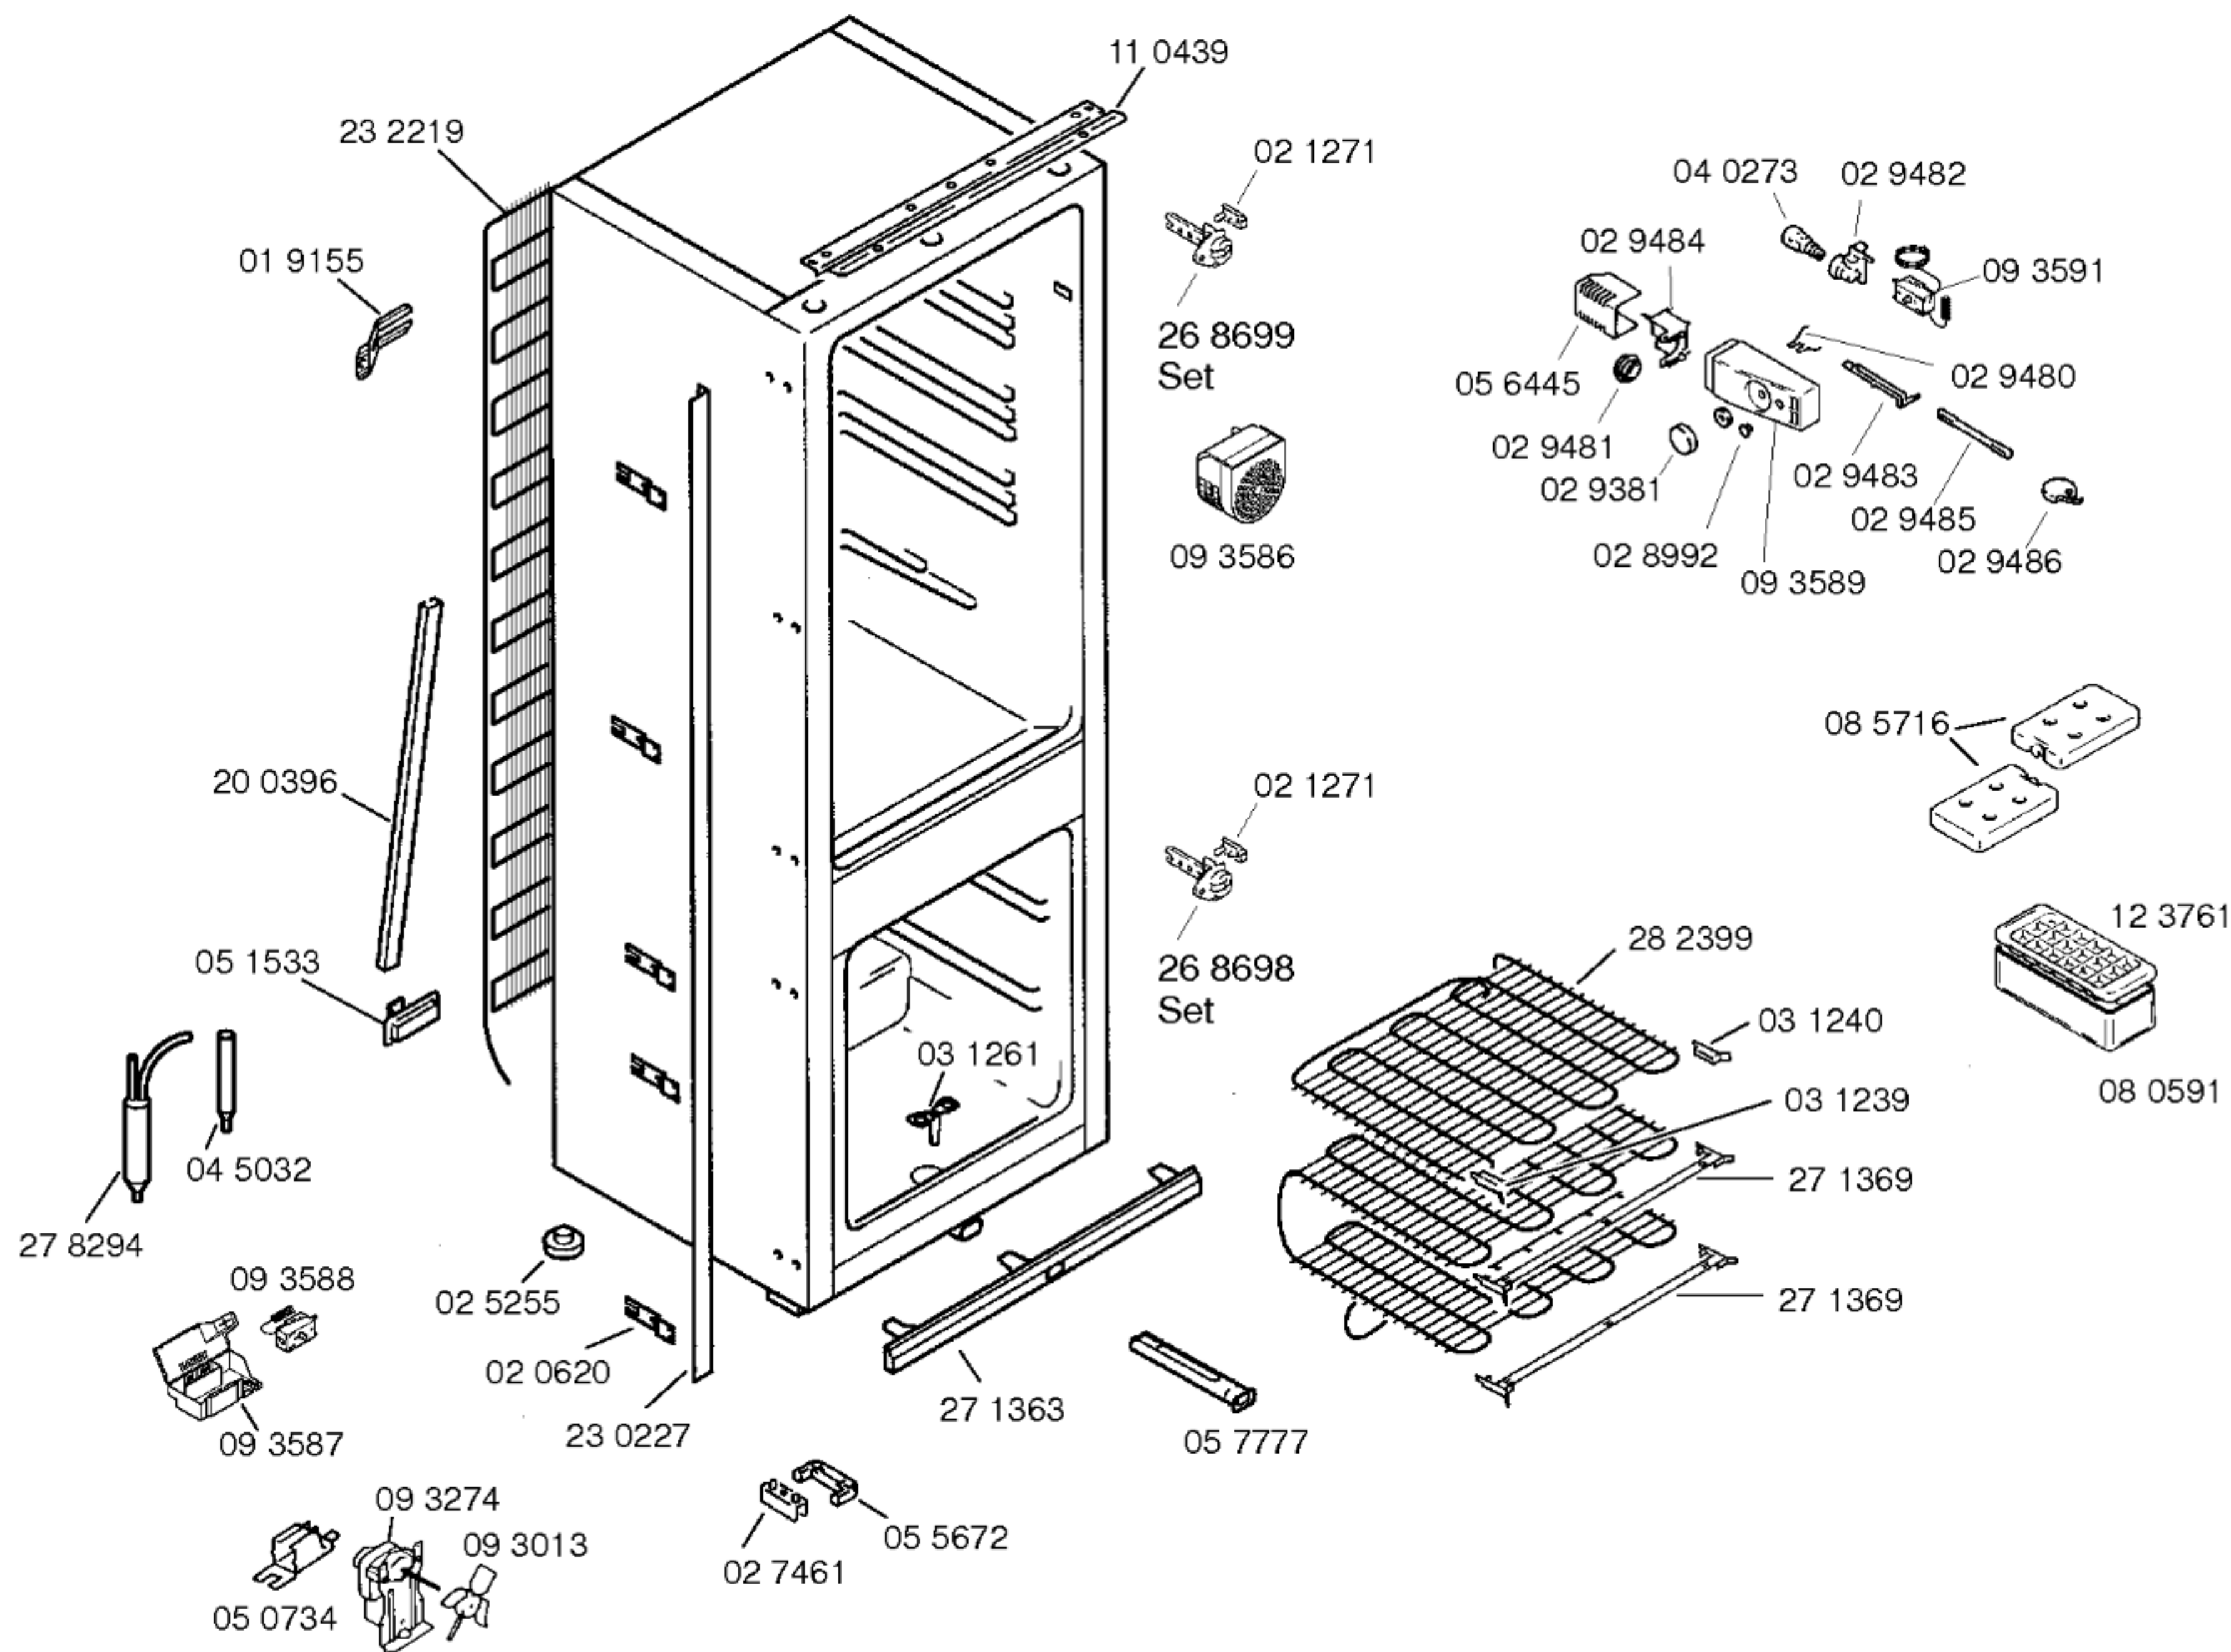


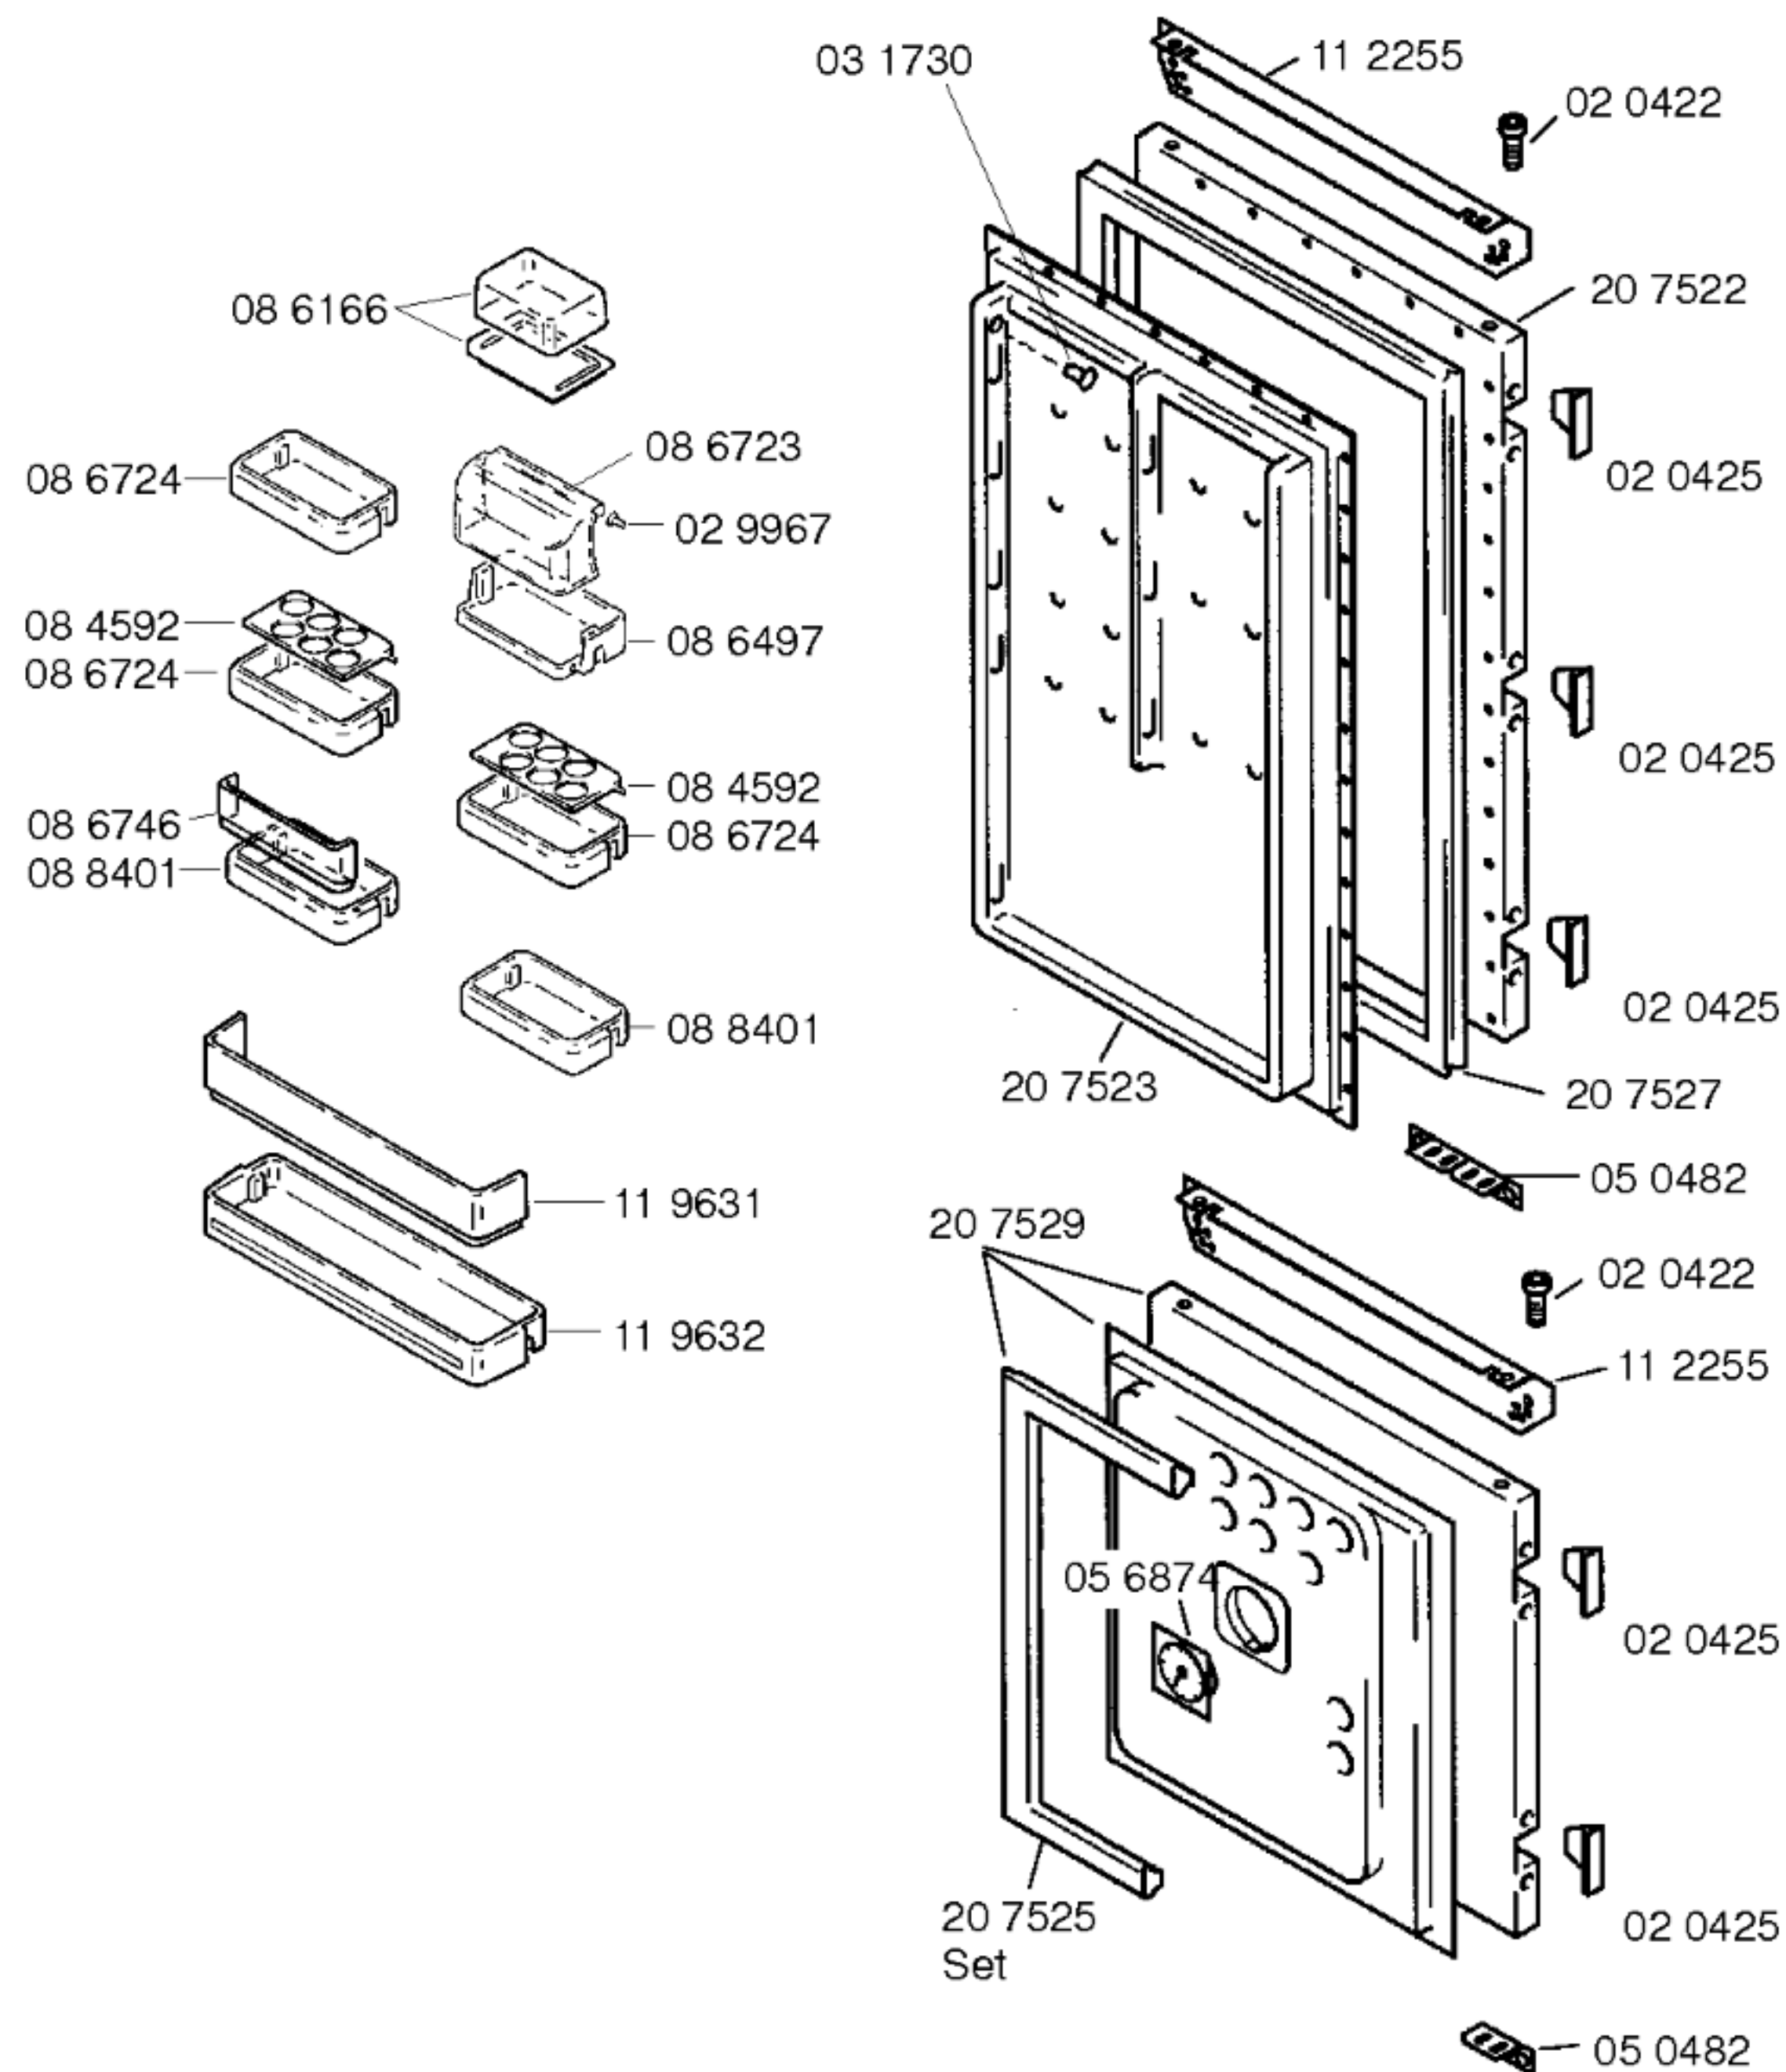


Gebrauchsanweisung
51 5681
(D,GB,F,I,NL,S,E,DK,N,,SF)

Montageanleitung
51 5546
(D,GB,F,I,NL,S,E,DK,N,,SF)

08 4137
Befestigungssatz
08 4136
Schraubensatz

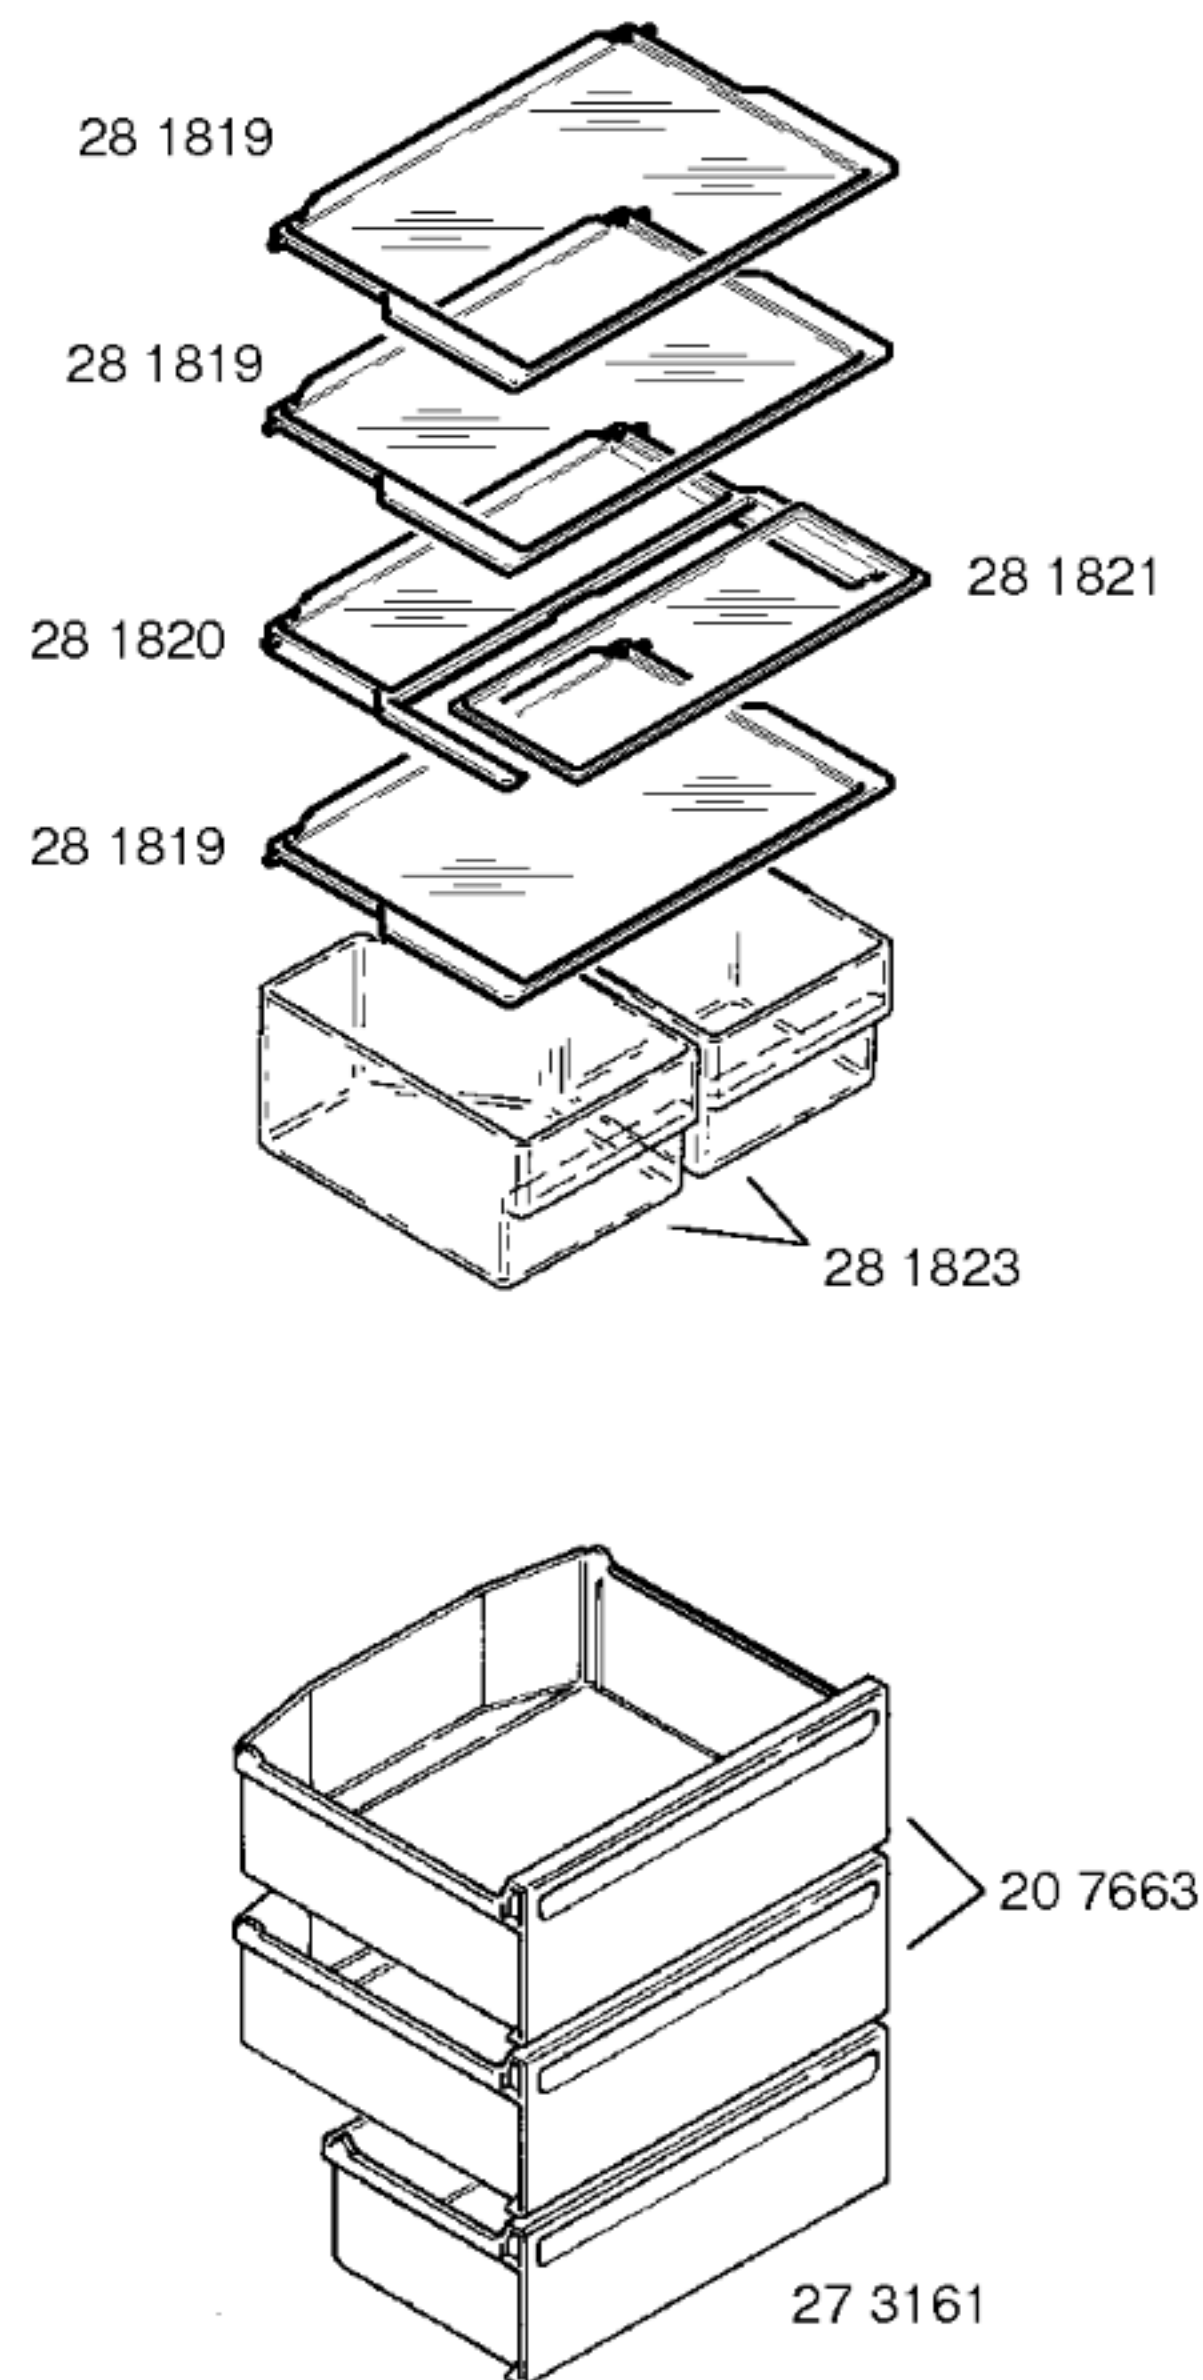

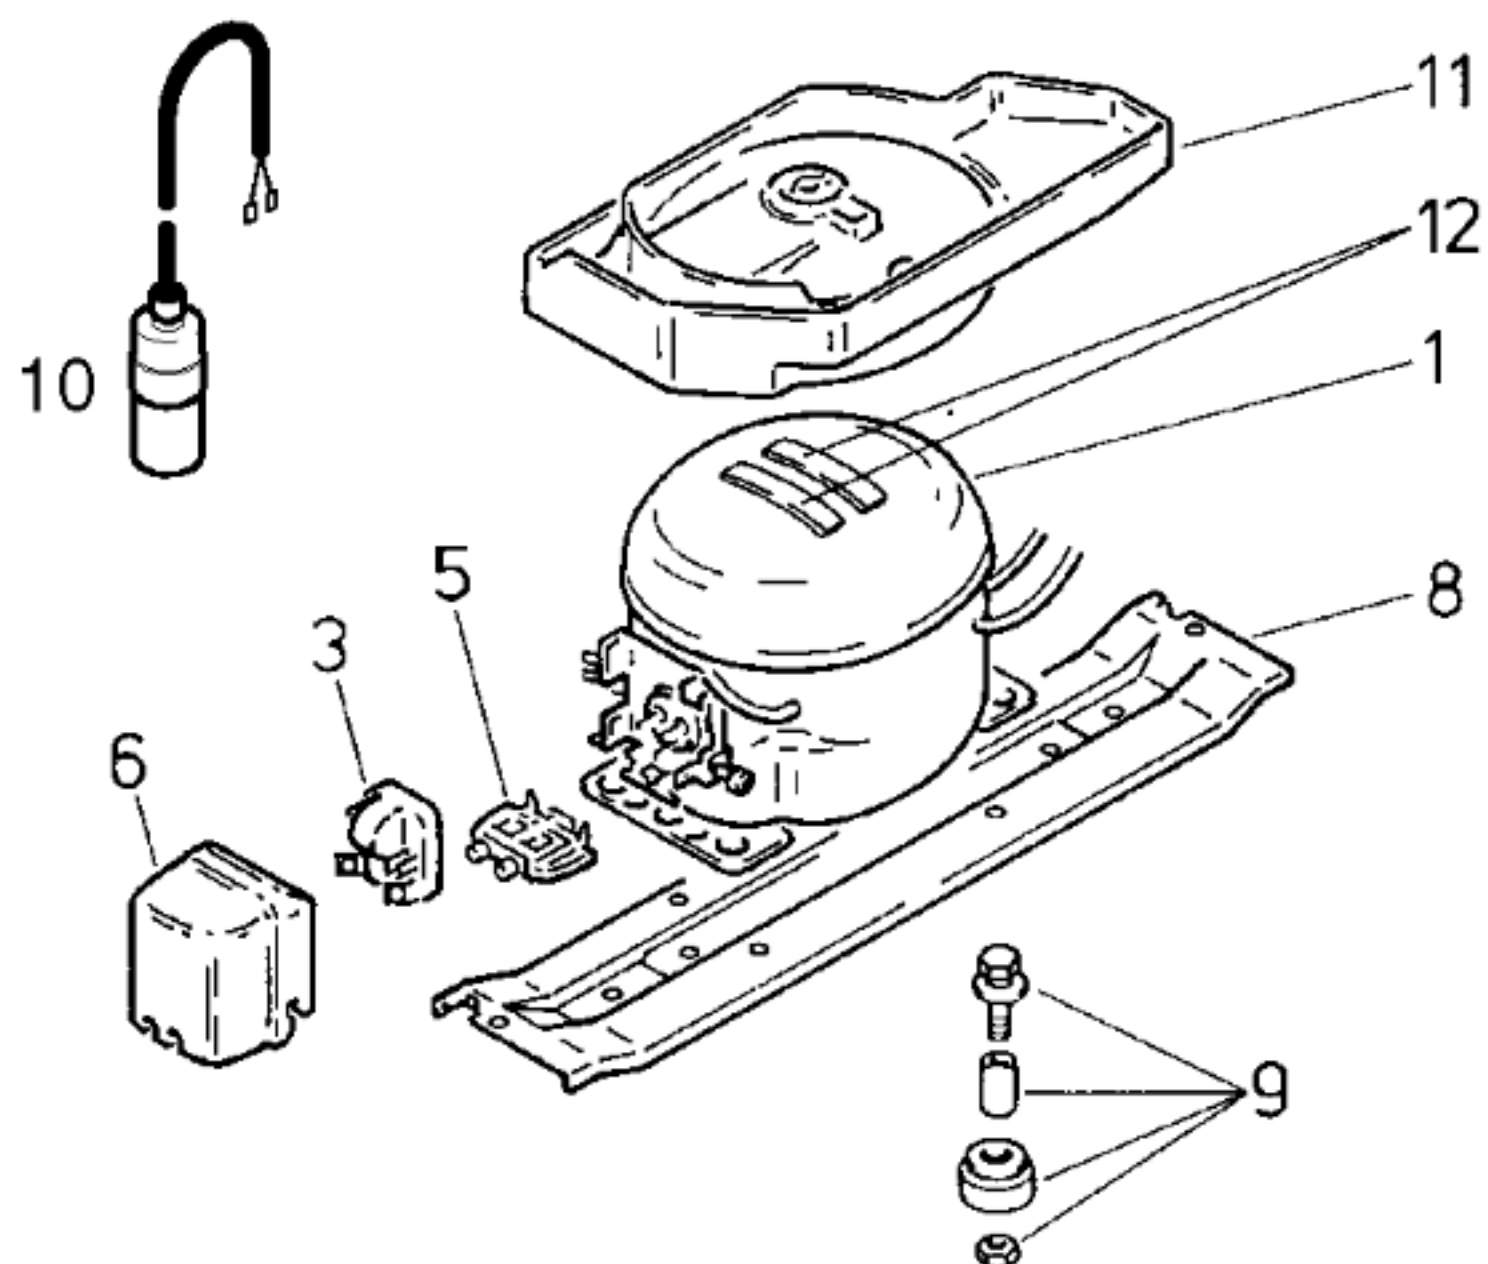

Pos.			
	Danfoss		
	NL7A		
1	14 0908		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8	28 1825		
9	05 0166		
10	05 9467		
11	28 1828		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		NL7A			
Förderleistung/Delivery/Débit		l/h	1314		
Anlaufstrom/Starting current/Cour. de démarrage		A	10,5		
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	13,3	
		Hi/aux	Ω	16,3	
Temp.-Regler/Thermostat		Ranco		Innentemp.	
Typ/Type		K 52-1		K 50-L5772	
Reglerstellung/Position		°C			
Schaltwerte/Switching values/ Valeurs de commutation („abtauen“ od.)		„ein“		kalt	warm
		„aus“		+4	+7,5
		„alarm“		0	+10
Füllmenge/Fill.quantity/Charge		R12	g	170	
Anschlußwert/Conn.load/Puiss. connectée			W	150	
Heizung/Heater/Chauffage					
Widerstand/Resistance/Resistance			Ω		
Leistung/Power/Puissance			W		
Ventilator/Blower/Ventilateur				Innen	Außen
Widerstand/Resistance/Résistance			Ω	1300	350
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance			Ω		
Spannung/Voltage/Tension			V		