 
 
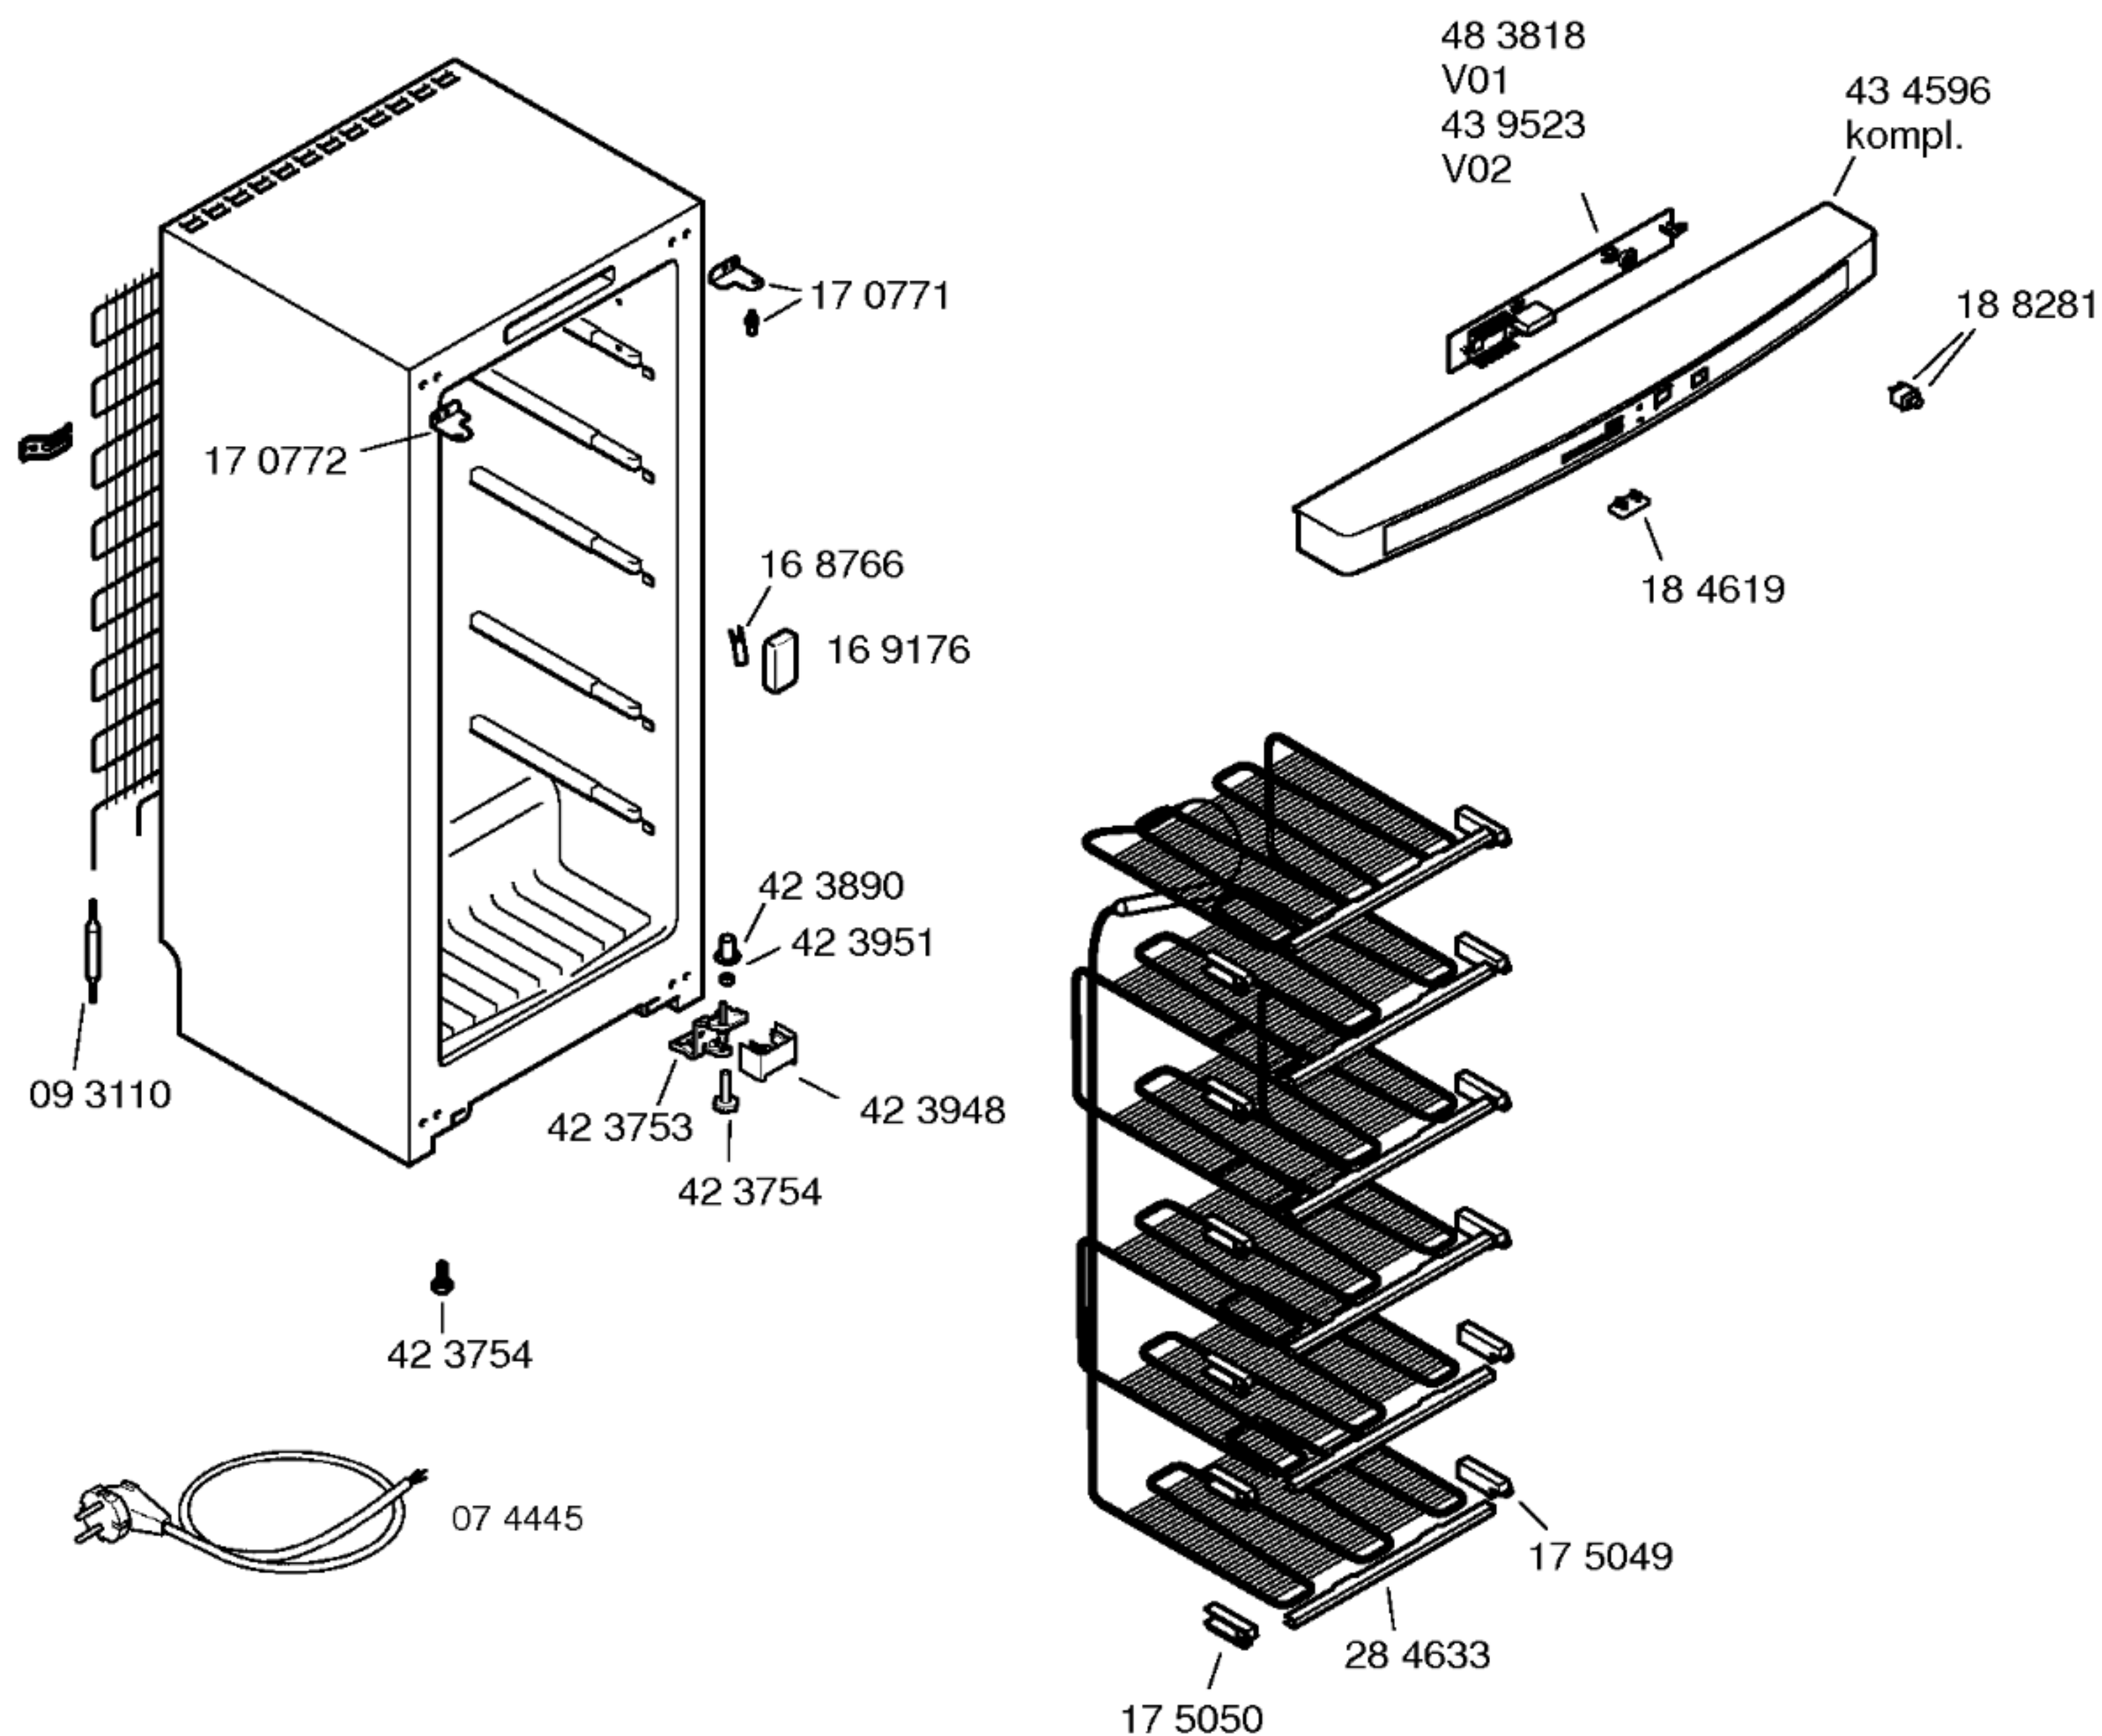 


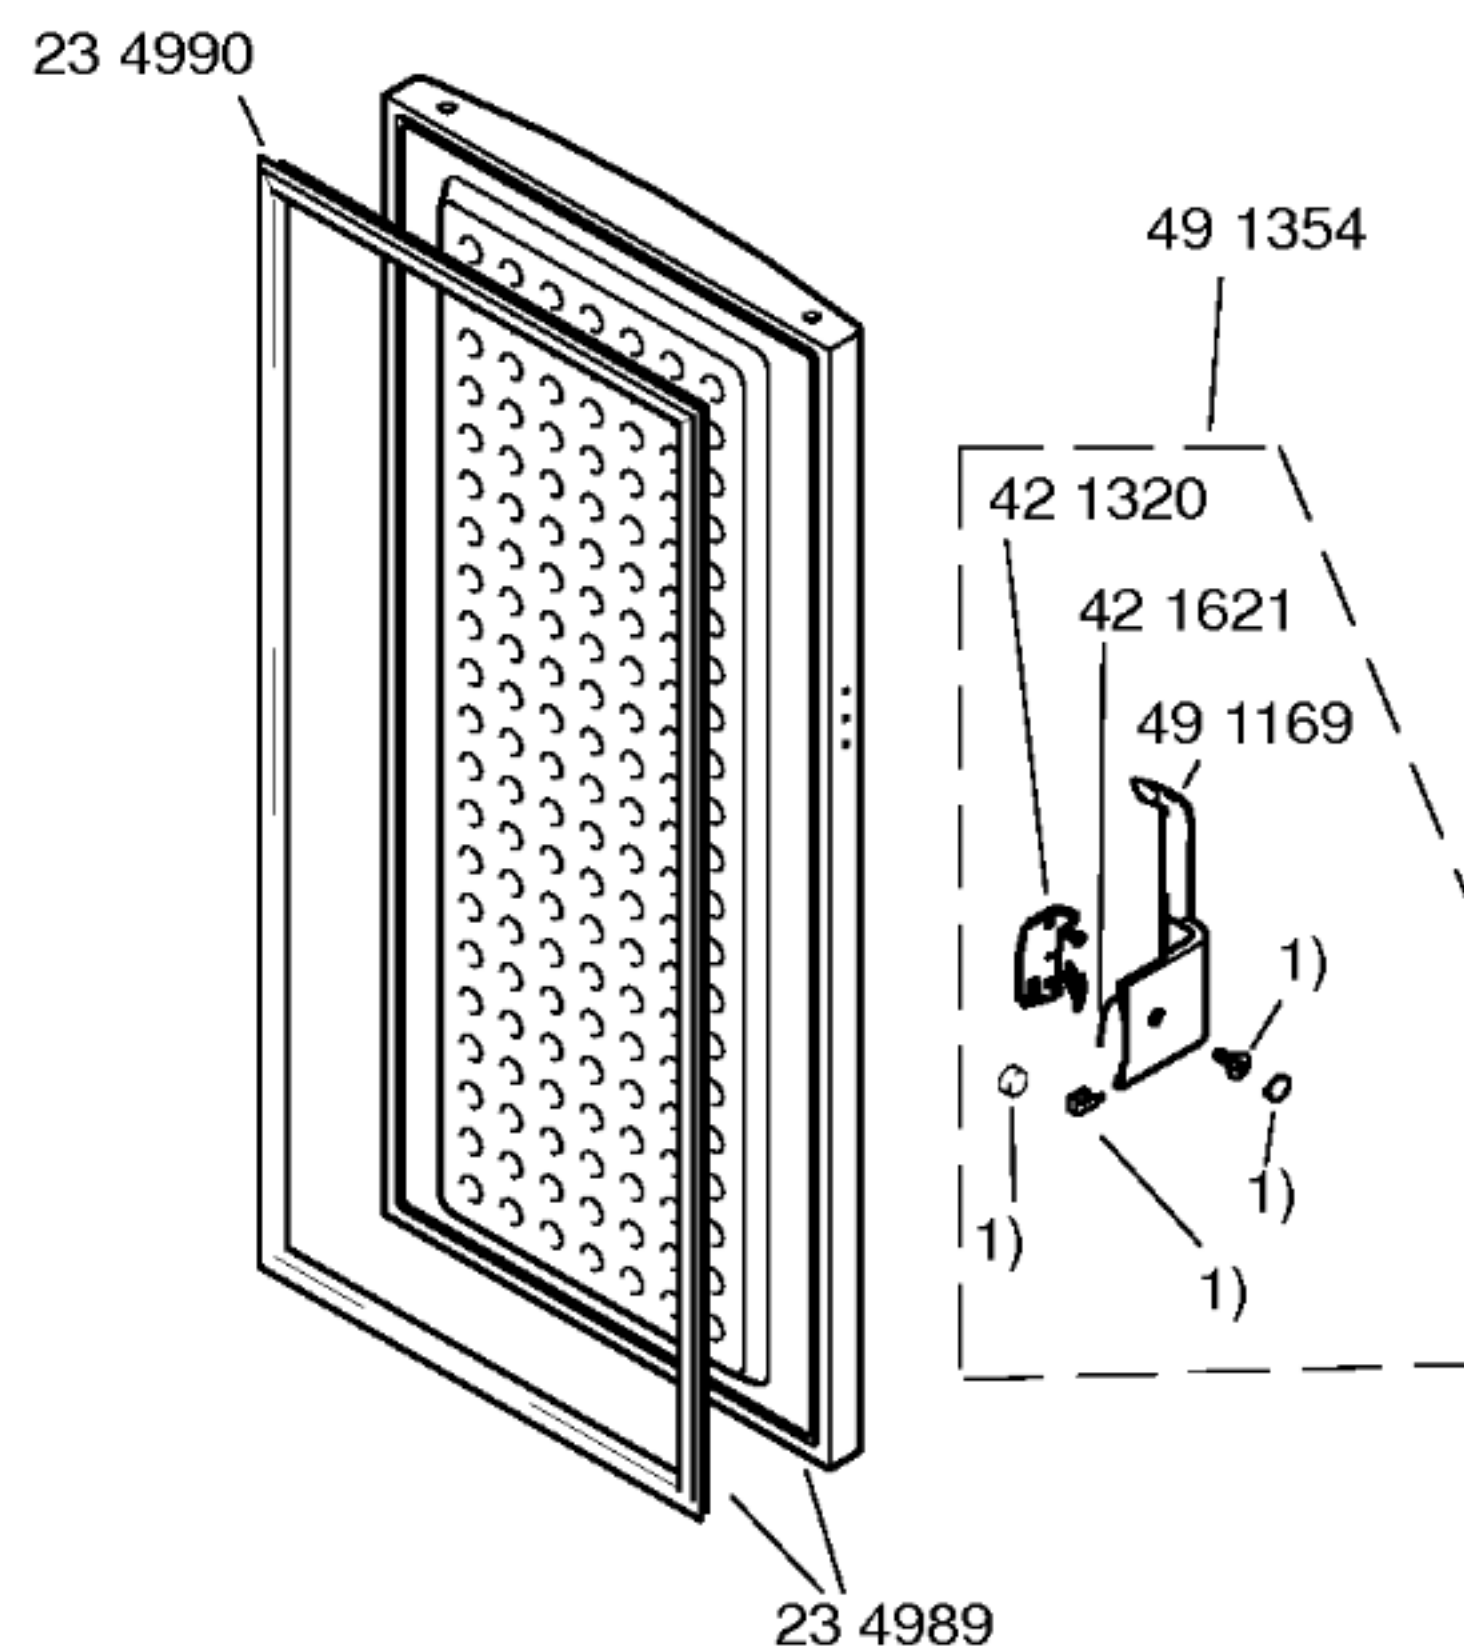 


Mat. – Nr. – Konstante
3740
Gebrauchsanweisung
58 6511
(de,en,fr,it,nl)
58 6709
(da,no,fi,se,es,pt)

Montageanleitung
58 9231
Beistellsatz
42 3948

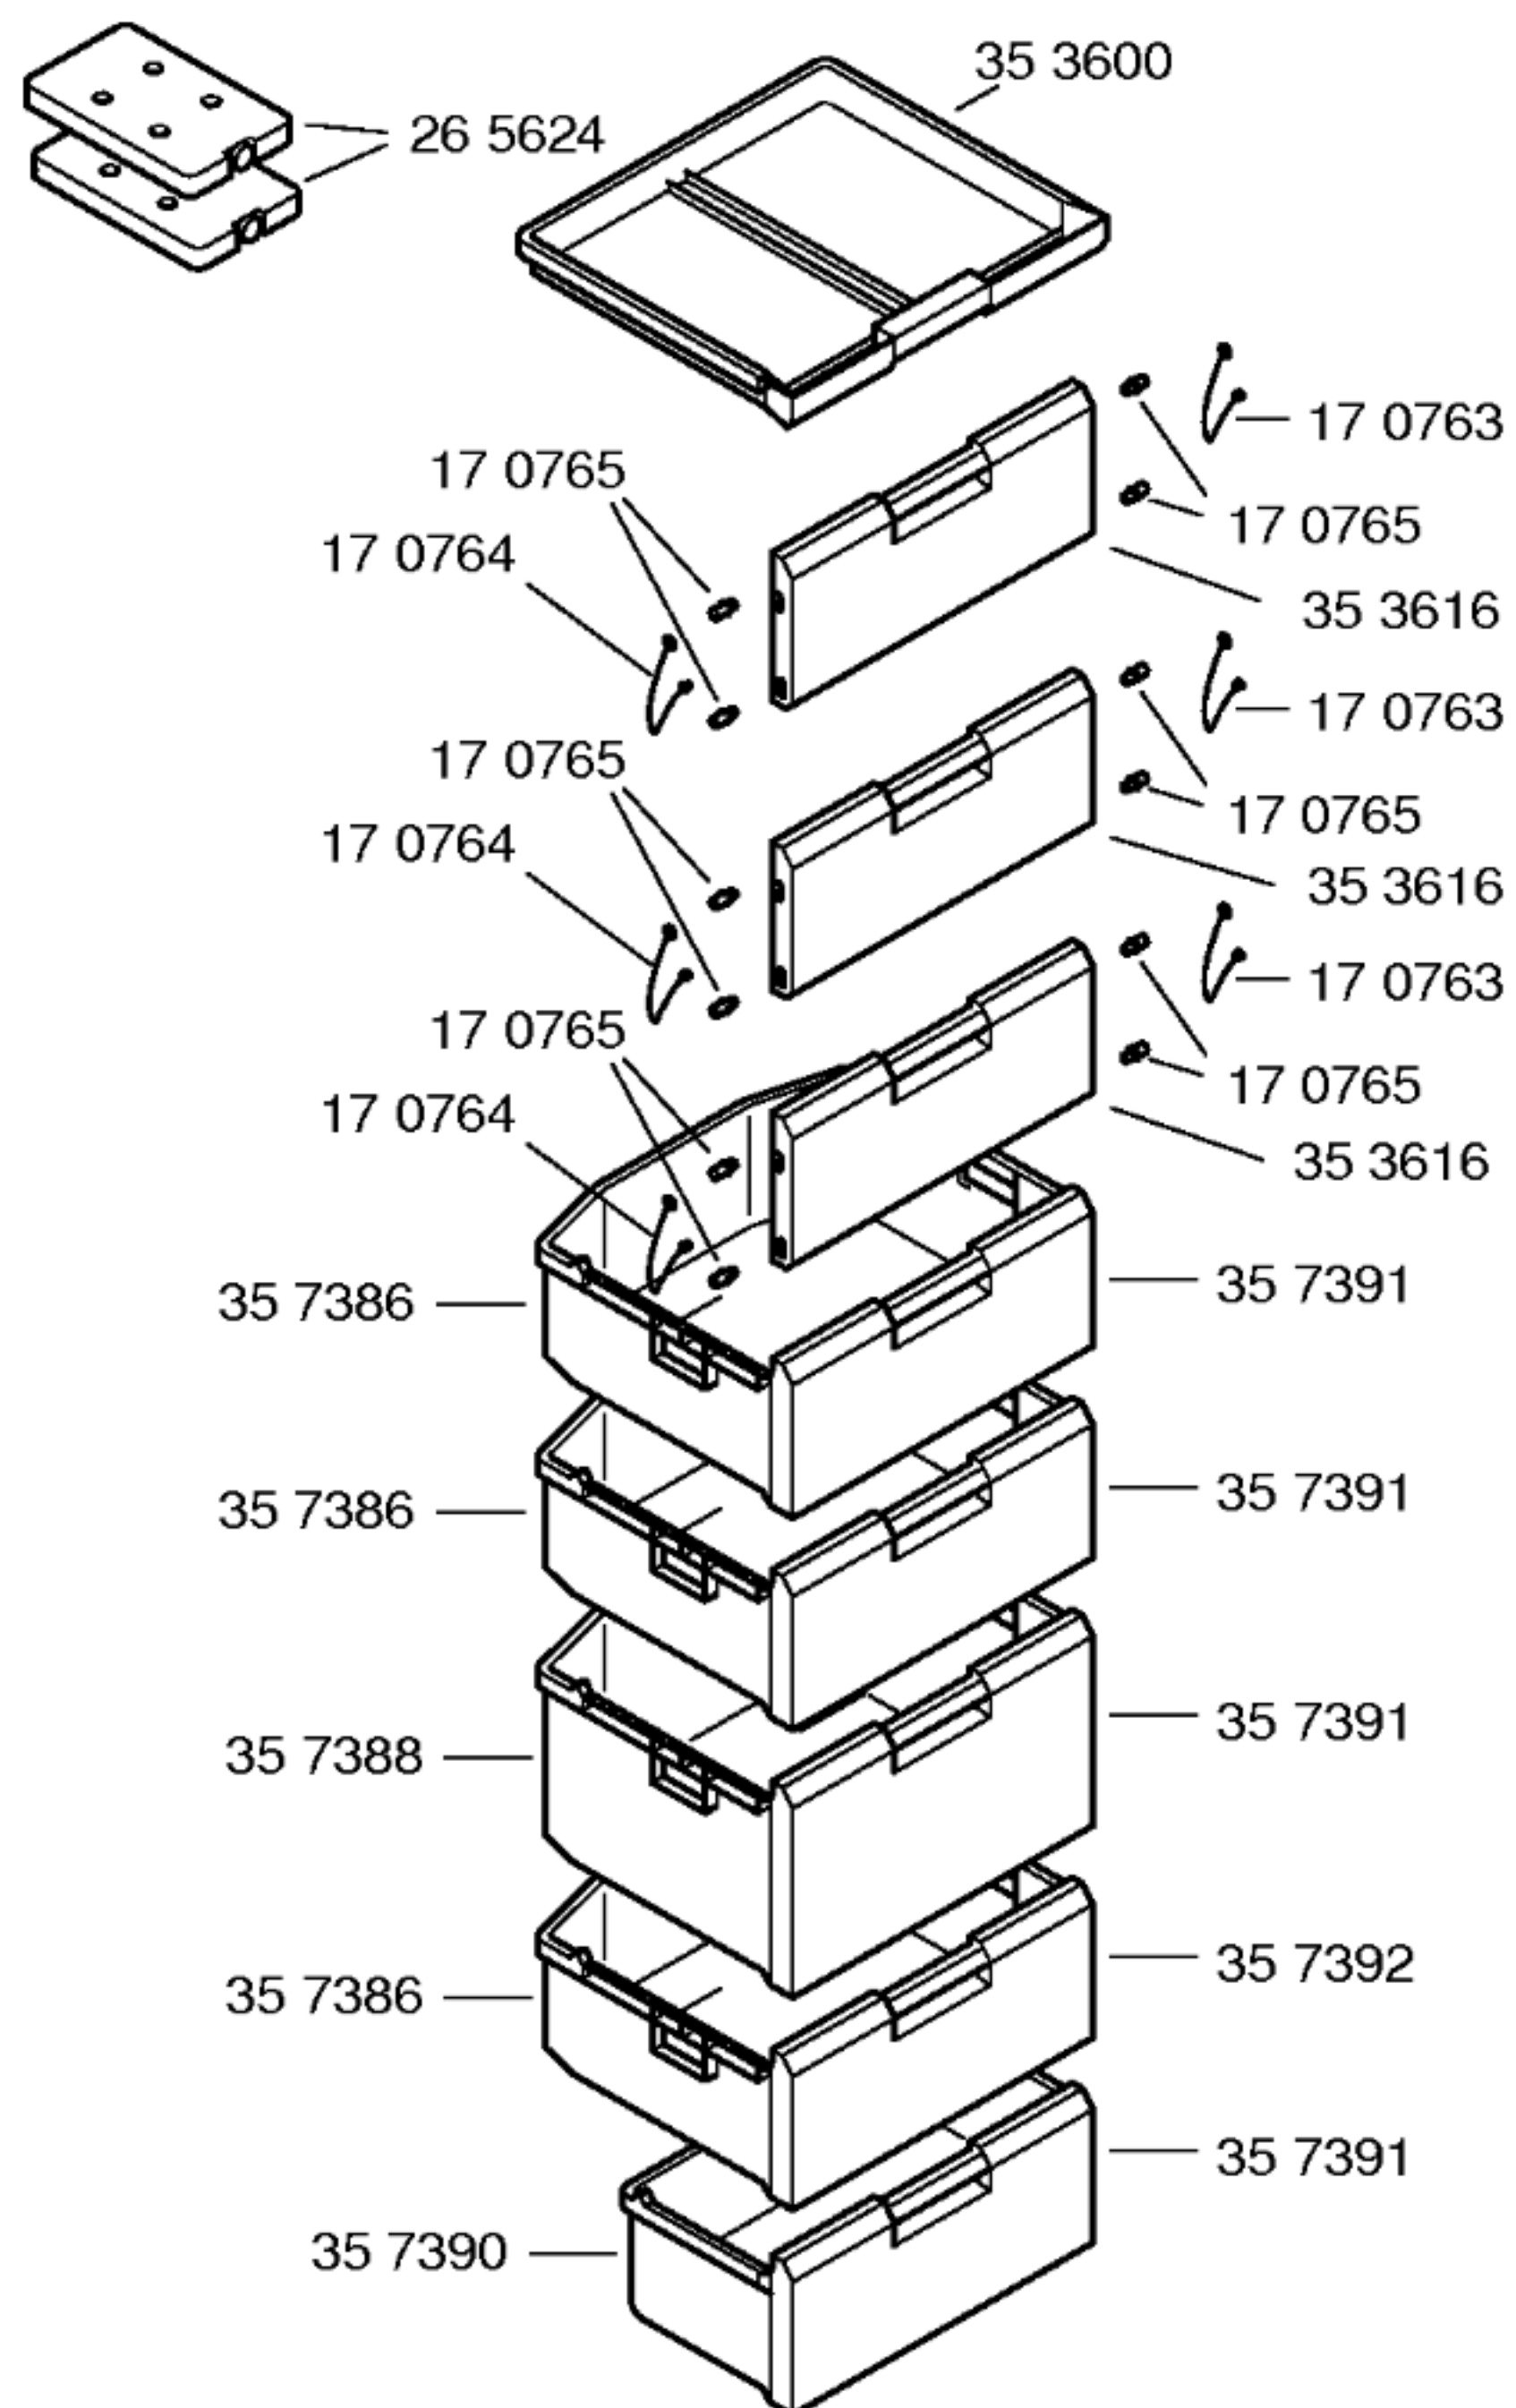

1) Kleinteilesatz
42 2336

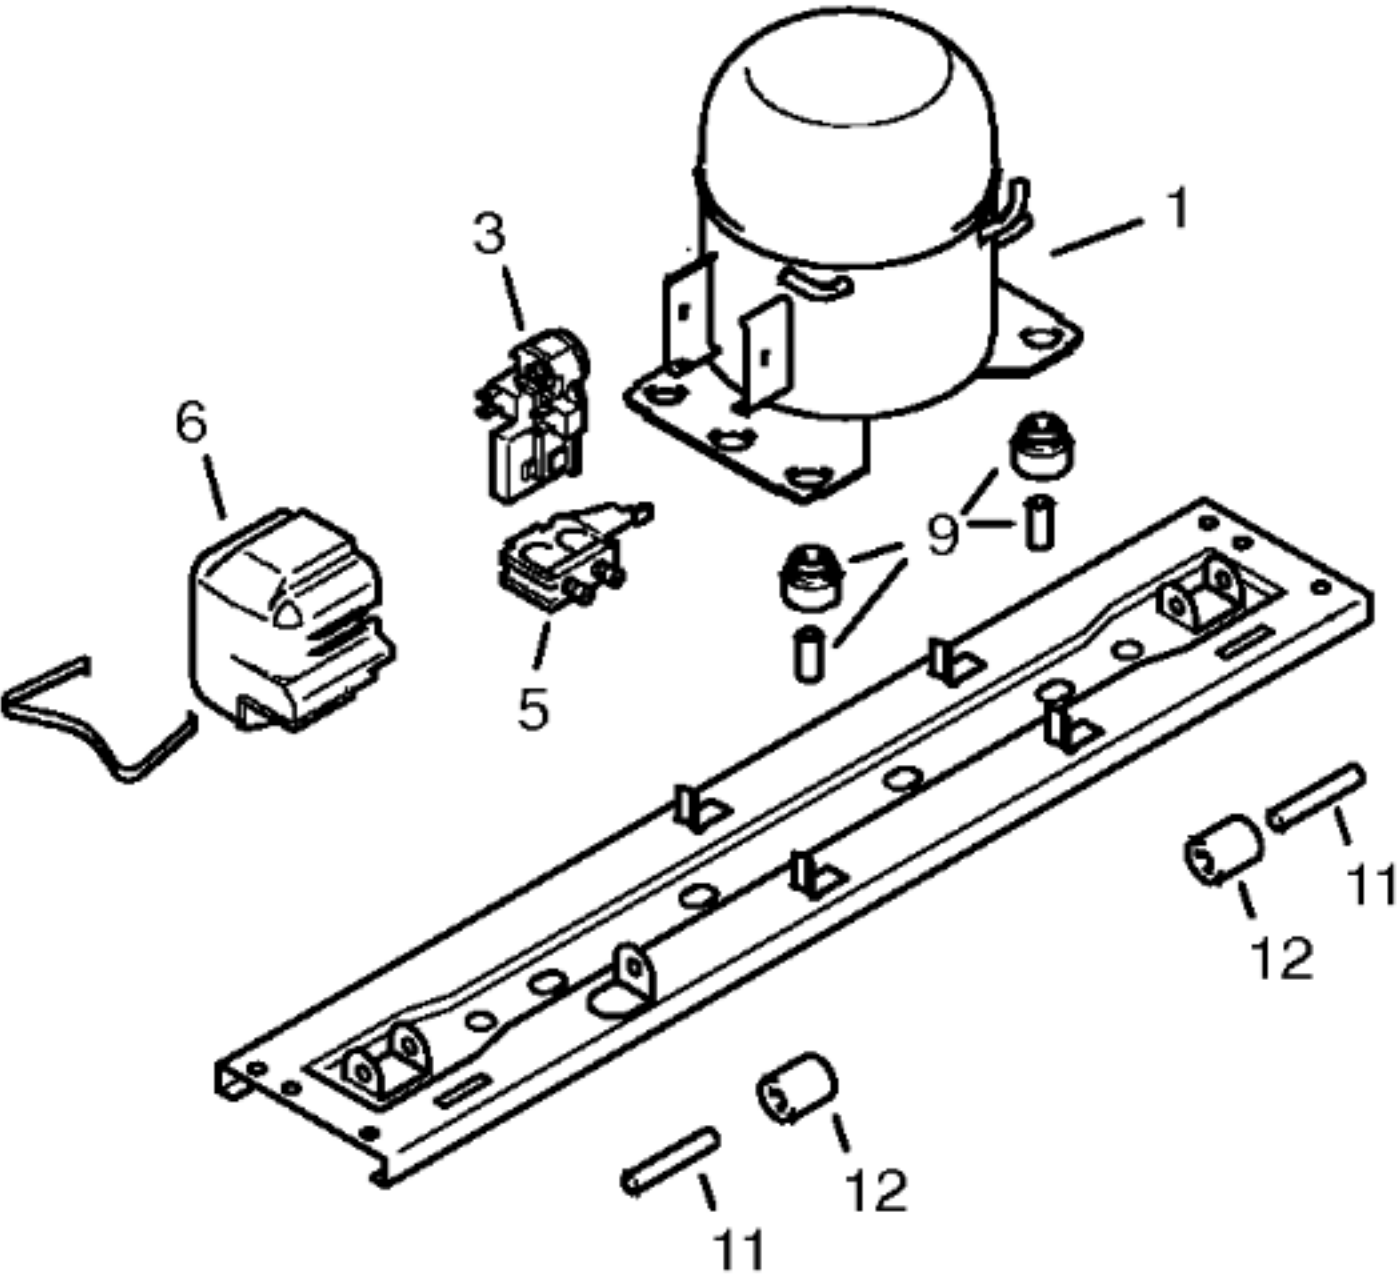

Pos.	V01		
	Matsushita		
	DG 125 E		
1	14 2305		
2			
3	18 7351		
4			
5	16 2549		
6	16 6782		
7			
8	21 4604		
9	05 0166		
10			
11	01 9017		
12	01 1916		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita		
Typ/Type		DG 125 E		
Förderleistung/Delivery/Débit		l/h	2246	
Anlaufstrom/Starting current/Cour de démarrage		A	9,3	
Widerstand/Resistance/Résistance		Ha/main/prin	W	12,1
		Hi/aux	W	13,8
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	136	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		W		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		W		
NTC-Fühler / Sensor		°C	kW	°C
		+10	9,95 □ 0,18	-18
		+5	12,70 □ 0,18	-22
		0	16,33 □ 0,16	-26
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		W		
Spannung/Voltage/Tension		V		