 
 
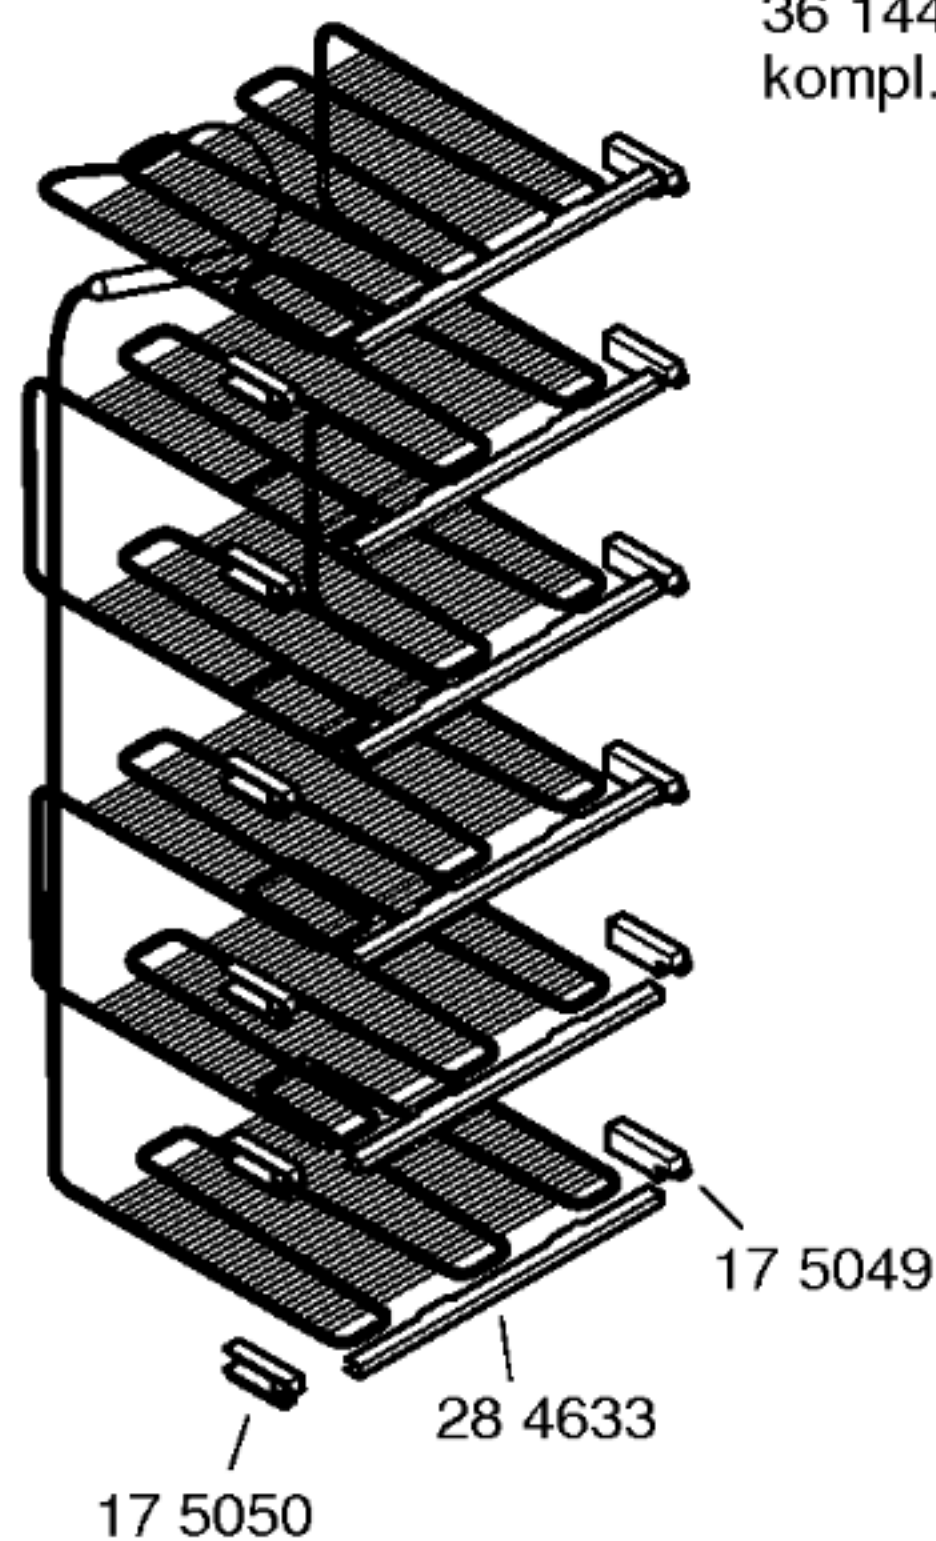 
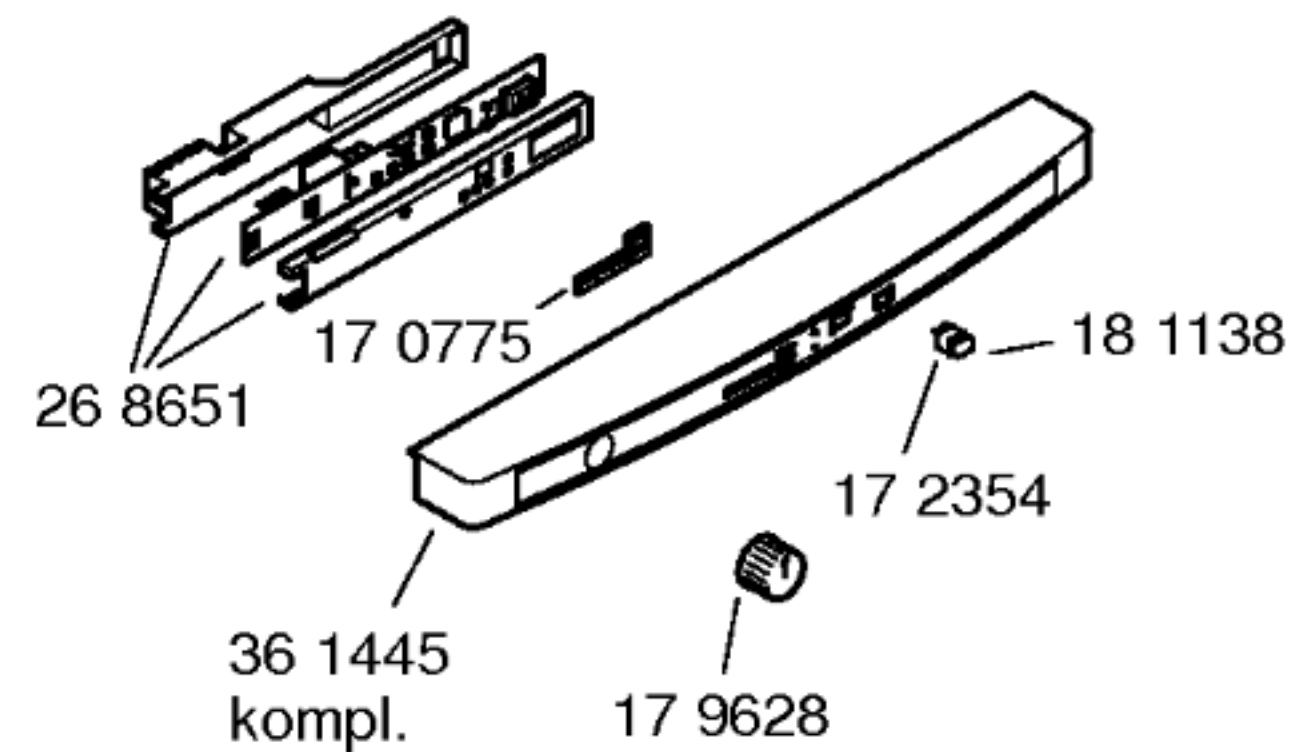 
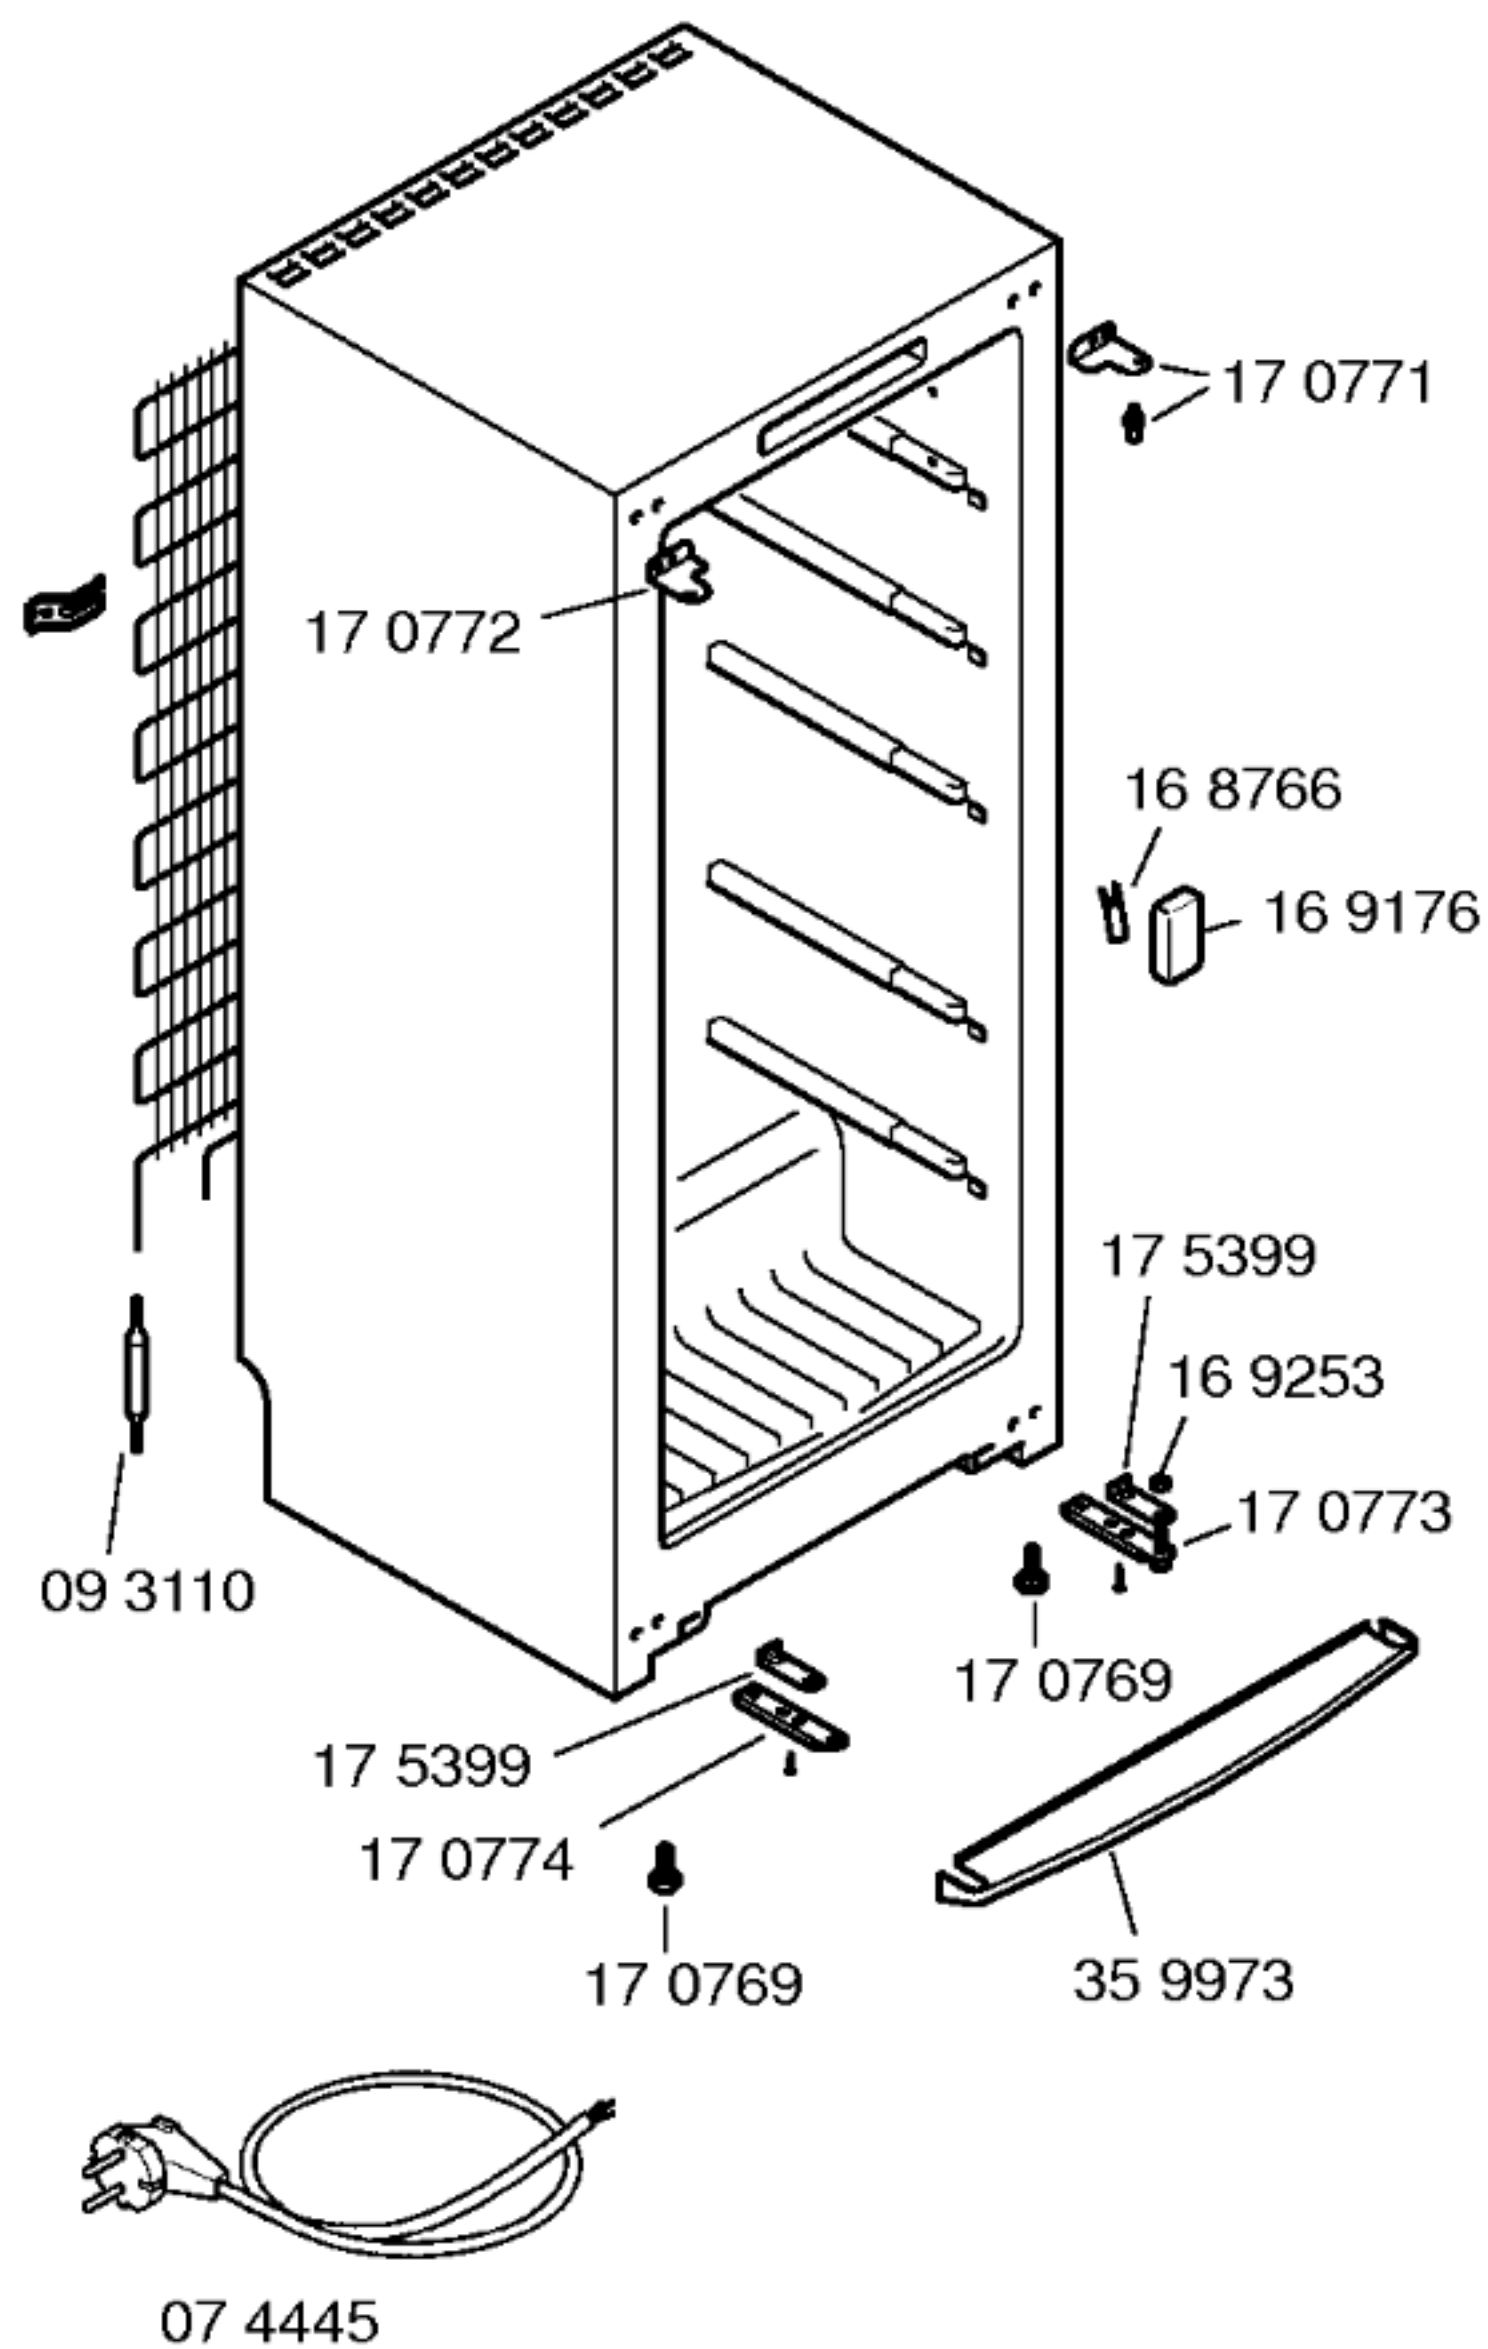 


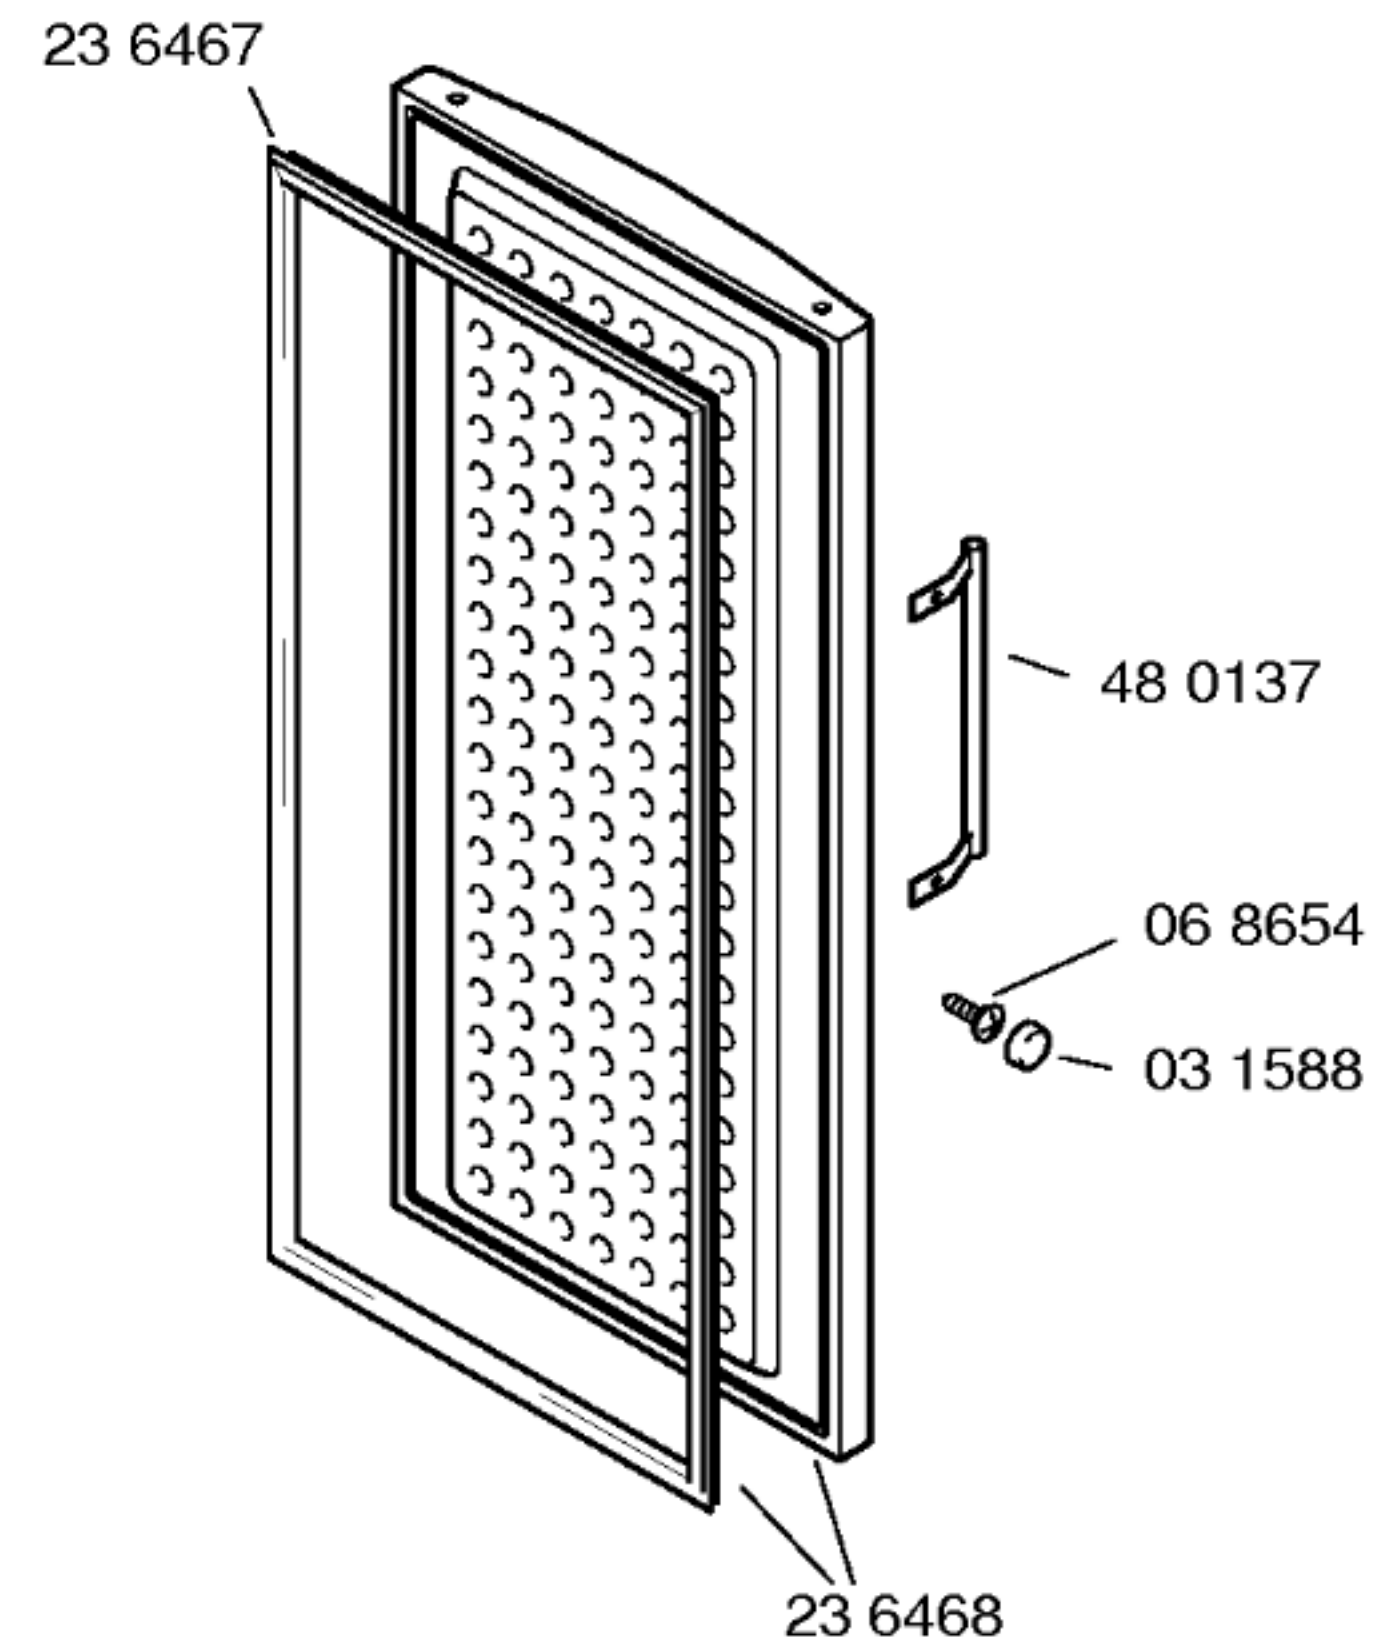 


Gebrauchsanweisung
52 2770
(D,GB,F,I,NL)
52 8221
(DK,SF,N,S)

Montageanleitung
52 2772
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5627
Edelstahlpflegemittel
16 6787

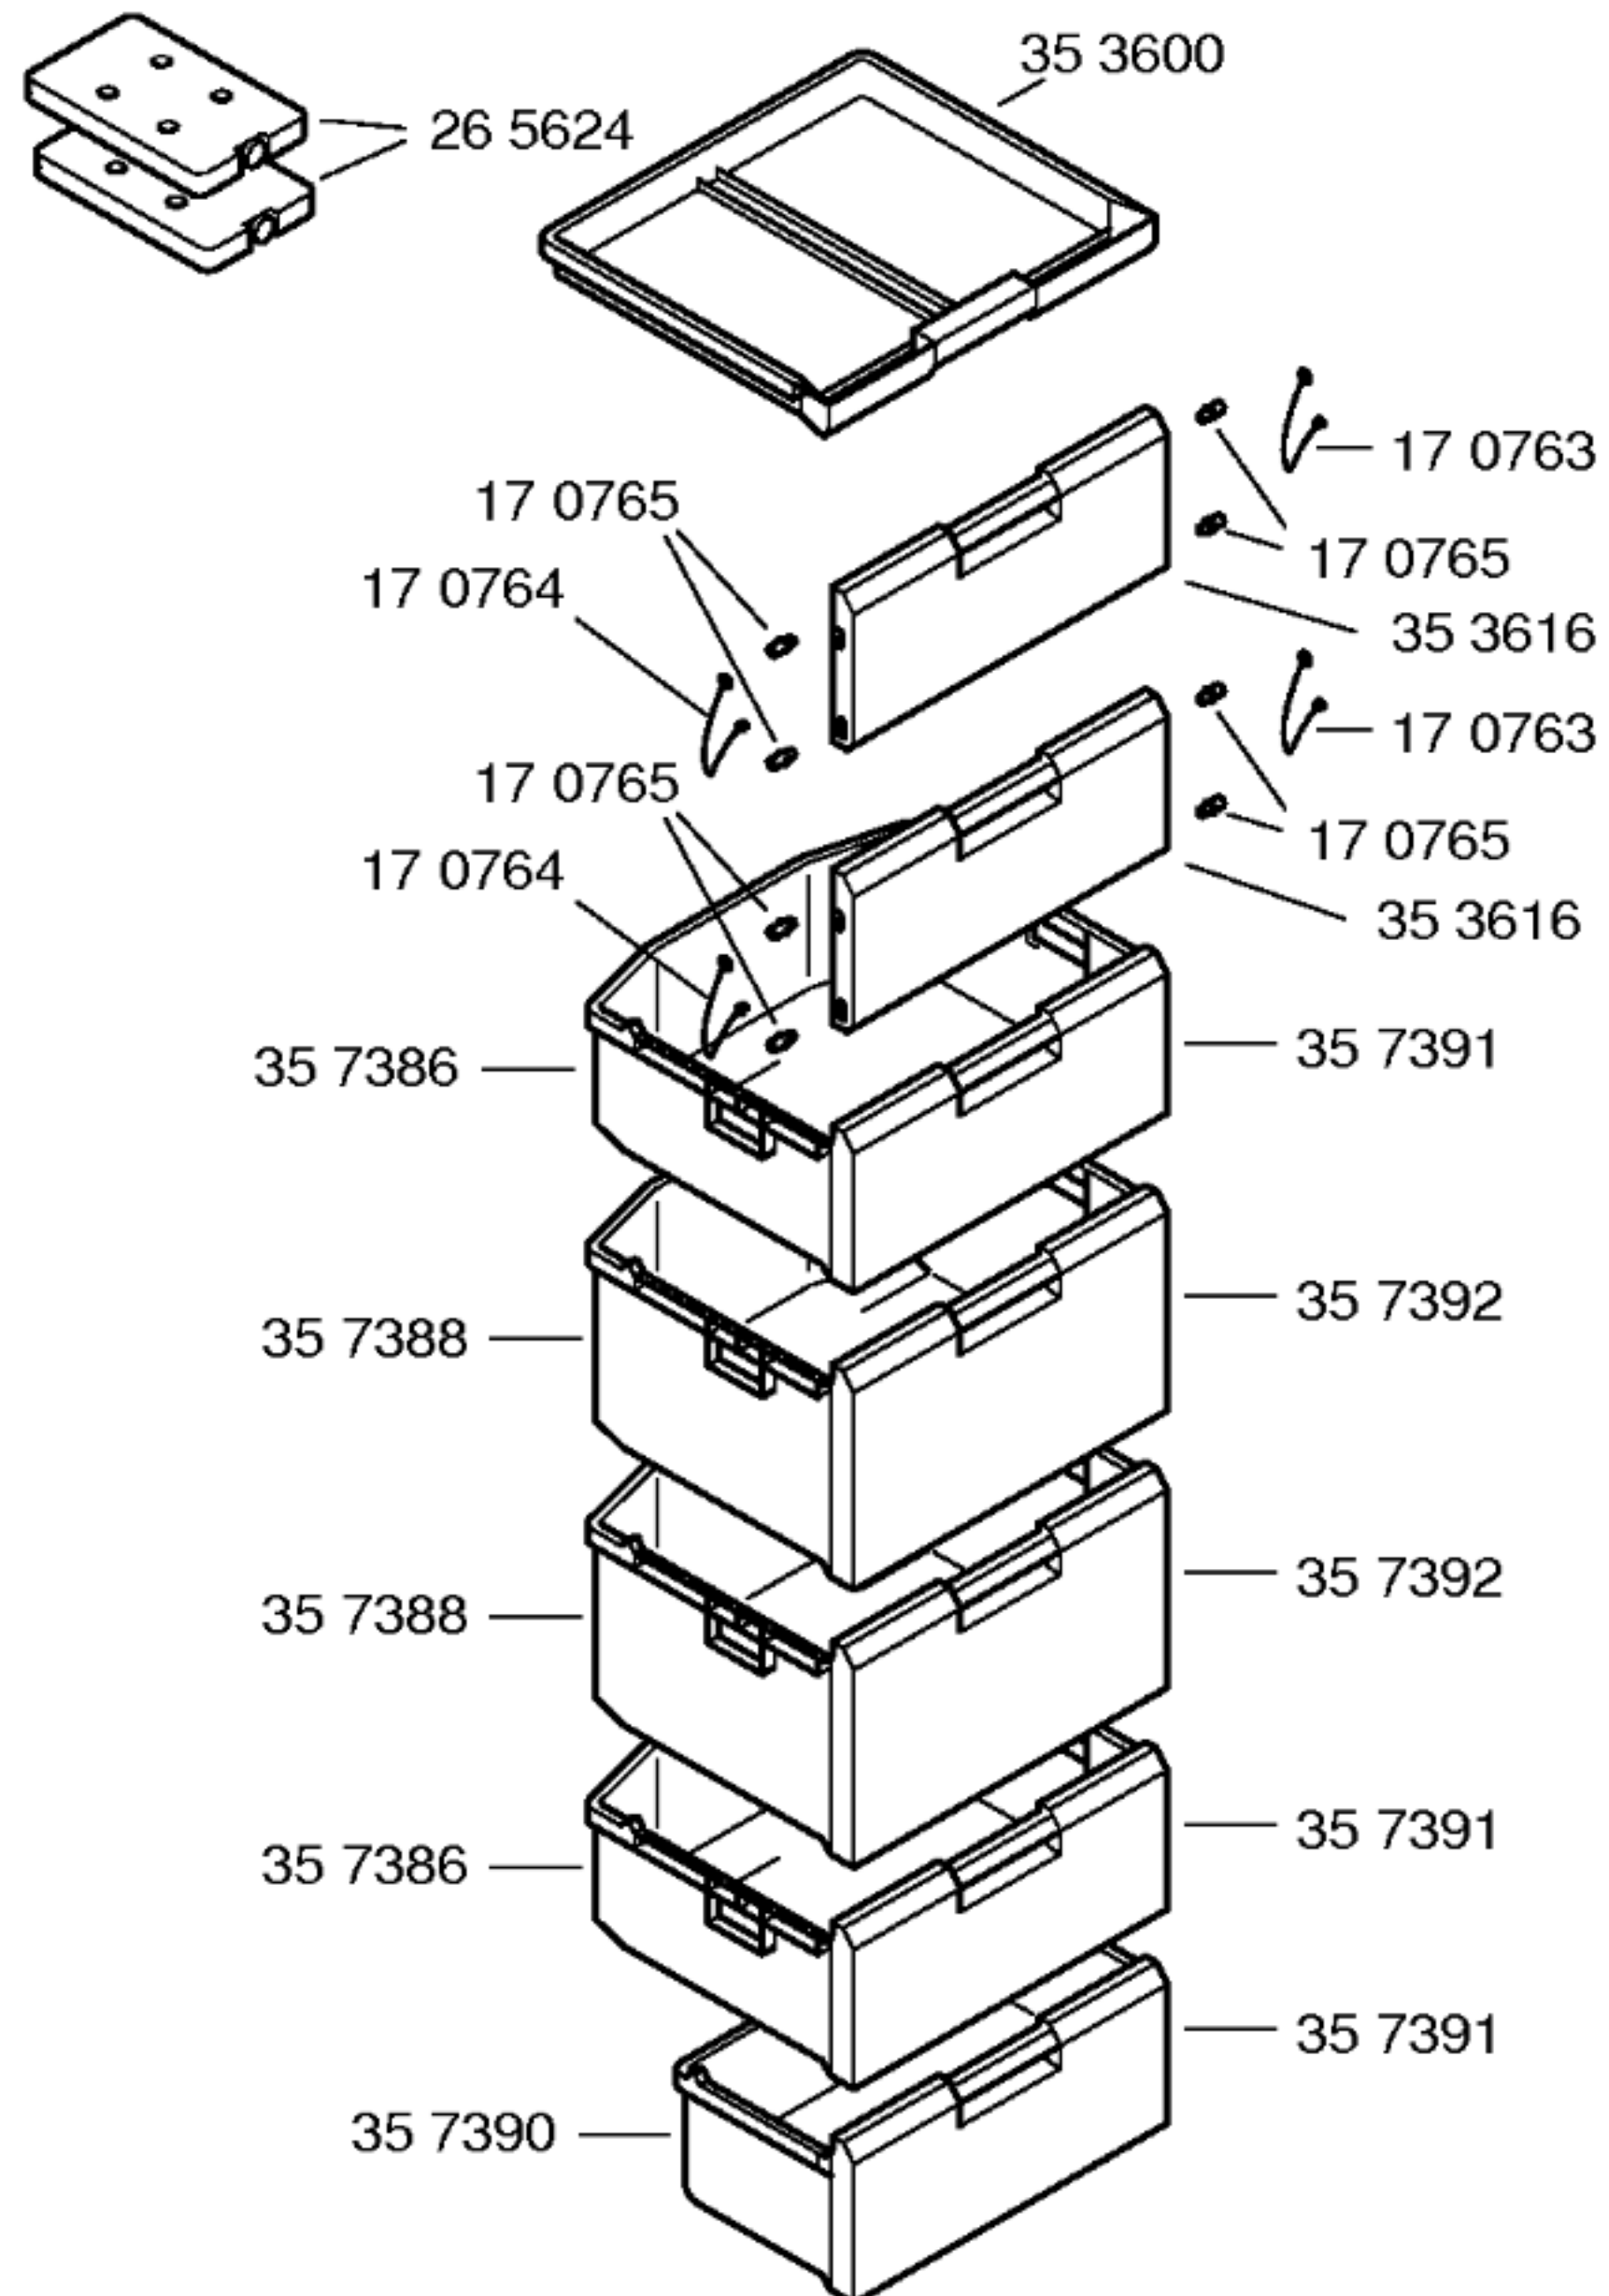

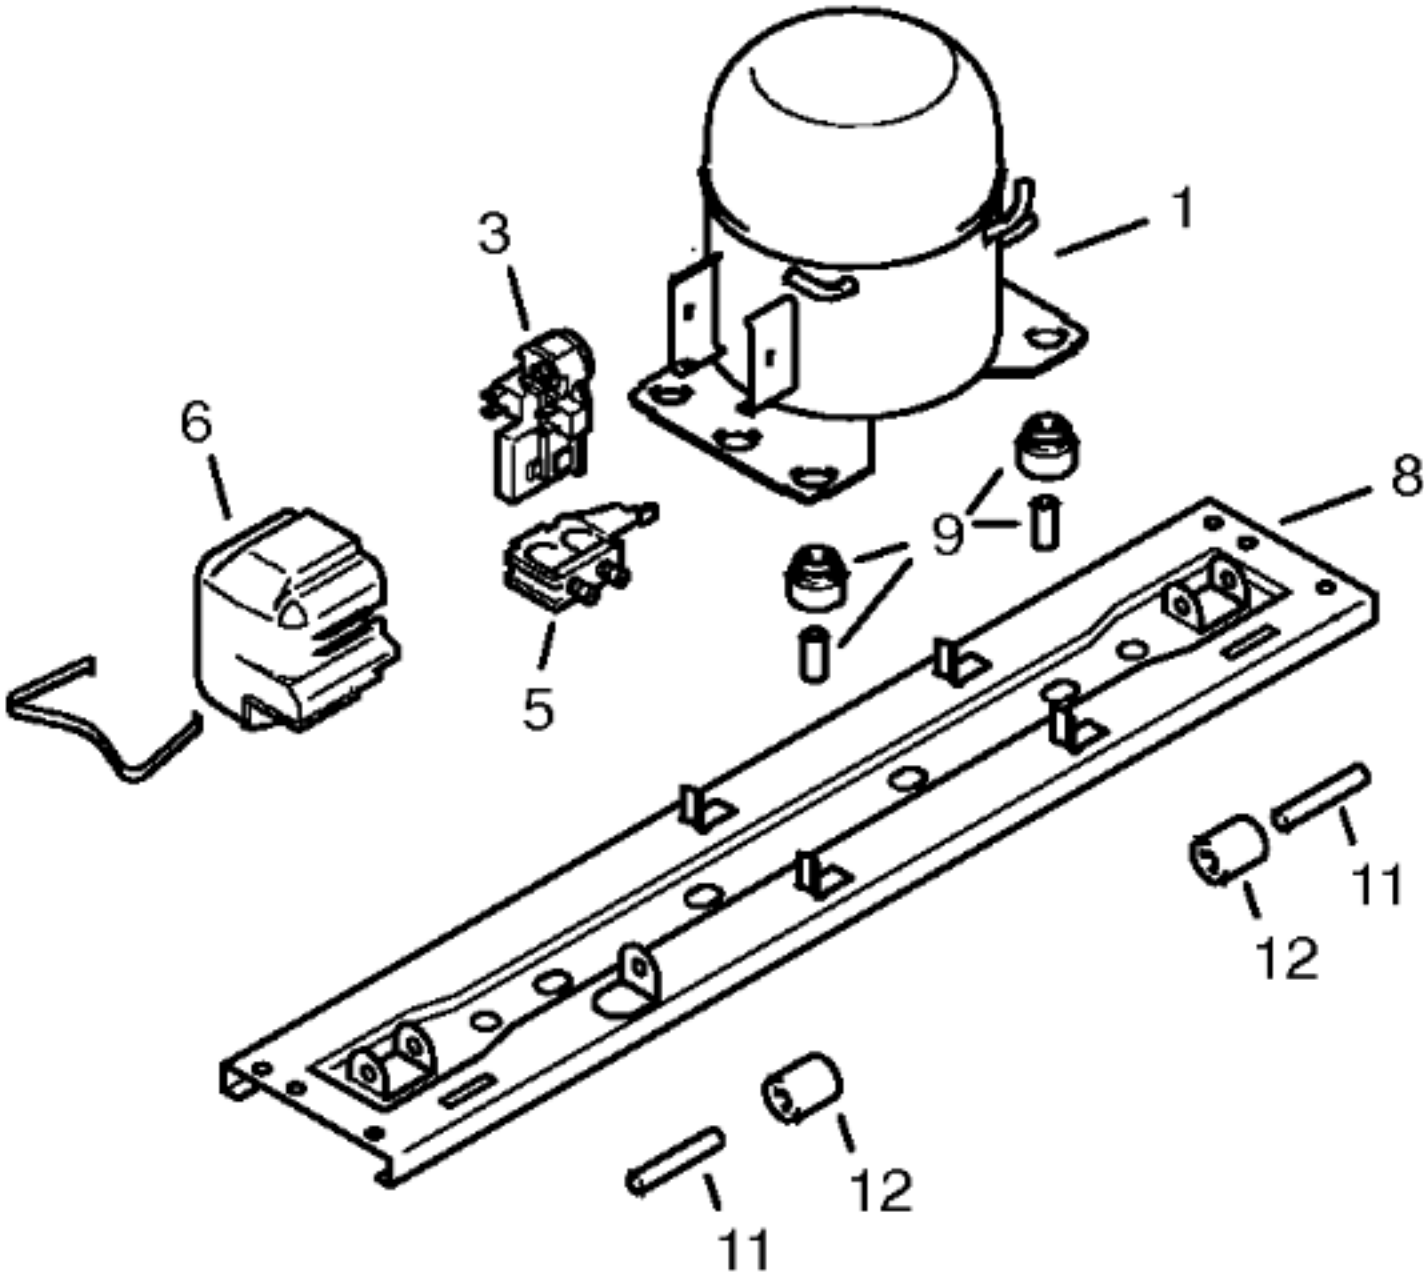

Pos.	V01		
	Matsushita		
	DC 125 E		
	14 2131		
1			
2			
3	17 2967		
4			
5	16 2549		
6	16 6782		
7			
8	21 4604		
9	05 0166		
10			
11	01 9017		
12	01 1916		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita		
Typ/Type		DC125E		
Förderleistung/Delivery/Débit		l/h	2246	
Anlaufstrom/Starting current/Cour de démarrage		A		
Widerstand/Resistance/Résistance		Ω		
Hi/aux		Ω		
Temp.–Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a		
Anschlußwert/Conn.load/Puiss. connectée		W		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
NTC–Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	–18
		+5	12,70 ±0,18	–22
		0	16,33 ±0,16	–26
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		