 


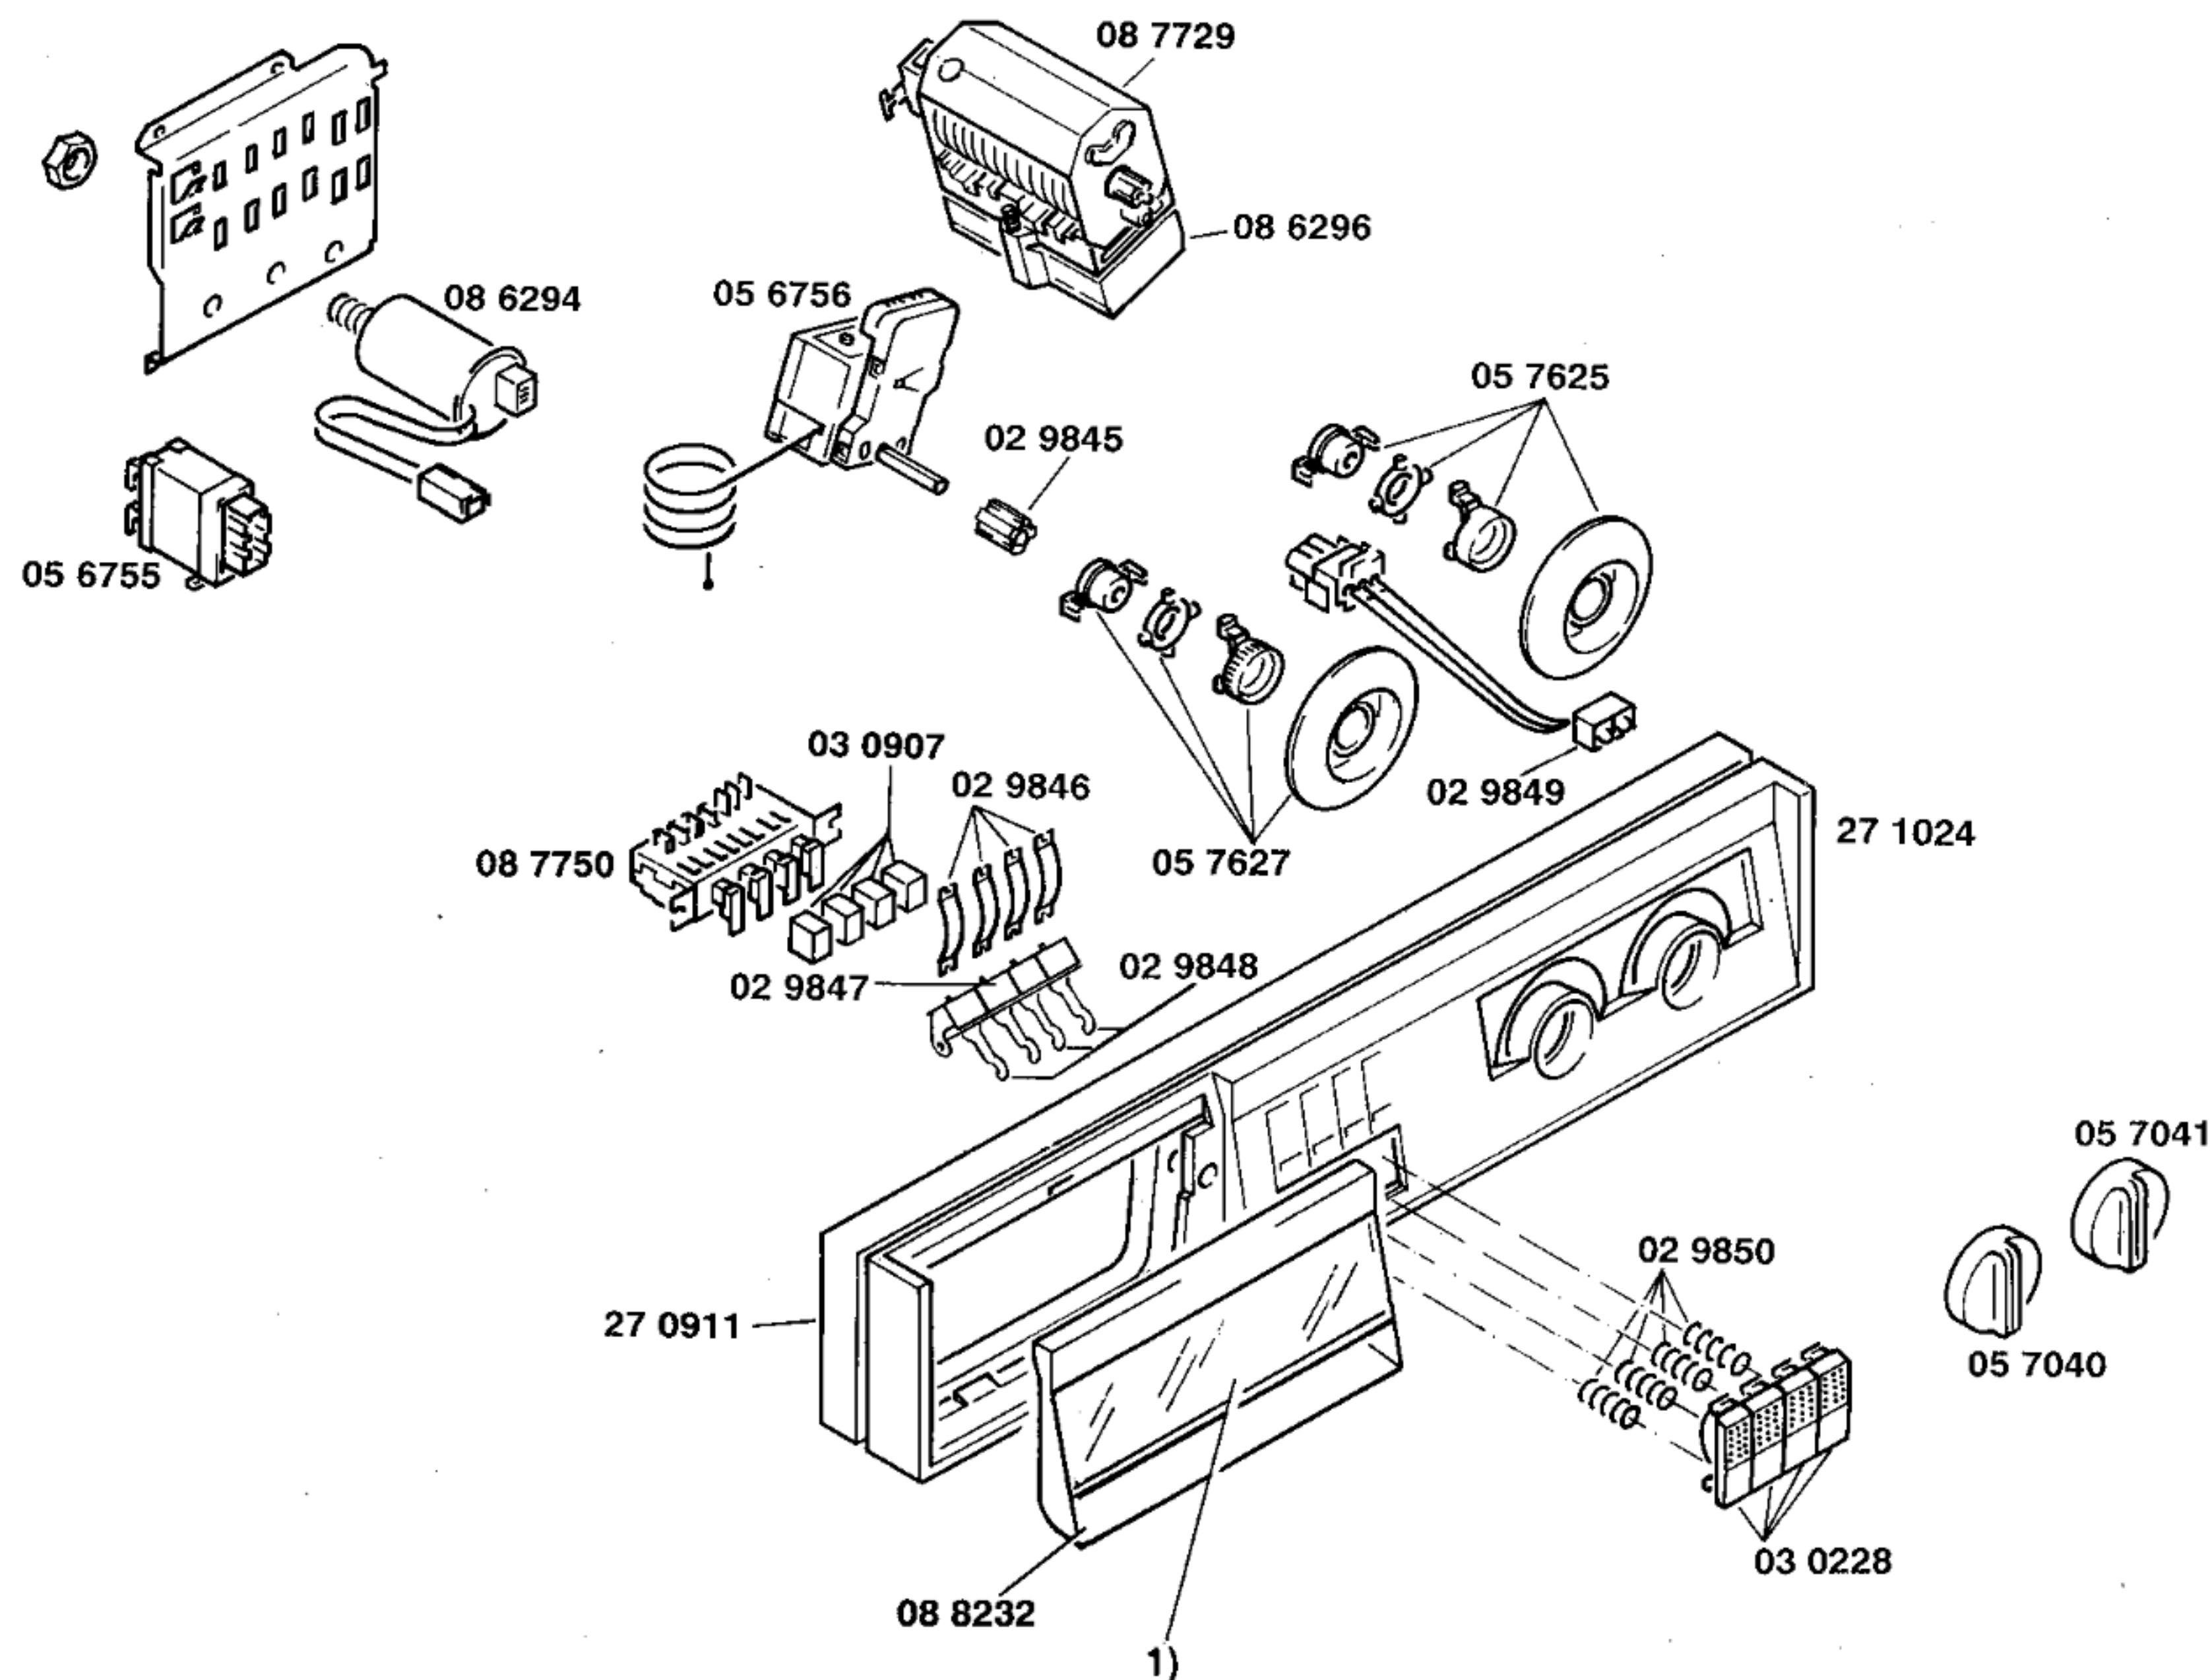

- 1) 08 8174
(D,I)
08 8716
(GB)
08 8717
N,SF
08 8718
(S,DK)
08 8719
(NL,F)
08 8720
(YU,TR)
08 8721
(E,GR)

Gebrauchsanweisungen:

 
- 51 3549
(D,I,S,N,SF)
51 3550
(S,DK)
51 3551
(NL,F,E,GB)

 
Programmtabellen:

- 51 3552
(D)
51 3553
(I,S,N,SF)
51 3554
(S,DK)
51 3555
(NL,F,E,GB)

Aufstellanweisungen:


- 51 3556
(D,I,S,N,SF)
51 3557
(S,DK)
51 3558
(NL,F,E,GB)

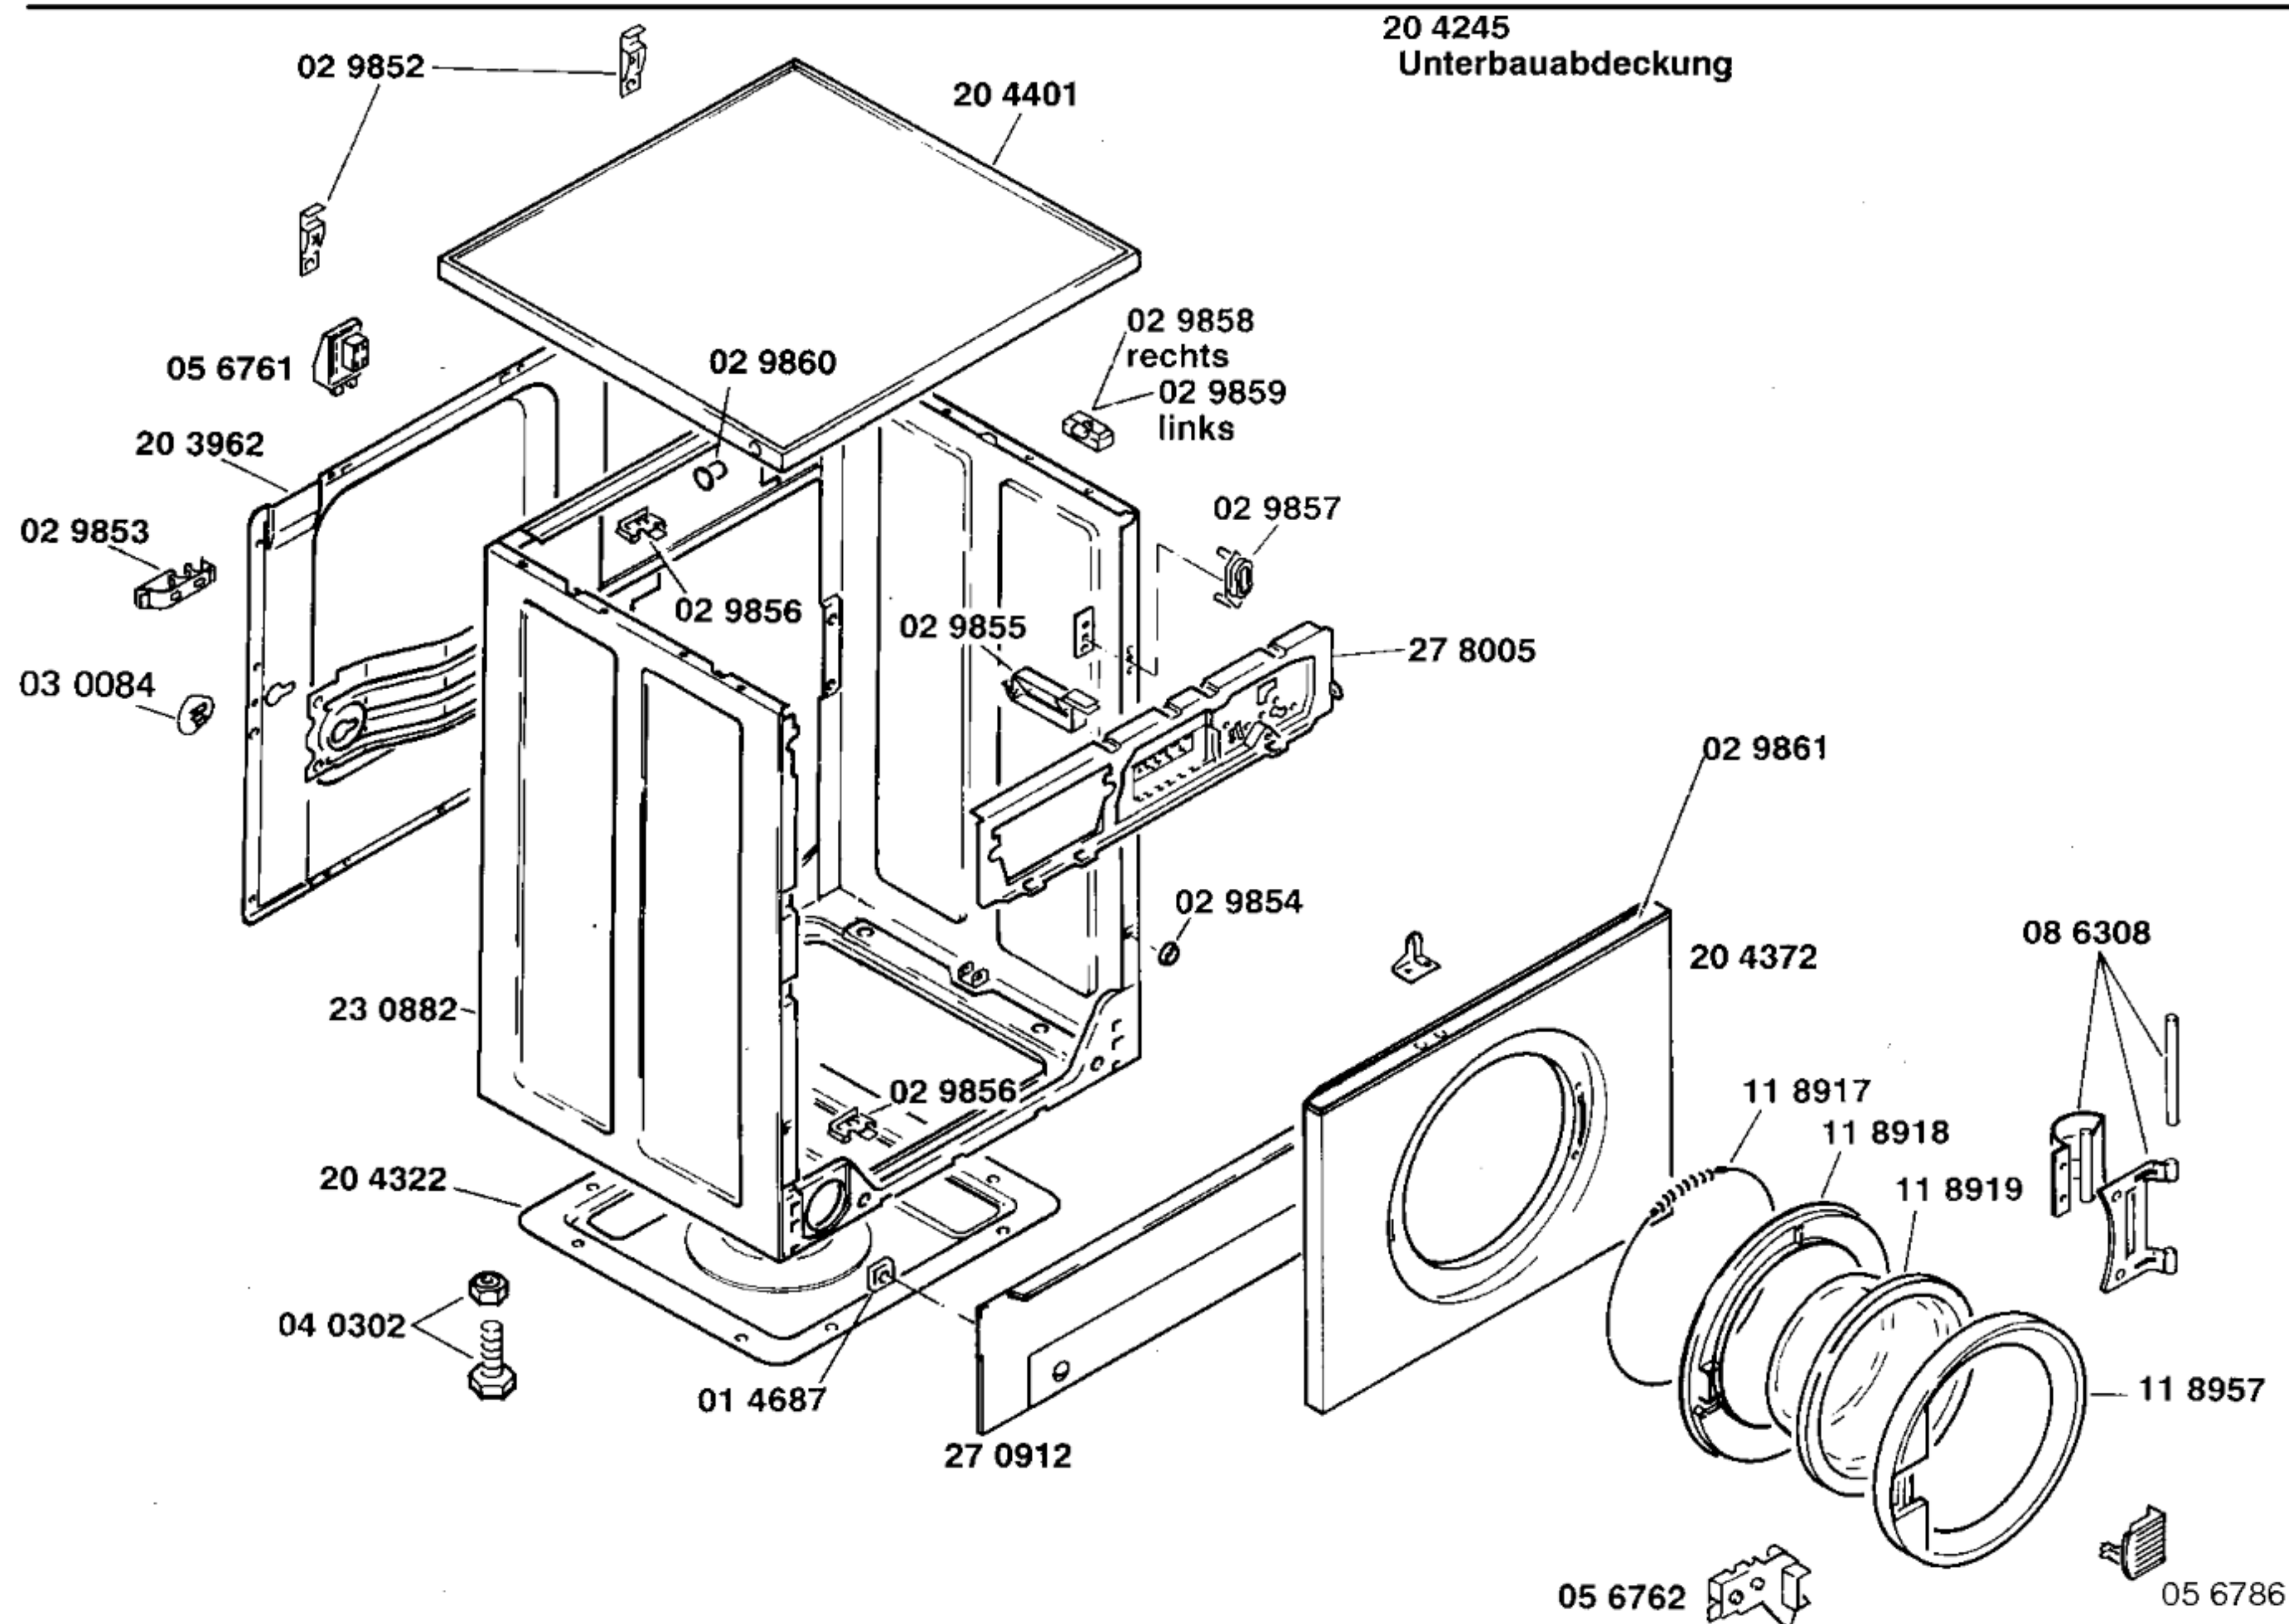

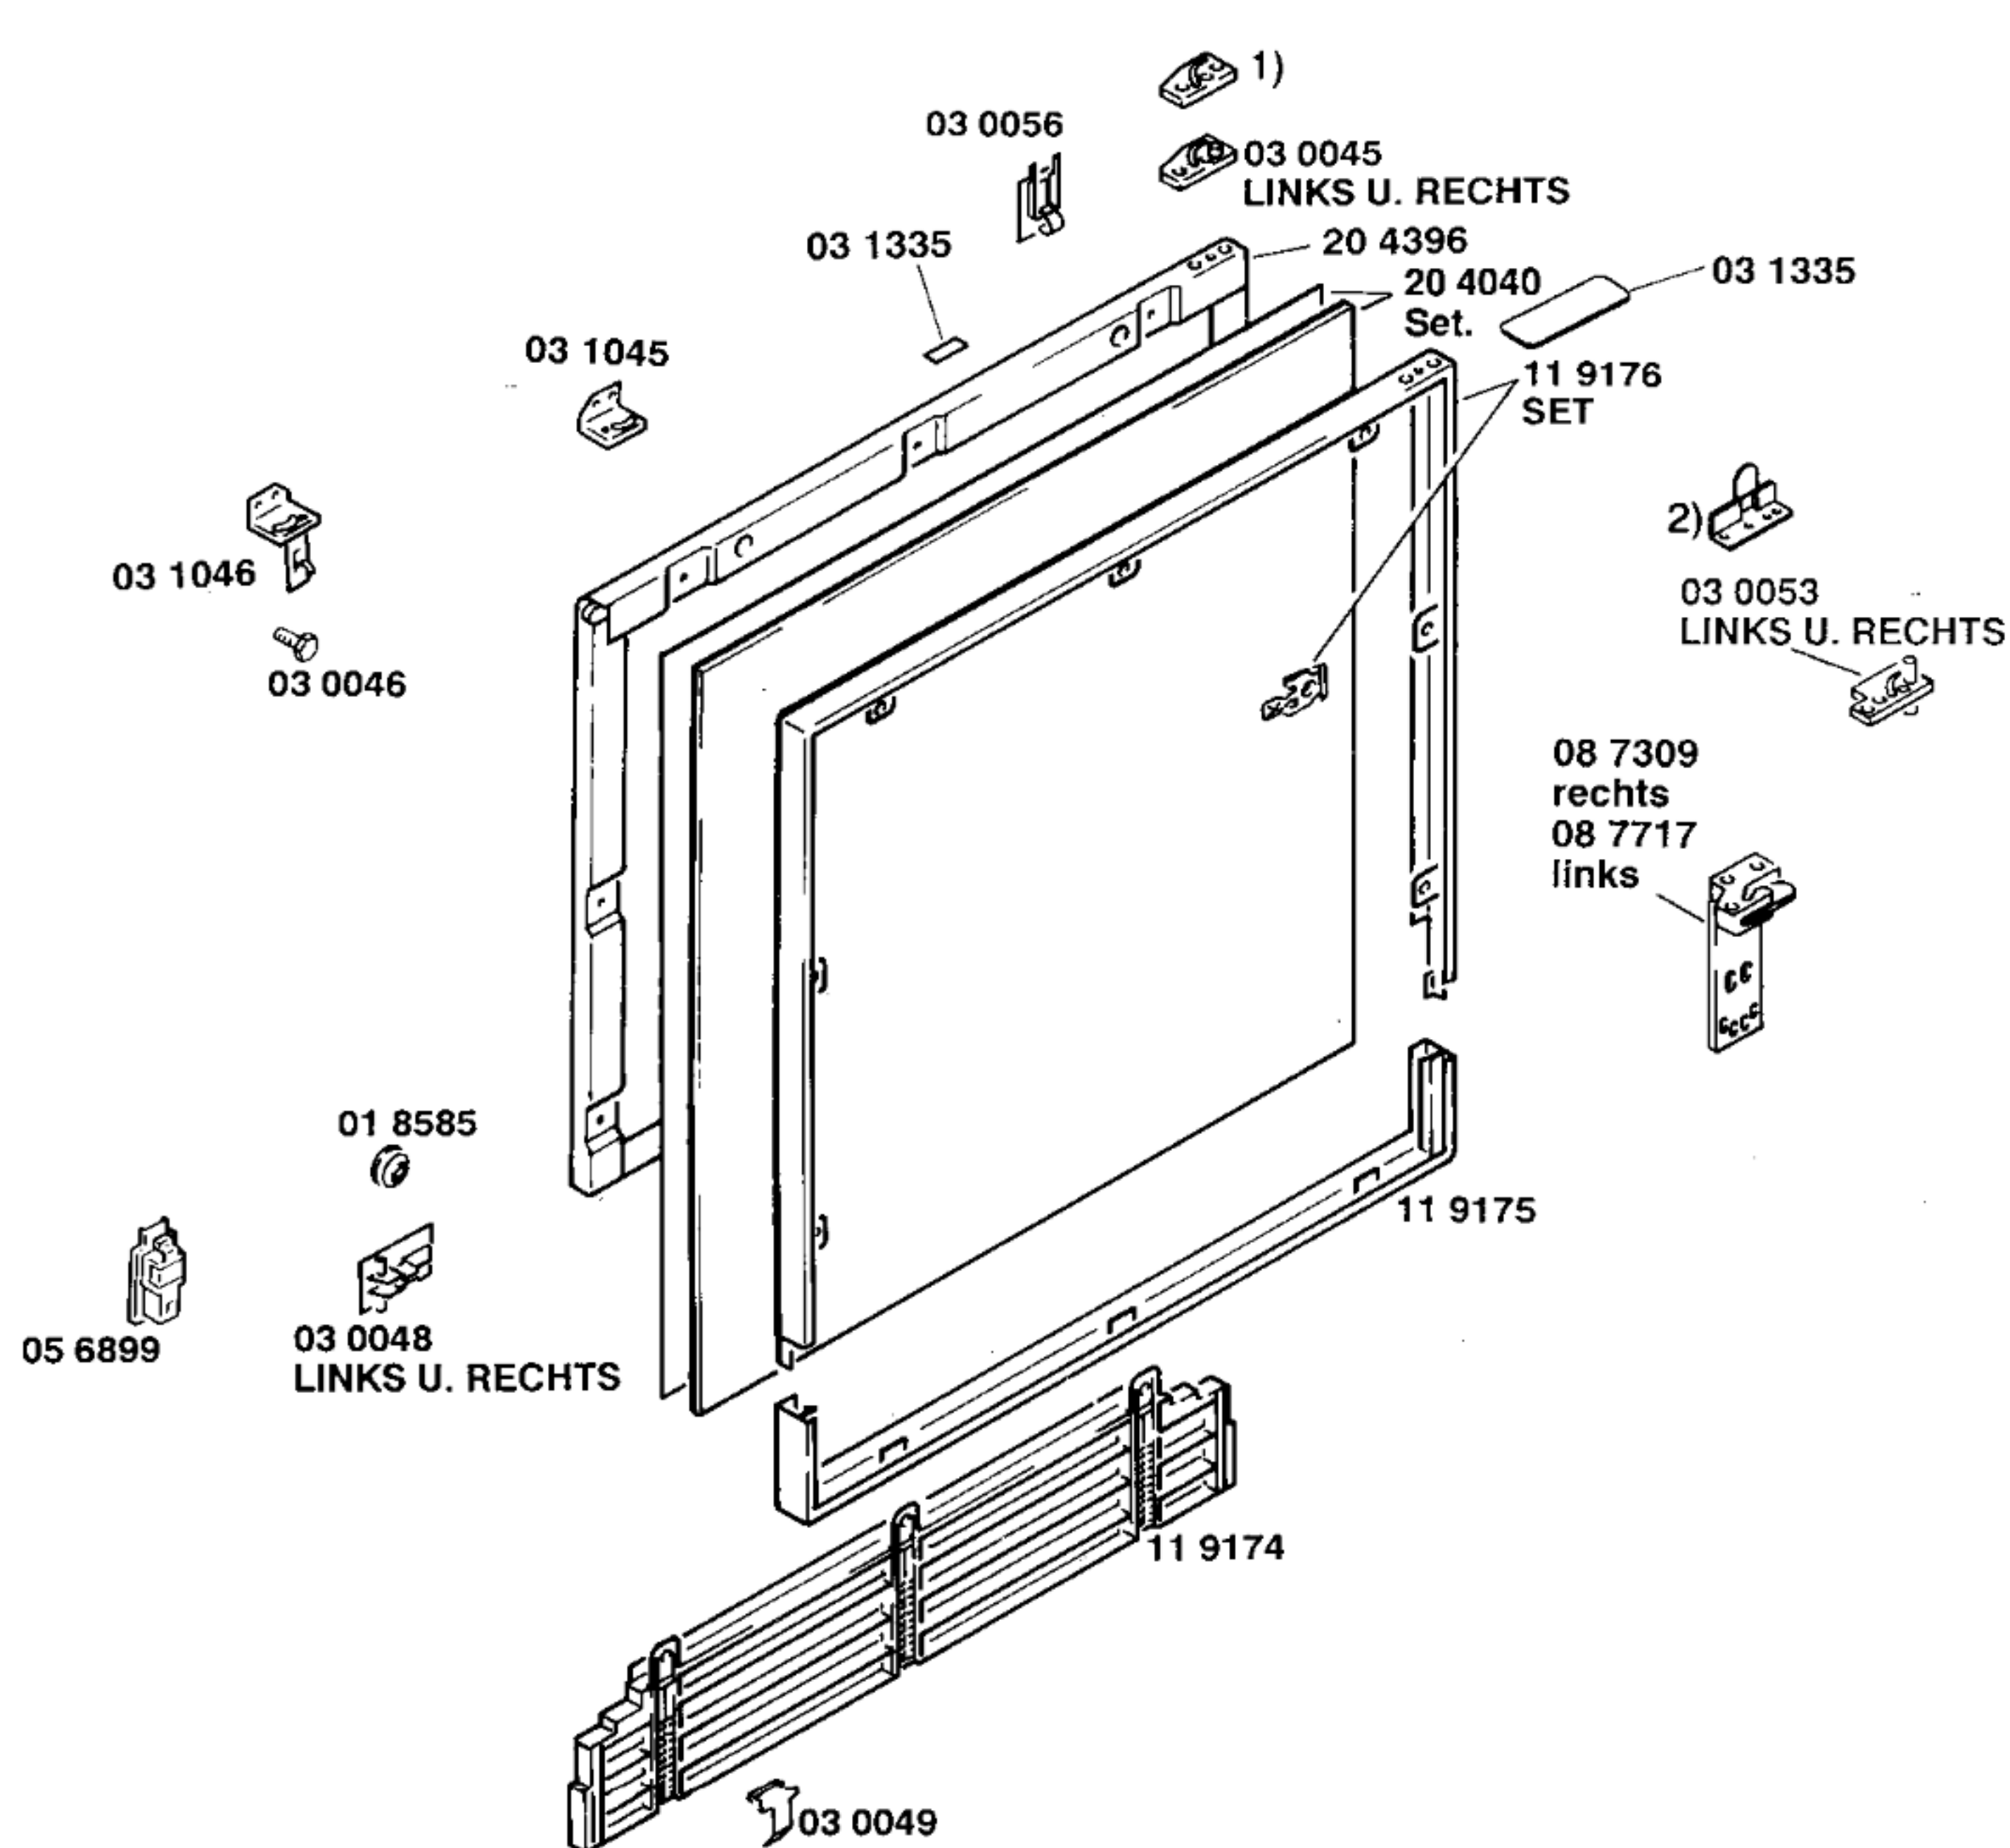

1) 03 0055
LINKS
03 0054
RECHTS

 2) 03 0052
RECHTS
03 0051
LINKS

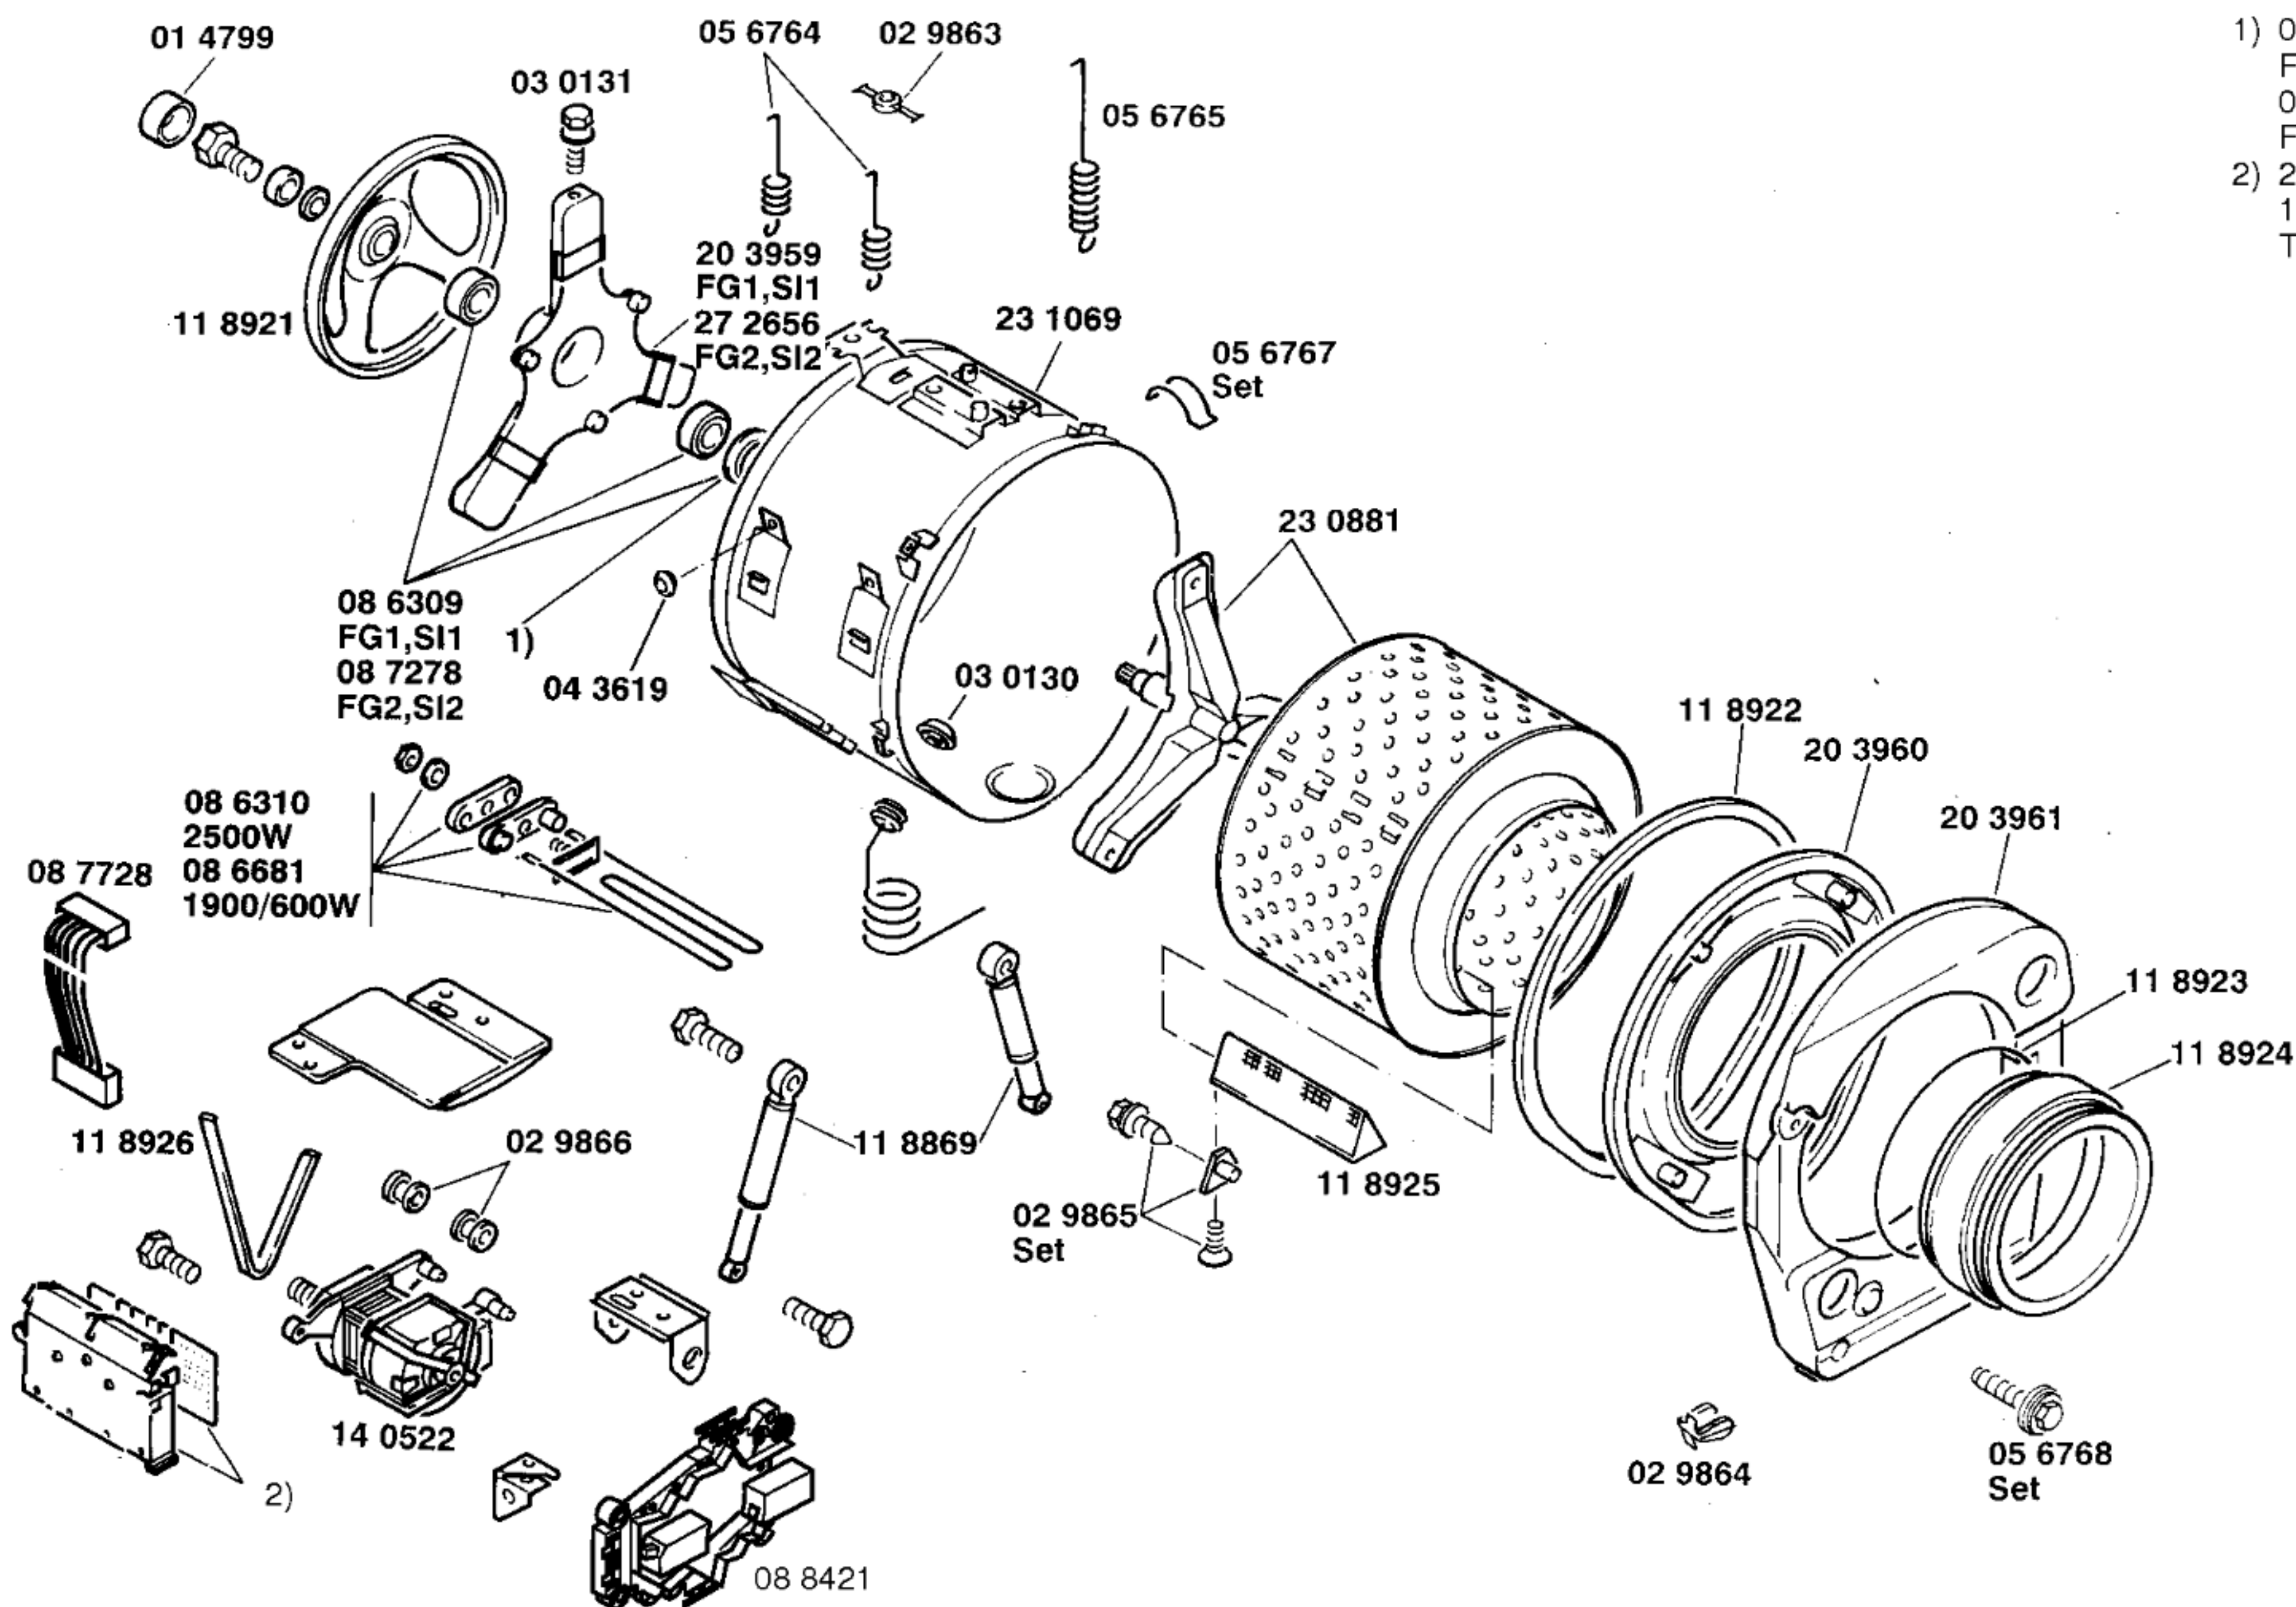

- 1) 05 6766
 FG1, SI1
 05 8436
 FG2, SI2
 2) 27 1717
 15 5272
 Triac-Motorleistung

