


23 5779
 V01,V02,V03
 24 1942
 V04,V05,V06
 24 4898
 V07

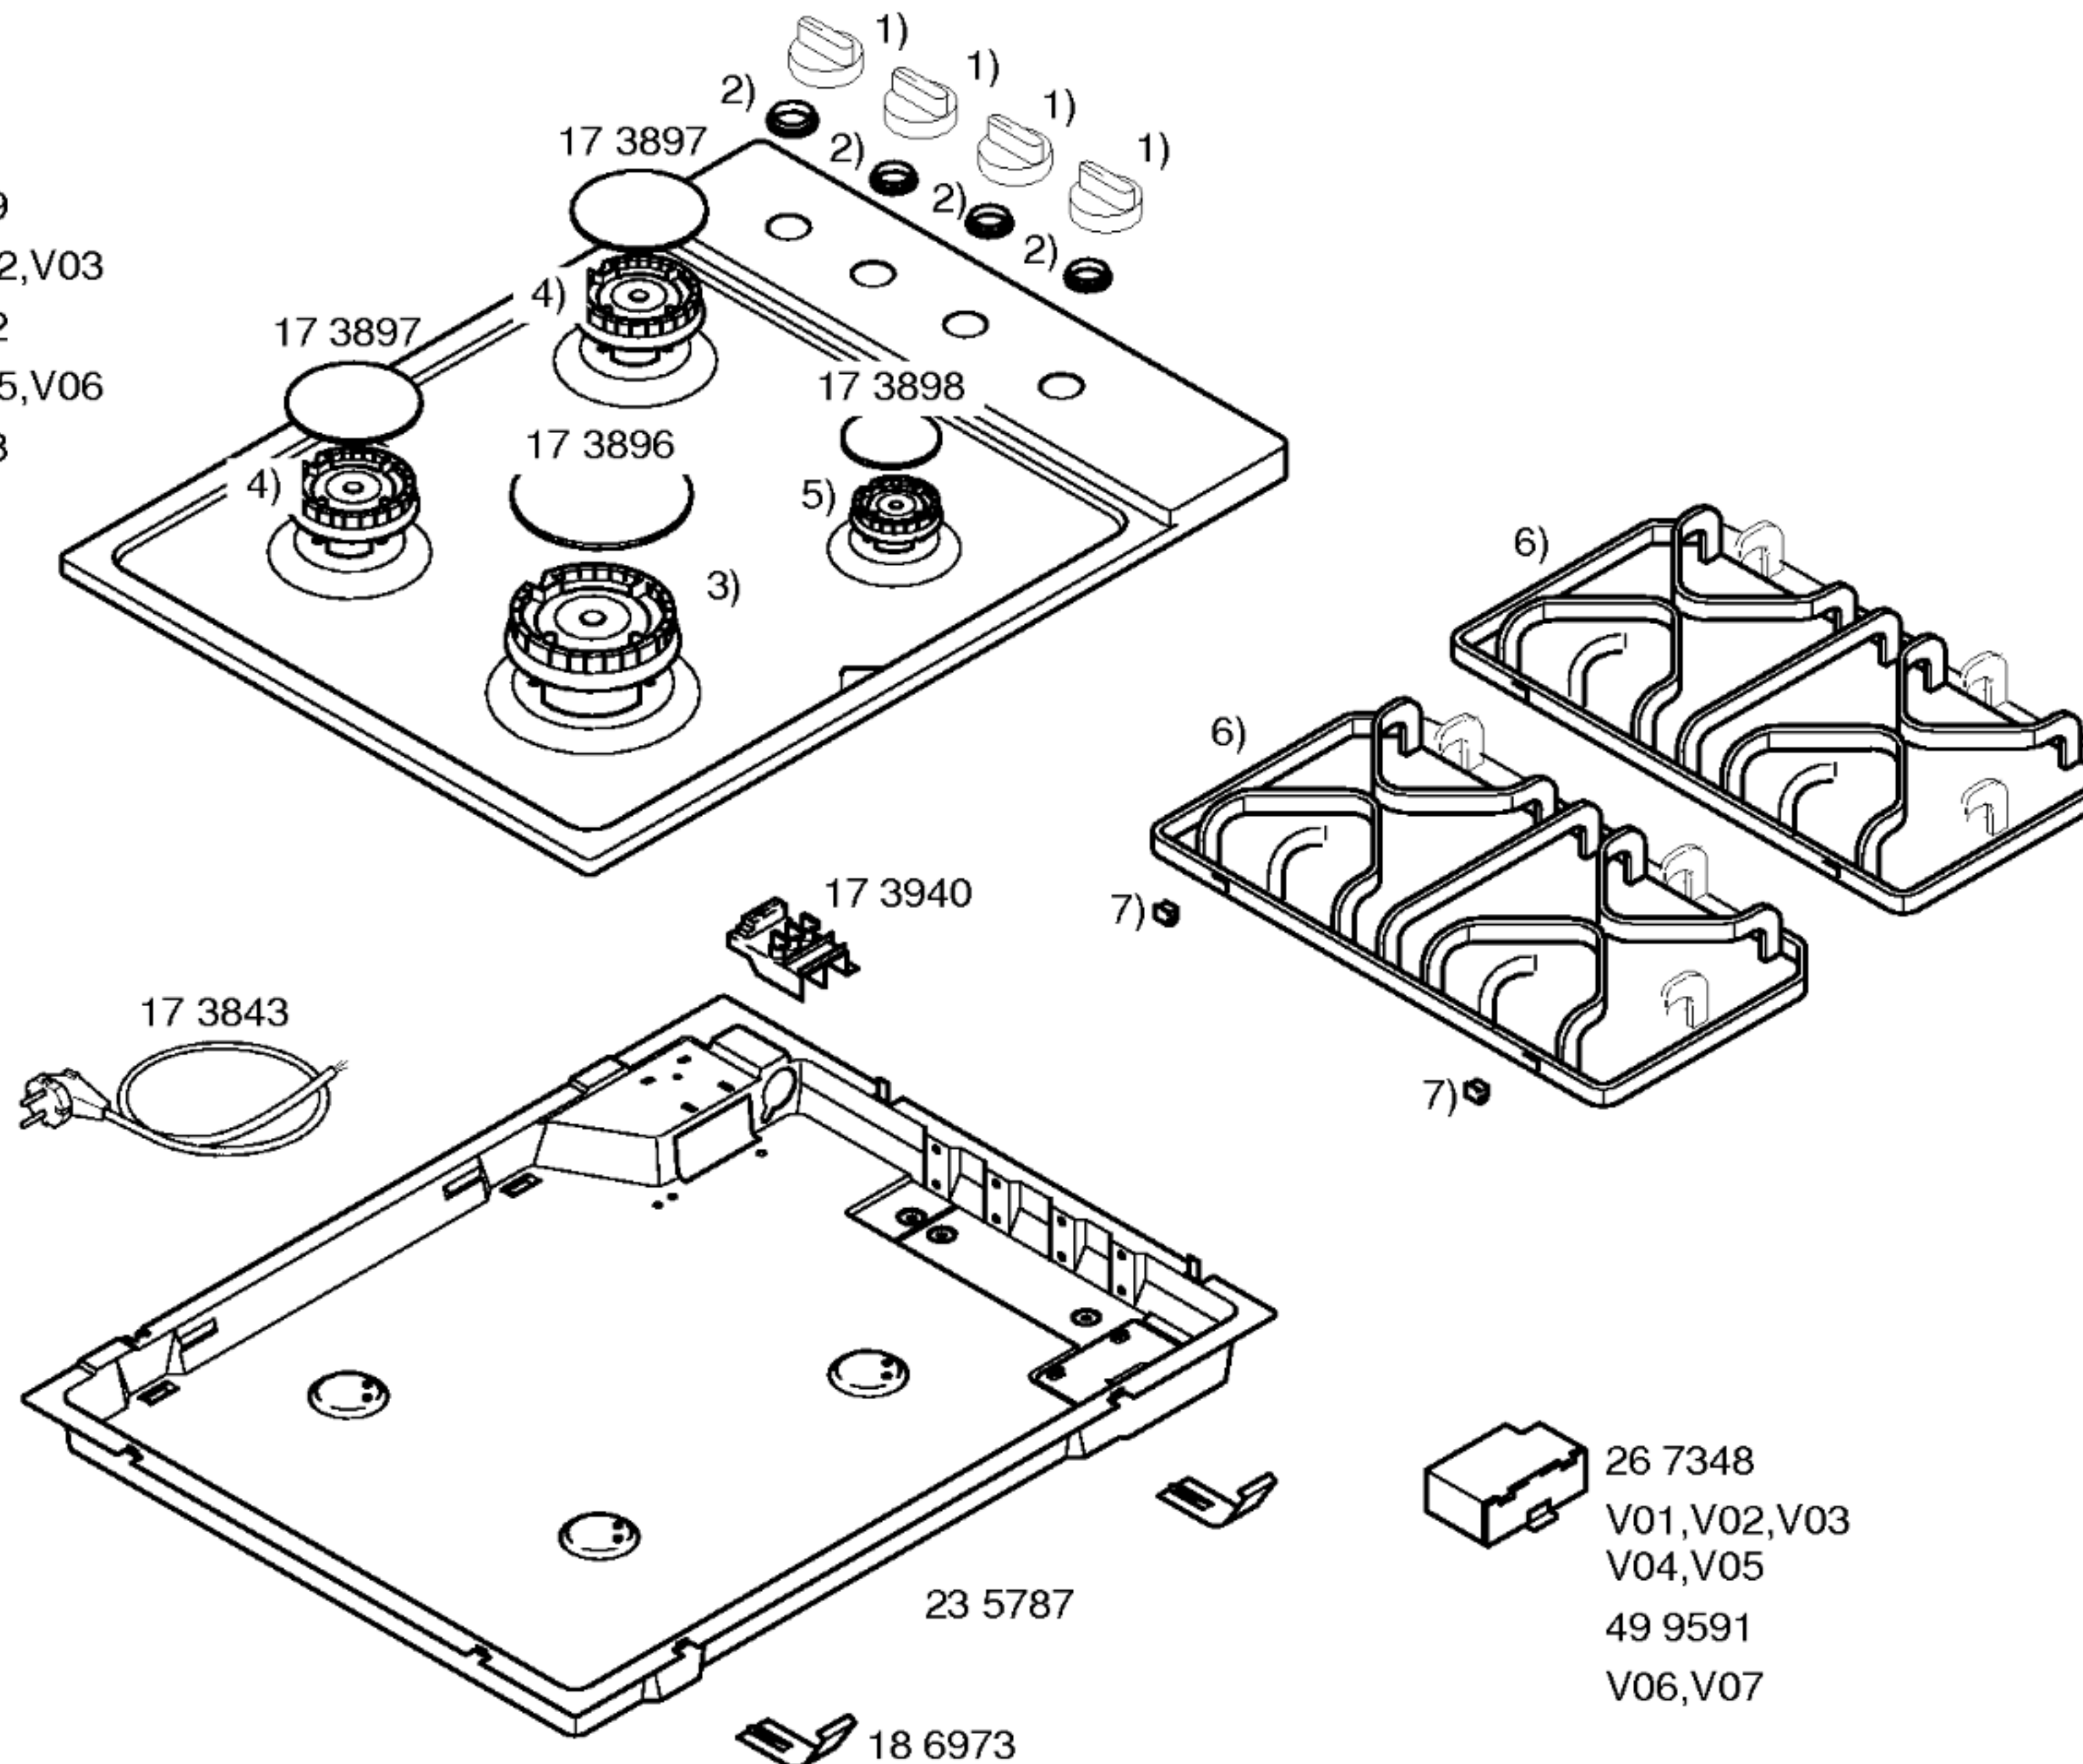


Ident – Nummern – Konstante
 3740

Gebrauchsanweisung
 58 2918
 V01,V02,V03,V04
 V05,V06
 69 9832
 V07
 (NE)
 58 2919
 V01,V02,V03,V04,
 V05,V06
 69 9831
 V07
 (NE)

- 1) 17 3891
 V01,V02,V03
 42 4423
 V04,V05,V06,V07
- 2) 18 8619
 V01
 41 8119
 V02,V03,V04,V05
 V06,V07
- 3) 26 7356
- 4) 26 7357
- 5) 26 7359
- 6) 36 2412
- 7) 18 3762

26 7348
 V01,V02,V03
 V04,V05
 49 9591
 V06,V07

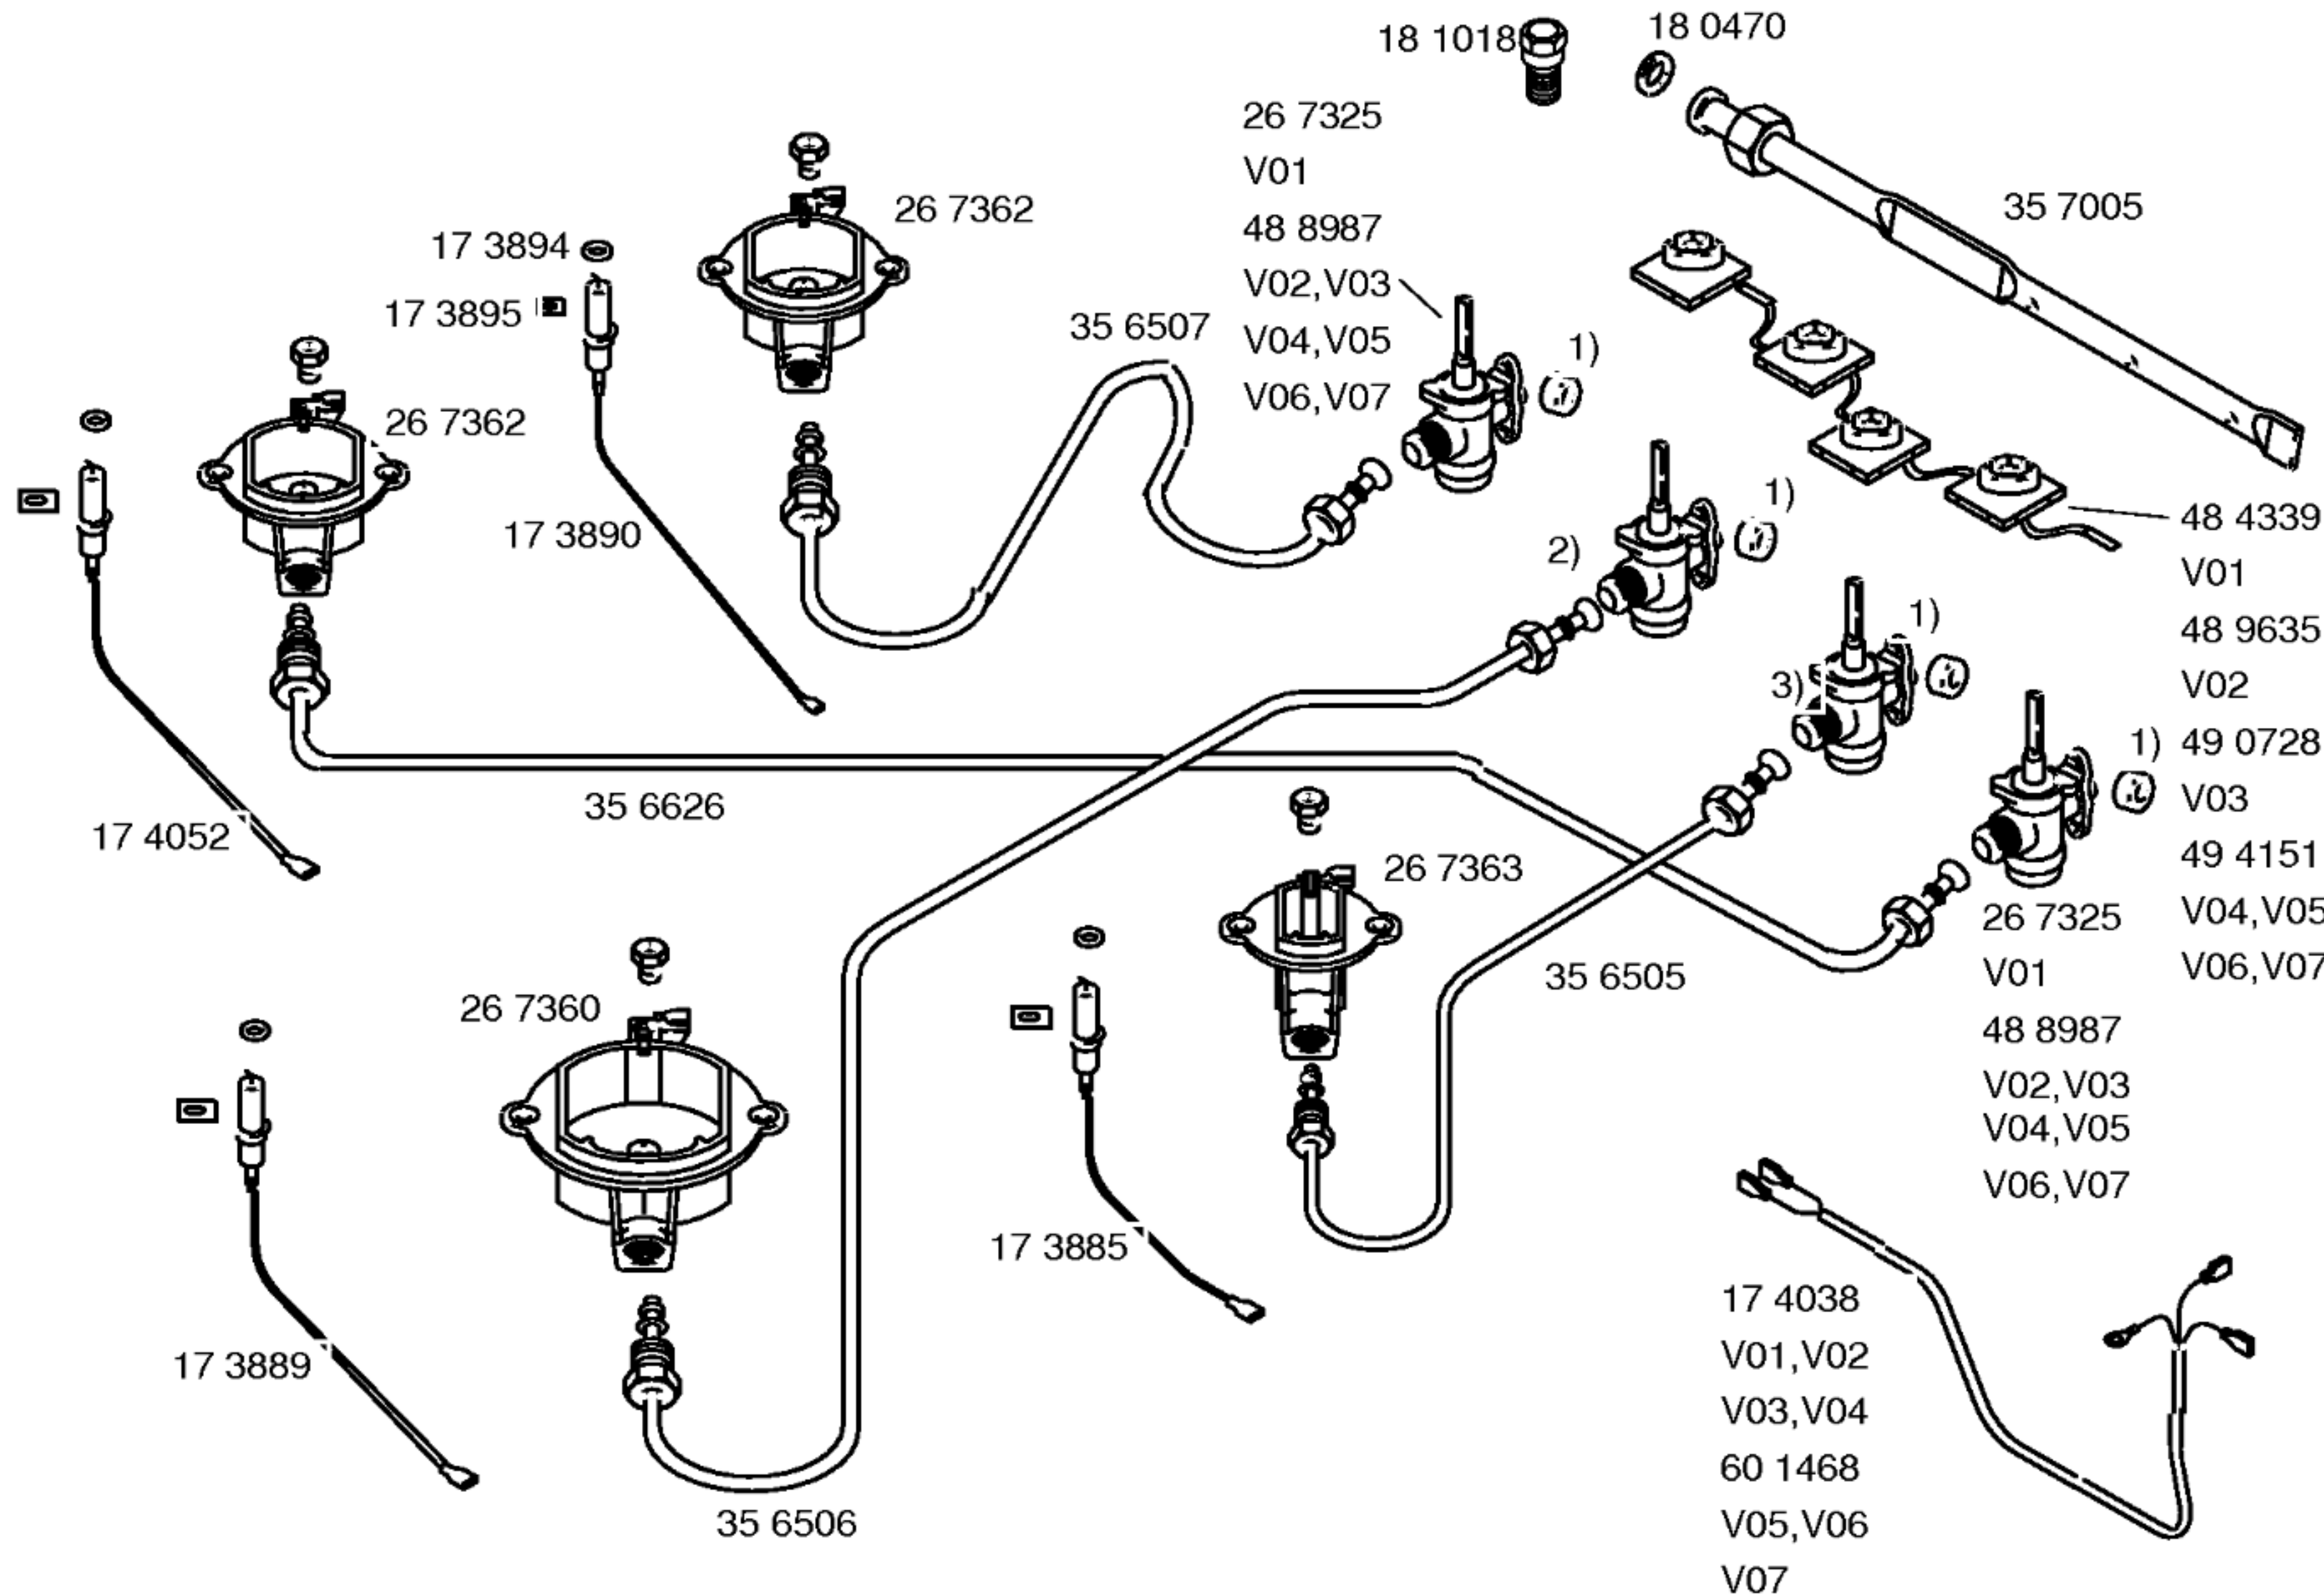

Ident - Nummern - Konstante
 3740

- 1) 16 9339
- 2) 26 7326
- V01
- 48 8988
- V02, V03, V04, V05
- V06, V07
- 3) 26 7324
- V01
- 48 8986
- V02, V03, V04, V05
- V06, V07

Duesensatz Für:
 EG H/E G20 20mbar
 17 4049

FG G30/31 30mbar
 17 4048

EG H/E G20 20mbar
 (inkl. Bypass-Dusen)
 41 7597

FG G30/31 30mbar
 (inkl. Bypass-Dusen)
 41 7837