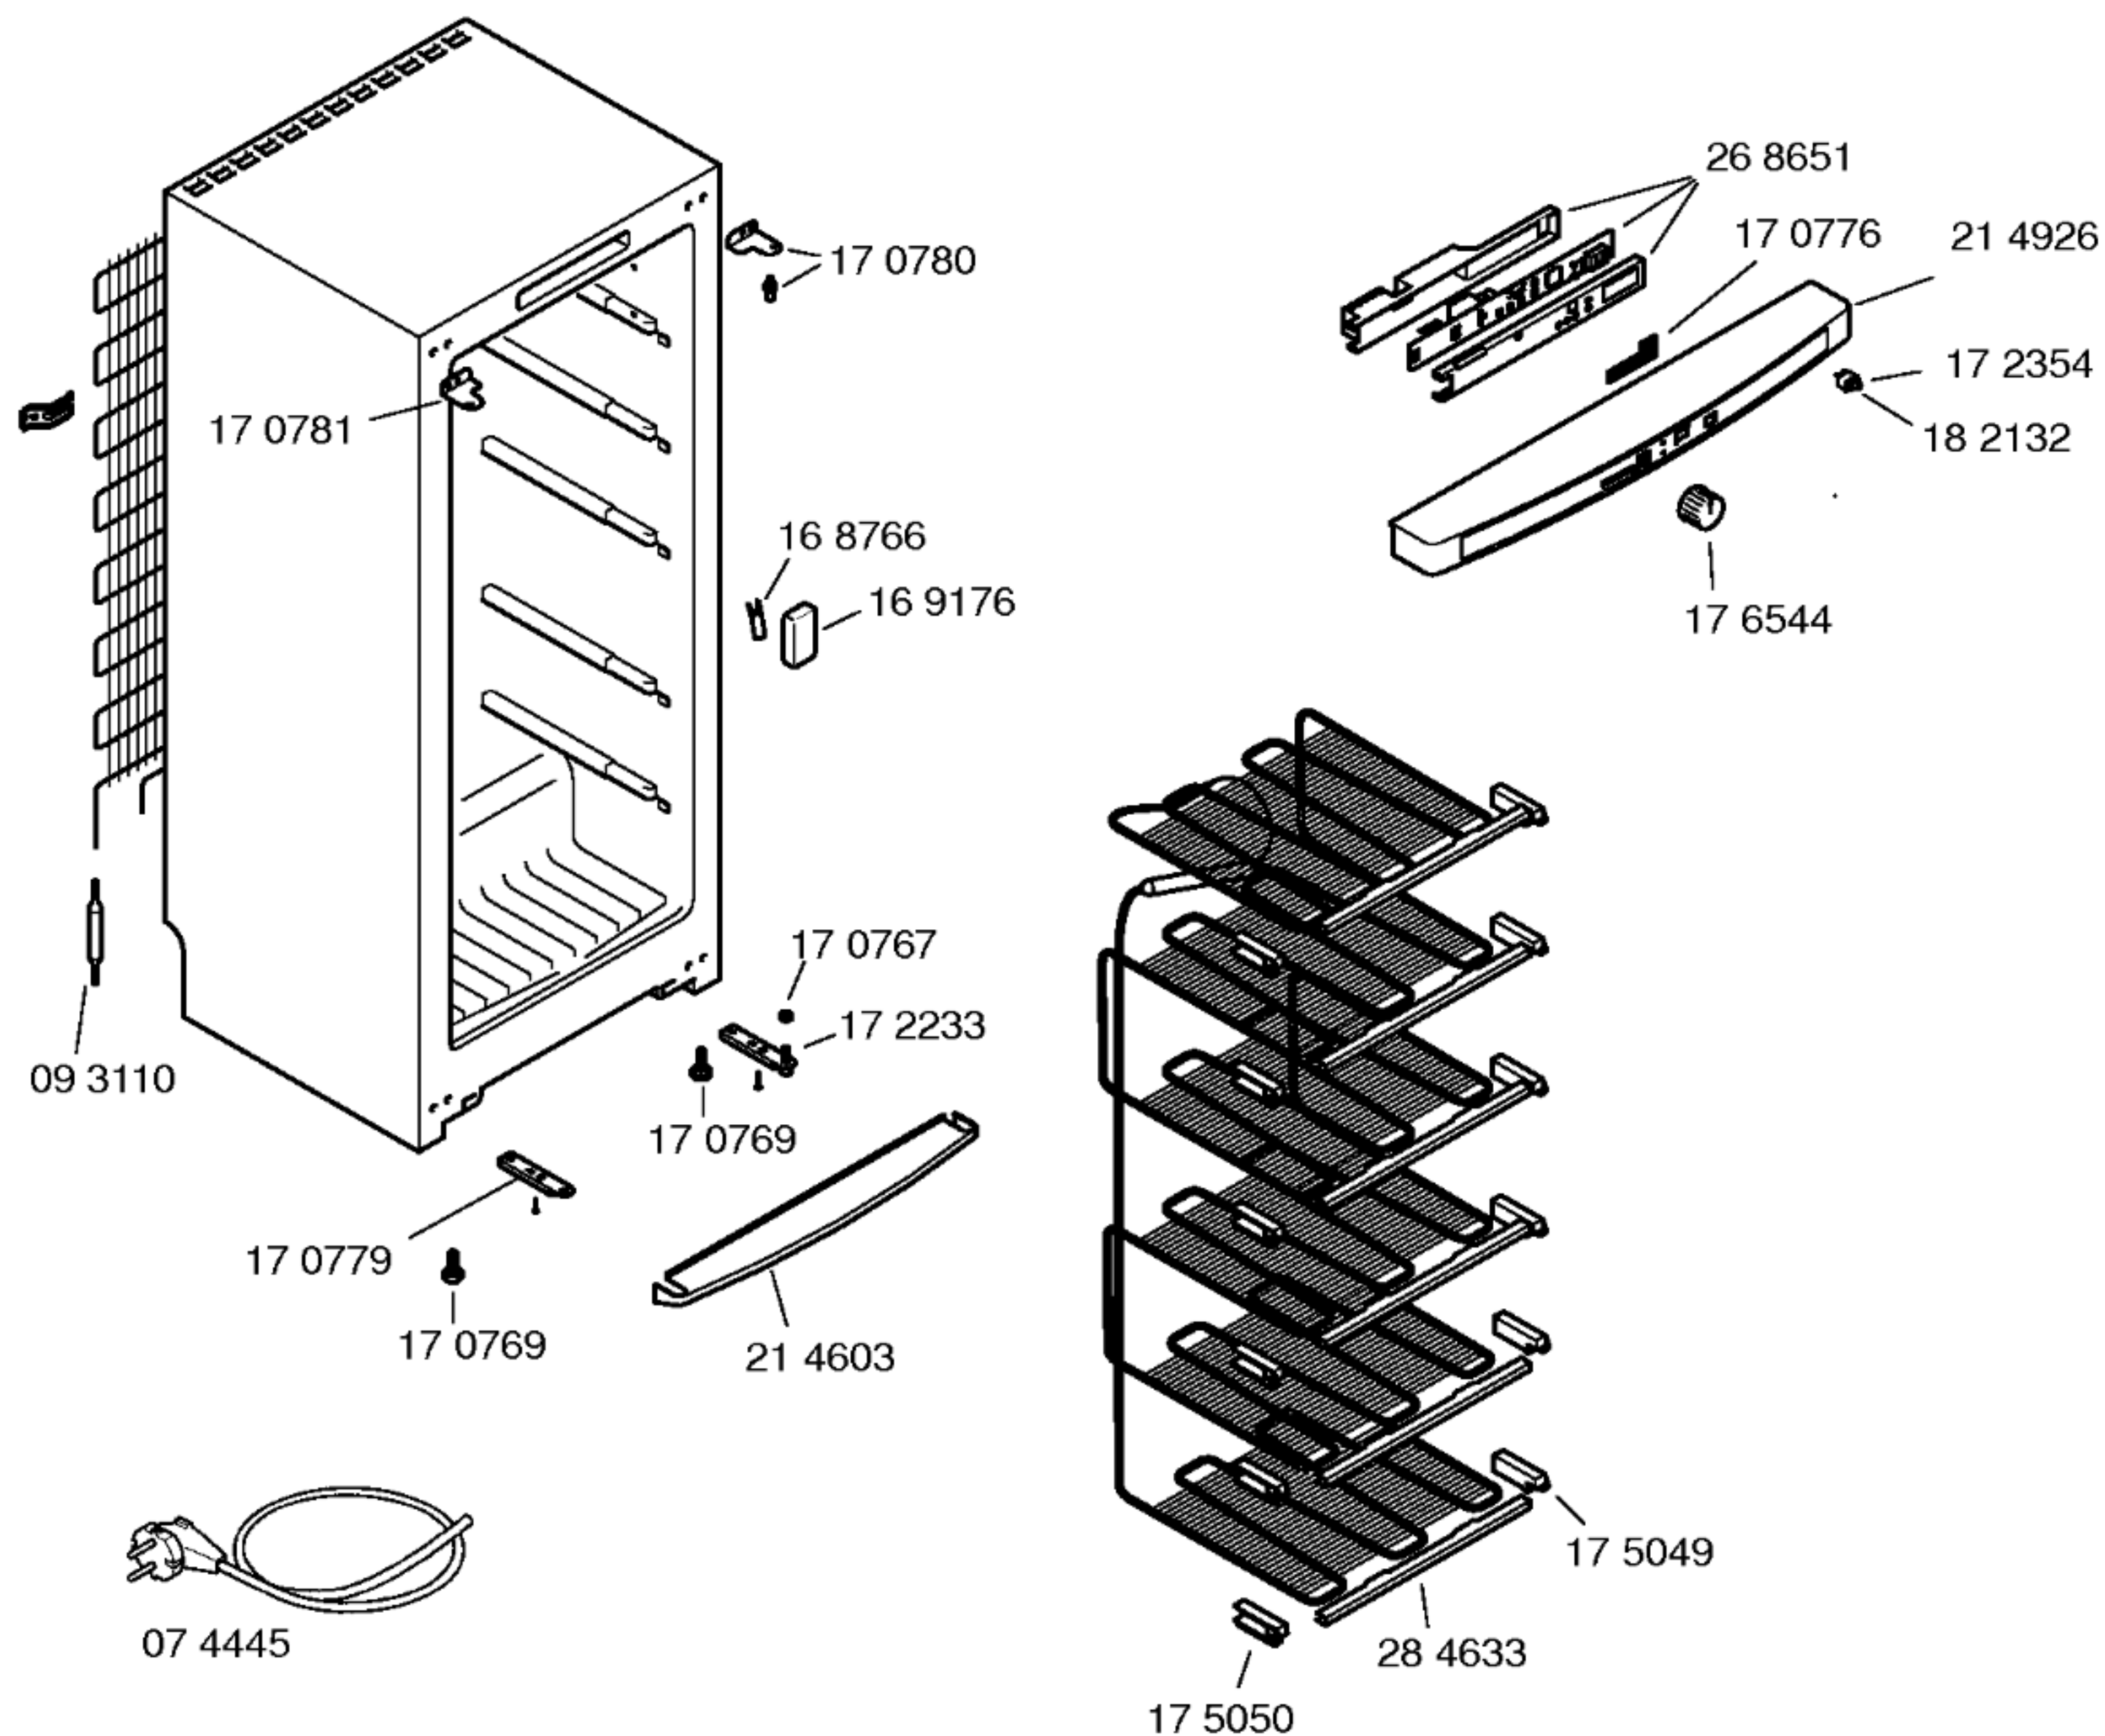 



 Mat. – Nr. – Konstante
3740

 
 Gebrauchsanweisung
52 8124
(D,GB,F,I,NL)

 
 Montageanleitung
52 2772
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

 Beistellsatz
26 5629

 Side by Side
Beistellsatz zu KSR/KSK
48 1044

 Promotionartikel
Kühltasche
362403

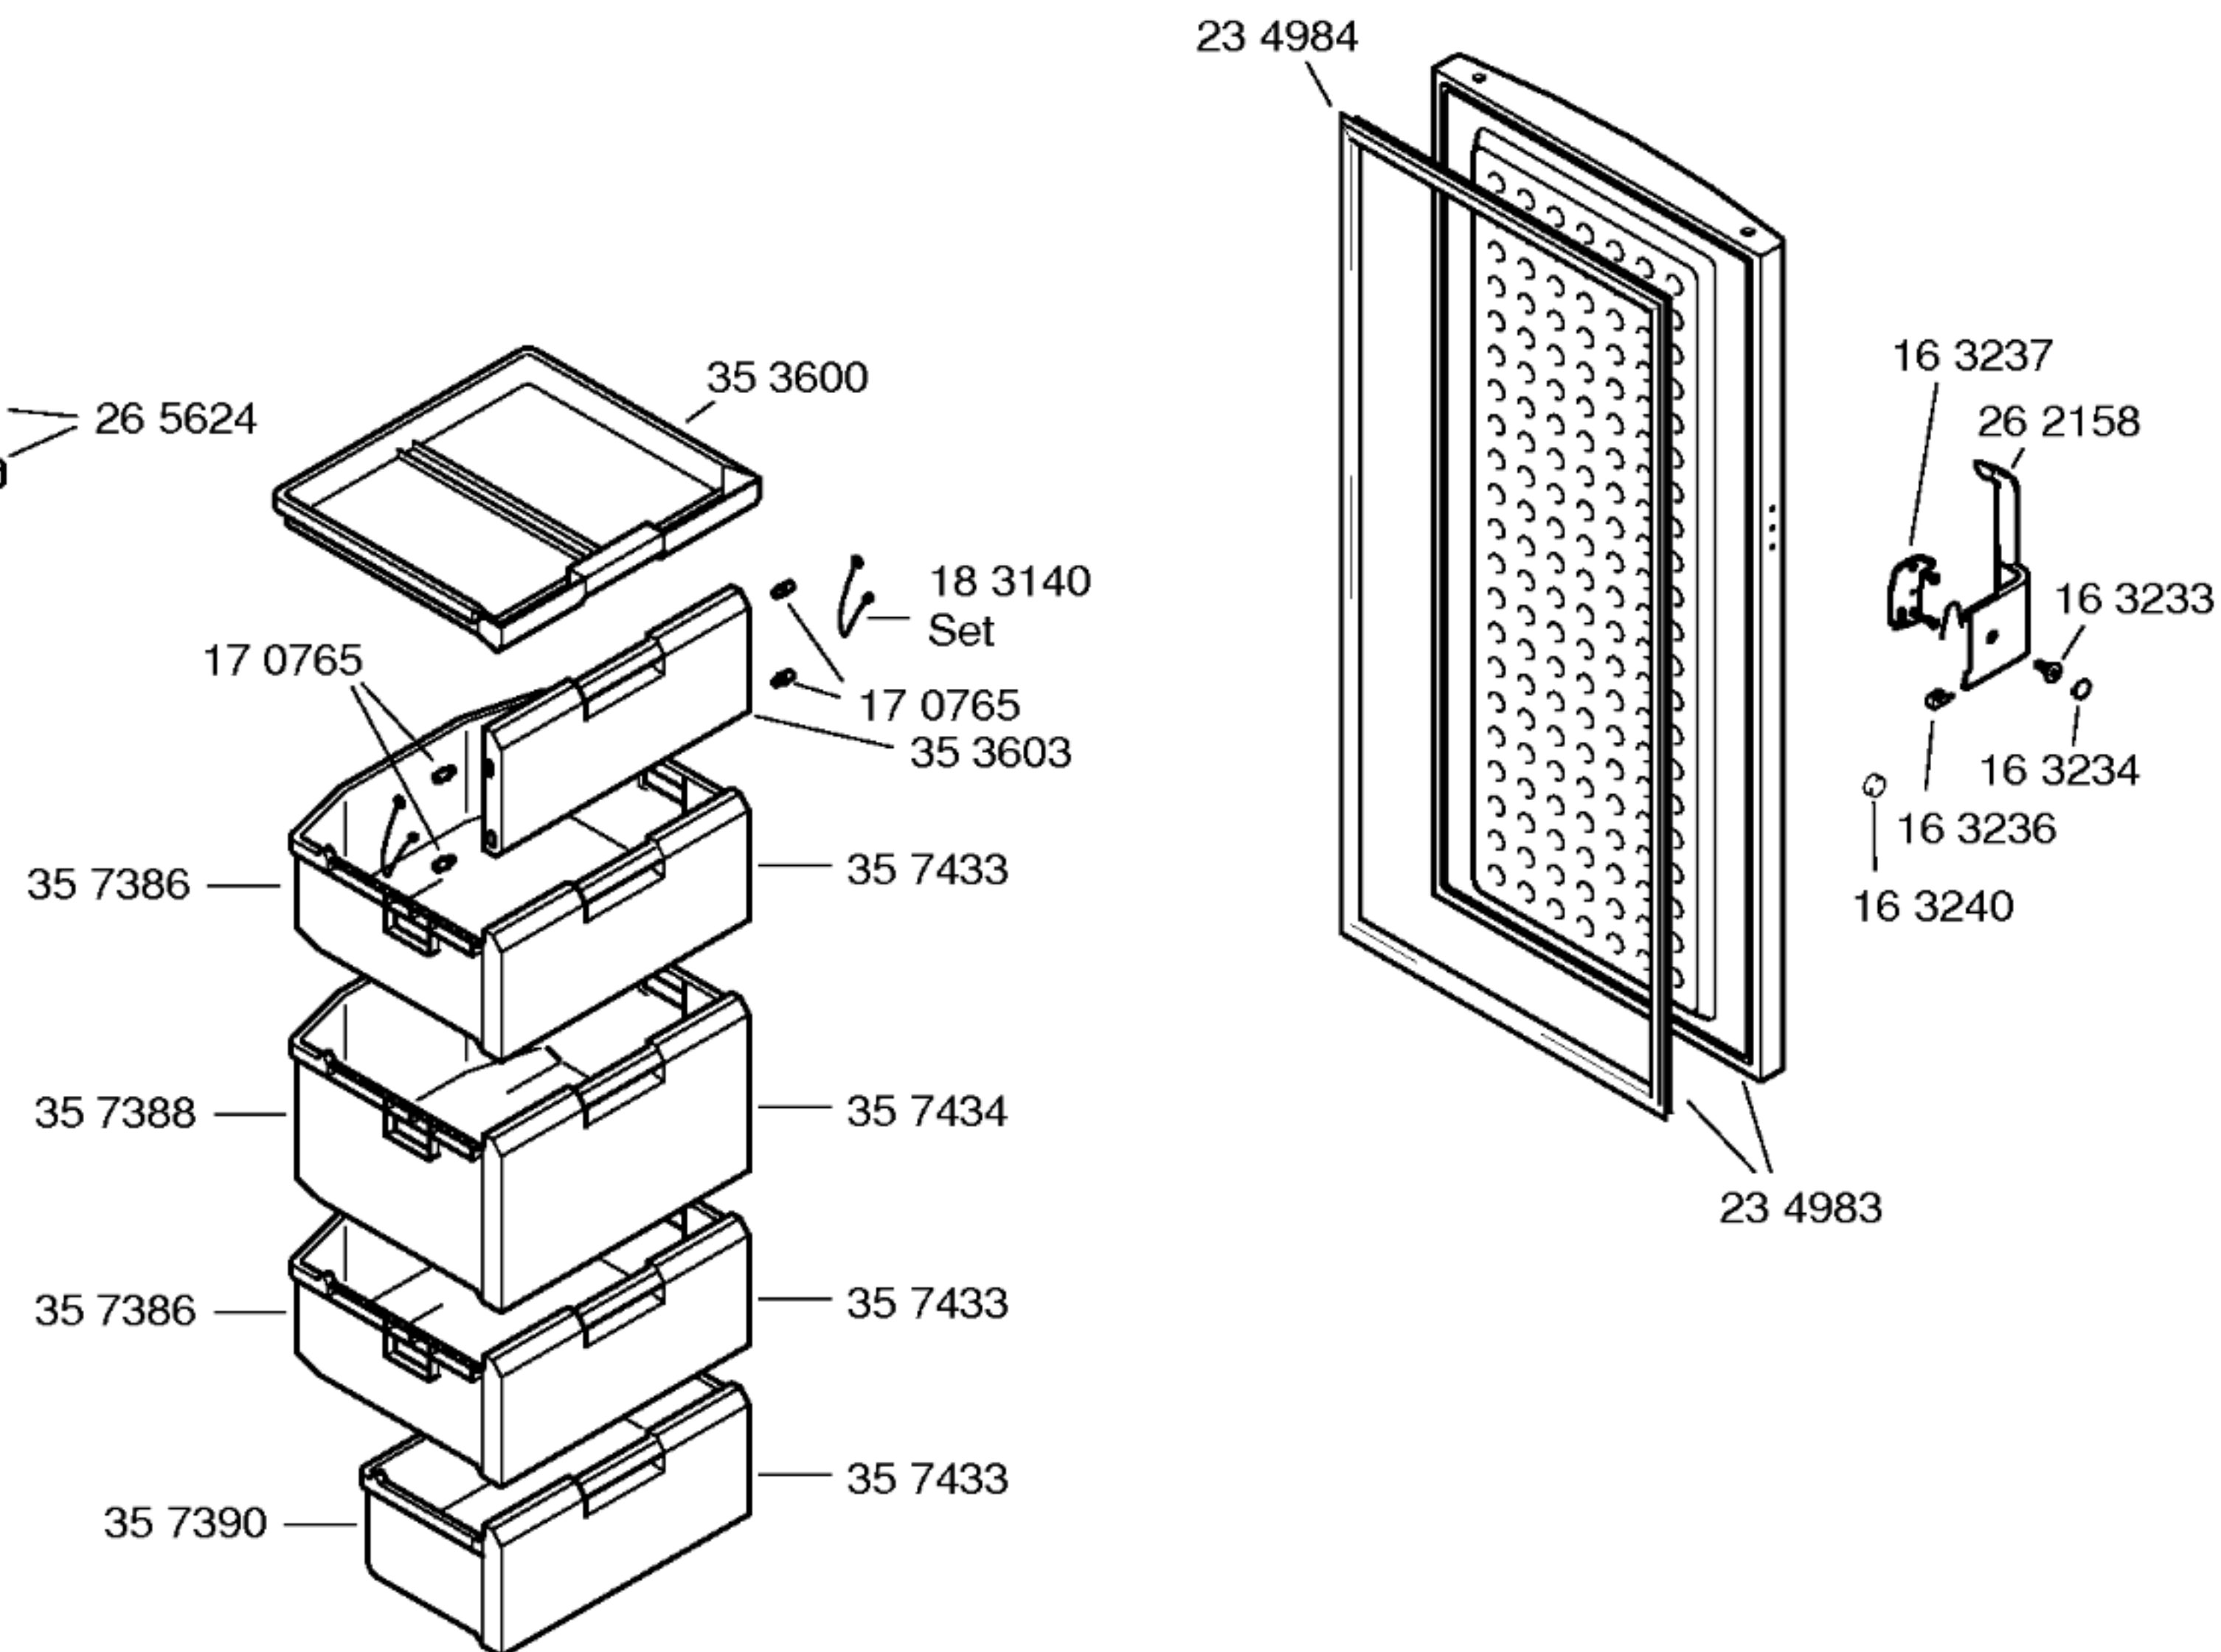

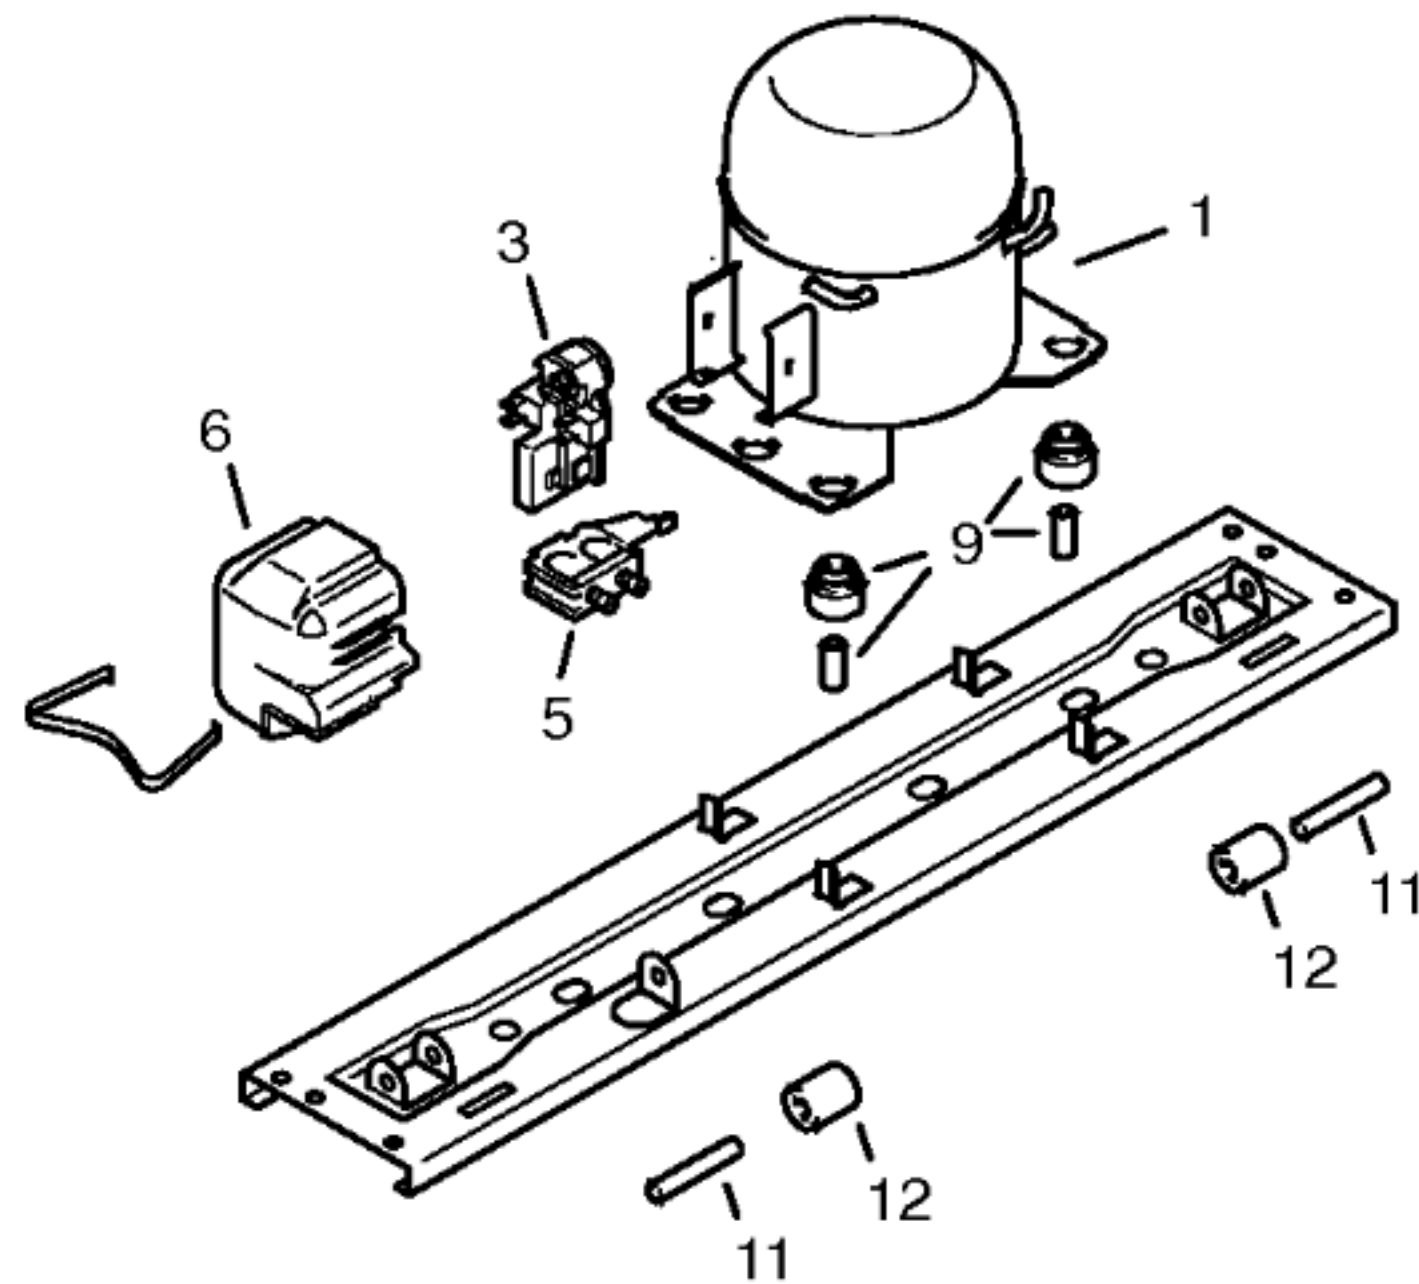

Pos.	V01		
	Danfoss		
	NLE11 KK2		
1	14 2163		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	20 9294		
9	050166		
10			
11	01 9017		
12	01 9016		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit Anlaufstrom/Starting current/Cour de démarrage Widerstand/Resistance/Résistance Hi/main/prin Hi/aux	l/h A Ω Ω	Danfoss NLE11 KK2 2007		
Temp.-Regler/Thermostat Typ/Type Regelstellung/Position Schaltwerte/Switching values Valeurs de commutation	"warm" "kalt" "alarm"			
Füllmenge/Fill.quantity/Charge	R600a			
Anschlußwert/Conn.load/Puiss. connectée	W			
Heizung/Heater/Chauffage Widerstand/Resistance/Résistance Leistung/Power/Puissance	Ω W			
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance	Ω			
NTC-Fühler / Sensor	$^{\circ}\text{C}$ $\text{k}\Omega$ +10 9,95 $\pm 0,18$ -18 43,31 $\pm 1,10$ +5 12,70 $\pm 0,18$ -22 54,66 $\pm 1,59$ 0 16,33 $\pm 0,16$ -26 69,42 $\pm 2,29$			
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Spannung/Voltage/Tension	Ω V			