
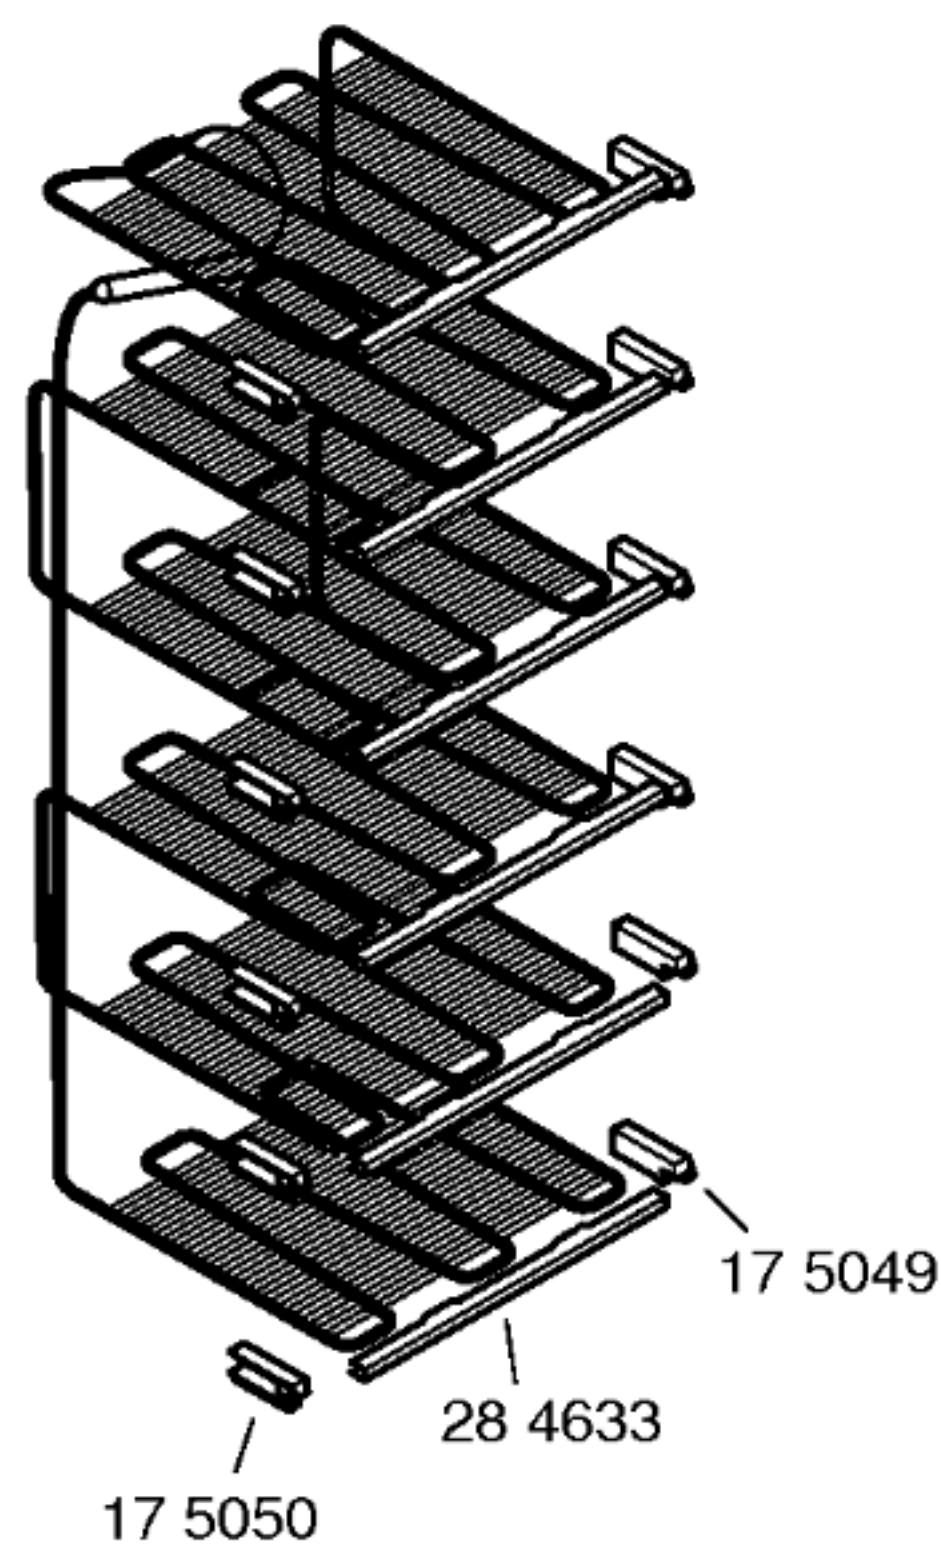
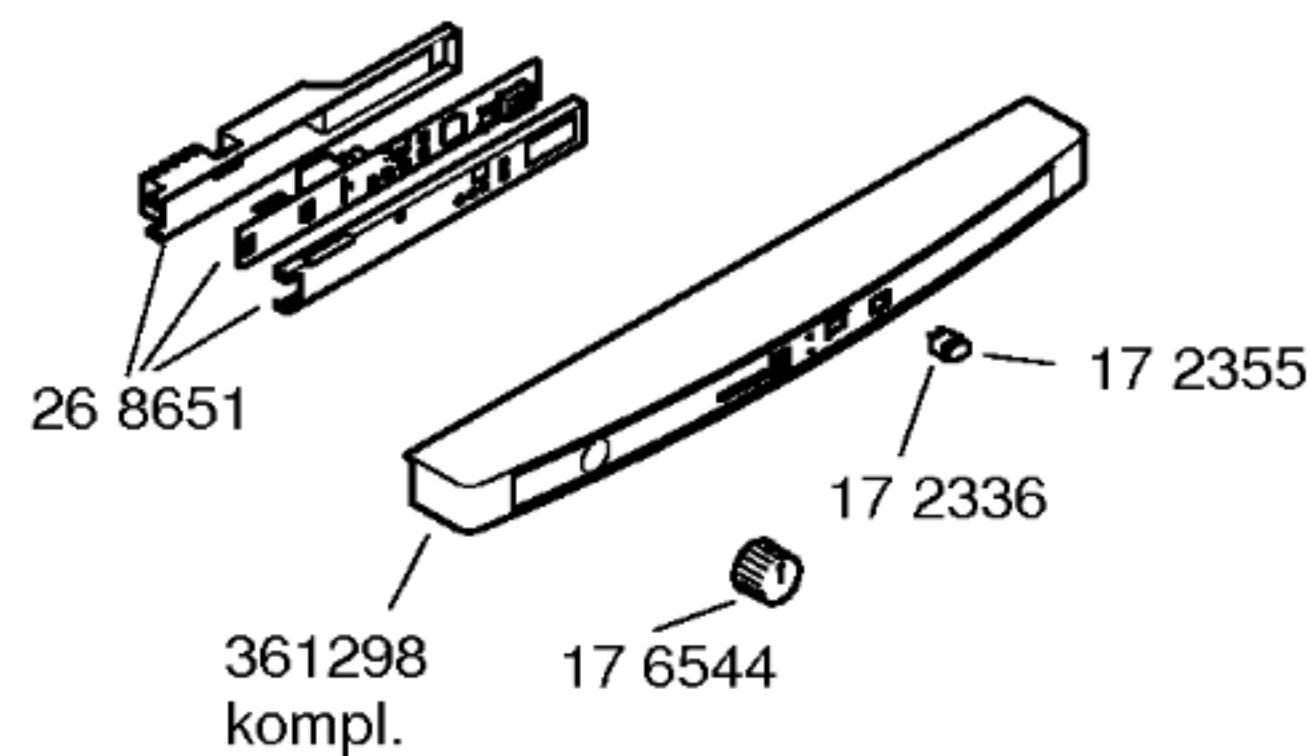


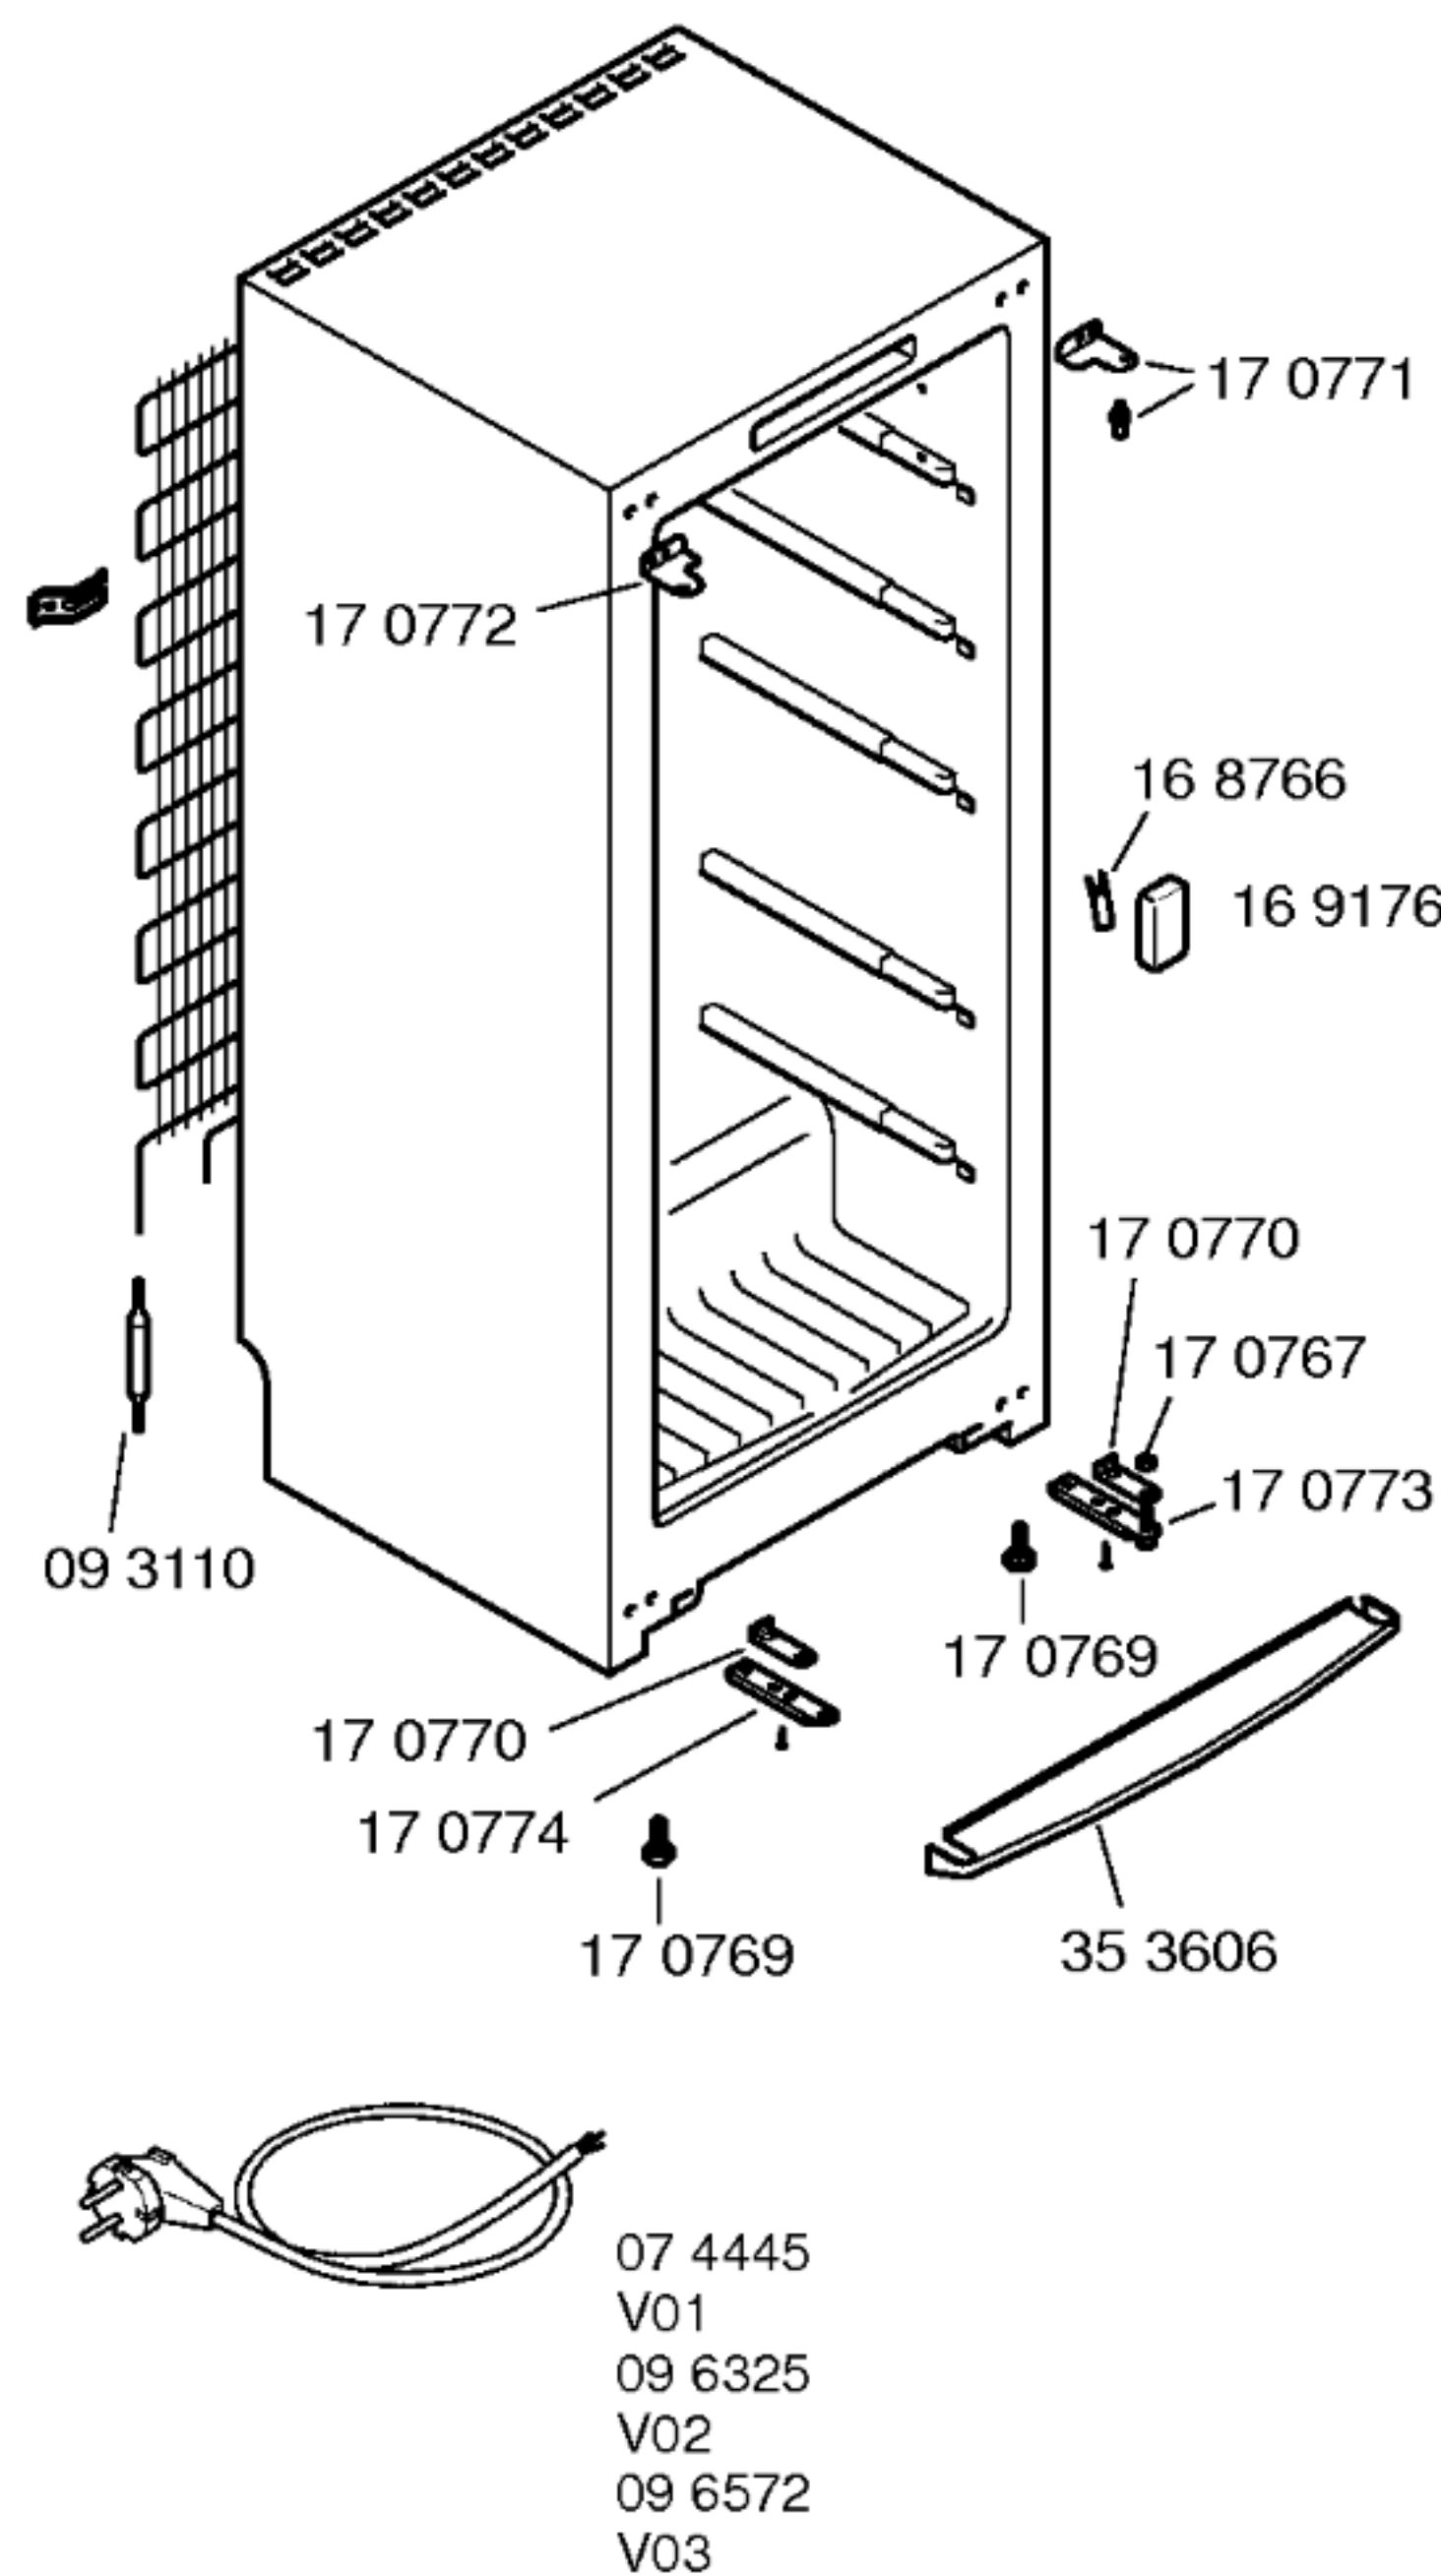



Mat. – Nr. – Konstante
3740

Gebrauchsanweisung
52 8124
(D,GB,F,I,NL,E,P))

Montageanleitung
52 2772
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5629

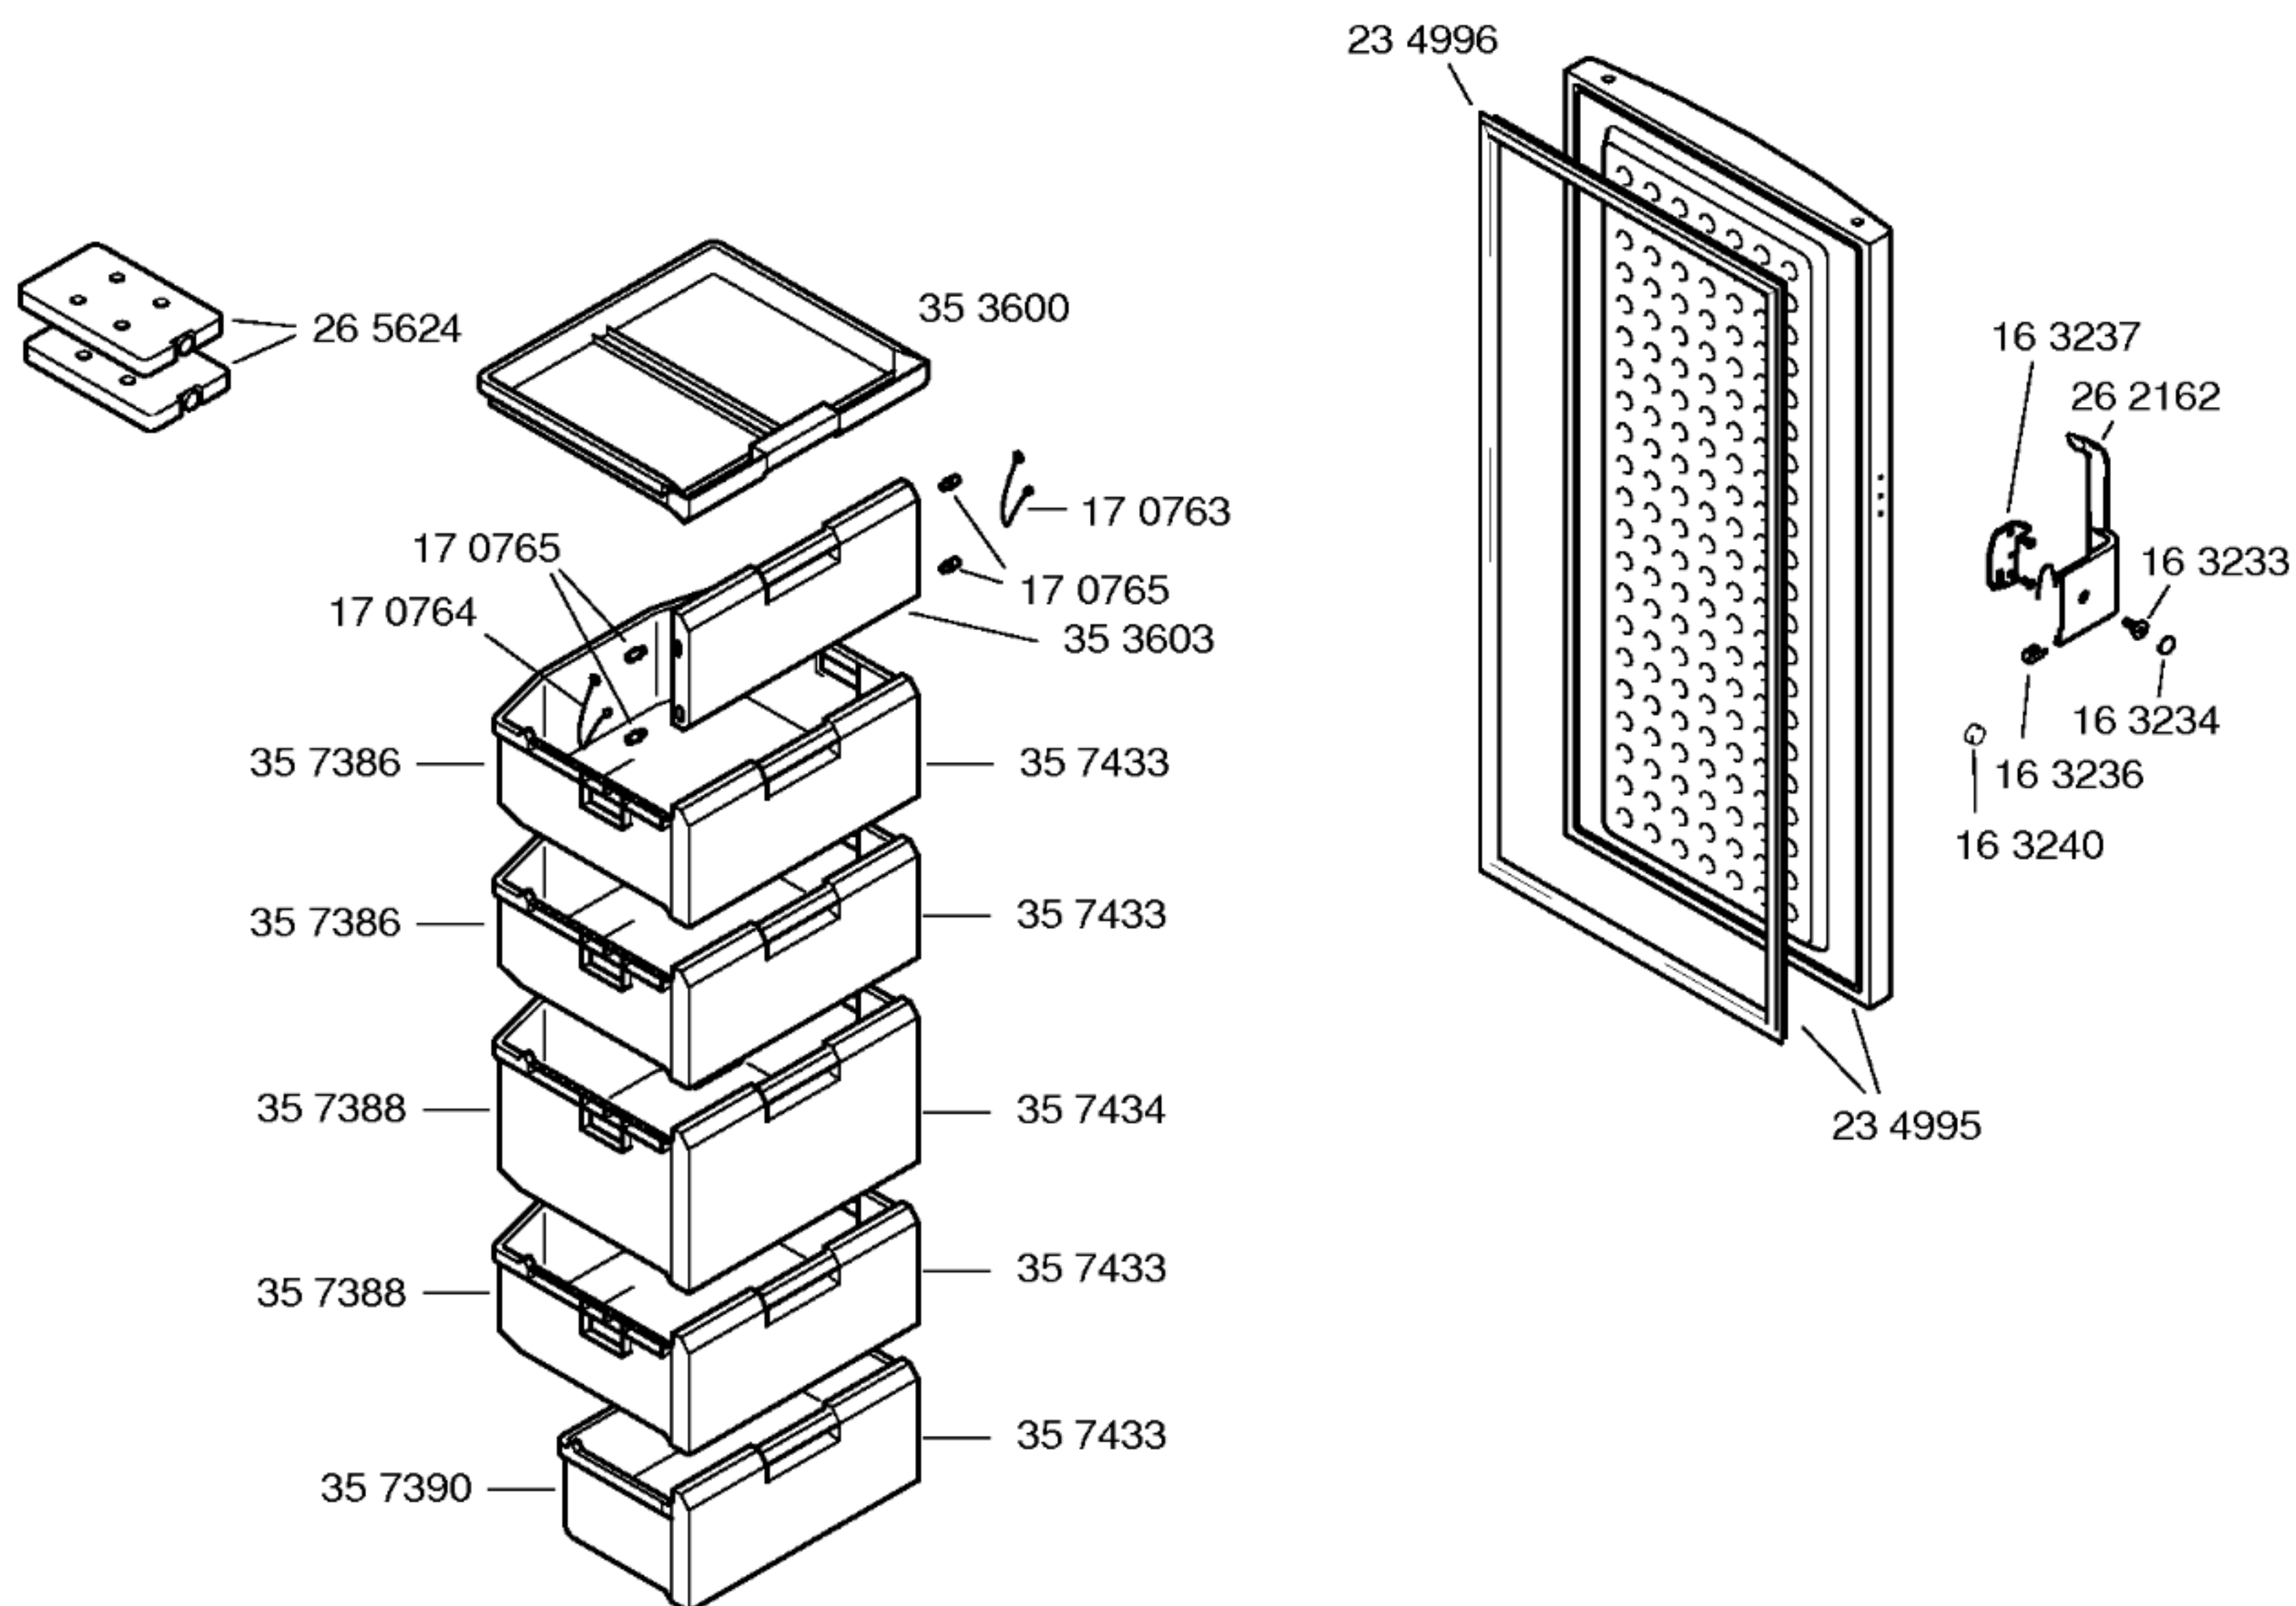

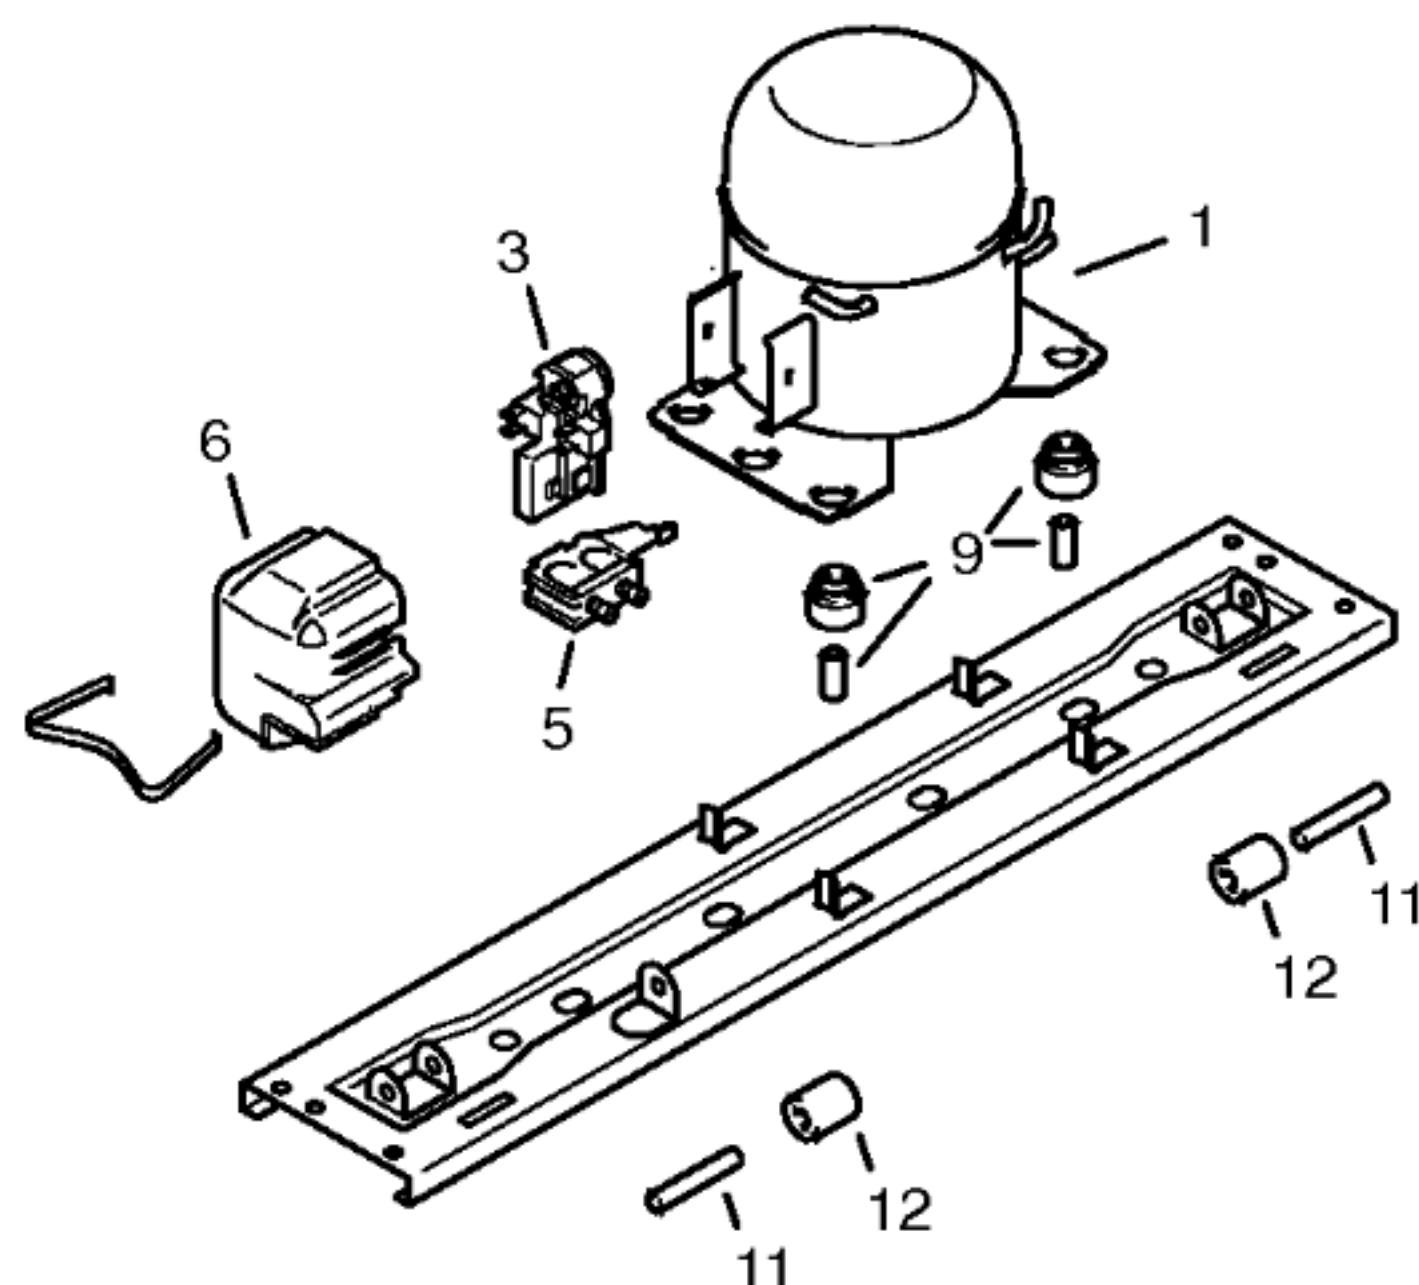

Pos.	Danfoss		
	NLE13K		
1	14 1751		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	21 4604		
9	05 0166		
10			
11	01 9017		
12	01 1916		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		NLE13K		
Förderleistung/Delivery/Débit		l/h	2394	
Anlaufstrom/Starting current/Cour de démarrage		A	10,9	
Widerstand/Resistance/Résistance		Ω	10,7	
Hi/aux		Ω	130,	
Temp.–Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a	*	
Anschlußwert/Conn.load/Puiss. connectée		W	148	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
NTC–Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	–18
		+5	12,70 ±0,18	–22
		0	16,33 ±0,16	–26
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		