



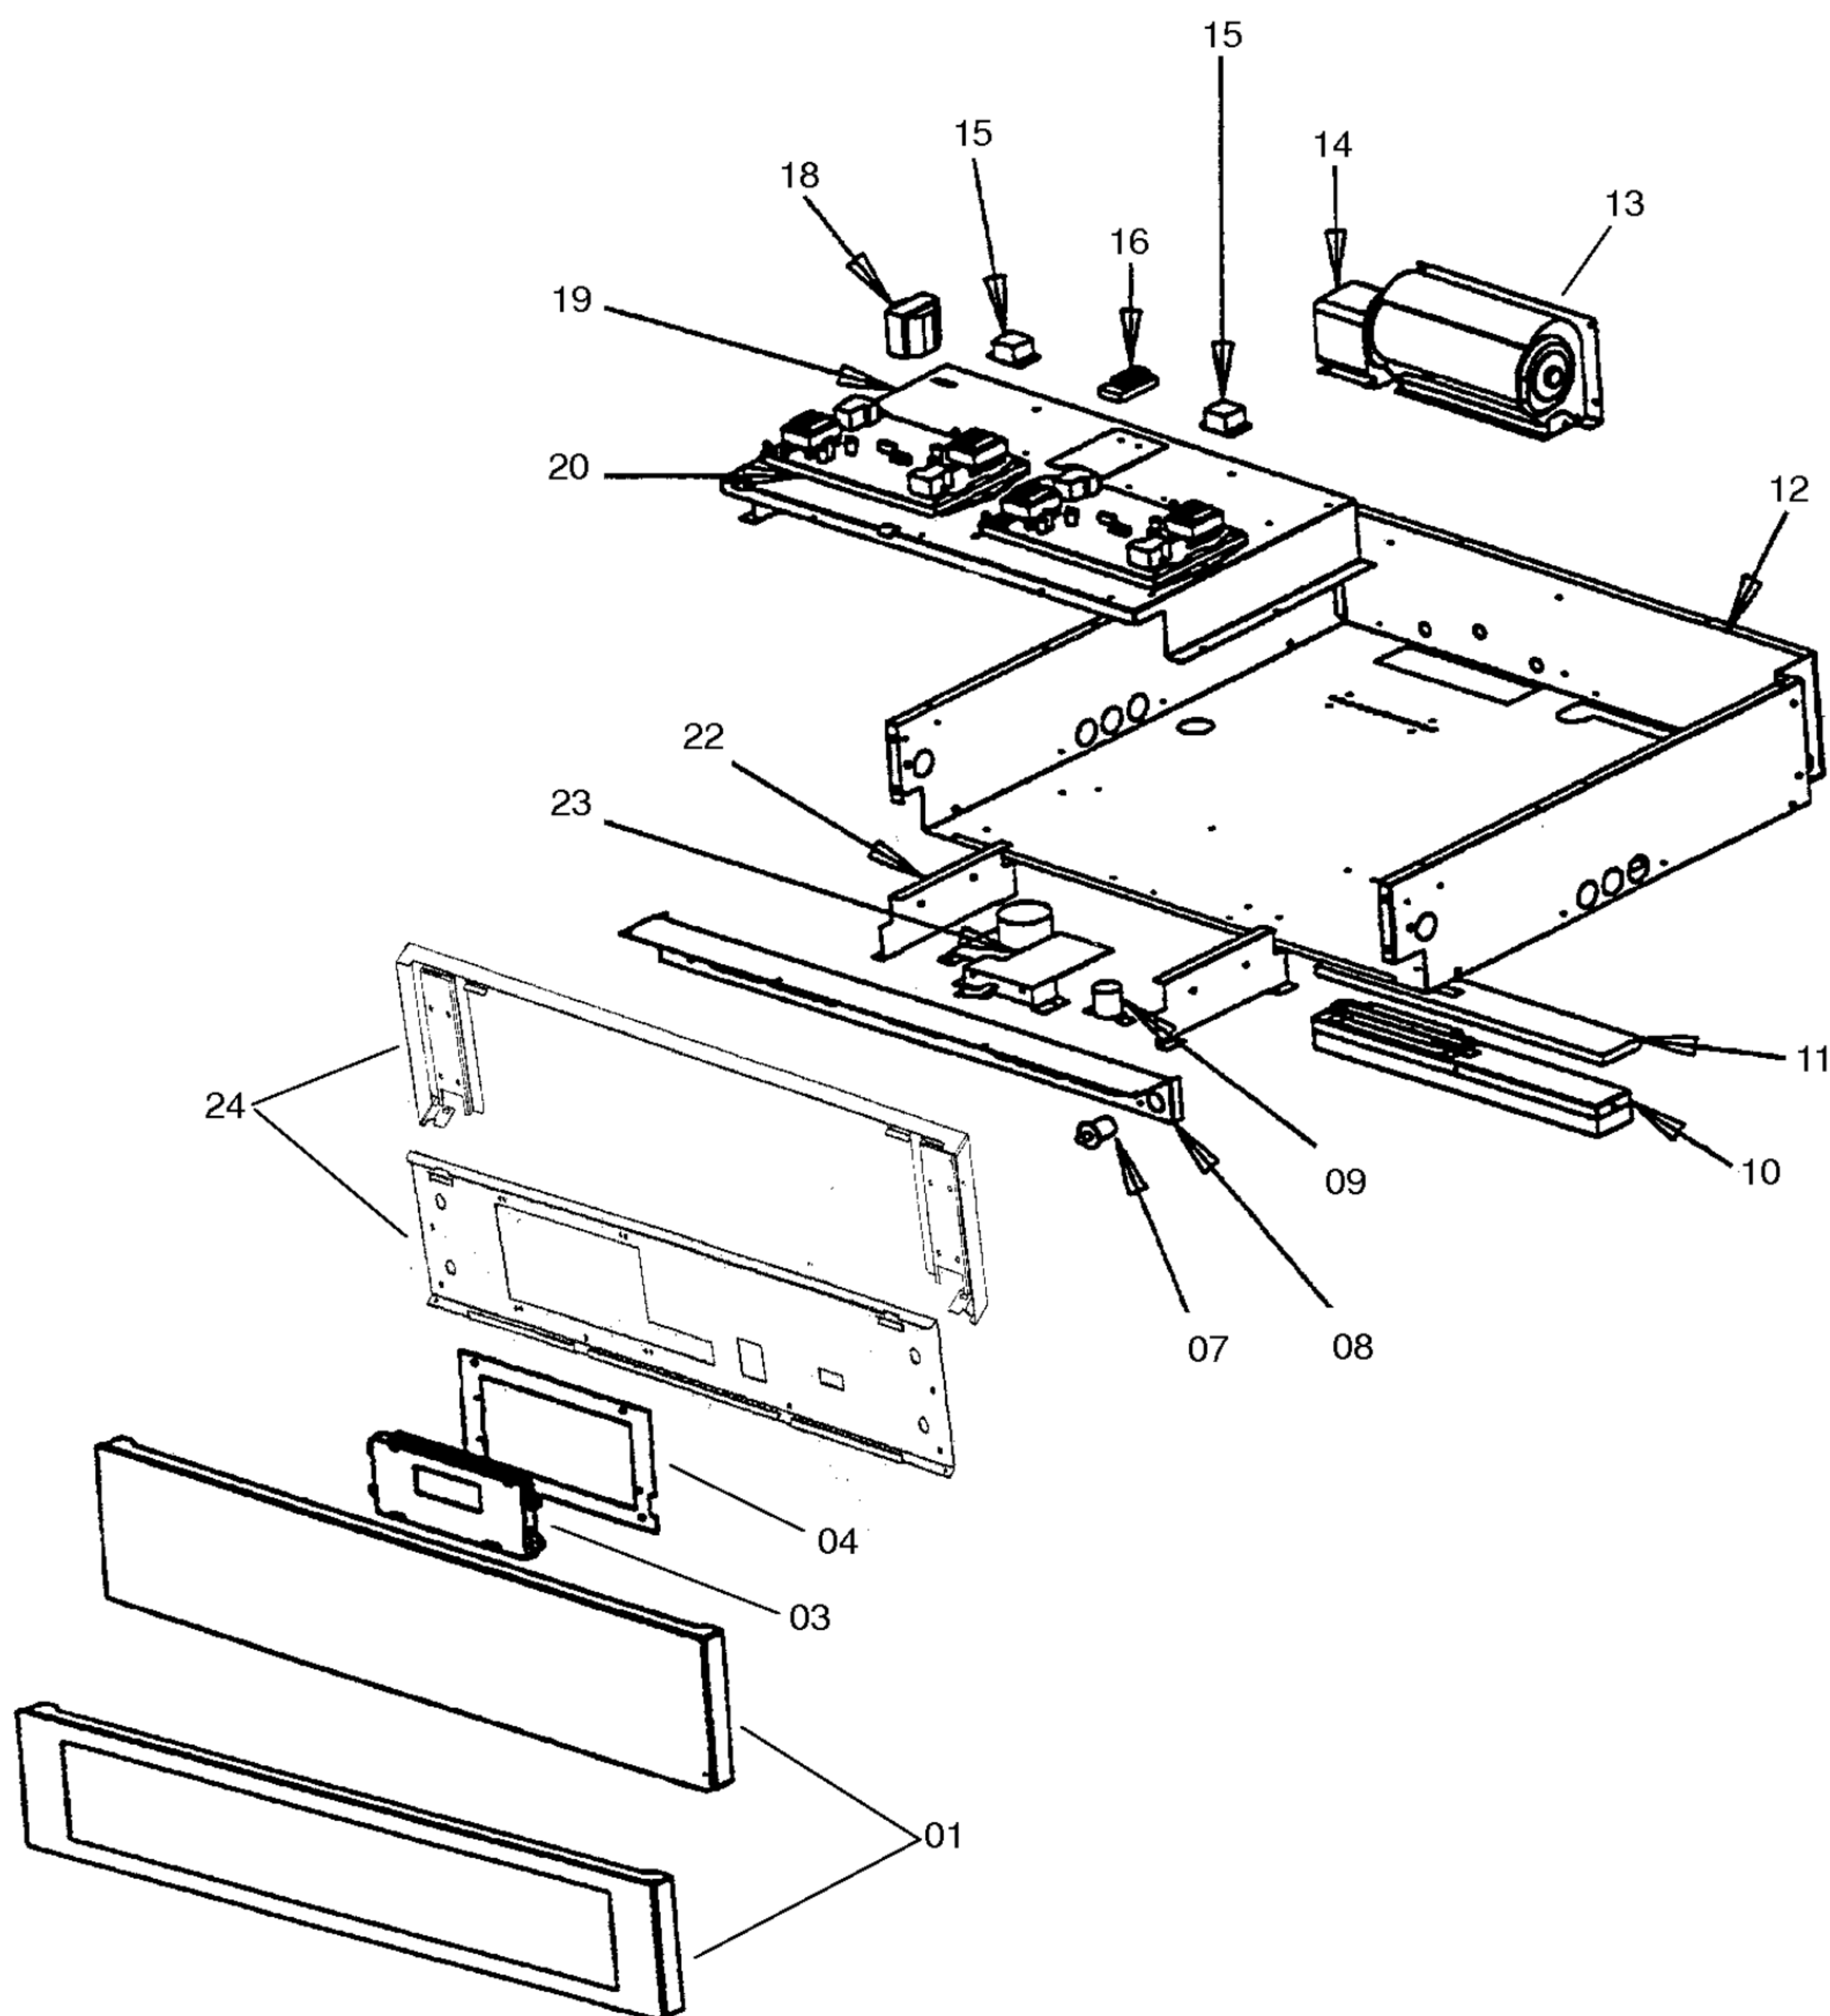

Page/Item	Part No.	Image	Part Discription
01 01	36 8766	MODULE–CONTROL	TOUCH CONTRL GLS W/FLTR S
01 01	36 8767	MODULE–CONTROL	TOUCH CONTRL GLS W/FLTR S
01 01	36 8770	MODULE–CONTROL	TOUCH CONTRL GLS W/FLTR S
01 03	48 6785	DISPLAY–PROGRAMME	DISPLAY HEAD KIT S–OVEN S
01 04	48 5994	PLATE	PLATE, DISPLAY MOUNT
01 07	41 5422	SWITCH	SWITCH, SHUTTER INTERLOCK
01 08	41 6801	PLATE	PLATE, UPPER LATCH 30 BLK
01 09	41 4633	FUSE–THERMAL	HTC M2
01 10	36 8437	DUCT	CHANNEL, VENT TOP ASSY
01 11	48 6004	INSULATING PART	INSULATION, VENT
01 12	14 2829	FRAME	BODY, CONTROL PLENUM 30"
01 13	41 3587	BRACKET	BRACKET, BLOWER MTG UPPER
01 14	48 7020	MOTOR–FAN	BLOWER, CROSSFLOW
01 15	41 5761	RELAY	RELAY, STALL FAN
01 16	48 4615	TERMINAL	BLOCK, TERMINAL
01 17	41 5761	RELAY	RELAY, STALL FAN
01 18	48 8796	TRANSFORMER	Transformer, Light (60 VA
01 19	36 8275	PANEL	PARTITION, UPPER PLENUM
01 20	48 6792	MODULE–POWER	KIT, S–OVEN RELAY BOARD
01 22	41 3118	PLATE	SHIELD, LATCH
01 23	48 9102	LOCK–MECHANICAL	latch assy, motorized
01 24	43 4191	FIXING KIT	KIT,CONTROL FRAME ASSY 30
01 24	43 4189	FIXING KIT	KIT,CONTROL FRAME ASSY BL
	V01, V02,V03,V04,V05,		
* 01 25	41 5191	CONNECTION	TAIL, MEMBRANE (TOUCH CON
* 01 26	41 1036	SPRING	SPRING, CATCH
* 01 27	41 1007	STUD	BALL STUD

* Not illustrated

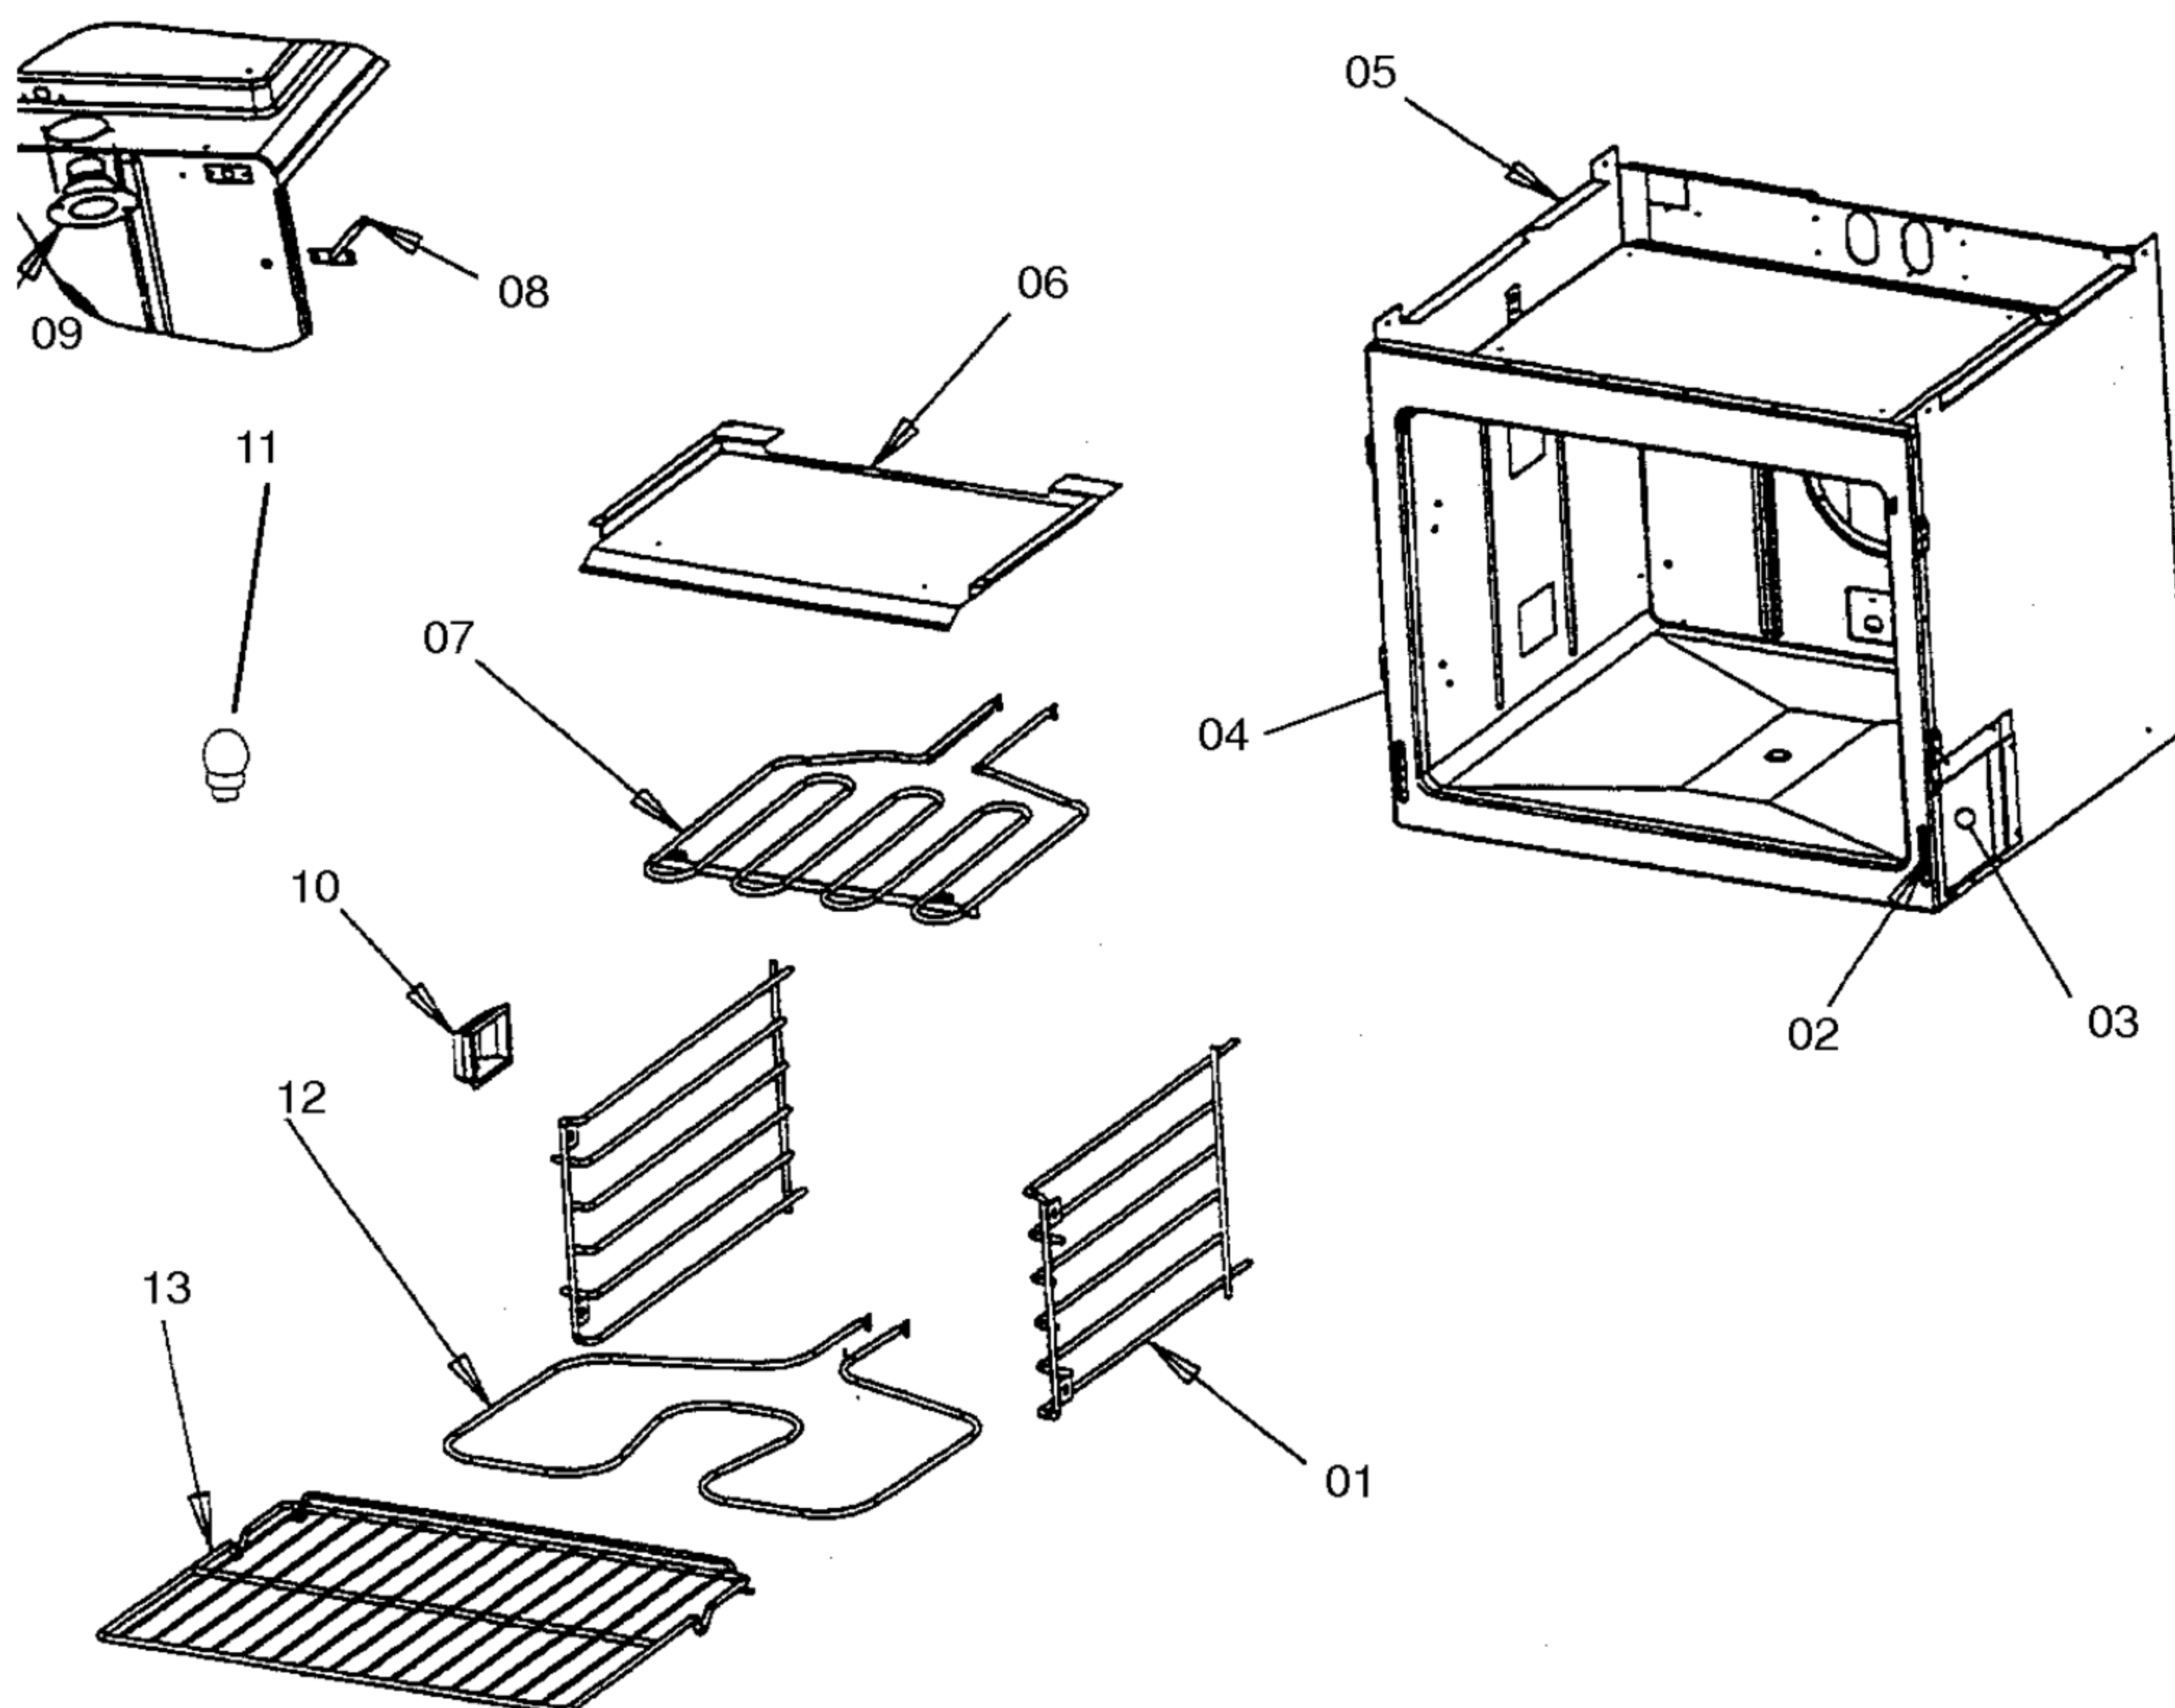

Page/Item	Part No.	Image	Part Discription
03 01	36 7553	SUPPORT	SUPPORT, RACK (NON-CONV)
03 02	41 4510	HOLDER	SUPPORT, HINGE COUNTER
03 03	48 5972	BRACKET	BRACKET, COUNTER SUPT RH
03 04	48 5973	BRACKET	BRACKET, COUNTER SUPT LH
03 05	23 8830	OVEN	MODULE, OVEN CAN 30"NON-C
03 06	36 8265	REFLECTOR	REFLECTOR
03 07	36 7647	HEATER-ELEMENT	ELEMENT, BROIL
03 08	41 4152	TEMPERATURE SENSOR	THERMAL SENSOR KIT
03 09	41 1220	catalyzer	CATALYST
03 10	41 4512	LAMP HOUSING	LAMP, OVEN
03 11	41 5813	LAMP-HALOGEN	BULB, HALOGEN 10WATT
03 12	36 7648	HEATER-ELEMENT	ELEMENT, BAKE 30
03 13	36 8826	SHELF	RACK, 30"S (NON-CONVECT)

* Not illustrated


Thermador®

S301TW (01) – V01,
S301TB (01) – V02,
S301TS (01) – V03,
S301ZS (01) – V04,

white
black
stainless
stainless

S301ZP (01) – V05 stainless

COOKING
OVENS

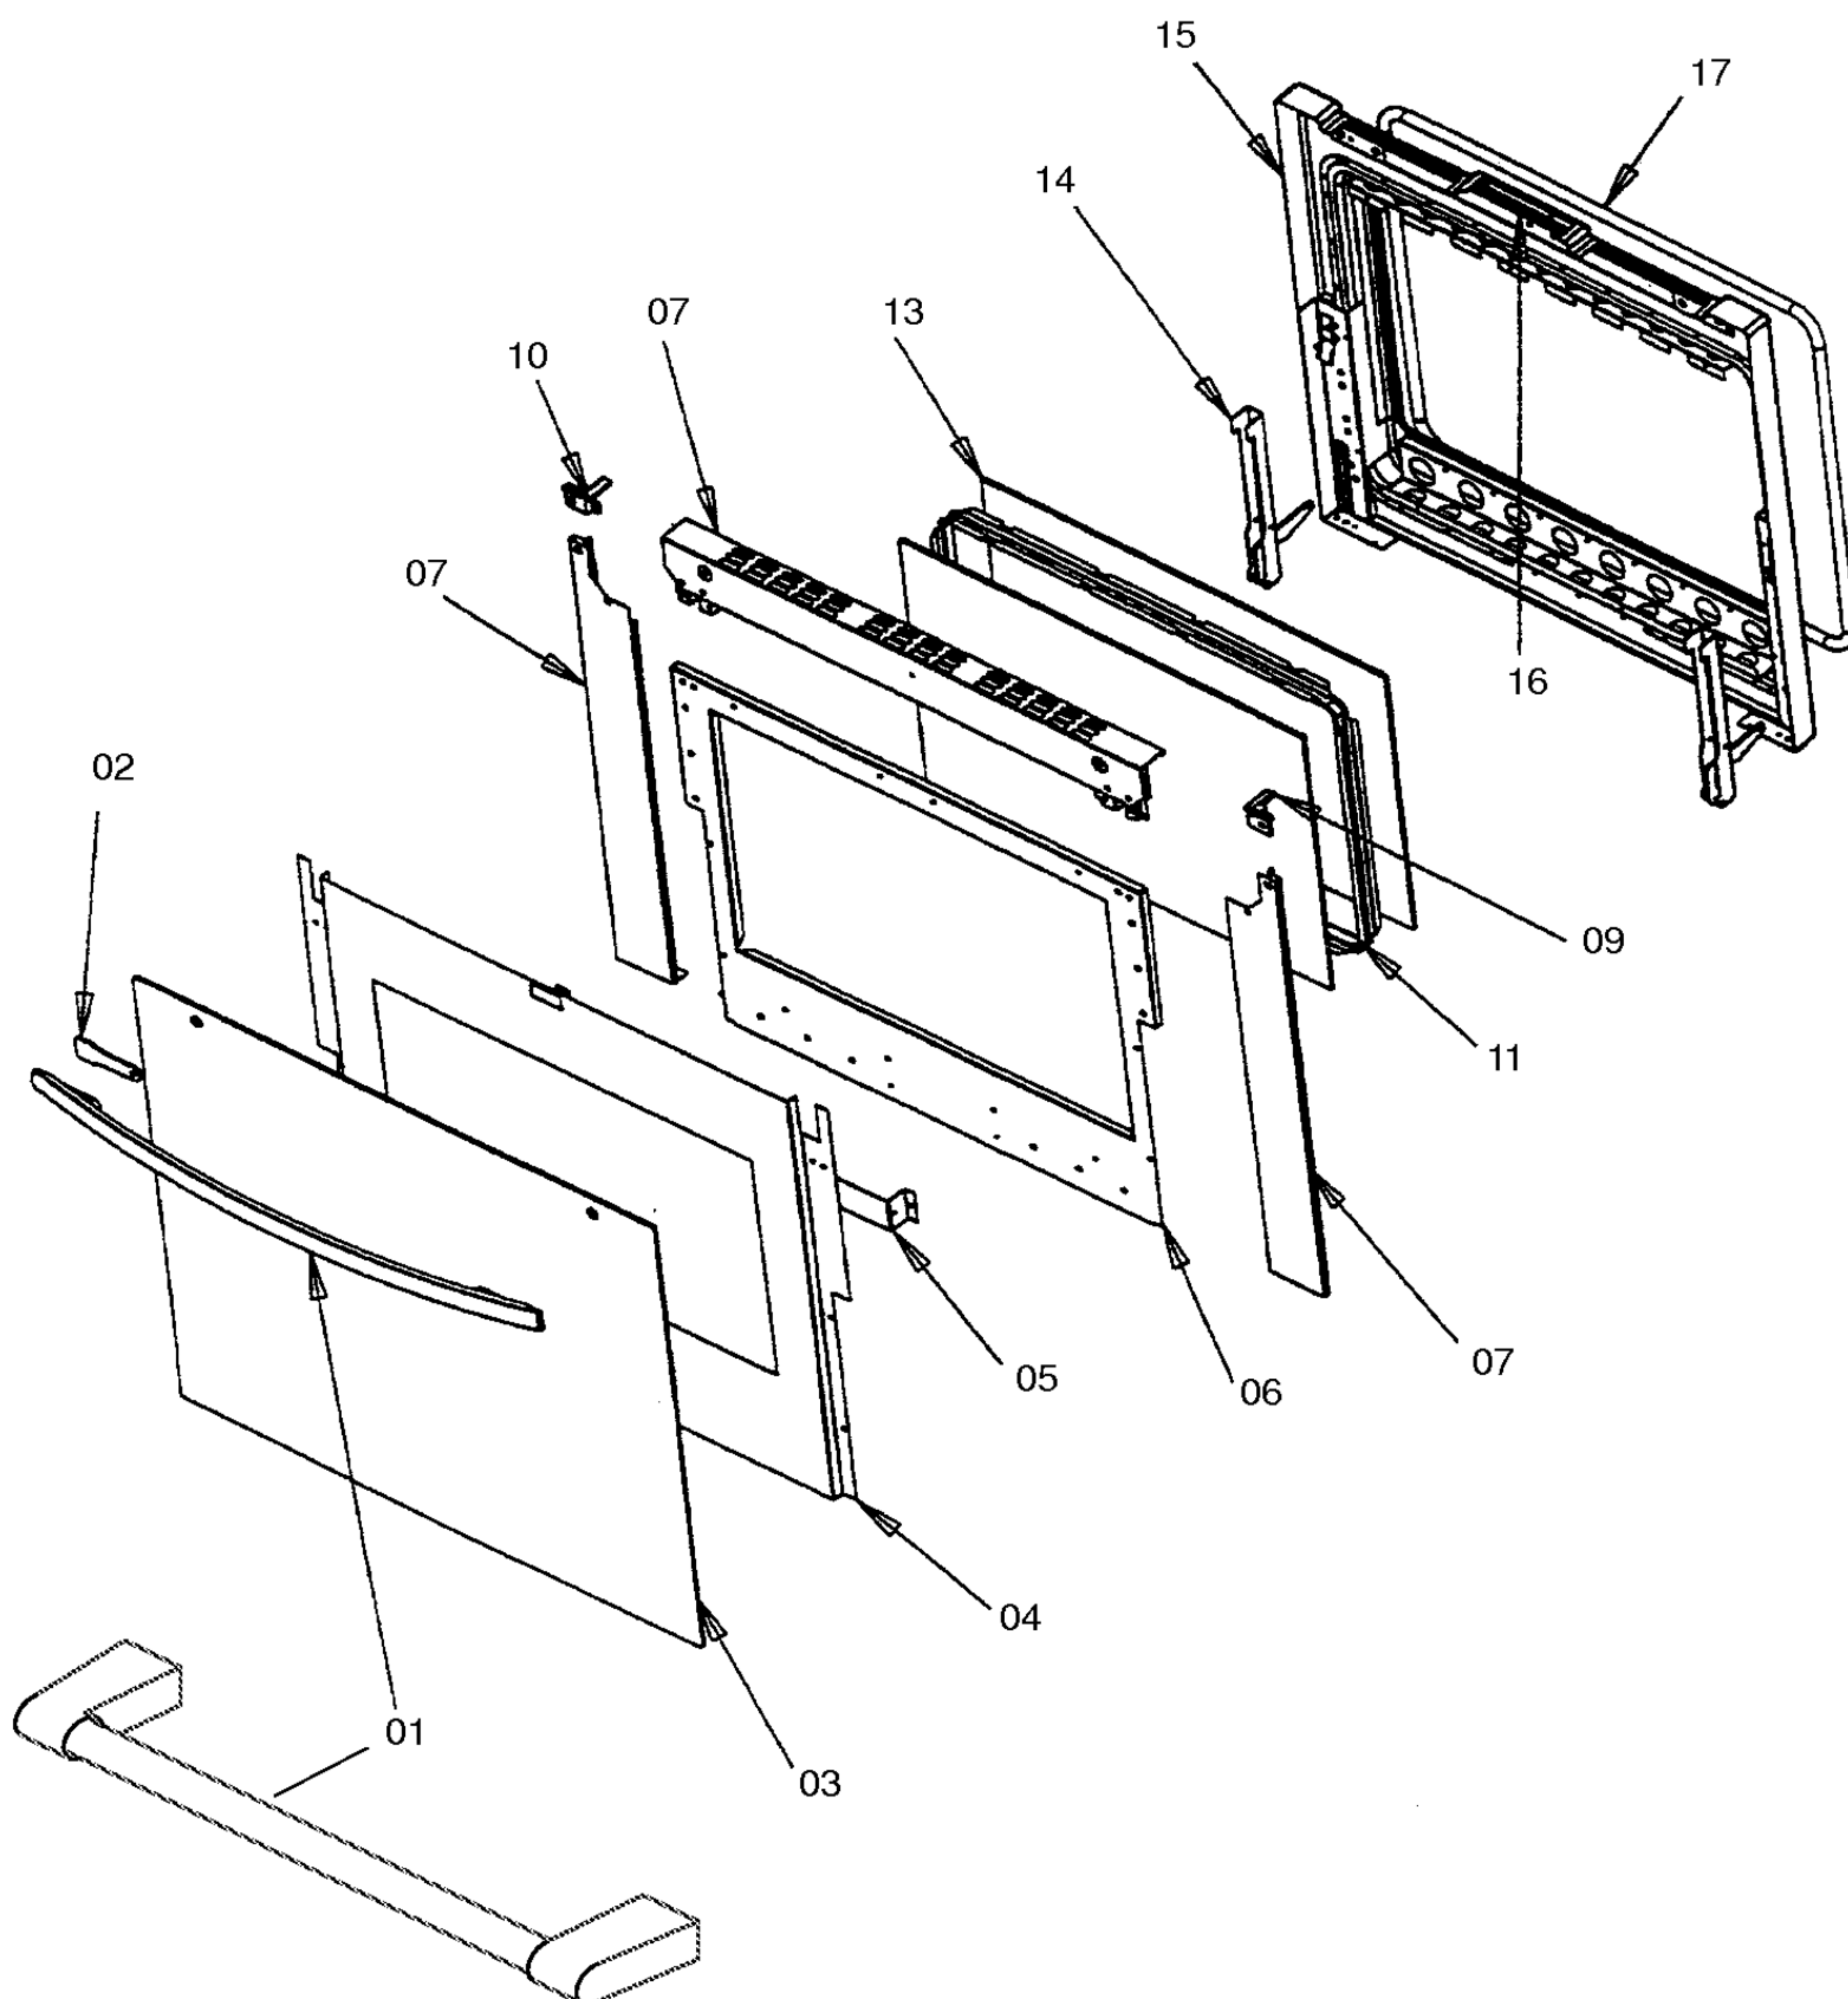

Page/Item	Part No.	Image	Part Discription
05 01	41 4393	HANDLE	HANDLE, DOOR 30" WHT
05 01	V01, 48 6868	HANDLE	HANDLE, DOOR 30" BLK
05 01	V02,V03, 43 2842	HANDLE-DOOR	HANDLE, DOOR S30"S/S
05 01	V04, 48 6001	HANDLE	ASSEMBLED 30" PRO HANDLE
05 02	V05, 41 4817	SPACER	SPACER, DOOR HANDLE
05 02	V01,V02,V03, 41 8933	SPACER	SPACER,HANDLE
05 03	V04, 14 2736	GLASS PANEL	ASSY, DOOR GLASS 30"WHT
05 03	V01, 14 2735	GLASS PANEL	ASSY, DOOR GLASS 30"BLK
05 03	V02, 14 2756	GLASS PANEL	ASSY, DR GLASS & SS PNL 3
05 03	V03,V04, 23 9016	DOOR-OUTER	KIT, DOOR PANEL 30" SS (P
05 04	V05, 48 5999	AIR CHANNEL	BAFFLE, DOOR AIR 30"
05 05	41 3120	BRACKET	BRACKET, BTM GLASS SUPT
05 06	36 8286	INSULATING PART	COVER, DR INSULATION 30"B
05 07	49 0522	FIXING KIT	Kit,Door Glass Support BL
05 09	48 8854	STRIP	Endcap DR Glass support R
05 09	V01, 41 4390	COVER	ENDCAP, DR GLASS SUPT RH
05 10	V02,V03,V04,V05, 41 4391	COVER	ENDCAP, DR GLASS SUPT LH
05 11	36 9152	SPACER	SPACER, INNER WINDOW
05 13	21 9357	GLASS PANEL	GLASS,INNER WINDOW 4MM 2S
05 14	41 4511	HINGE	HINGE, DOOR 30" (S/S)
05 15	47 0538	DOOR-INNER	DOOR, LINER W/STRIKE ASSY
05 16	41 2838	LOCK	STRIKE, DOOR (BLK OXIDE)
05 17	48 6767	SEAL-DOOR	GASKET, 30" OVEN DOOR KIT
05 18	23 8713	DOOR	DOOR ASSY, S/SC/SCD 30"WH
* 05 18	V01, 14 2743	DOOR	DOOR ASSY, S/SC/SCD 30"BL
* 05 18	V02, 23 8714	DOOR	DOOR ASSY, S/SC/SCD 30" S
* 05 18	V03,V04, 14 2744	DOOR	DOOR ASSY, S/SC/SCD 30"PR
05 19	V05, 41 6811	WASHER	WASHER, SHOULDER

* Not illustrated


Thermador®

S301TW (01) – V01,
S301TB (01) – V02,
S301TS (01) – V03,
S301ZS (01) – V04,

white
black
stainless
stainless

S301ZP (01) – V05 stainless

COOKING
OVENS

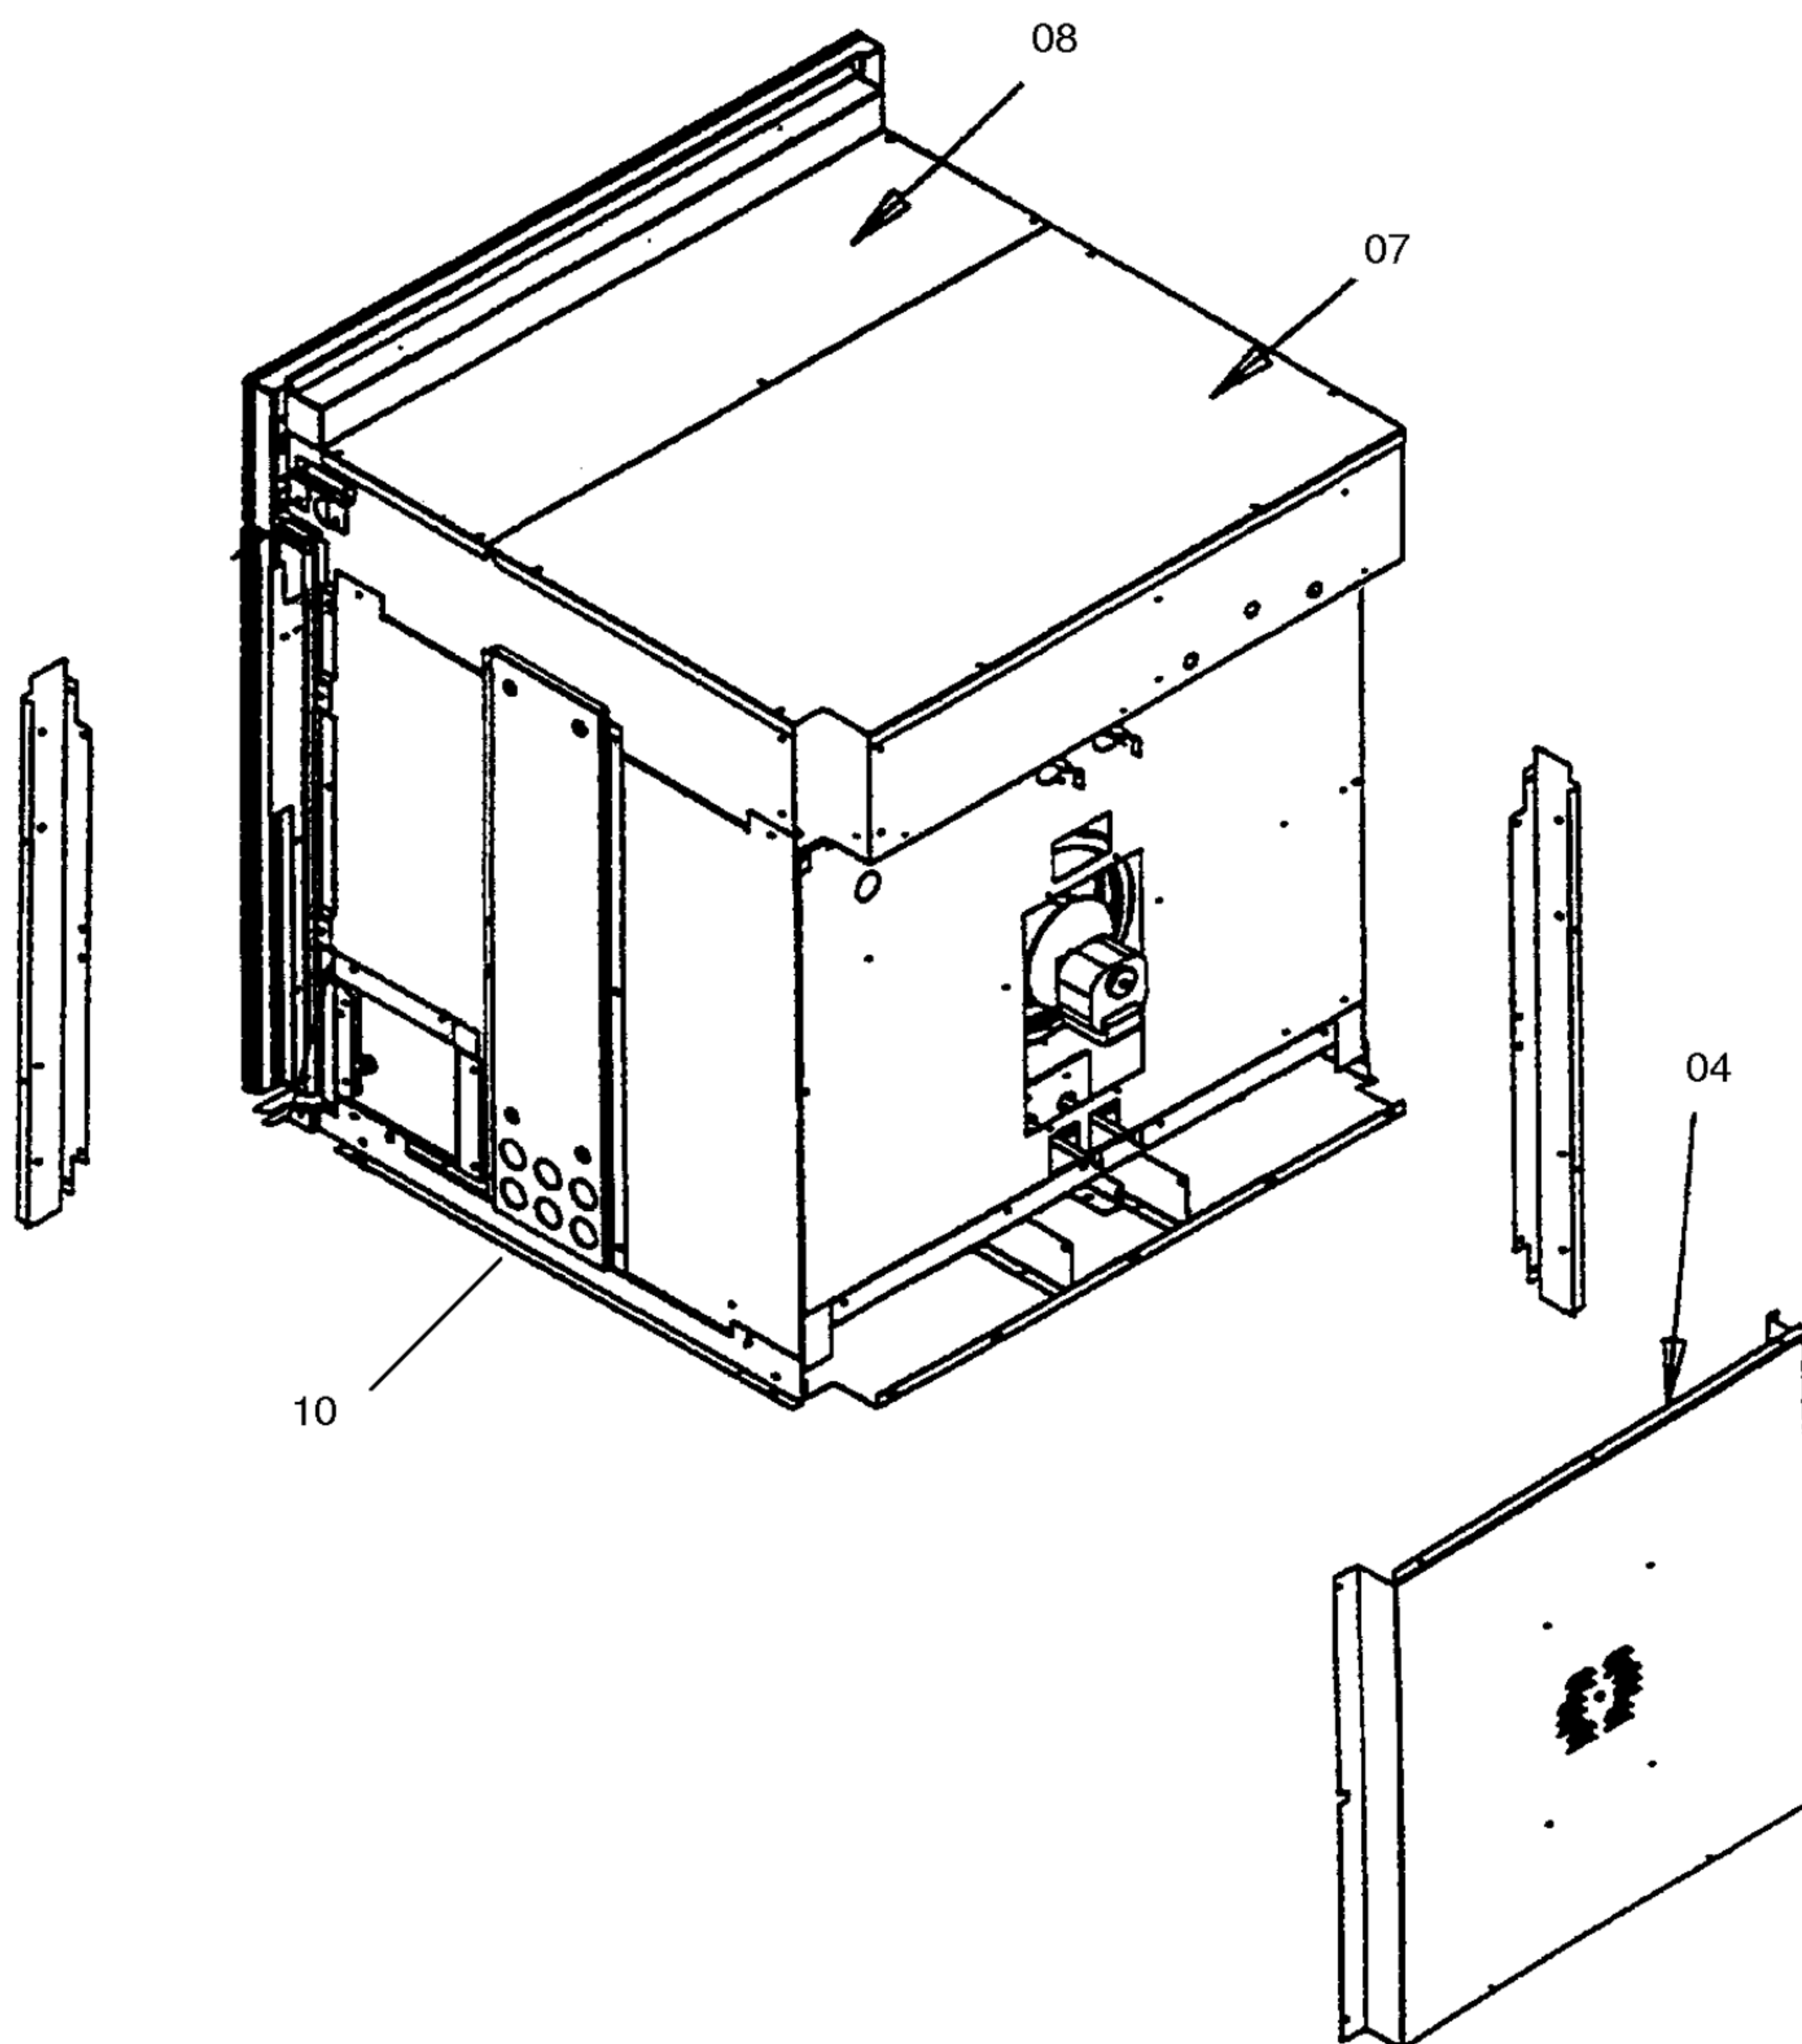

Page/Item	Part No.	Image	Part Discription
07 04	36 8268	COVER	COVER, BACK SGL 30
07 07	48 5974	COVER	COVER, TOP LWR 30"
07 08	36 8460	COVER	COVER, TOP FRONT X30
07 10	36 8450	DUCT	DUCT, SIDE

* Not illustrated


Thermador®

S301TW (01) – V01,
S301TB (01) – V02,
S301TS (01) – V03,
S301ZS (01) – V04,

white
black
stainless
stainless

S301ZP (01) – V05 stainless

COOKING
OVENS

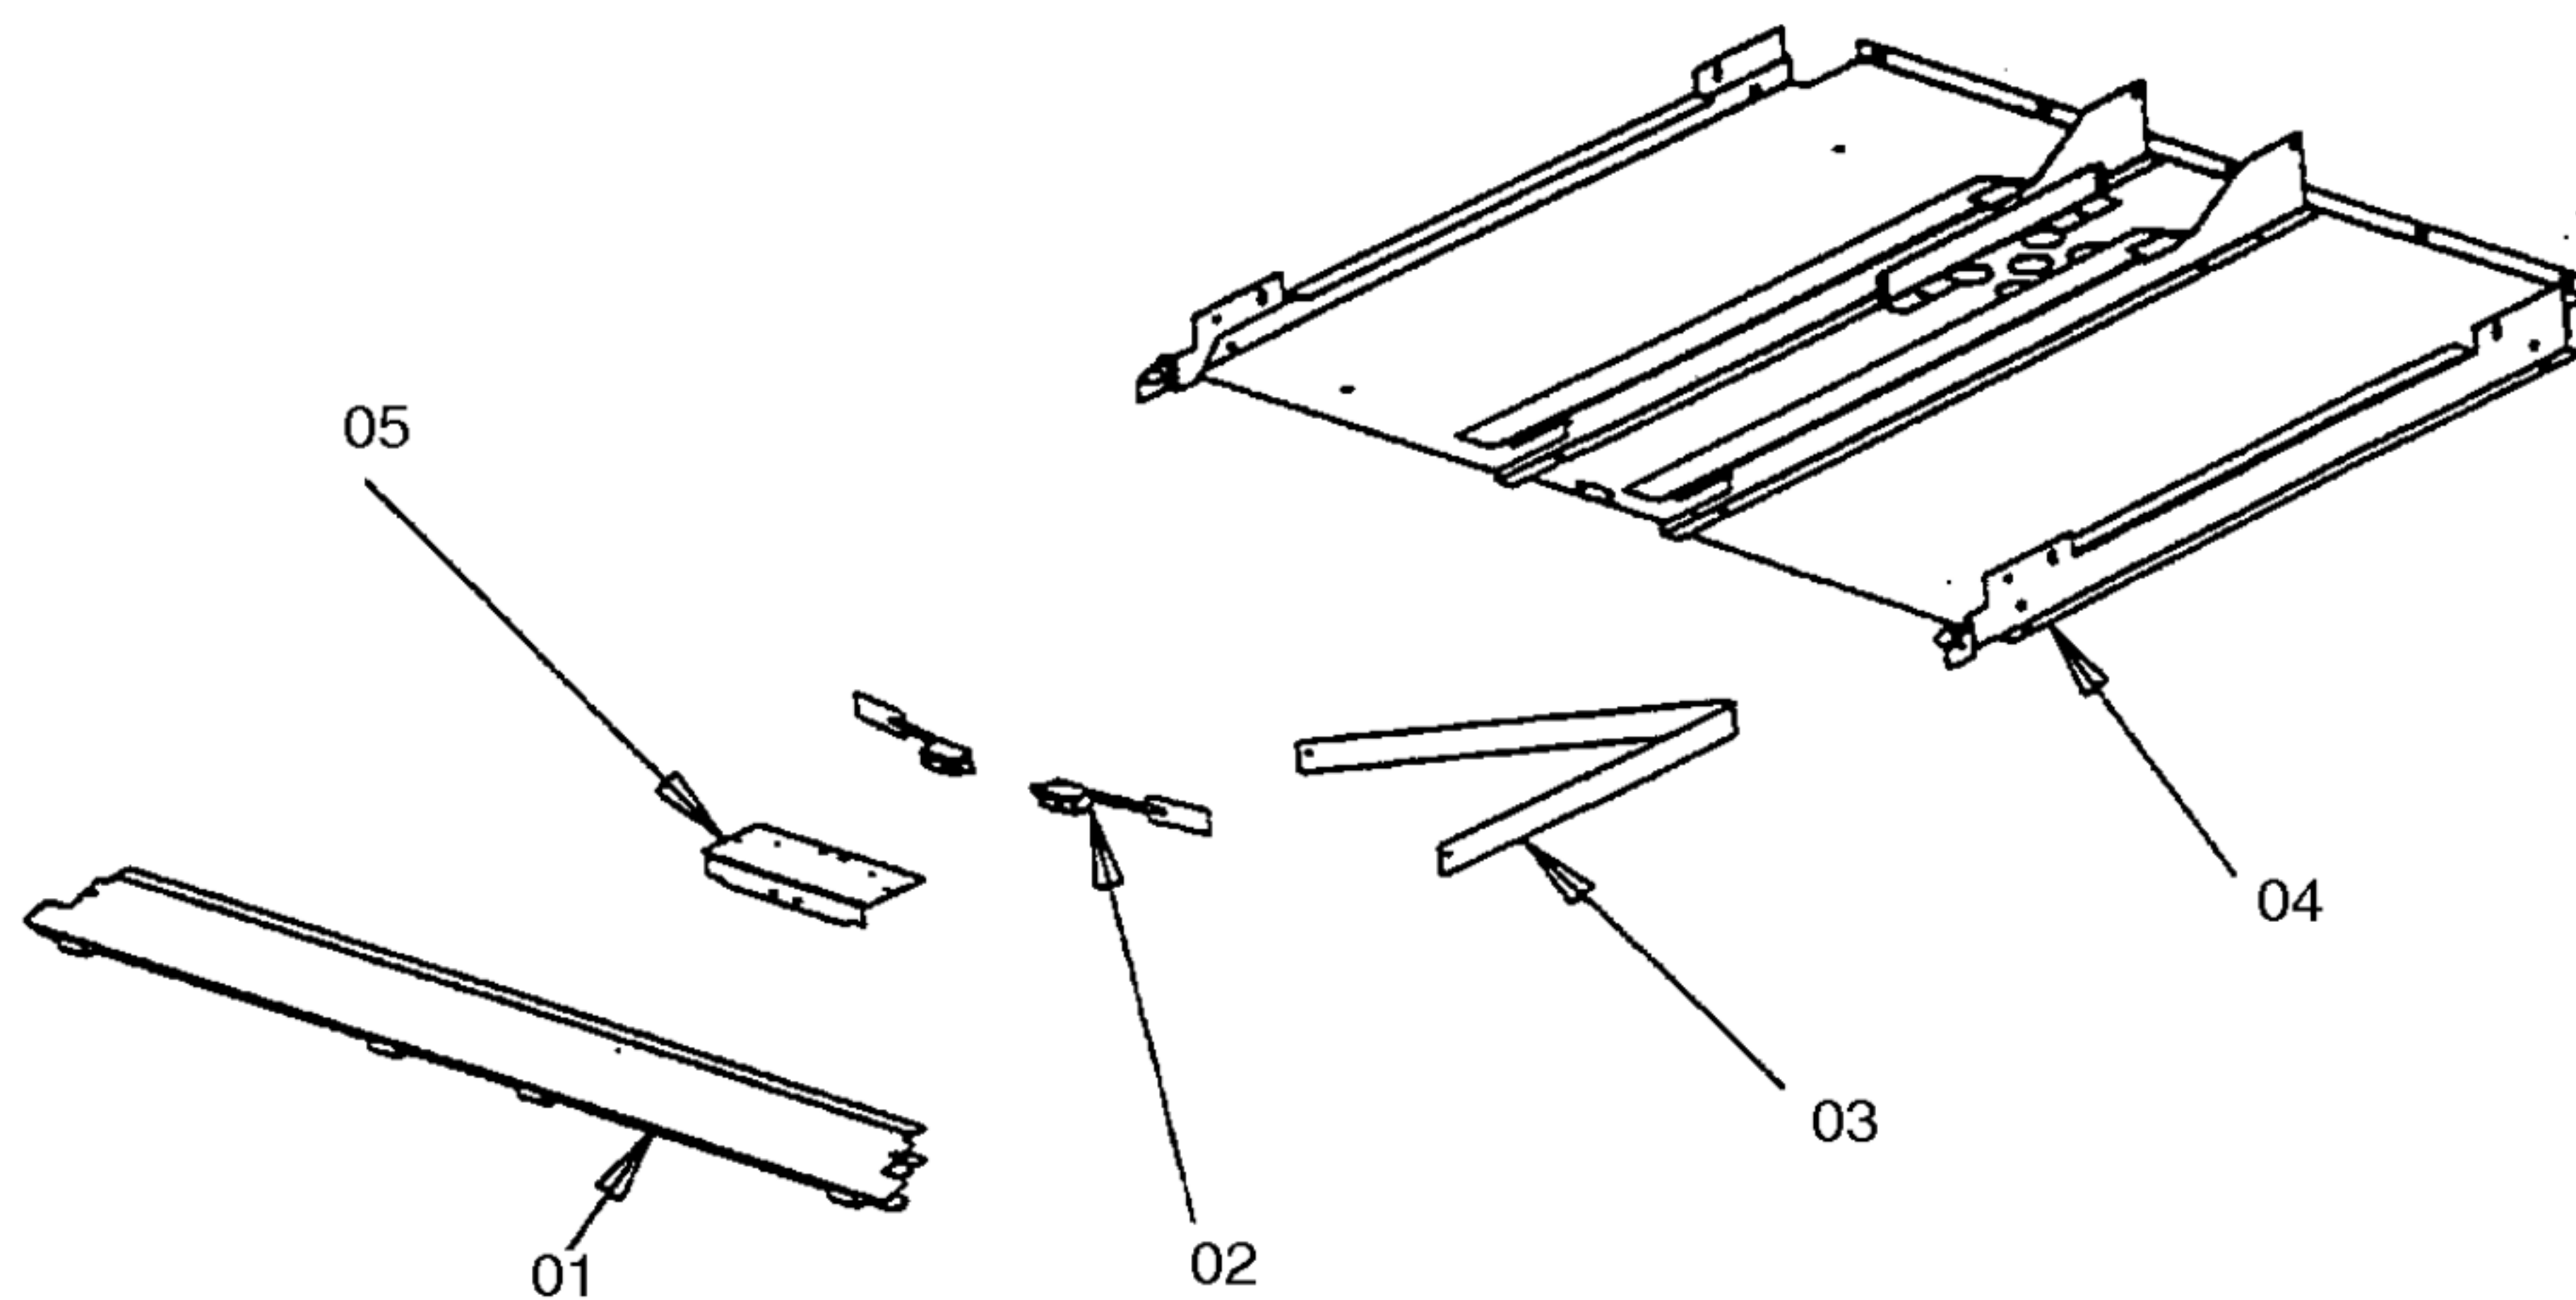

Page/Item	Part No.	Image	Part Discription
09 01	36 9981	PANEL-BASE	TRIM, BOTTOM 30" WHT
09 01	48 6326	FRAME	TRIM, BOTTOM 30" BLK
	V01, V02,V03,V04,V05,		
09 02	41 3121	SWITCH	SWITCH, AIR-INTERLOCK (W/
09 03	48 6258	DISTRIBUTOR	DIVERter, AIR FLOW
09 04	21 9355	BASE	BASE ASSY 30"
09 05	41 3122	BRACKET	BRACKET, AIR SWITCH
* 11 01	18 9944	CABLE HARNESS	HARNESS, KEYPAD POWER
* 11 02	18 9945	CABLE HARNESS	HARNESS, KEYPAD SIGNAL
* 11 03	18 9946	CABLE HARNESS	HARNESS, DISPLAY SIGNAL
* 11 04	18 9947	CABLE HARNESS	HARNESS, COMMUNICATION SI
* 11 05	18 9948	CABLE HARNESS	HARNESS, LATCH SGL/UPPER
* 11 06	18 9949	CABLE HARNESS	HARNESS, DLB SGL/UPR OVEN
* 11 07	48 4534	CABLE HARNESS	HARNESS, MAIN SGL/UPPER O
* 11 08	48 4537	CABLE HARNESS	HARNESS, LIGHT DBL OVEN
* 11 09	18 9952	CABLE HARNESS	HARNESS, MAIN AIR SW SGL
* 11 10	18 9953	CABLE HARNESS	HARNESS, INTERCONNECT TOU
* 11 11	48 4539	CABLE HARNESS	HARNESS, HTC & LIGHTS LWR
* 30 01	D30SXSB	Trim Piece Black	
*	V02,V03,V04,V05,		
* 30 02	D30SXSW		Trim Piece White
*	V01,		
* 40 01	SH-30/0007E		DIAGRAM
* 40 02	SH-30/0008E		DIAGRAM
* 50 01	RH30001E	Repair manual	

* Not illustrated