



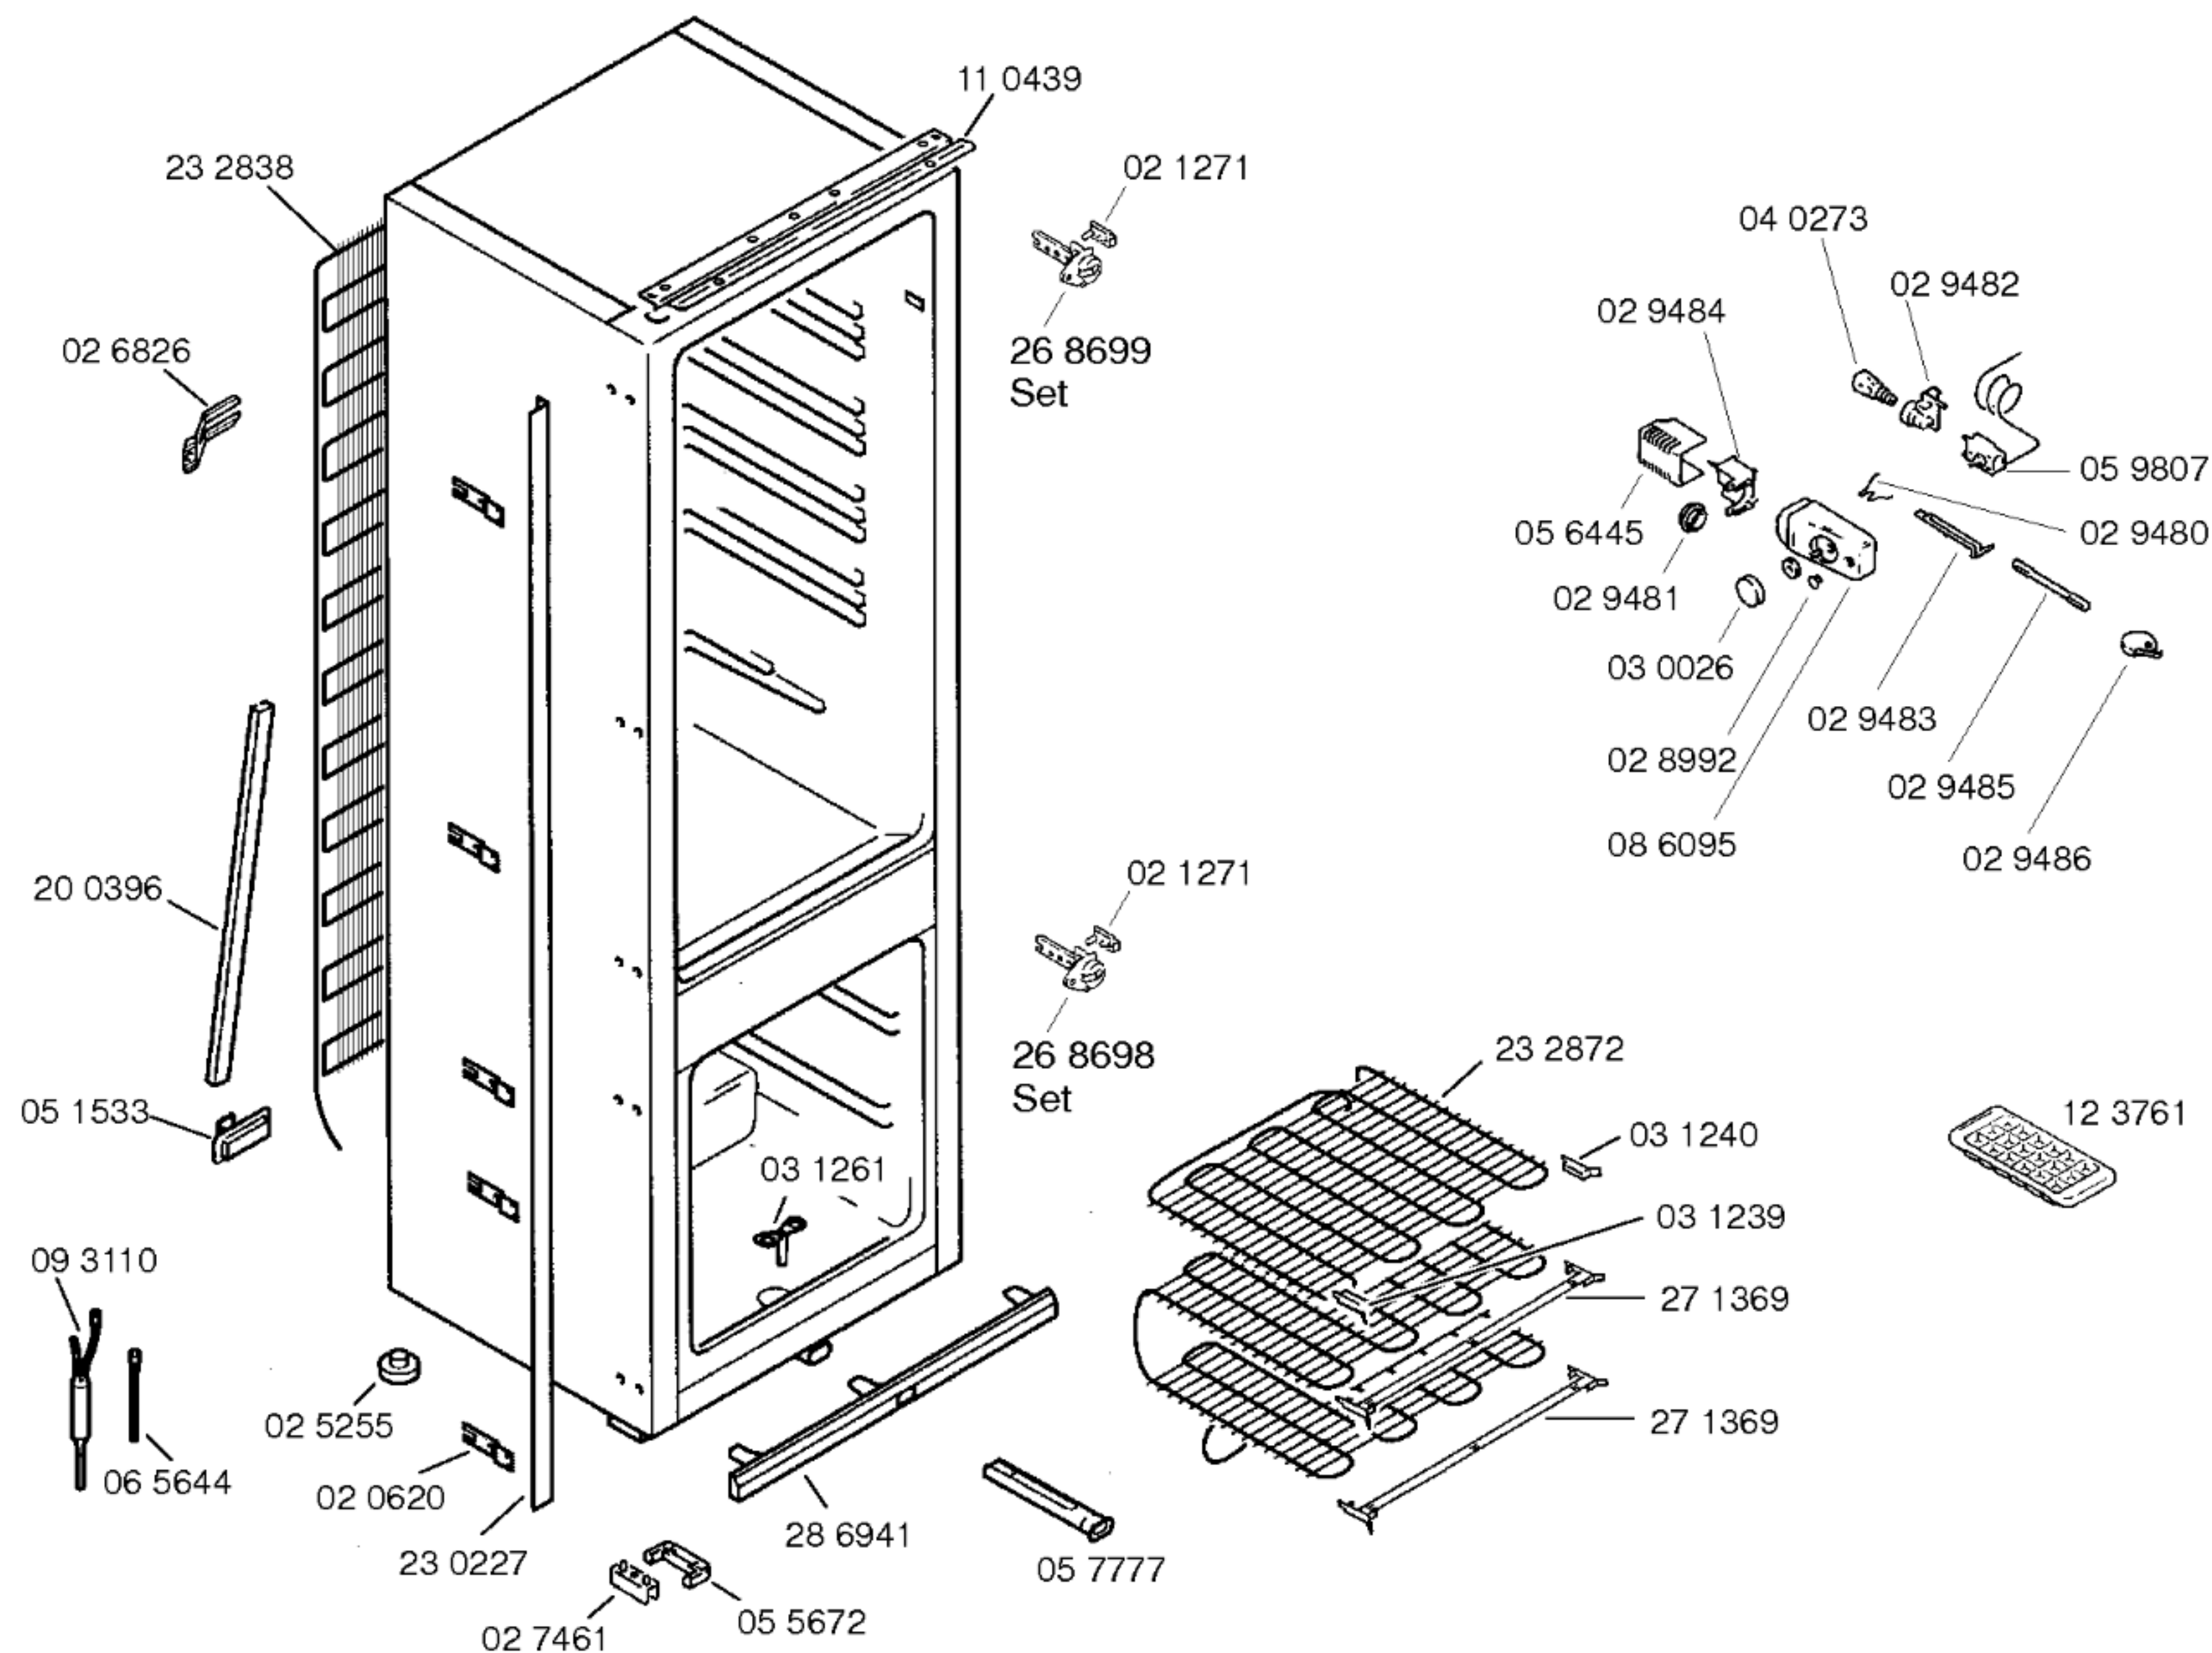


Gebrauchsanweisung
51 5681
(D,GB,F,I,NL,S,E,DK,N,,SF)

Montageanleitung
51 5546
(D,GB,F,I,NL,S,E,DK,N,,SF)

08 4137
Befestigungssatz
08 4136
Schraubensatz

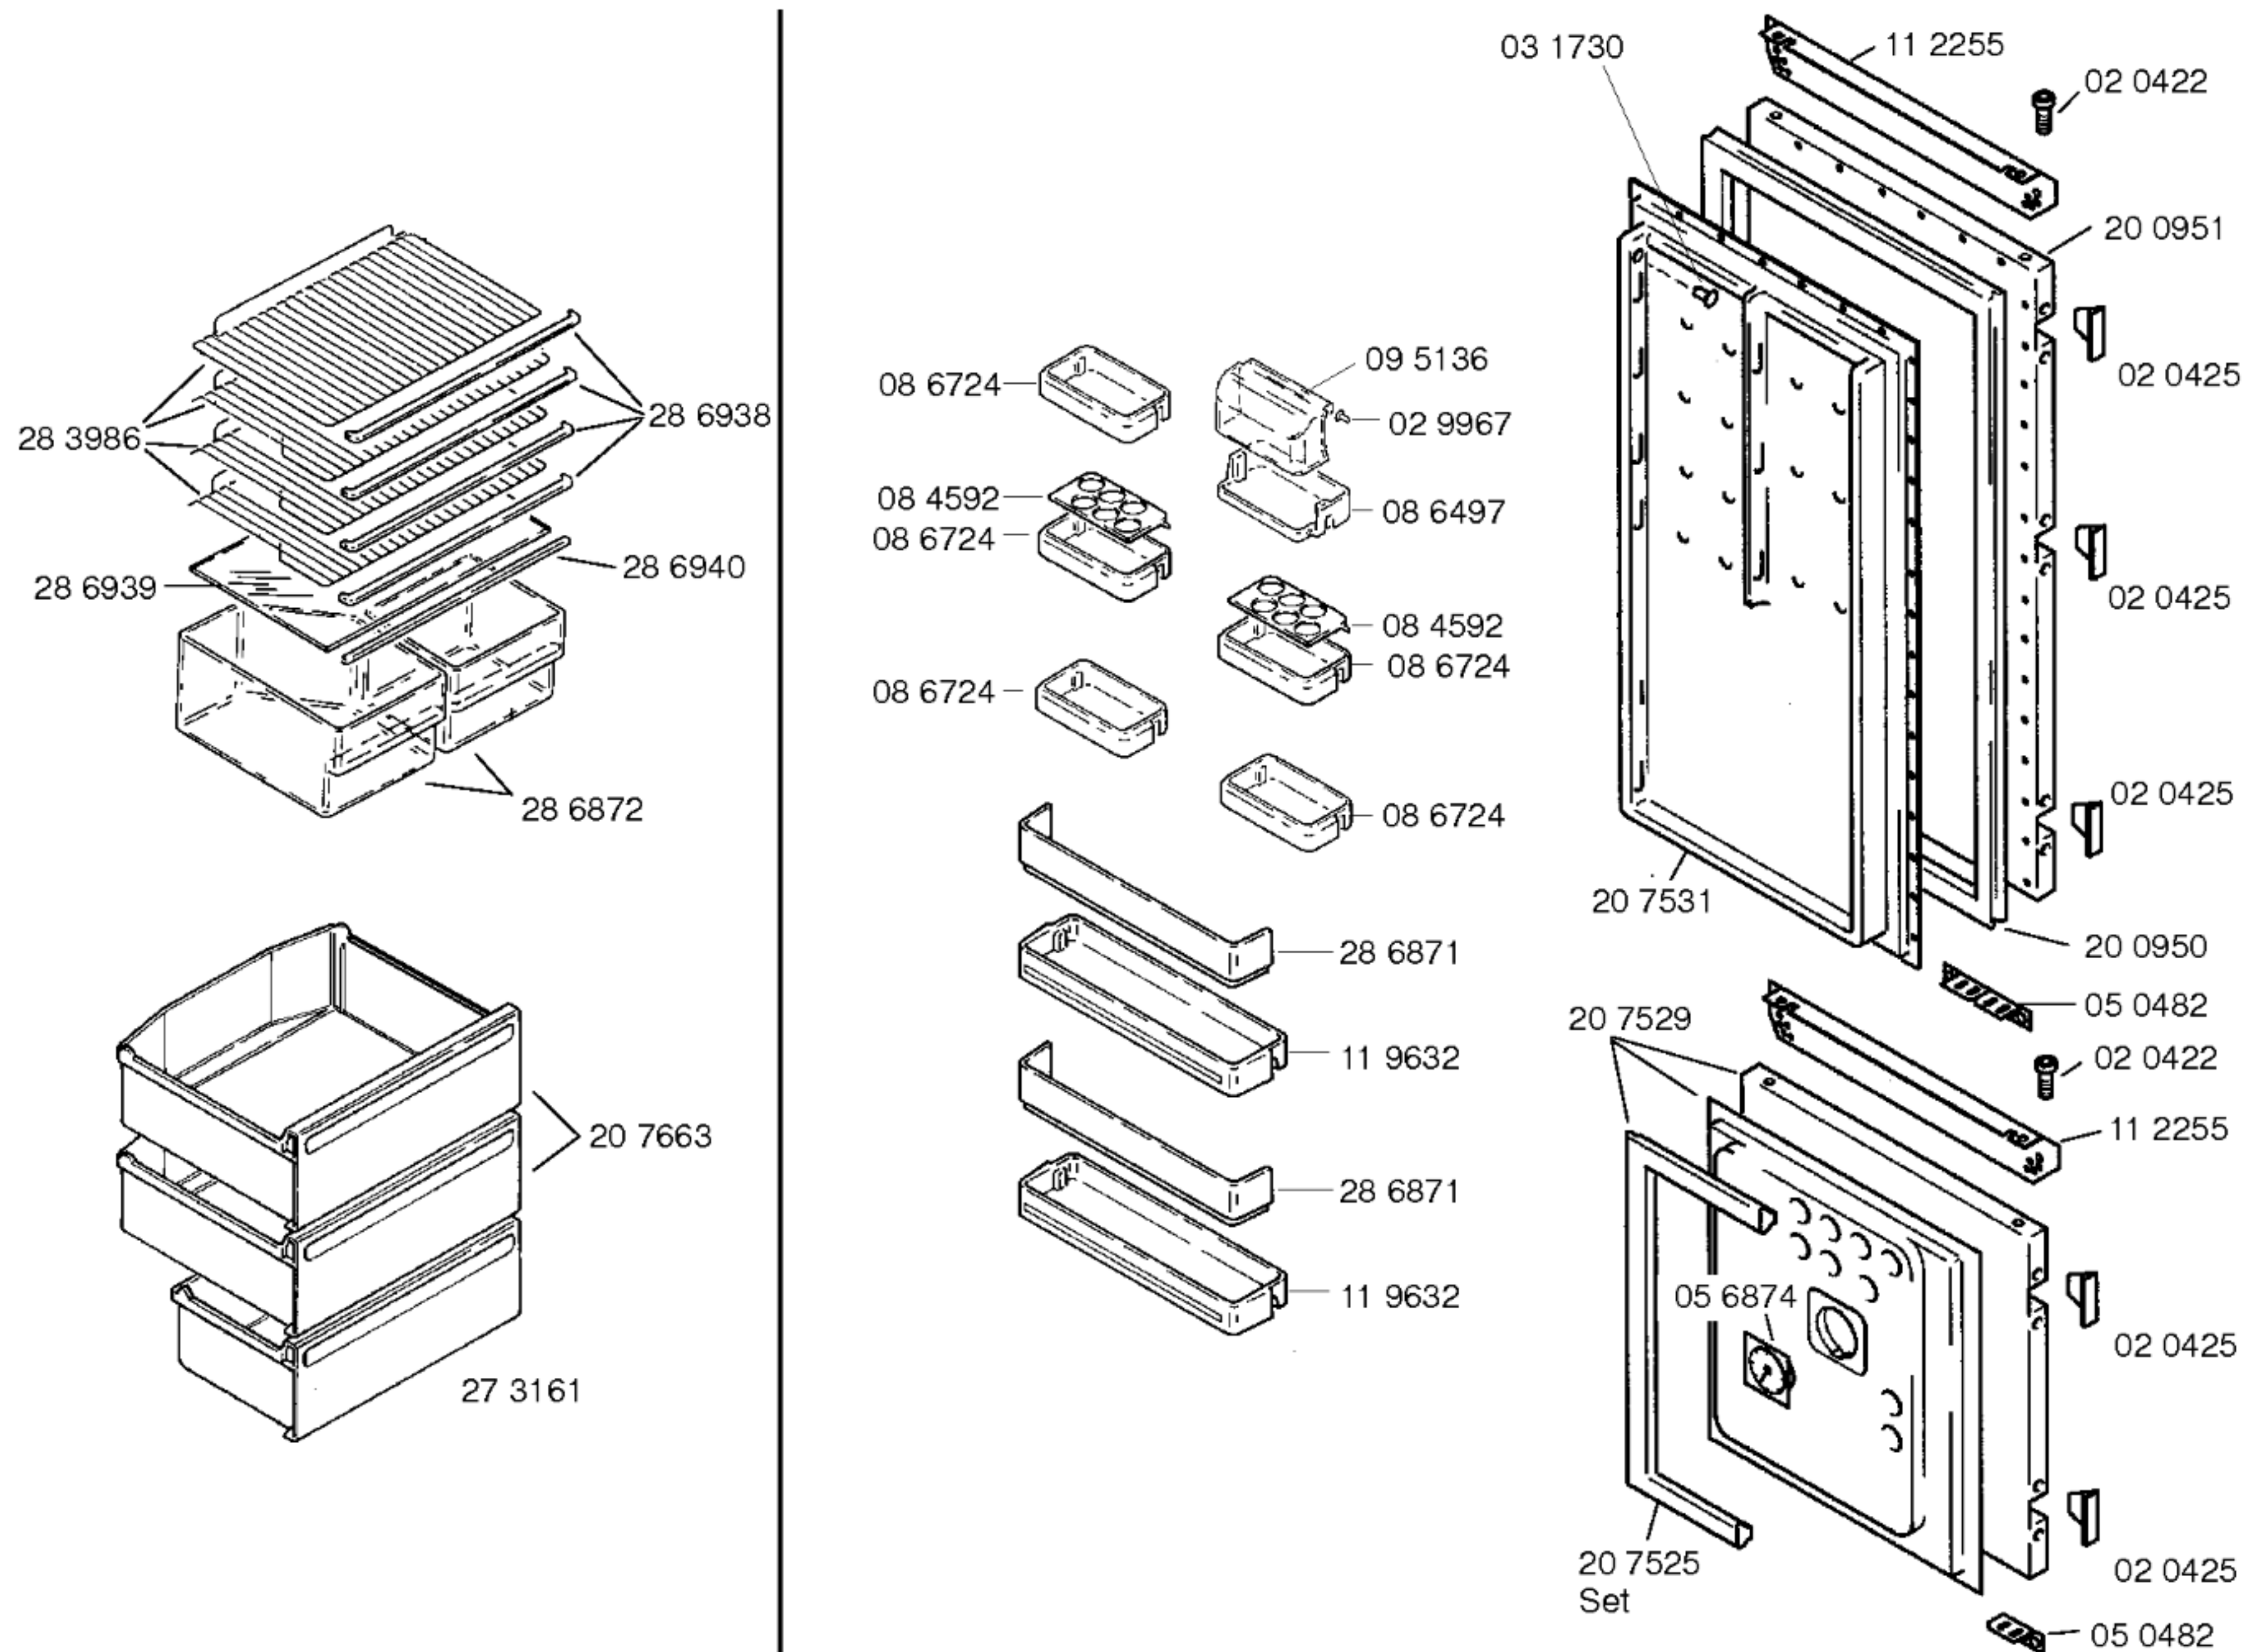

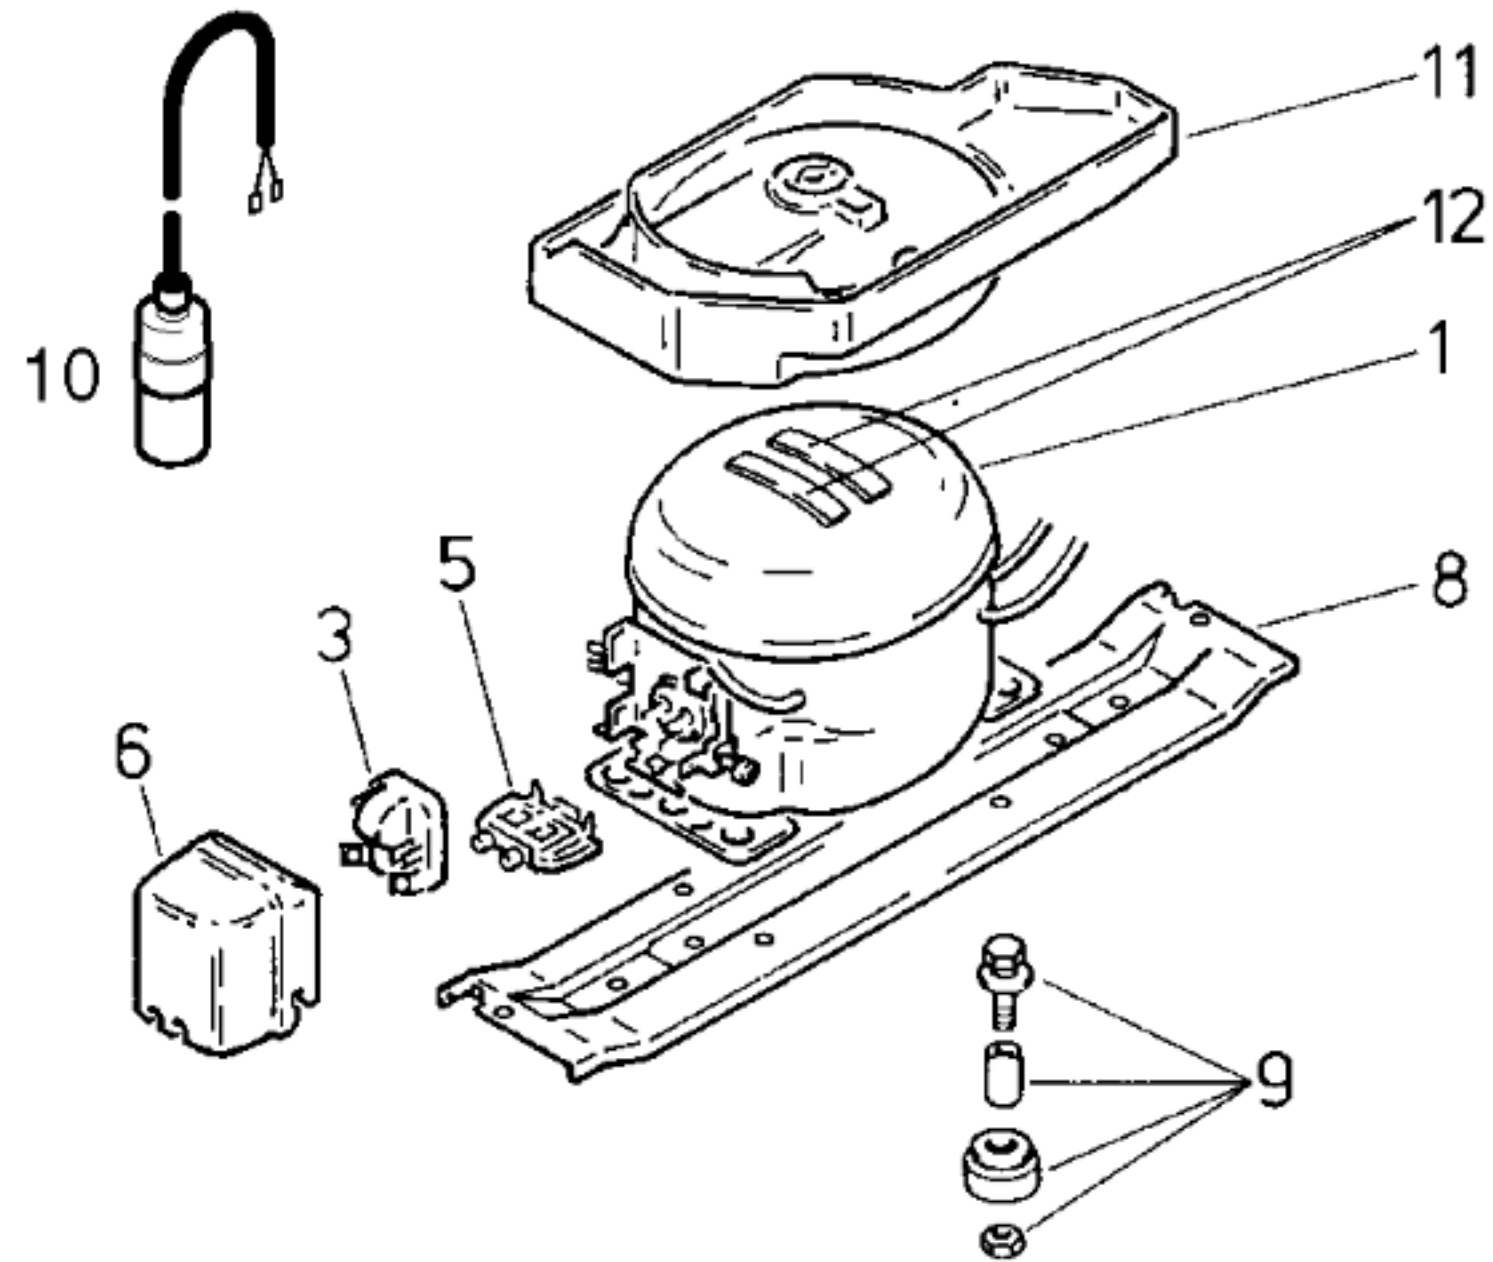

Pos.			
	Danfoss		
	NLE 9 F		
1	14 1257		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	28 1825		
9	05 0166		
10	05 9467		
11	28 6924		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		NLE 9 F			
Förderleistung/Delivery/Débit		l/h	1503		
Anlaufstrom/Starting current/Cour. de démarrage		A	10,5		
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	13,0	
		Hi/aux	Ω	17,6	
Temp.-Regler/Thermostat		WHF/TPC			
Typ/Type		TF57F1K			
Reglerstellung/Position		kalt		warm	
Schaltwerte/Switching values/ Valeurs de commutation		„ein“	°C	+5	+5
		„aus“ („abtauen“ od.)		-31	-20
Füllmenge/Fill.quantity/Charge		R134a	g	155	
Anschlußwert/Conn.load/Puiss. connectée			W	150	
Heizung/Heater/Chauffage					
Widerstand/Resistance/Resistance			Ω		
Leistung/Power/Puissance			W		
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance			Ω		
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance			Ω		
Spannung/Voltage/Tension			V		