



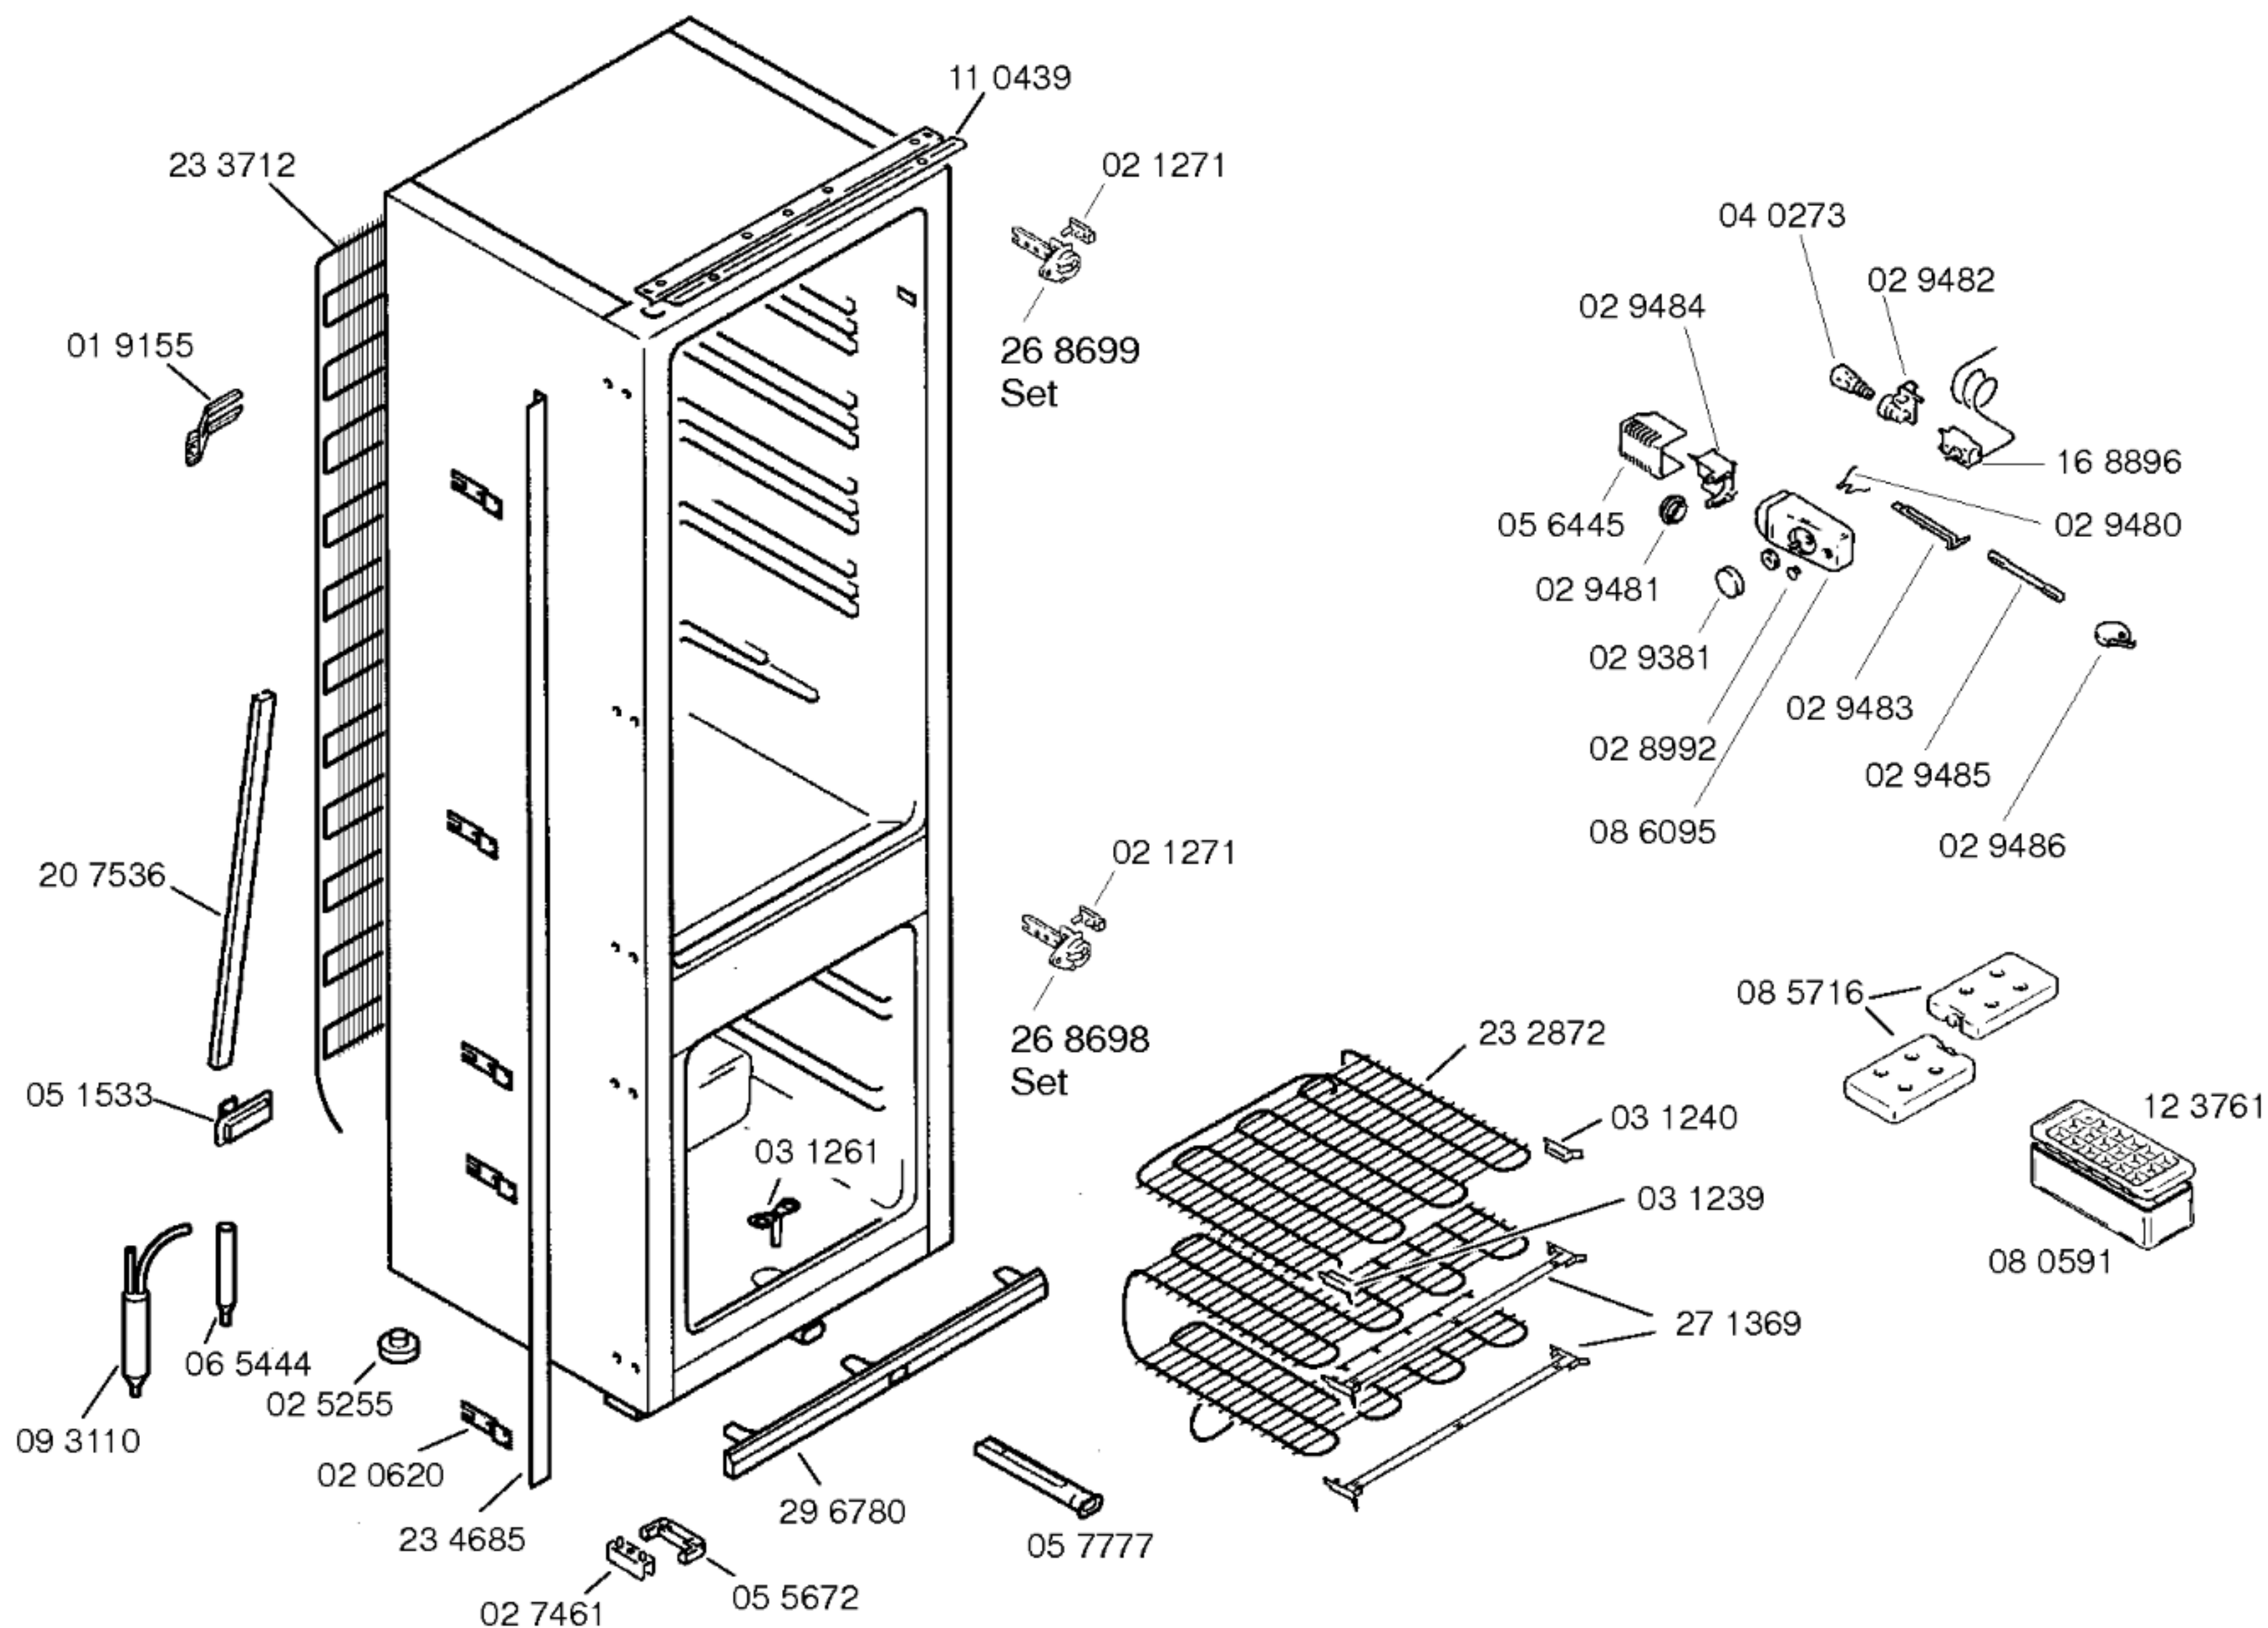


Gebrauchsanweisung
51 5681
(D,GB,F,I,NL,S,E,DK,N,,SF)

Montageanleitung
51 5546
(D,GB,F,I,NL,S,E,DK,N,,SF)

08 4137
Befestigungssatz
08 4136
Schraubensatz

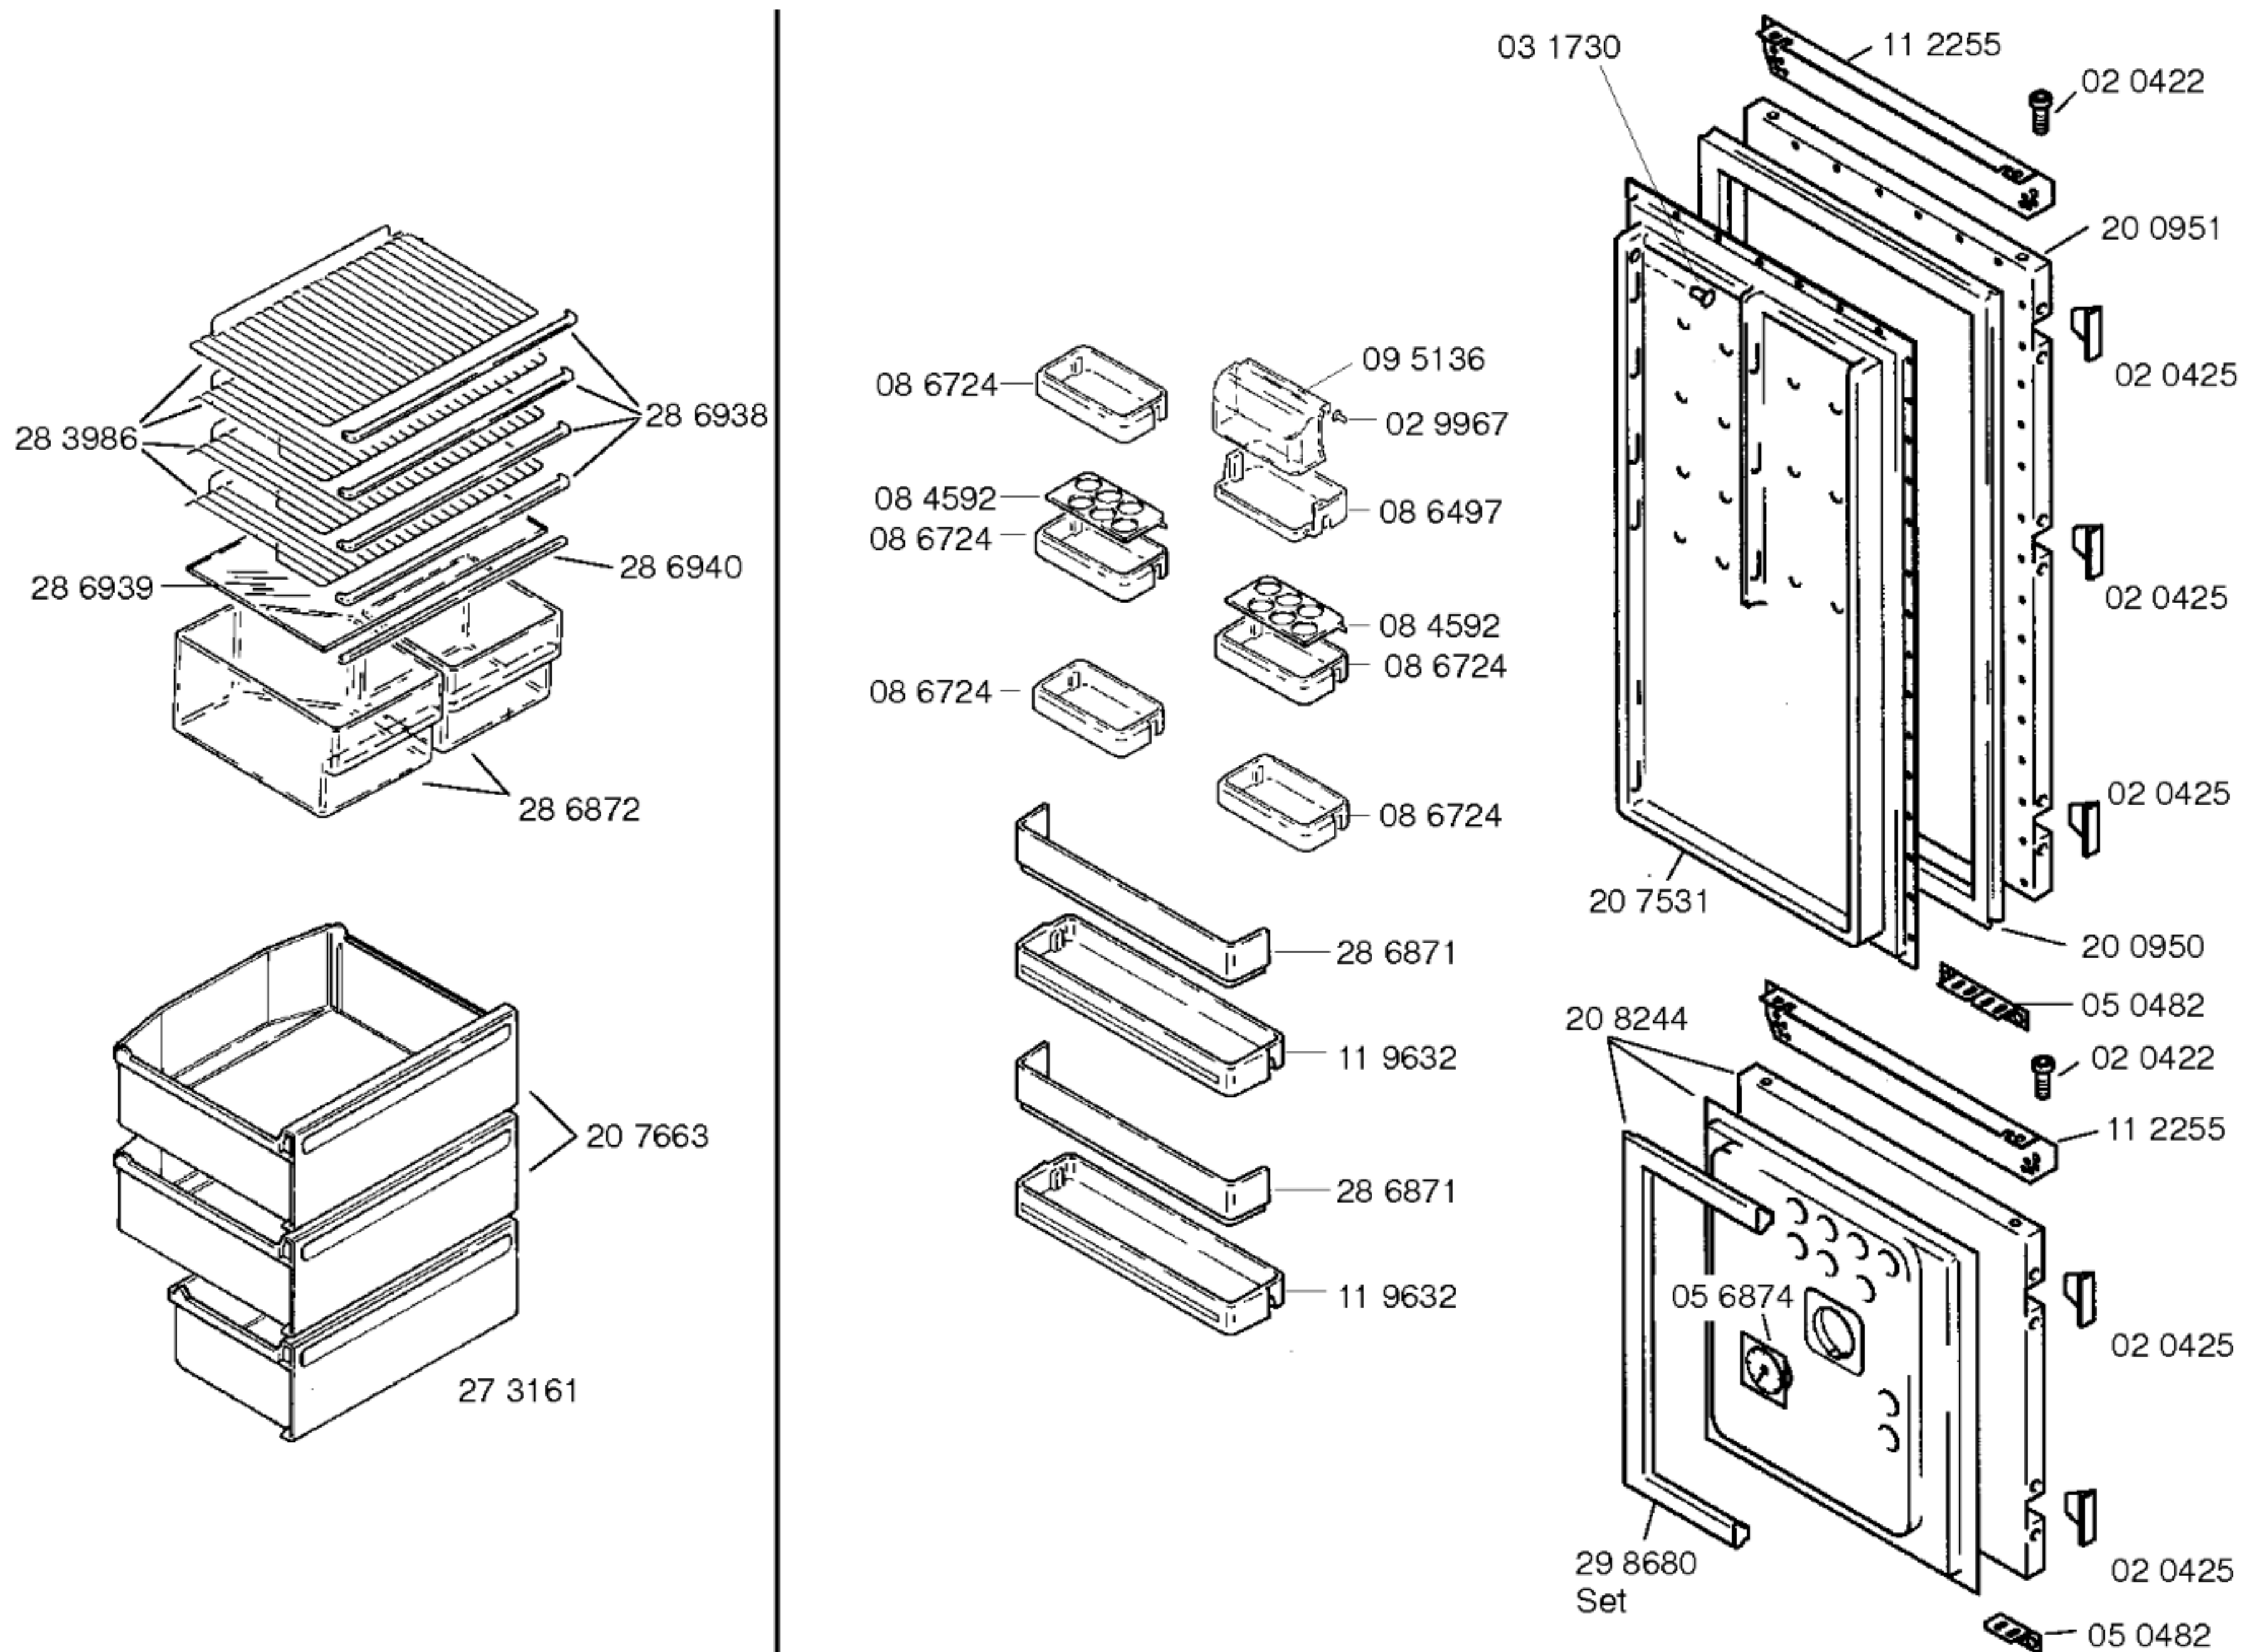

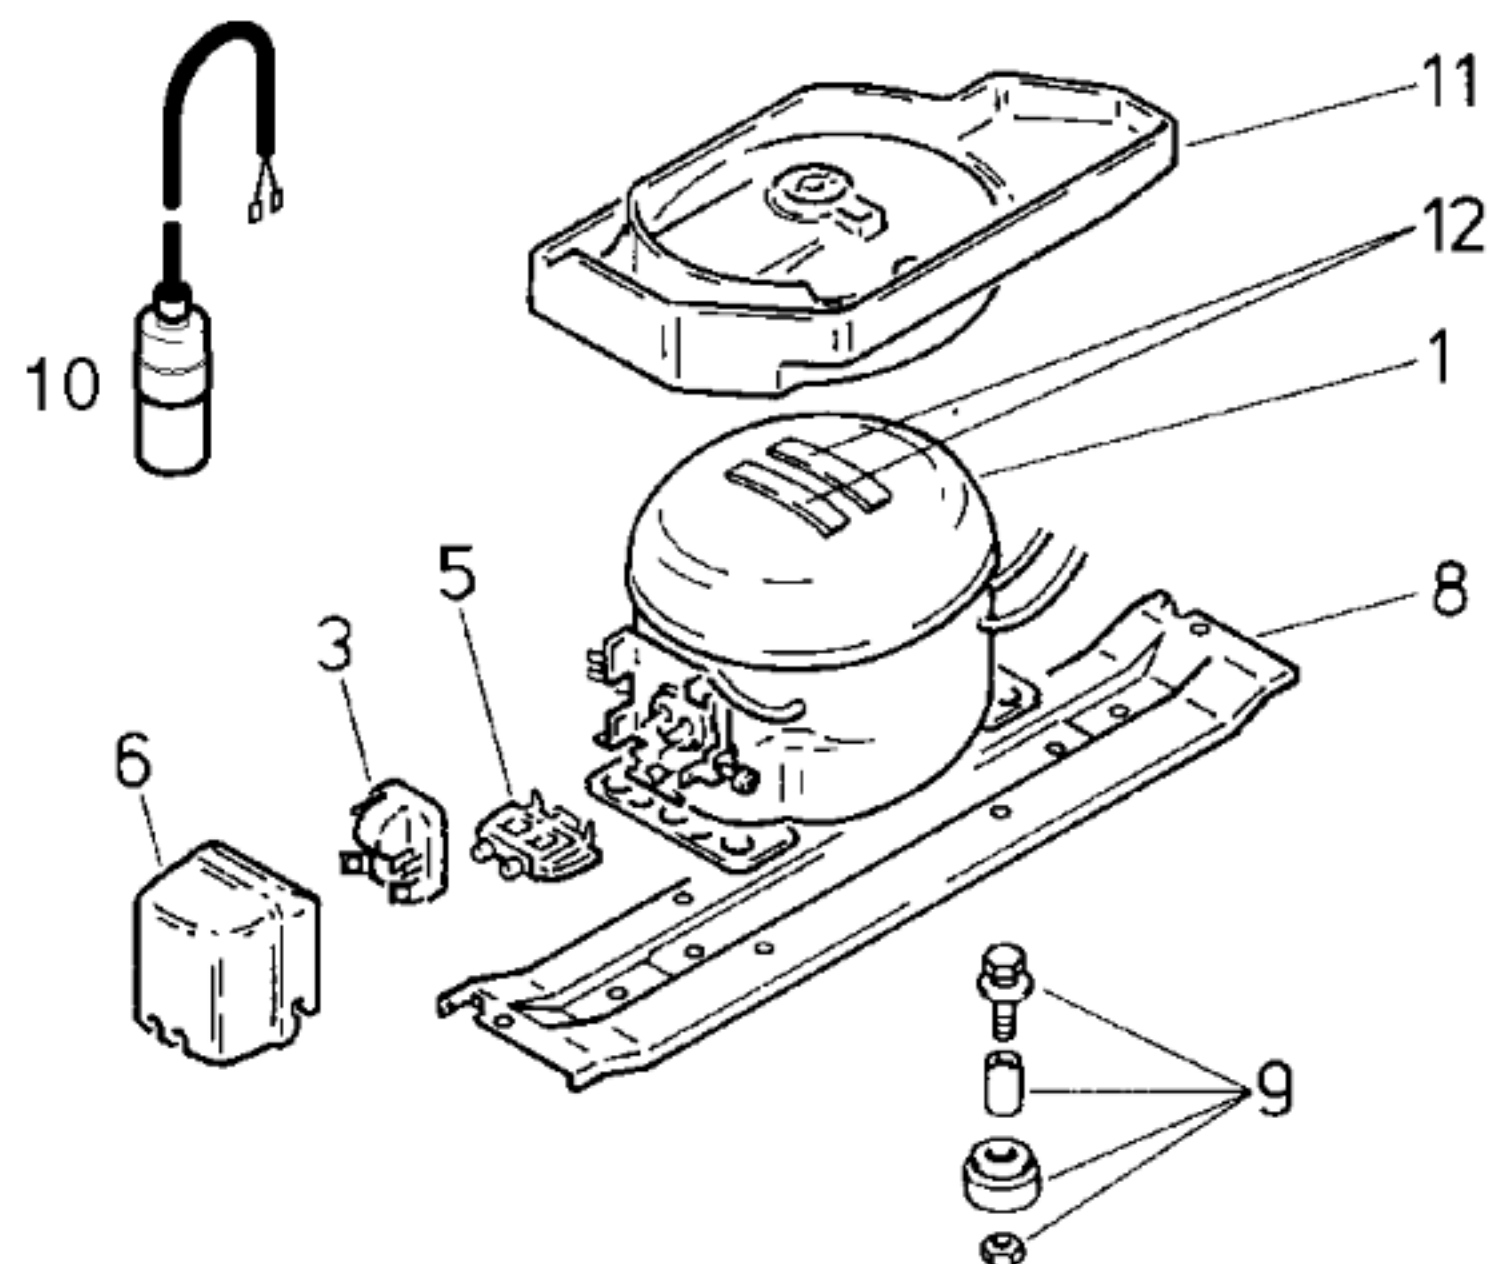

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur Typ/Type		Danfoss NLE 15 K 2637	
Förderleistung/Delivery/Débit	l/h		
Anlaufstrom/Starting current/Cour. de démarrage	A		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω		
	Hi/aux Ω		
Temp.-Regler/Thermostat Typ/Type		RCO K59 KER	
Reglerstellung/Position	°C	kalt	warm
Schaltwerte/Switching values/ Valeurs de commutation	„ein“ „aus“ („abtauen“ od.)	+4,5 -32,0	+4,5 -21
Füllmenge/Fill.quantity/Charge	R600a	g	*
Anschlußwert/Conn.toad/Puiss. connectée	W	150	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild

Pos.			
	Danfoss		
	NLE 15 K		
1	14 1752		
2			
3	15 1055		
4			
5	15 1053		
6	15 1072		
7			
8	28 1825		
9	05 0166		
10	05 9467		
11	28 6924		
12	05 6008		