



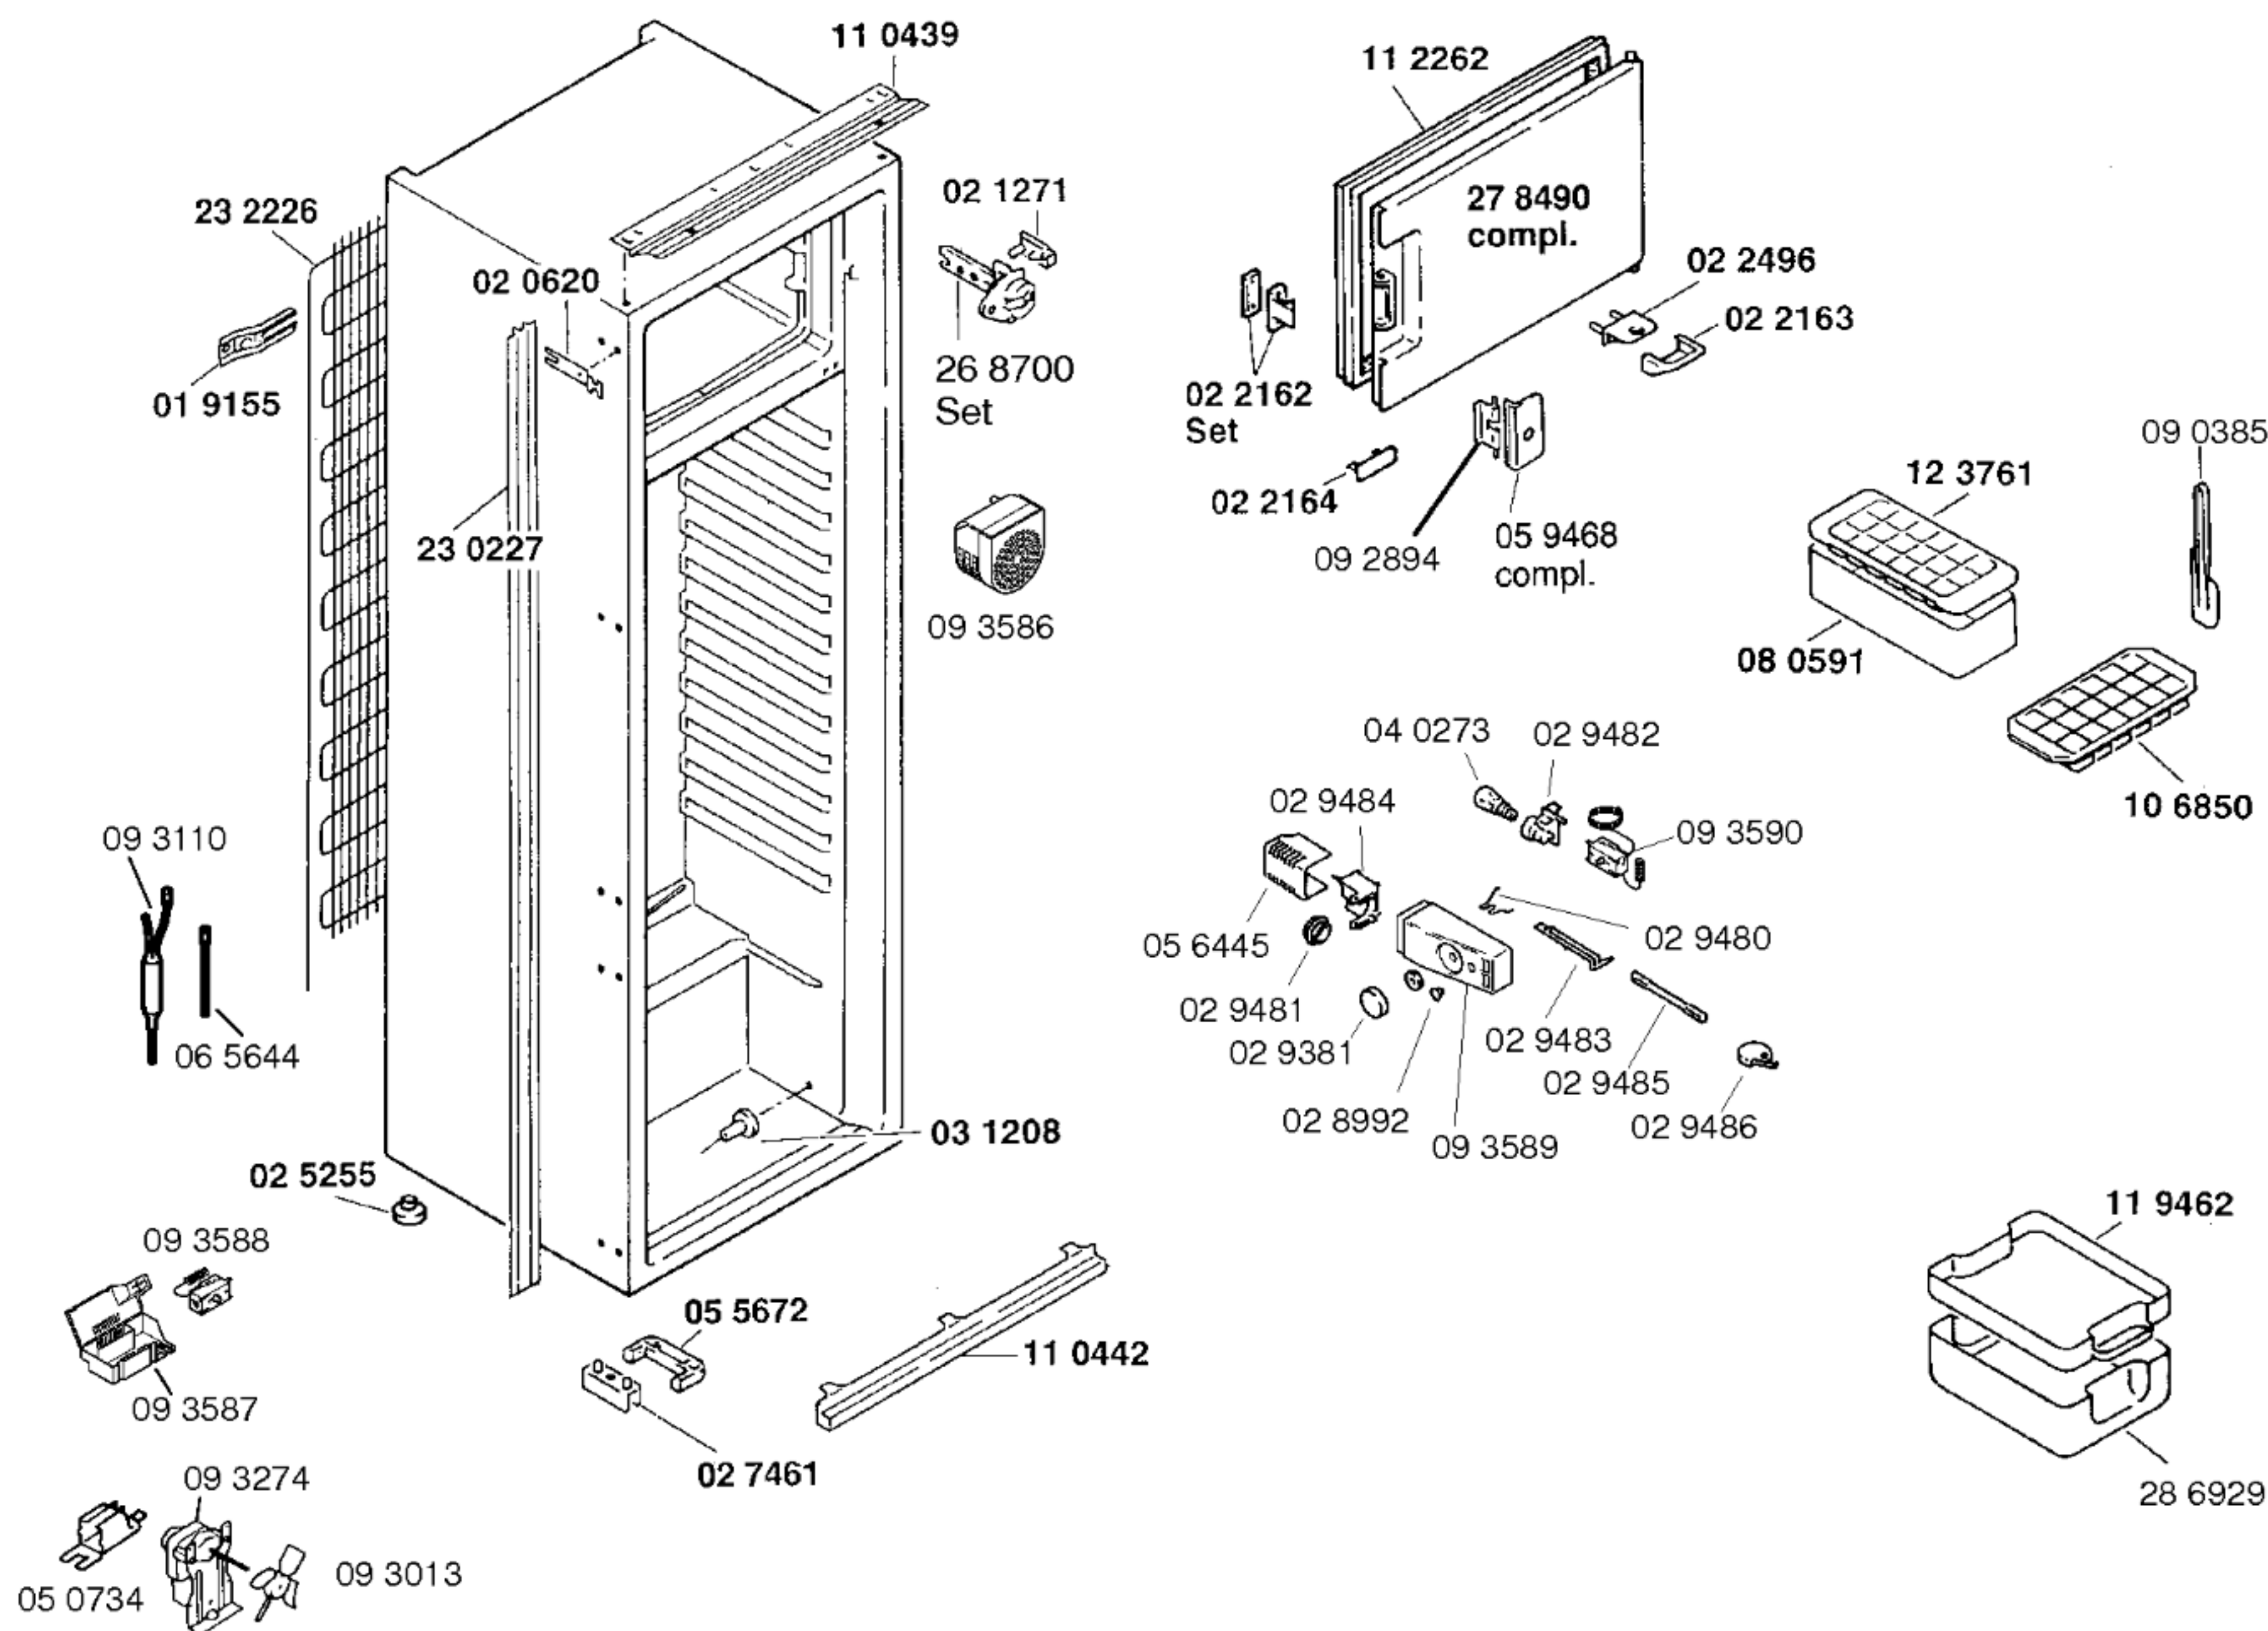


Gebrauchsanweisung
51 4430
(D,GB,F,I,NL,E)
Montageanweisung
51 5436
(D,GB,F,I,NL,N,S,E)

Schraubensatz
08 4136

Befestigungssatz
08 8957

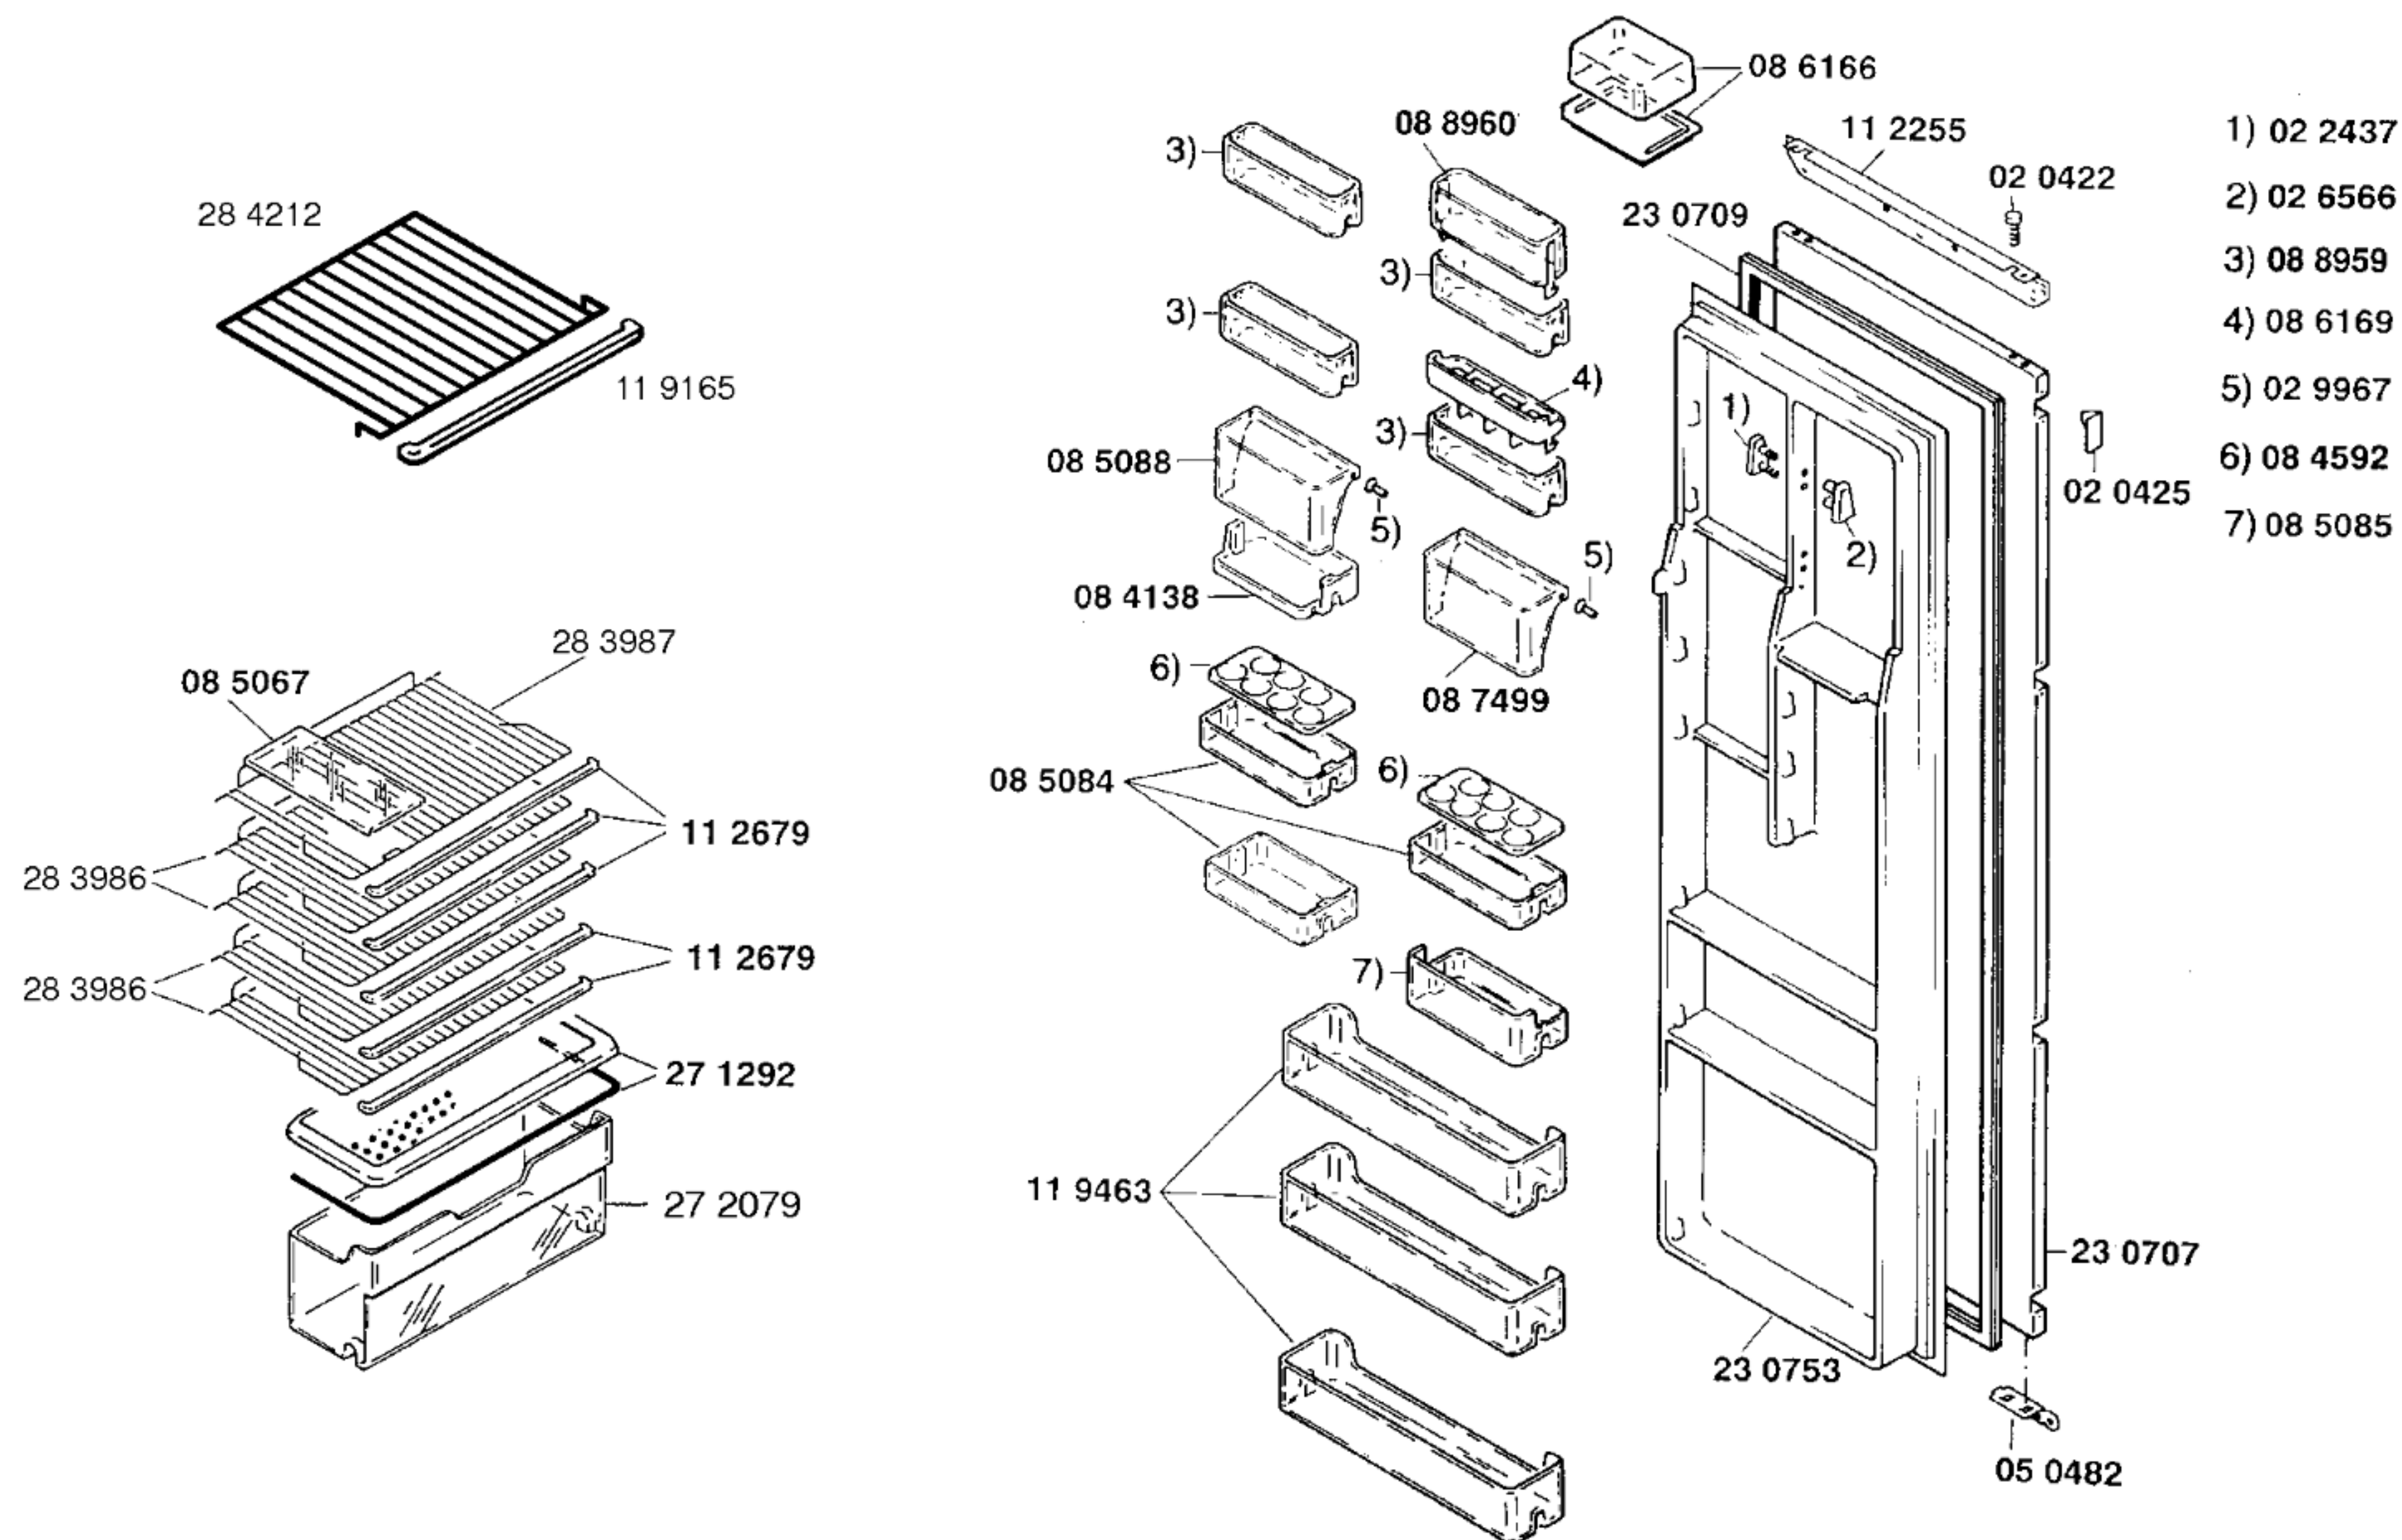

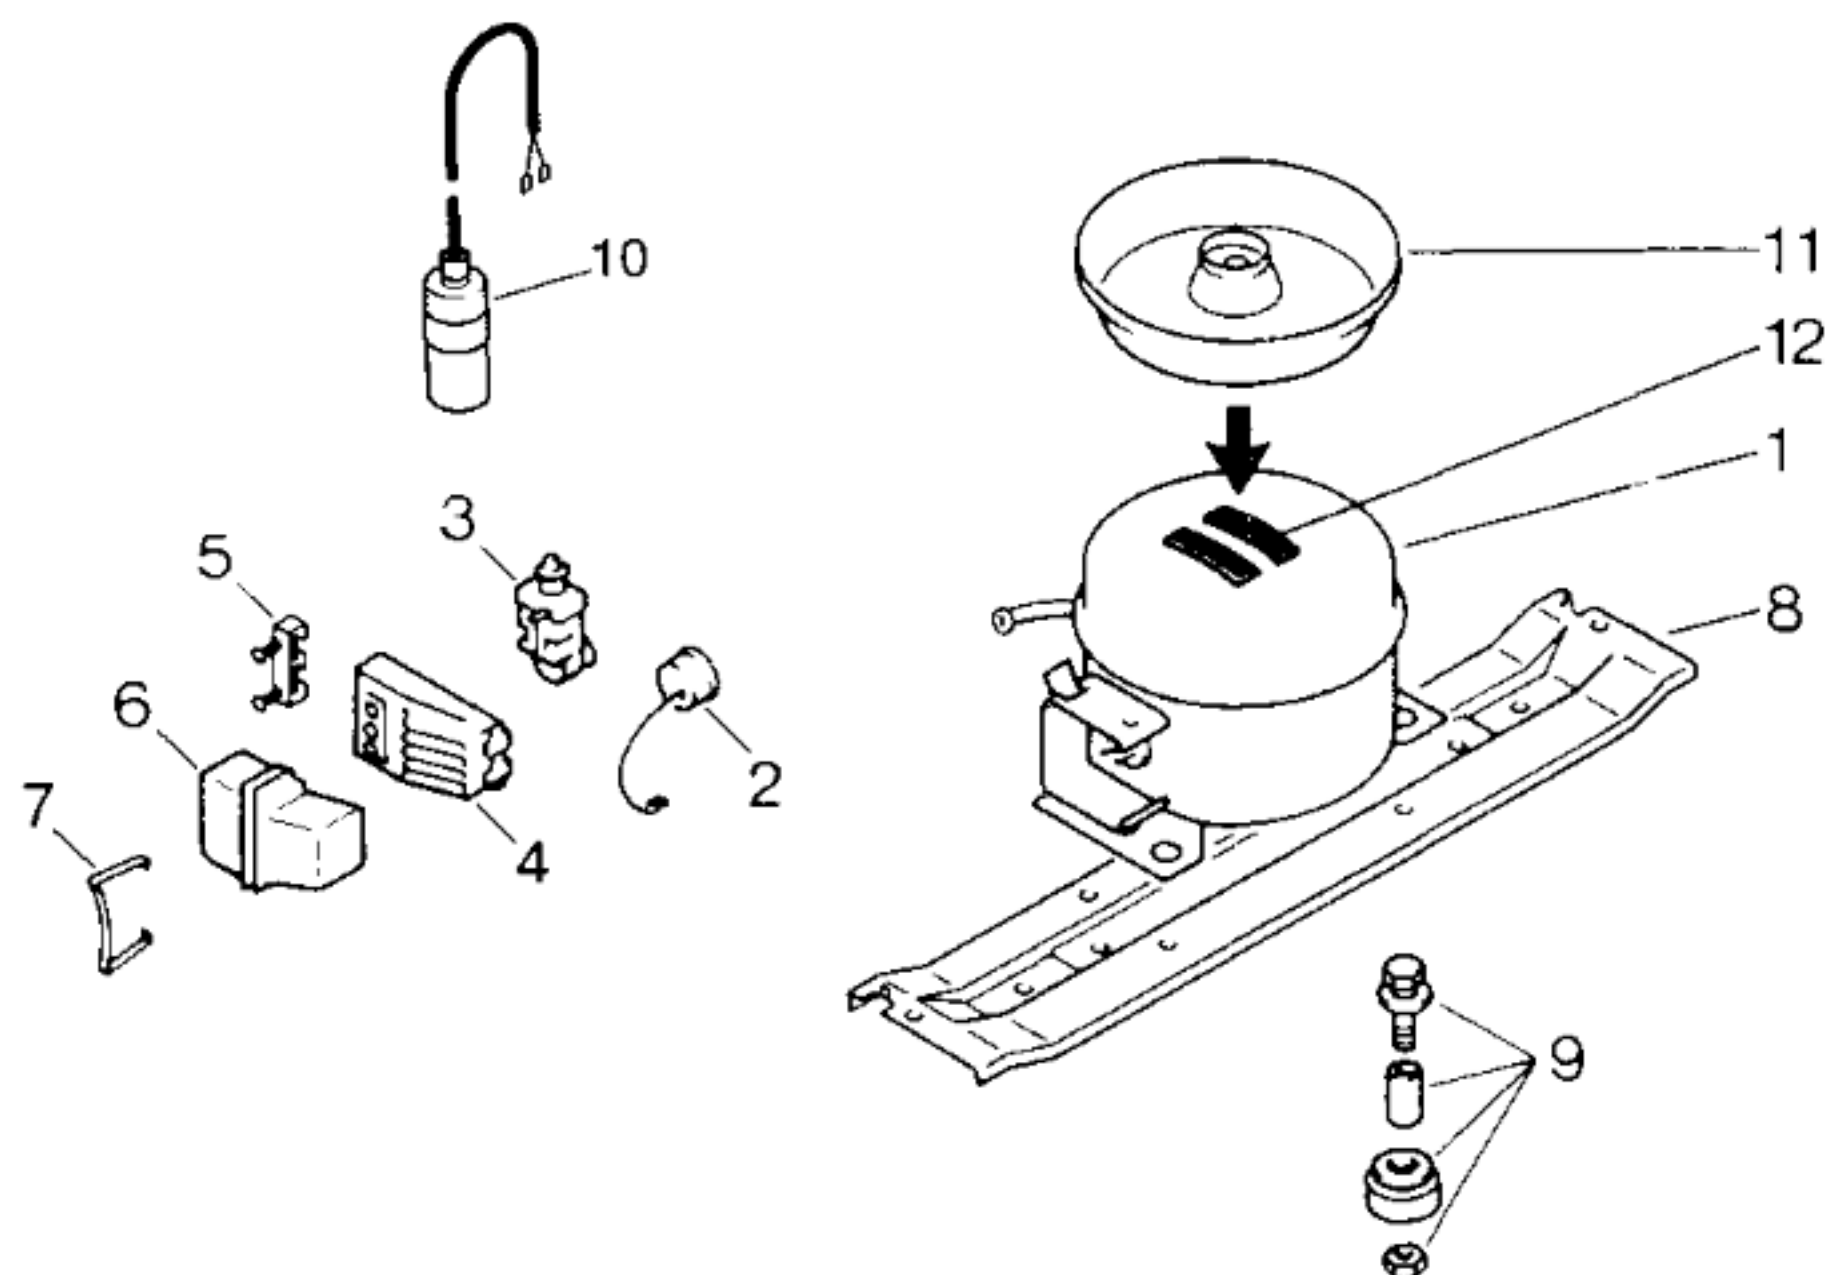

Pos.	V01, V02	V03	
	Danfoss	Danfoss	
	NLE 15 K	NLE 15 K	
1	14 1311	14 1752	
2			
3	15 1055	15 1055	
4			
5	15 0760	15 0760	
6	15 1072	15 1072	
7	02 6731	02 6731	
8	28 1825	28 1825	
9	05 0166	05 0166	
10			
11	08 4744	08 4744	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES						
Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit Anlaufstrom/Starting current/Cour de démarrage Widerstand/Resistance/Résistance			Danfoss NLE15K 2637 l/h A Ha/main/prin. Hi/aux			
Temp.-Regler/Thermostat Typ/Type Reglerstellung/Position Schaltwerte/Switching values/ Valeurs de commutation („abtauen“ od.)			Ranco °C „ein“ „aus“ „alarm“		Innentemp. K 52-1 Kontaktf. Luftf. kalt +4 0 warm +7,5 +10	
					Außentemp. K 50-L5772 +31,5 +28,5	
Füllmenge/Fill.quantity/Charge			R600a	g	55	
Anschlußwert/Conn.load/Puiss. connectée			W	150		
Heizung/Heater/Chauffage Widerstand/Resistance/Résistance Leistung/Power/Puissance			Ω W			
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance			Ω	Innen 1300	Außen 350	
Schaltuhr/Timer/Minuterie de contact Widerstand/Resistance/Résistance			Ω			
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Spannung/Voltage/Tension			Ω V			