




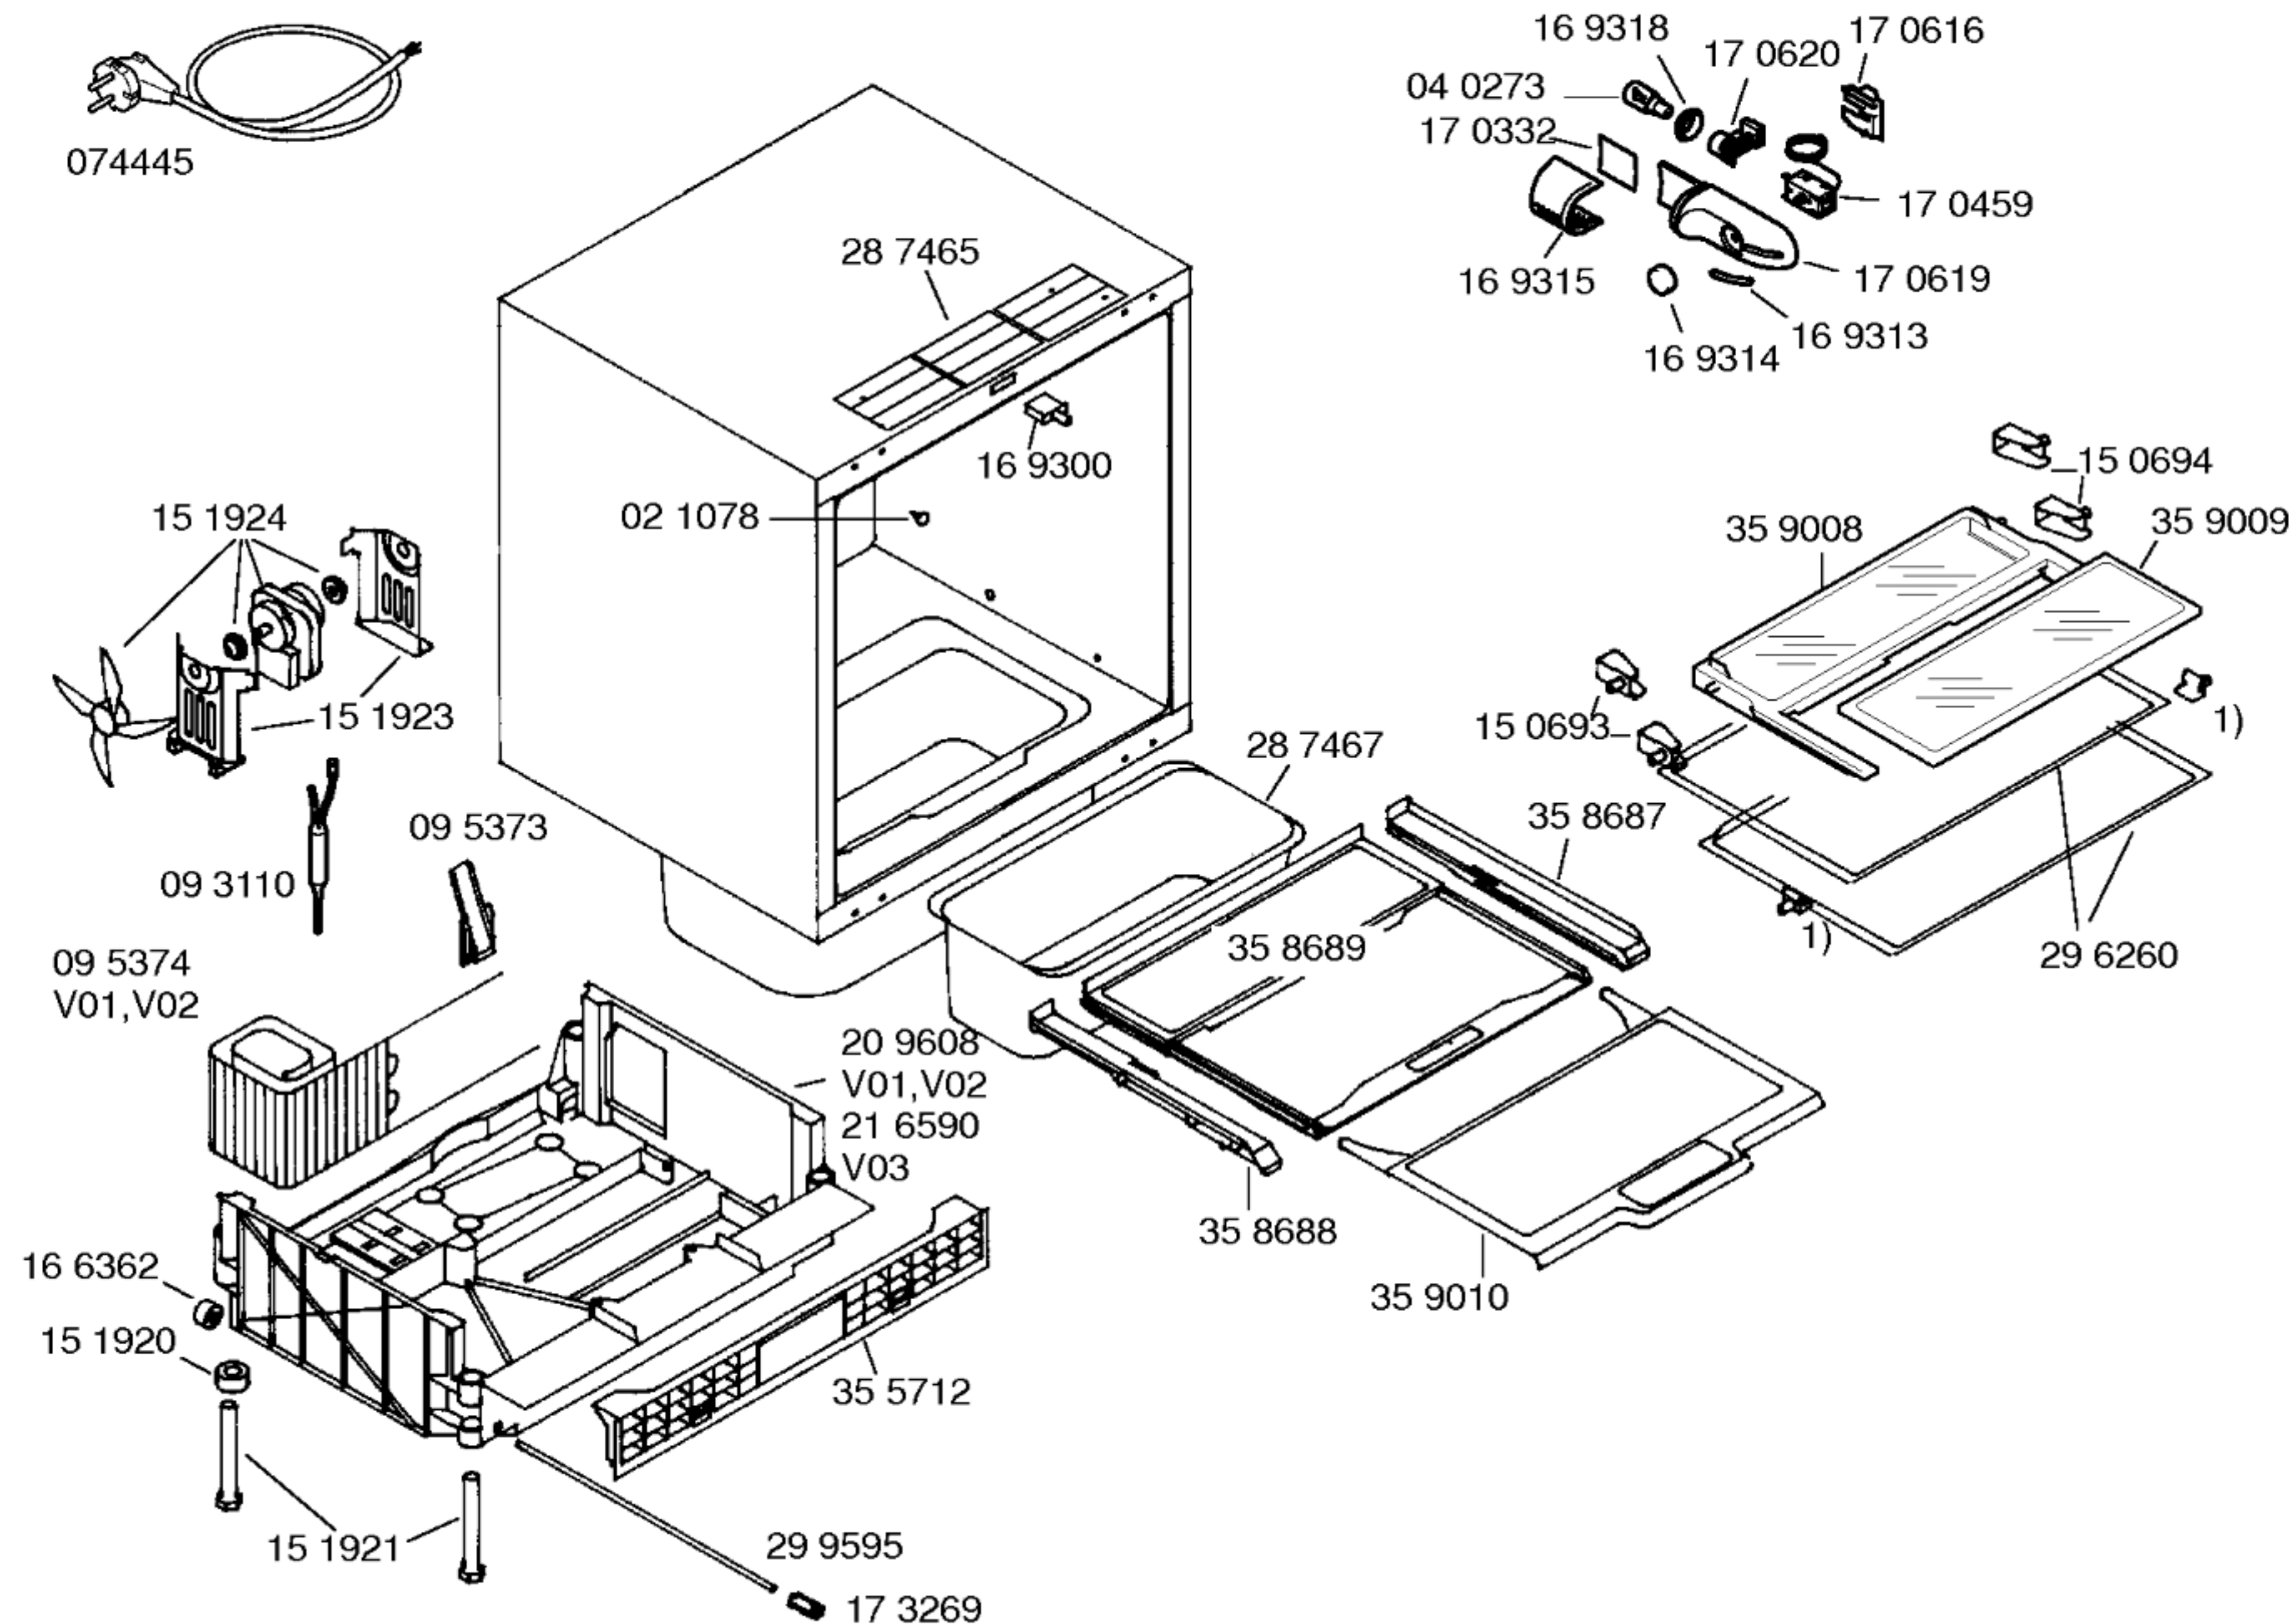

Gebrauchsanweisung
52 6323
Montageanleitung
52 6094
Beistellsatz
26 7188

1) 16 5789

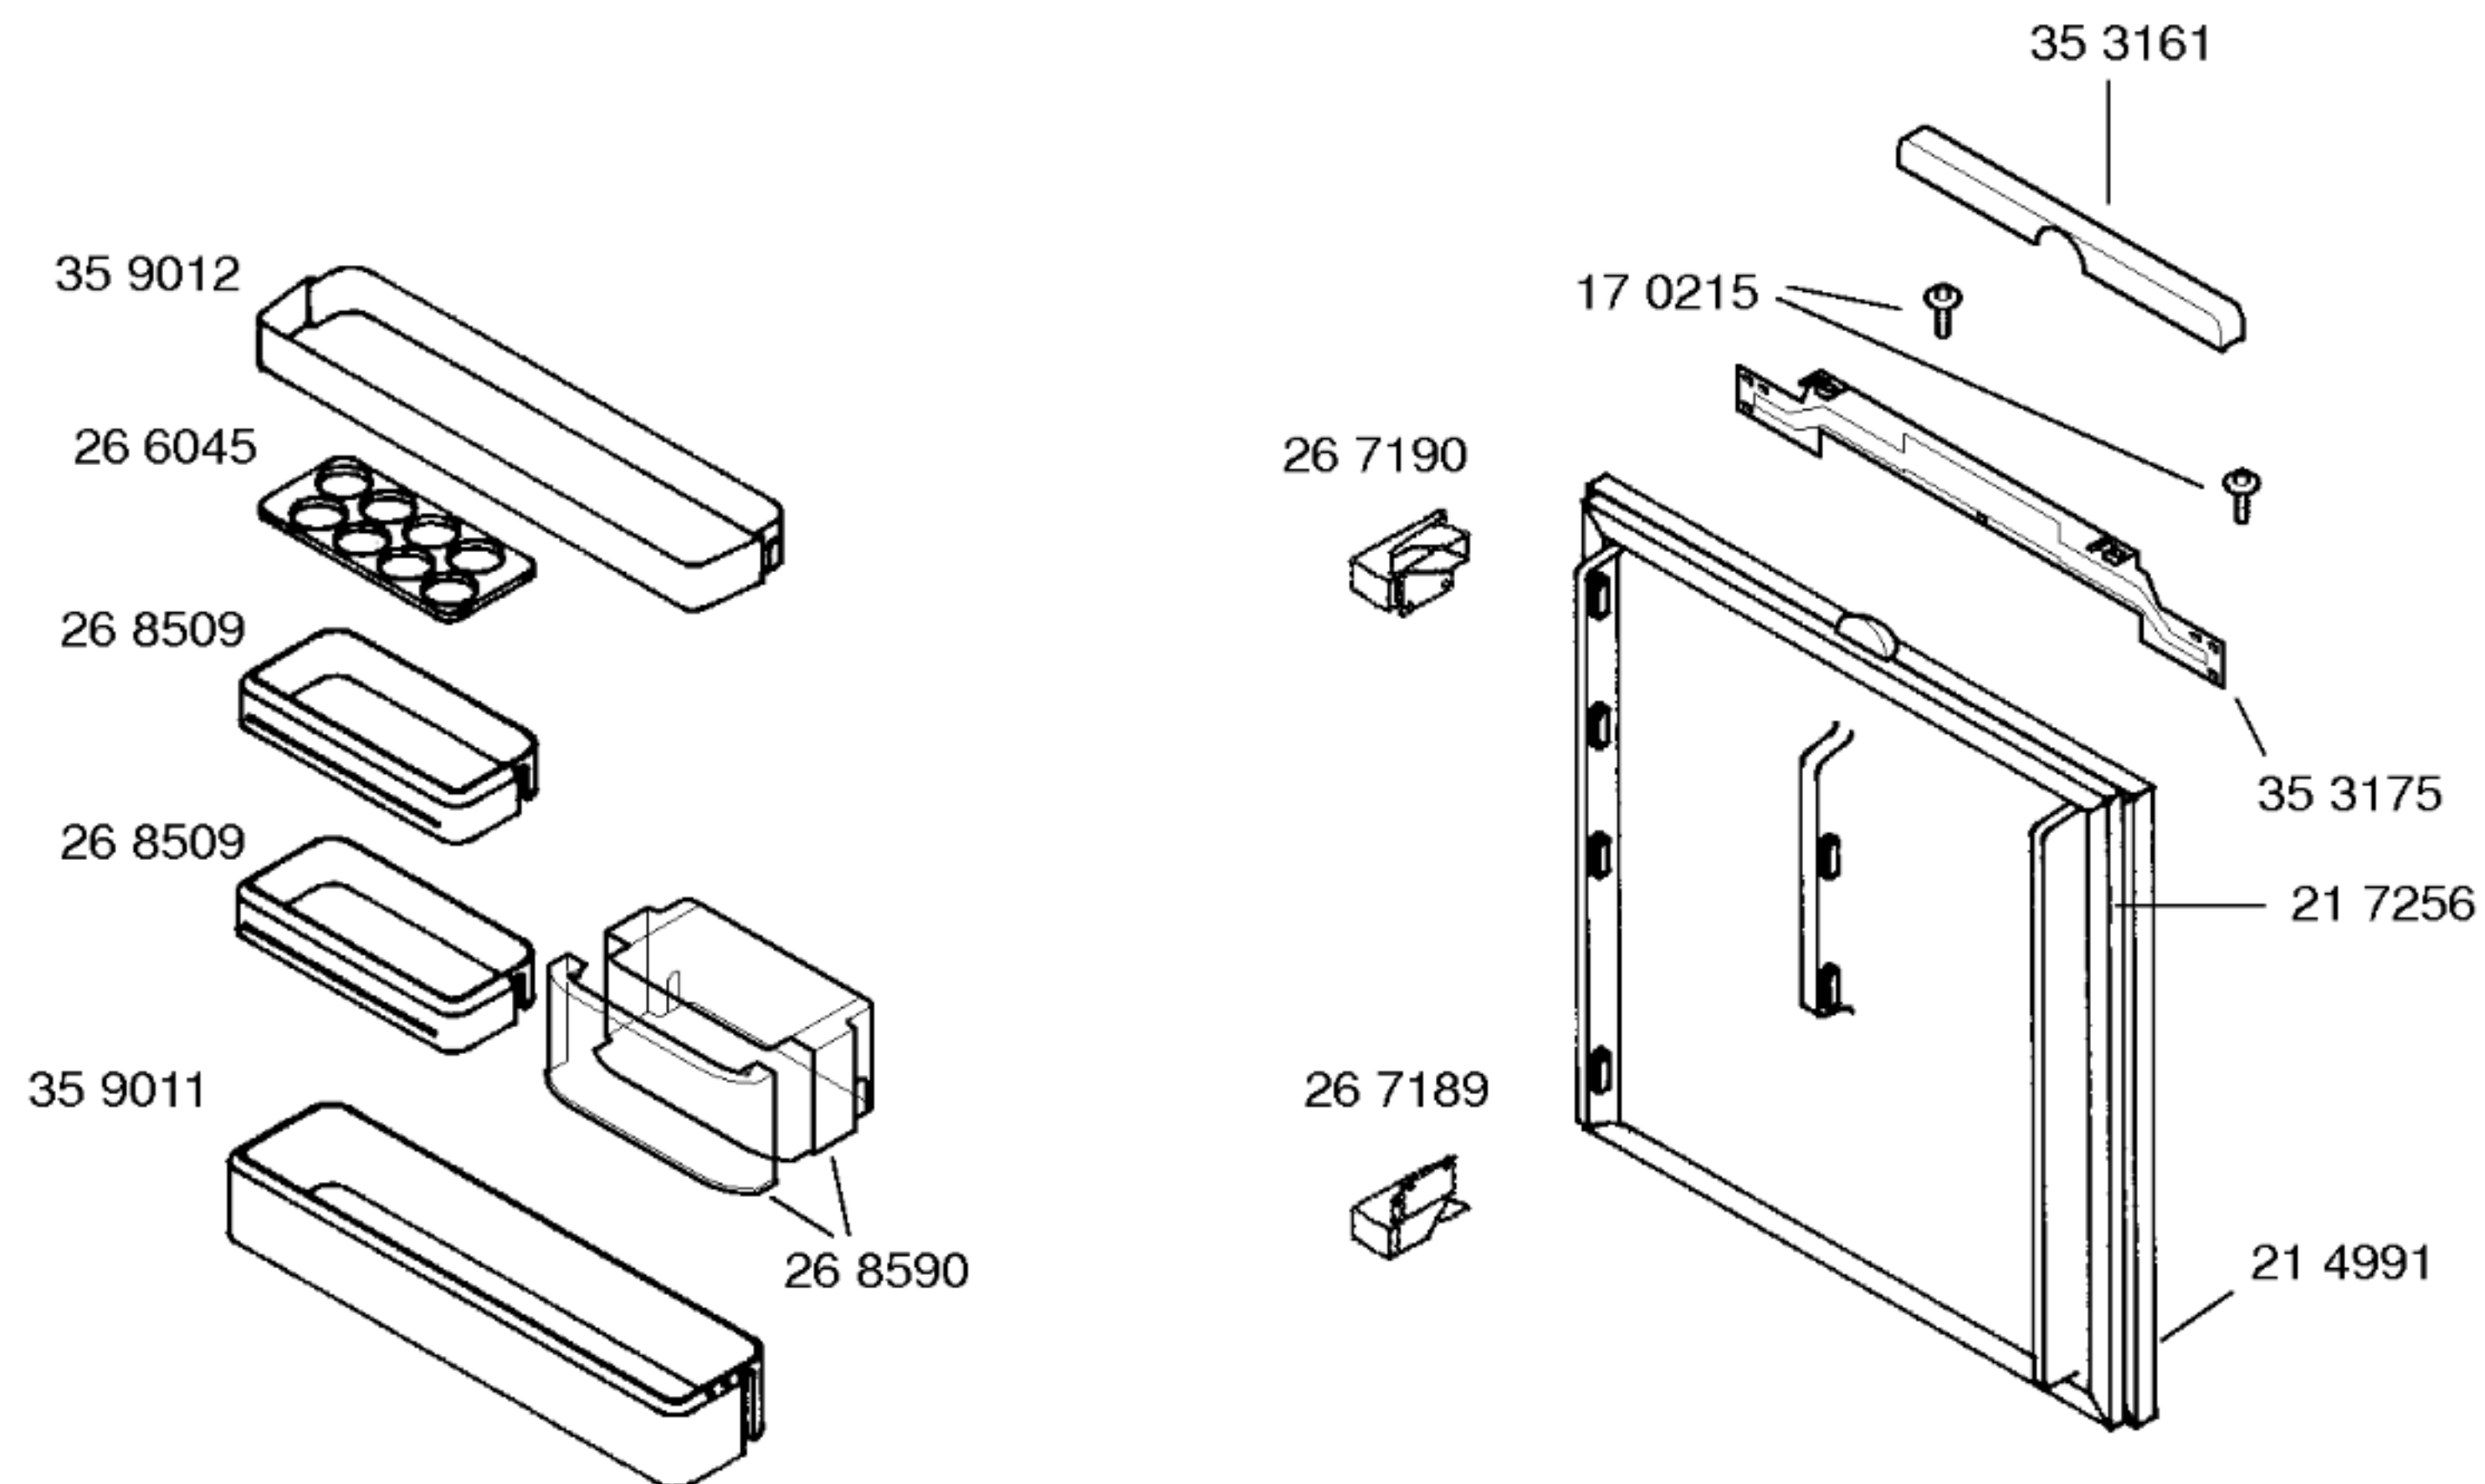

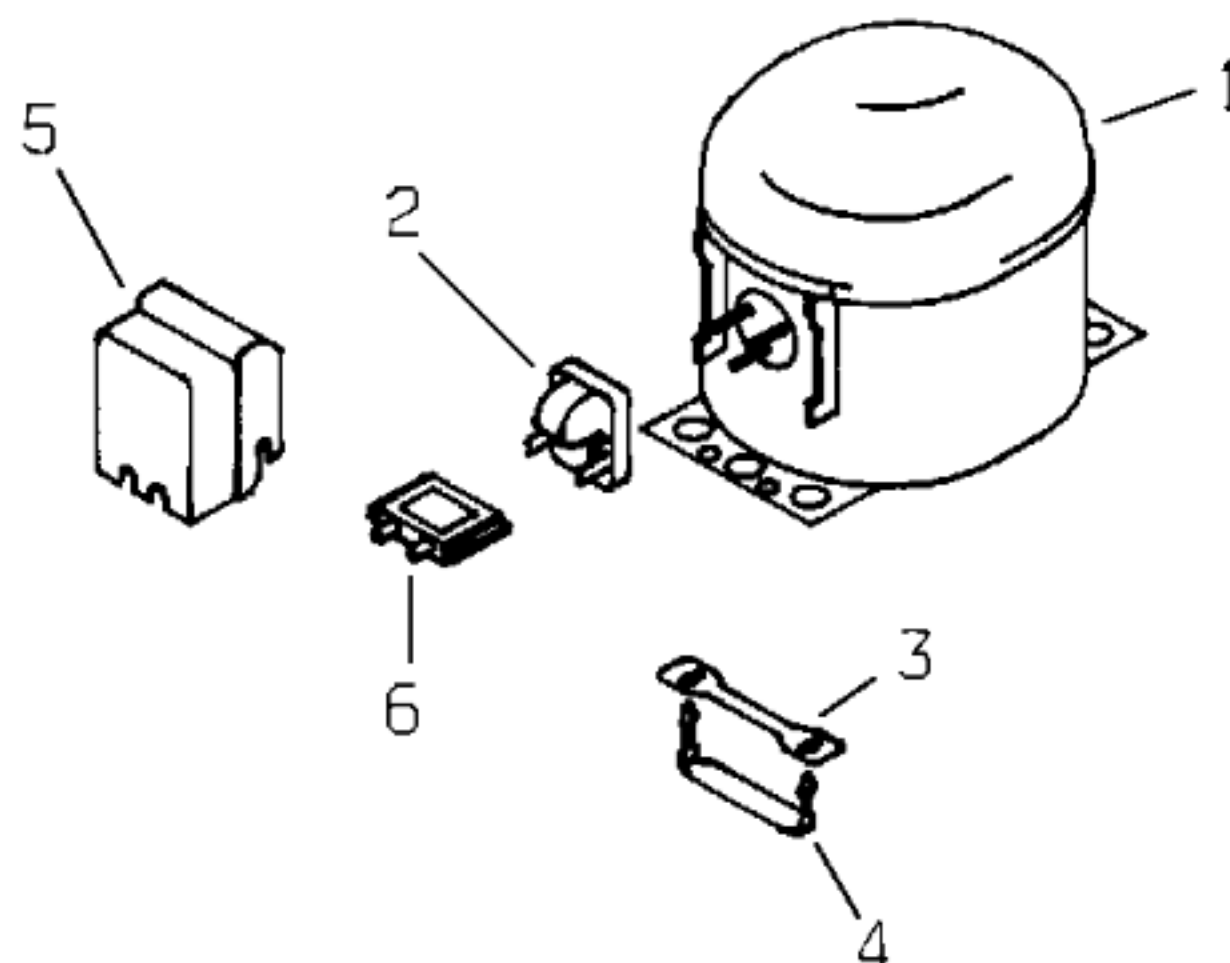

Pos.	V01, V02		
	Danfoss		
	TLES 6 KK2		
1	14 1904		
2	15 1055		
3	15 1919		
4	15 1918		
5	15 1072		
6	15 0760		
7			
8			
9			
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		TLS 6 KK2	
Förderleistung/Delivery/Débit	l/h	1026	
Anlaufstrom/Starting current/Cour de démarrage	A	8,5	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	25,7
	Hi/aux	Ω	15,7
Temp.-Regler/Thermostat		Ranco	
Typ/Type		K 59	
Reglerstellung/Position		kalt	warm
Schaltwerte/Switching values/	„ein“	+5	+5
Valeurs de commutation	„aus“	-28	-17
	(„abtauen“ od.)	„alarm“	
Füllmenge/Fill.quantity/Charge	R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée	W	66	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur		MES F61-10	
Widerstand/Resistance/Résistance	Ω	680	
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild