


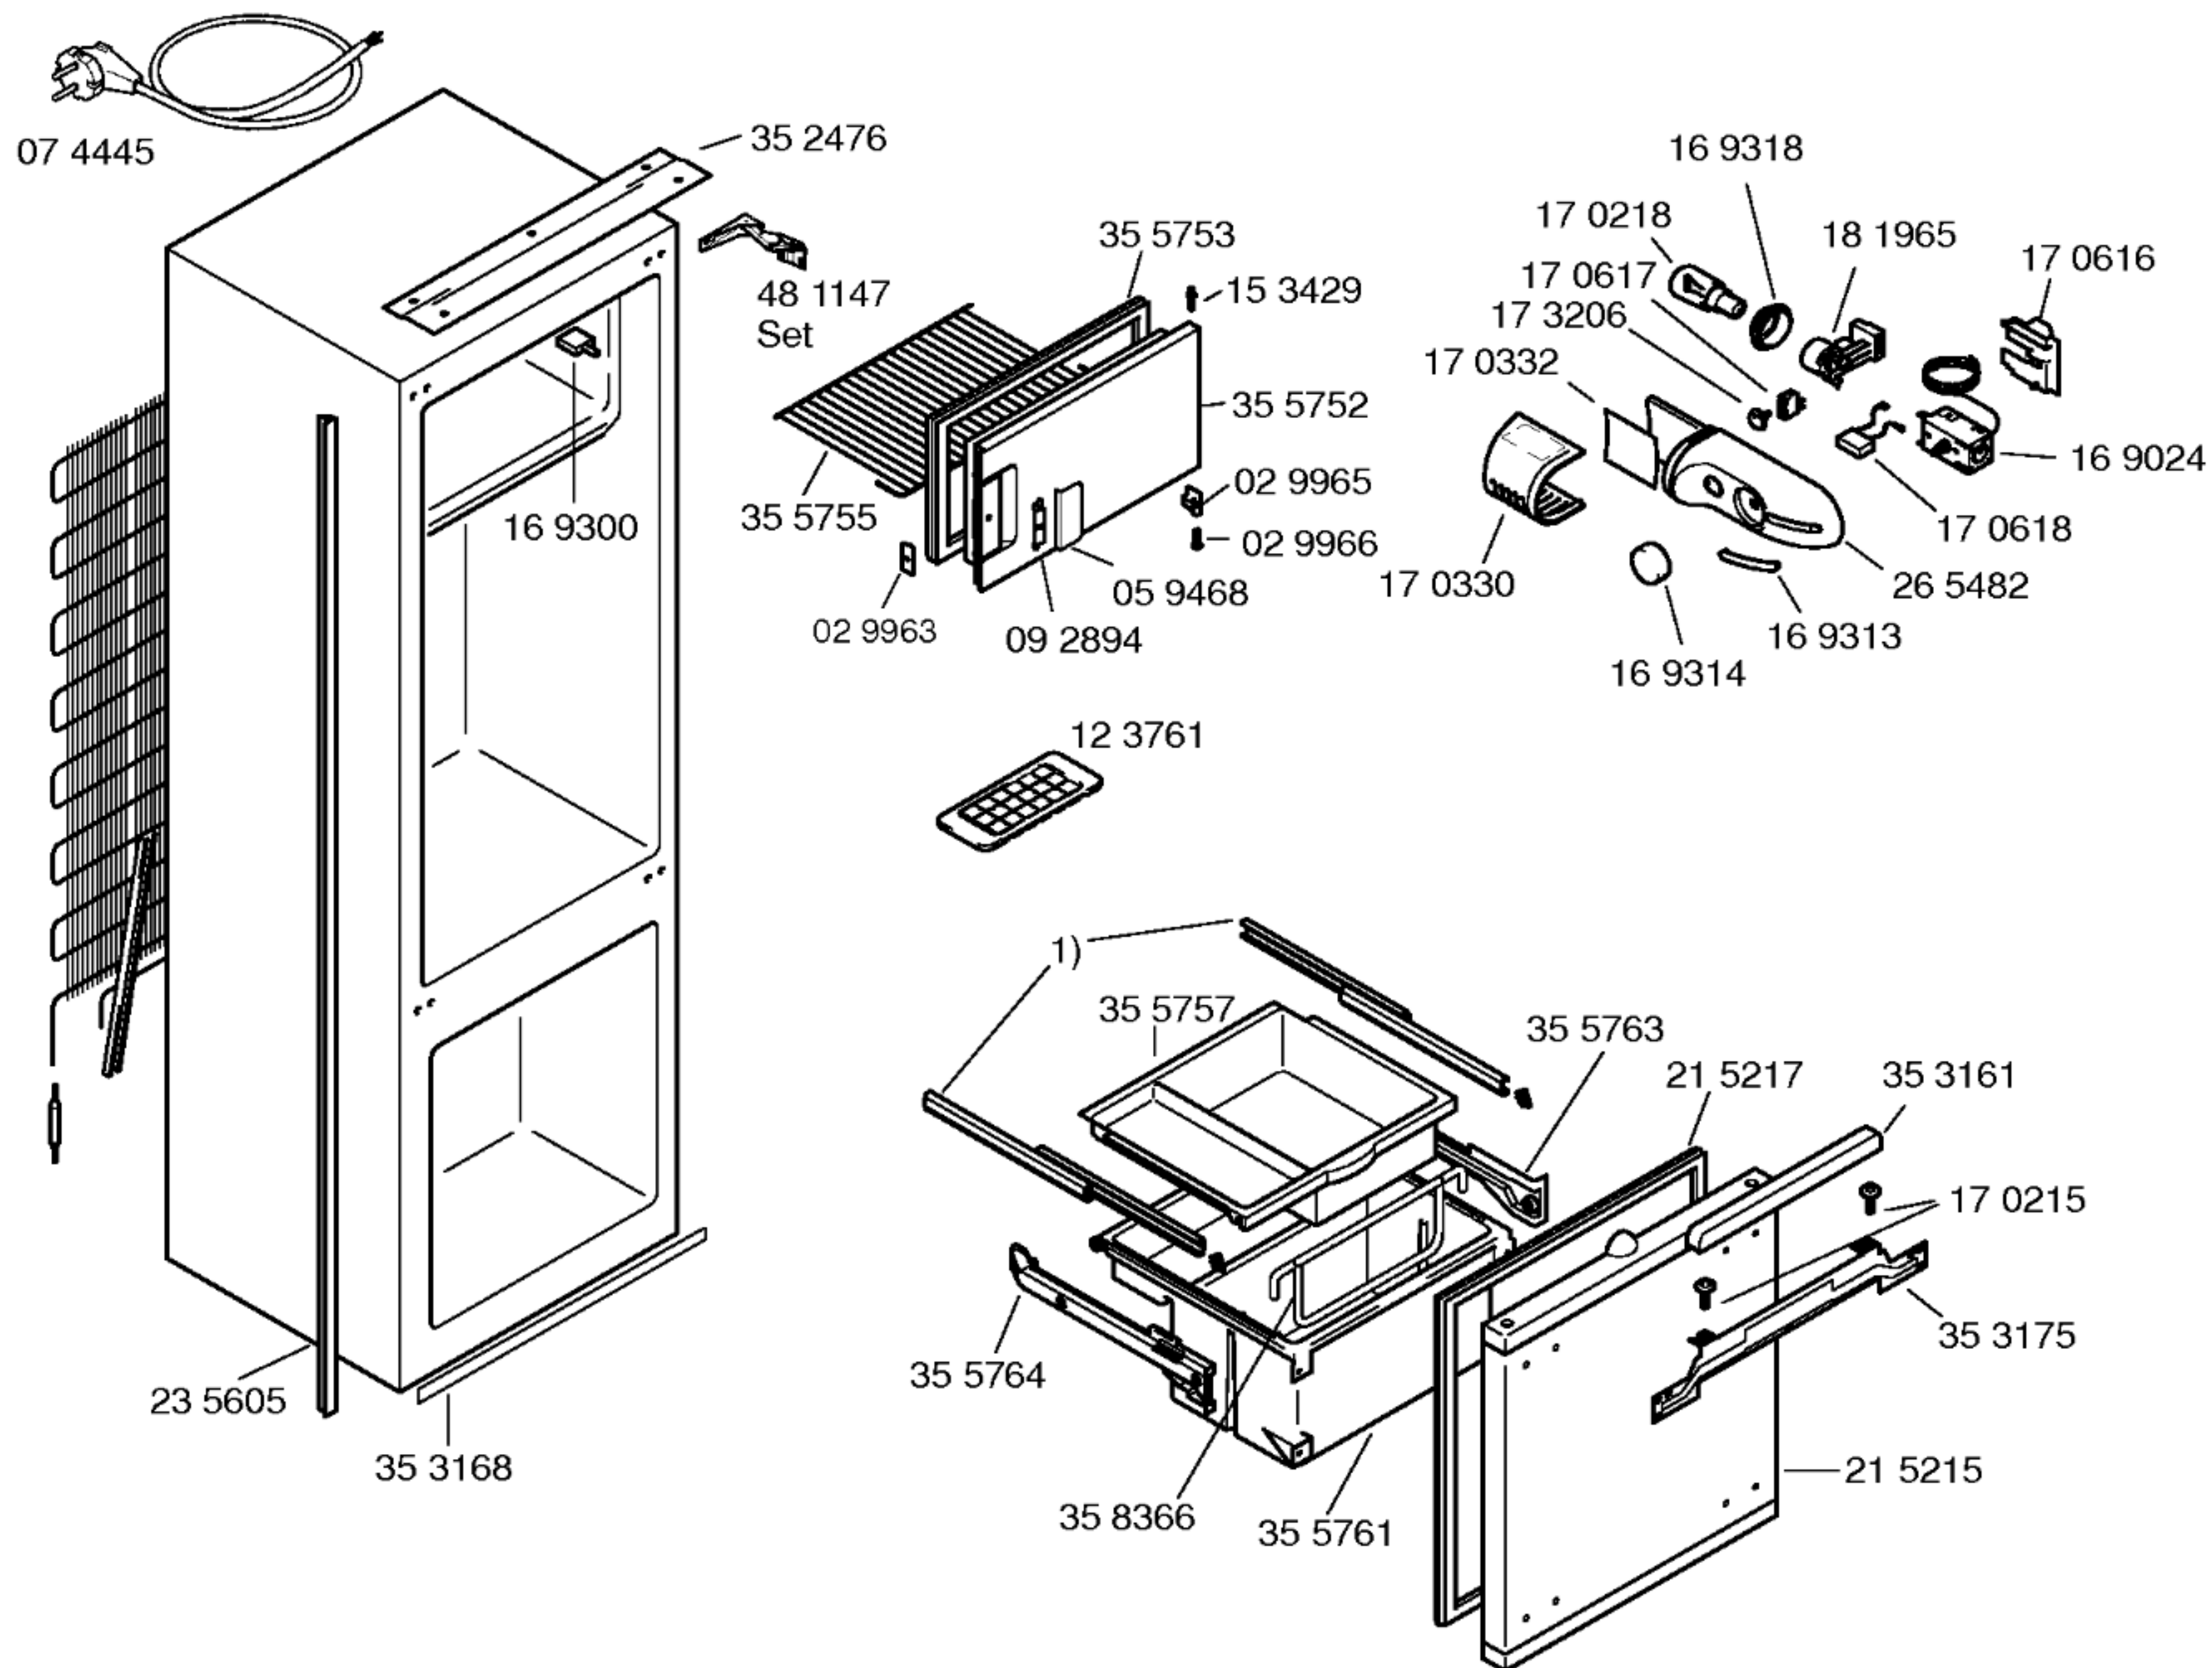



Gebrauchsanweisung
52 3728
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF
SE,TR)

Beistellsatz
48 1819

1) 35 5088

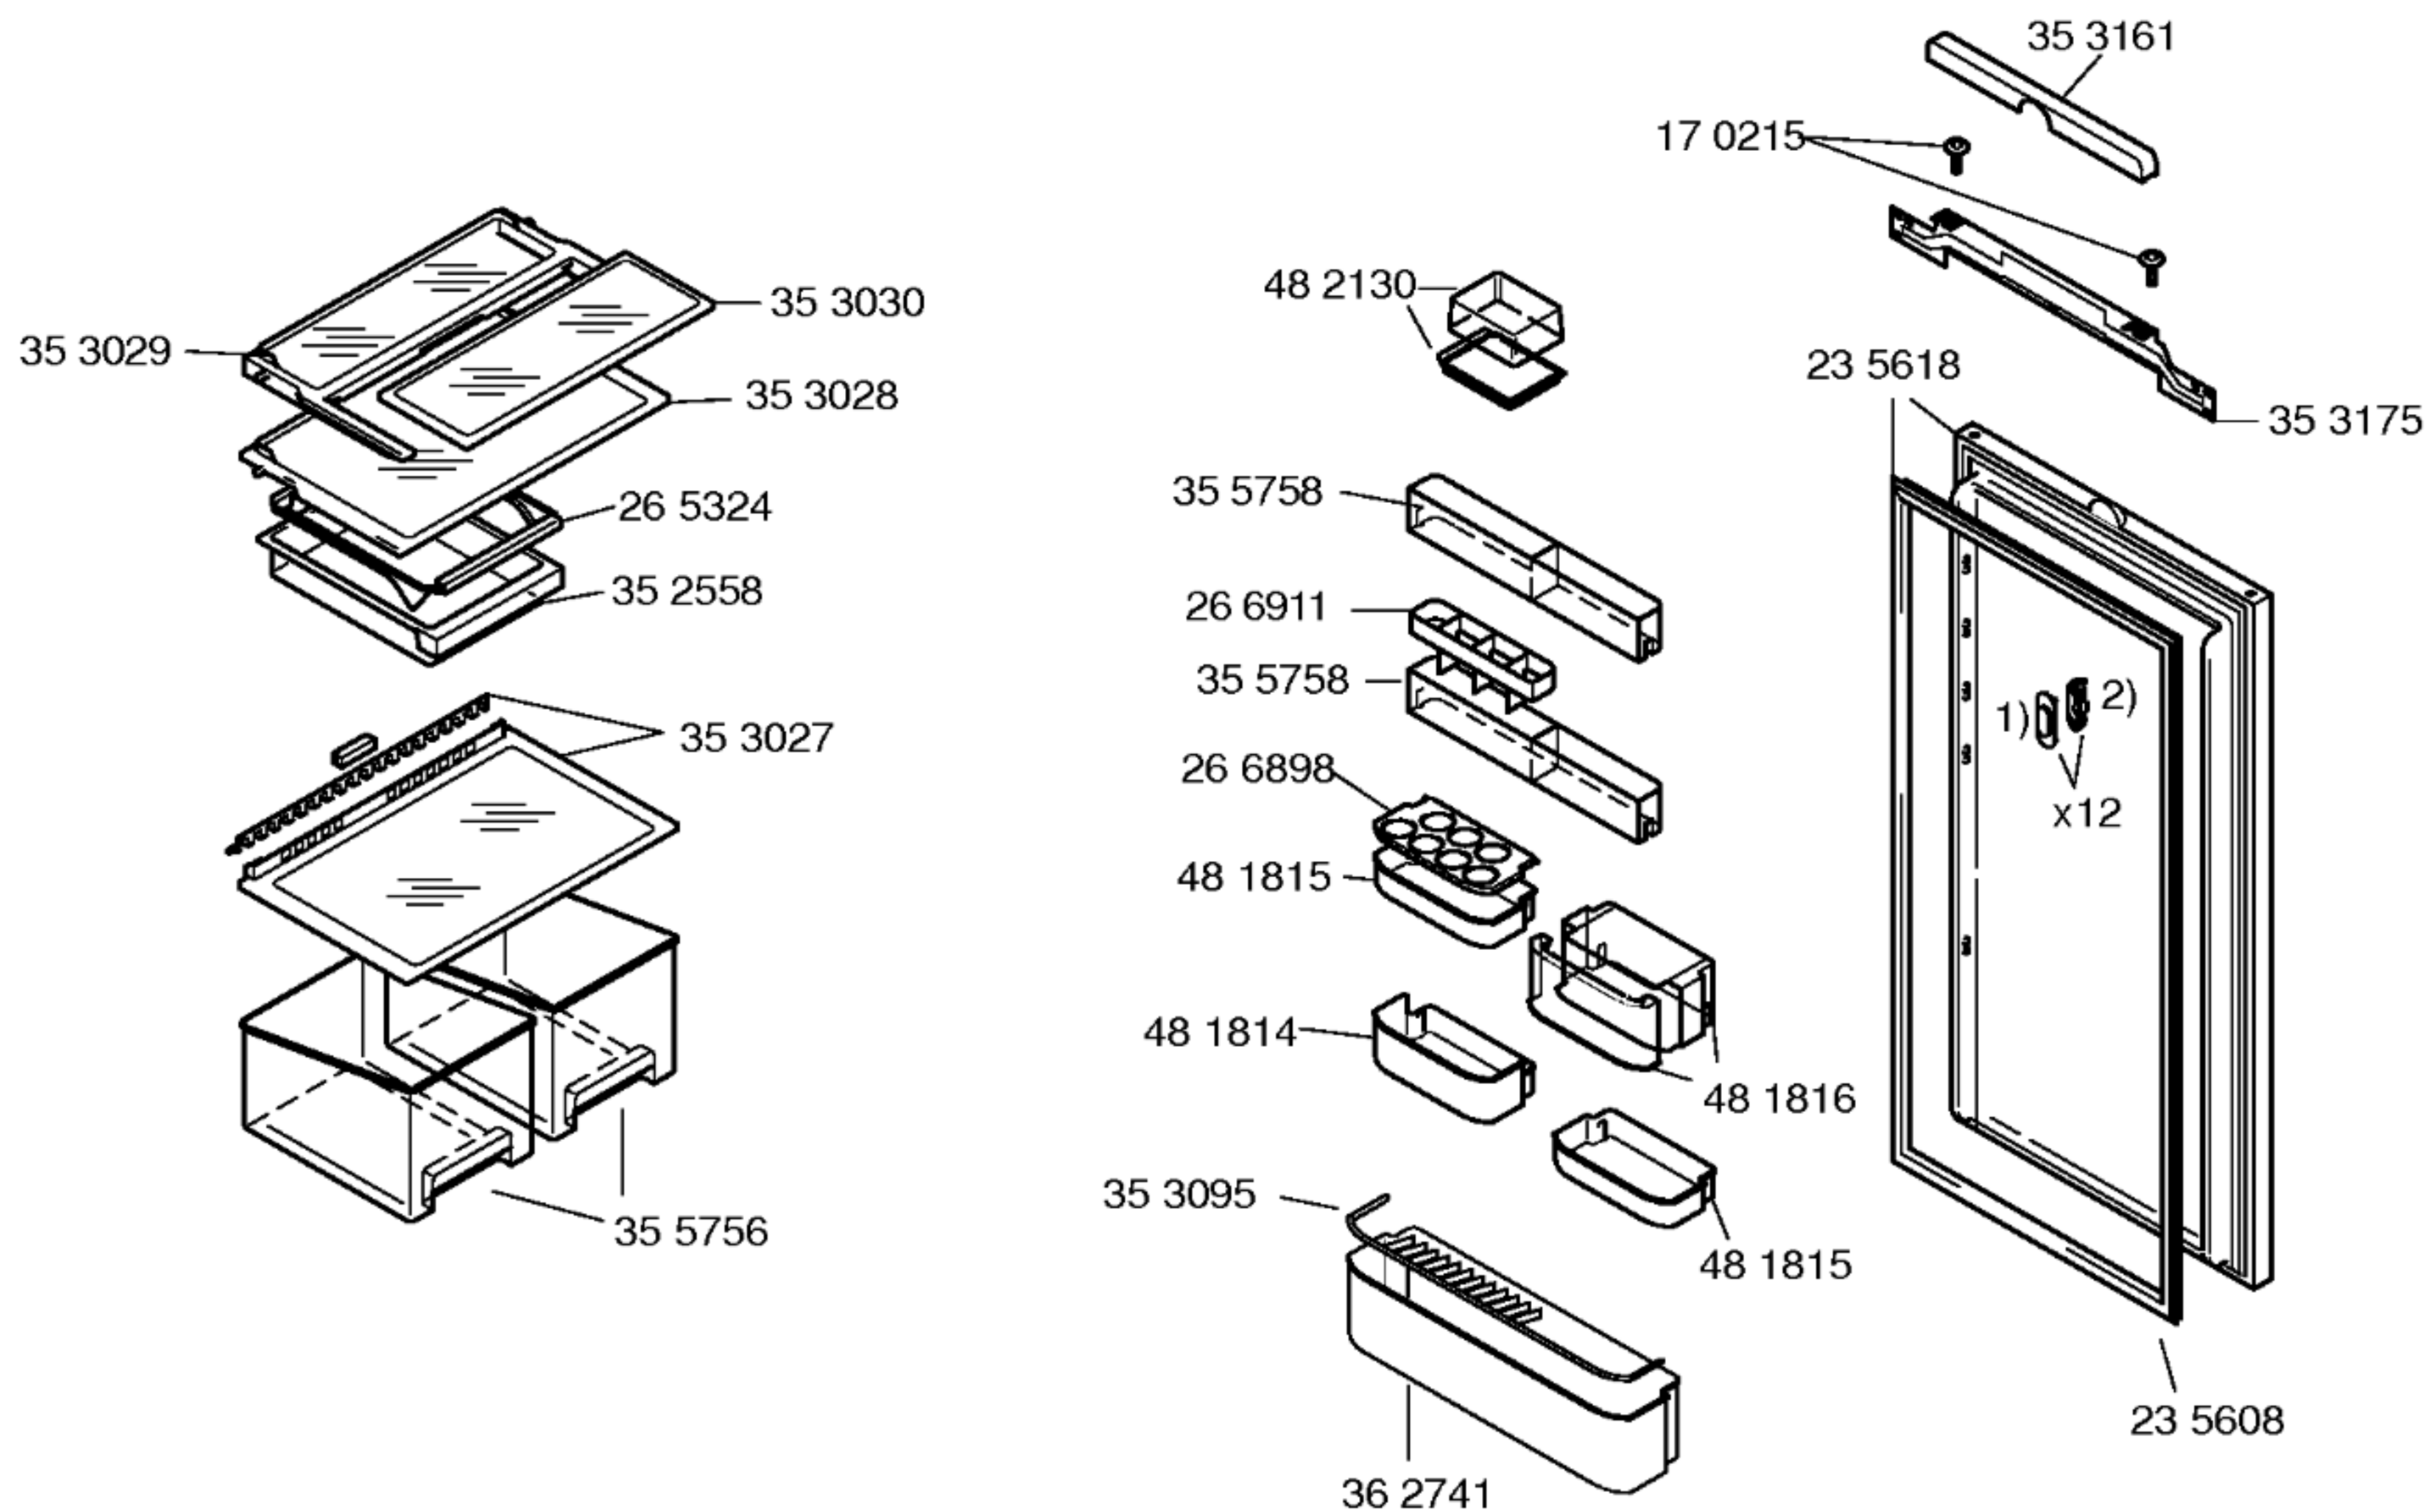

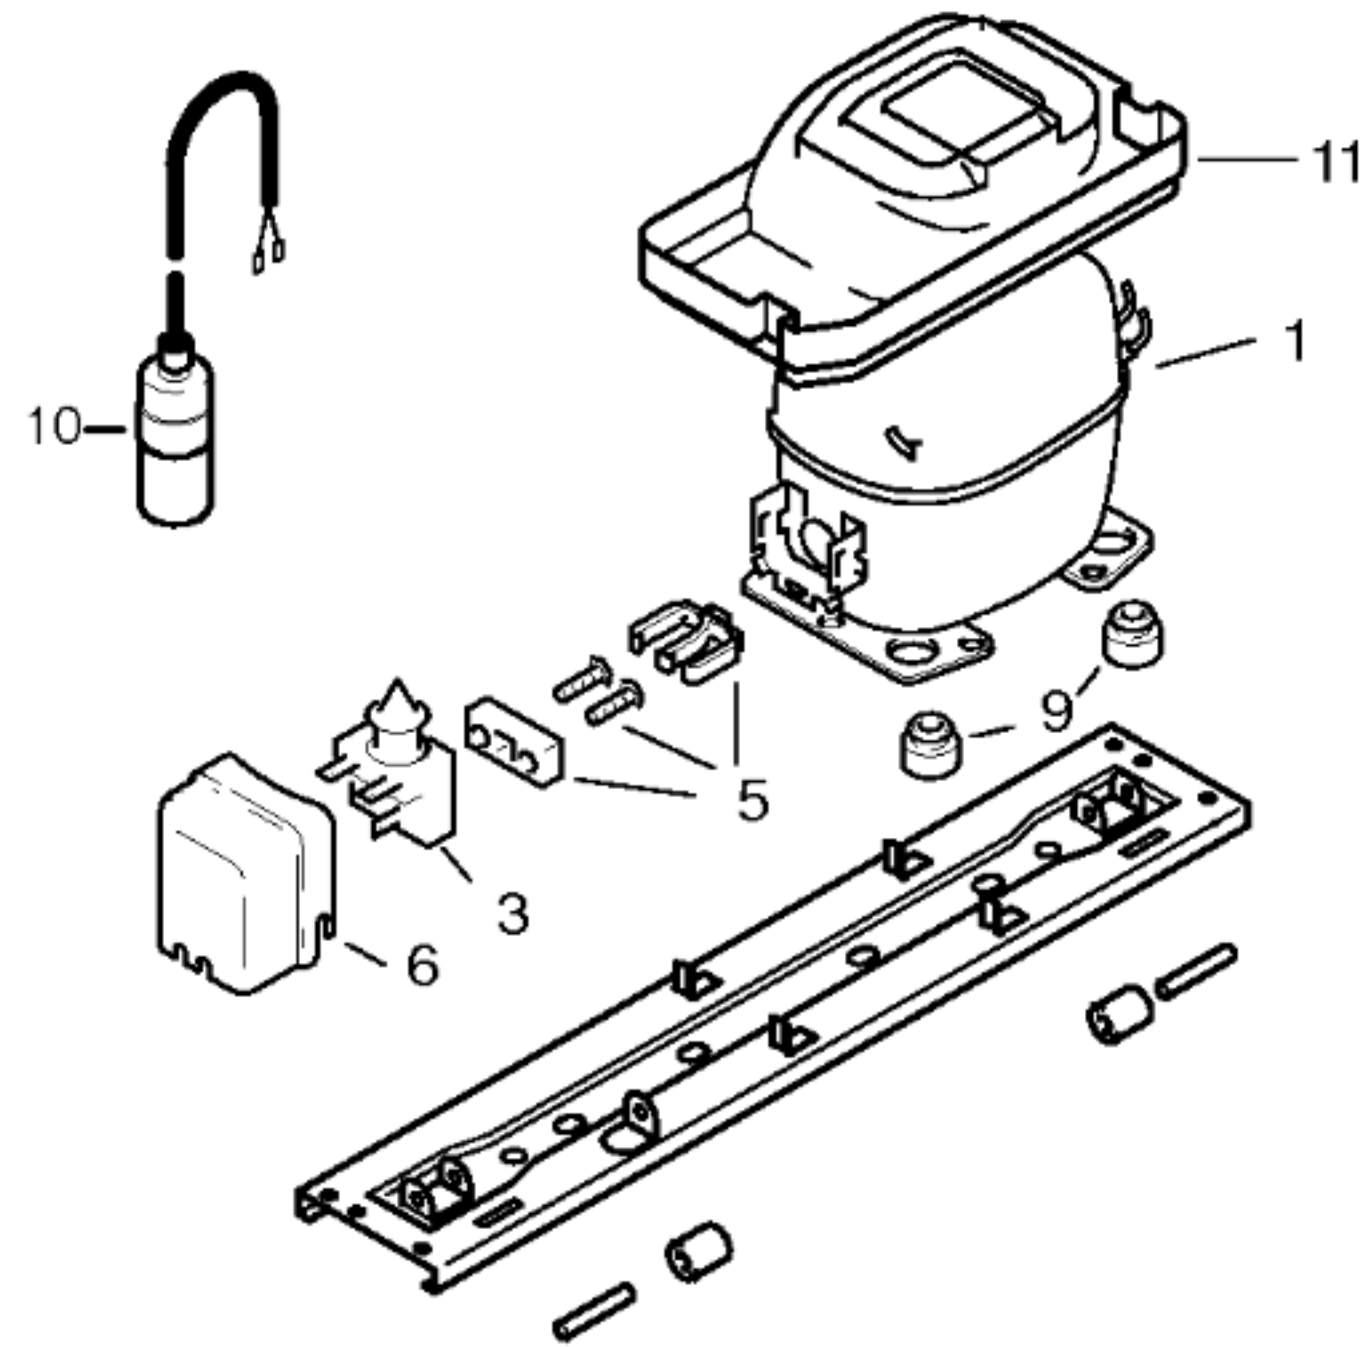

	V01		
	Danfoss		
Pos.	NLE 13 K		
1	14 1751		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8			
9	05 0166		
10	15 2222		
11	26 6624		
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	
Typ/Type		NLE 13 K	
Förderleistung/Delivery/Débit	l/h	2394	
Anlaufstrom/Starting current/Cour de démarrage	A	10,9	
Widerstand/Resistance/Résistance	Ha/main/prin	W	10,7
	Hi/aux	W	13,0
Temp.-Regler/Thermostat		Danfoss	
Typ/Type		Dan 6,3	
Regelstellung/Position		kalt	warm
Schaltwerte/Switching values	"warm"	+5,2	+5,2
Valeurs de commutation	"kalt"	-32,0	-15,0
	"alarm"		
Füllmenge/Fill.quantity/Charge	R600a	*	
Anschlußwert/Conn.load/Puiss. connectée	W	144	
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	W		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	W		
Temp.-Regler/Thermostat			
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	W		
Spannung/Voltage/Tension	V		

* siehe Typenschild