 
 
 
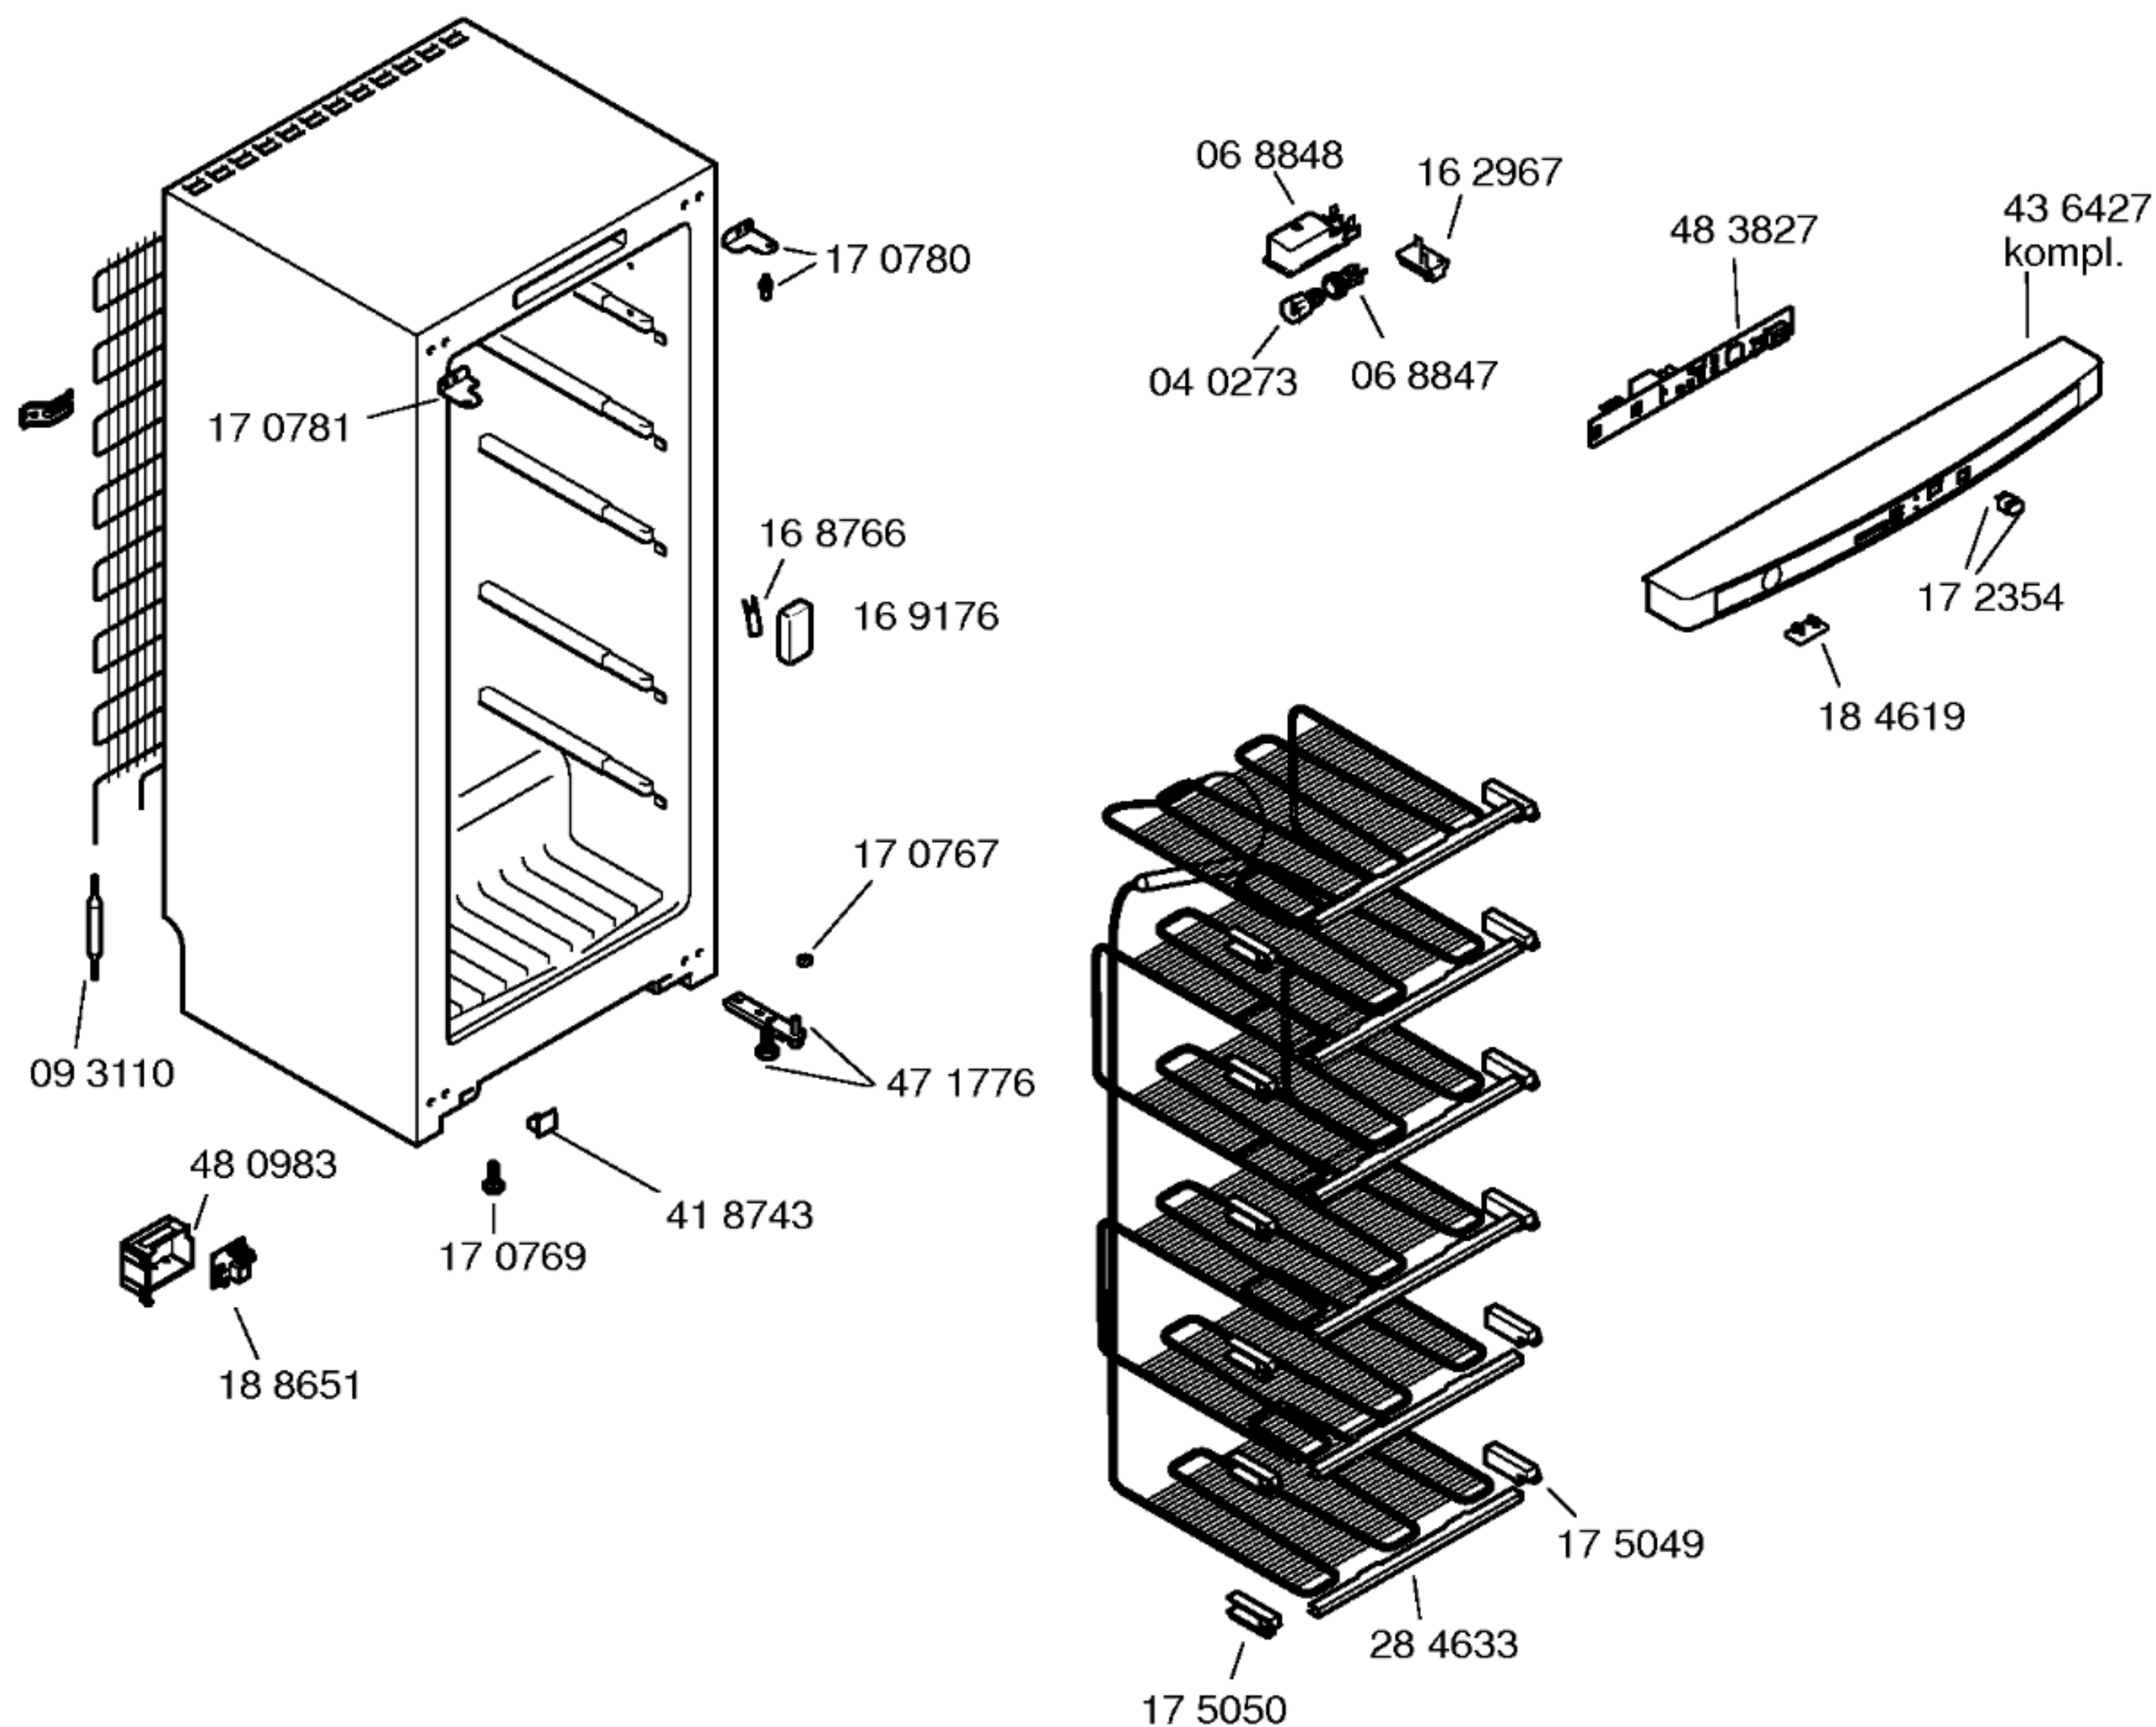 


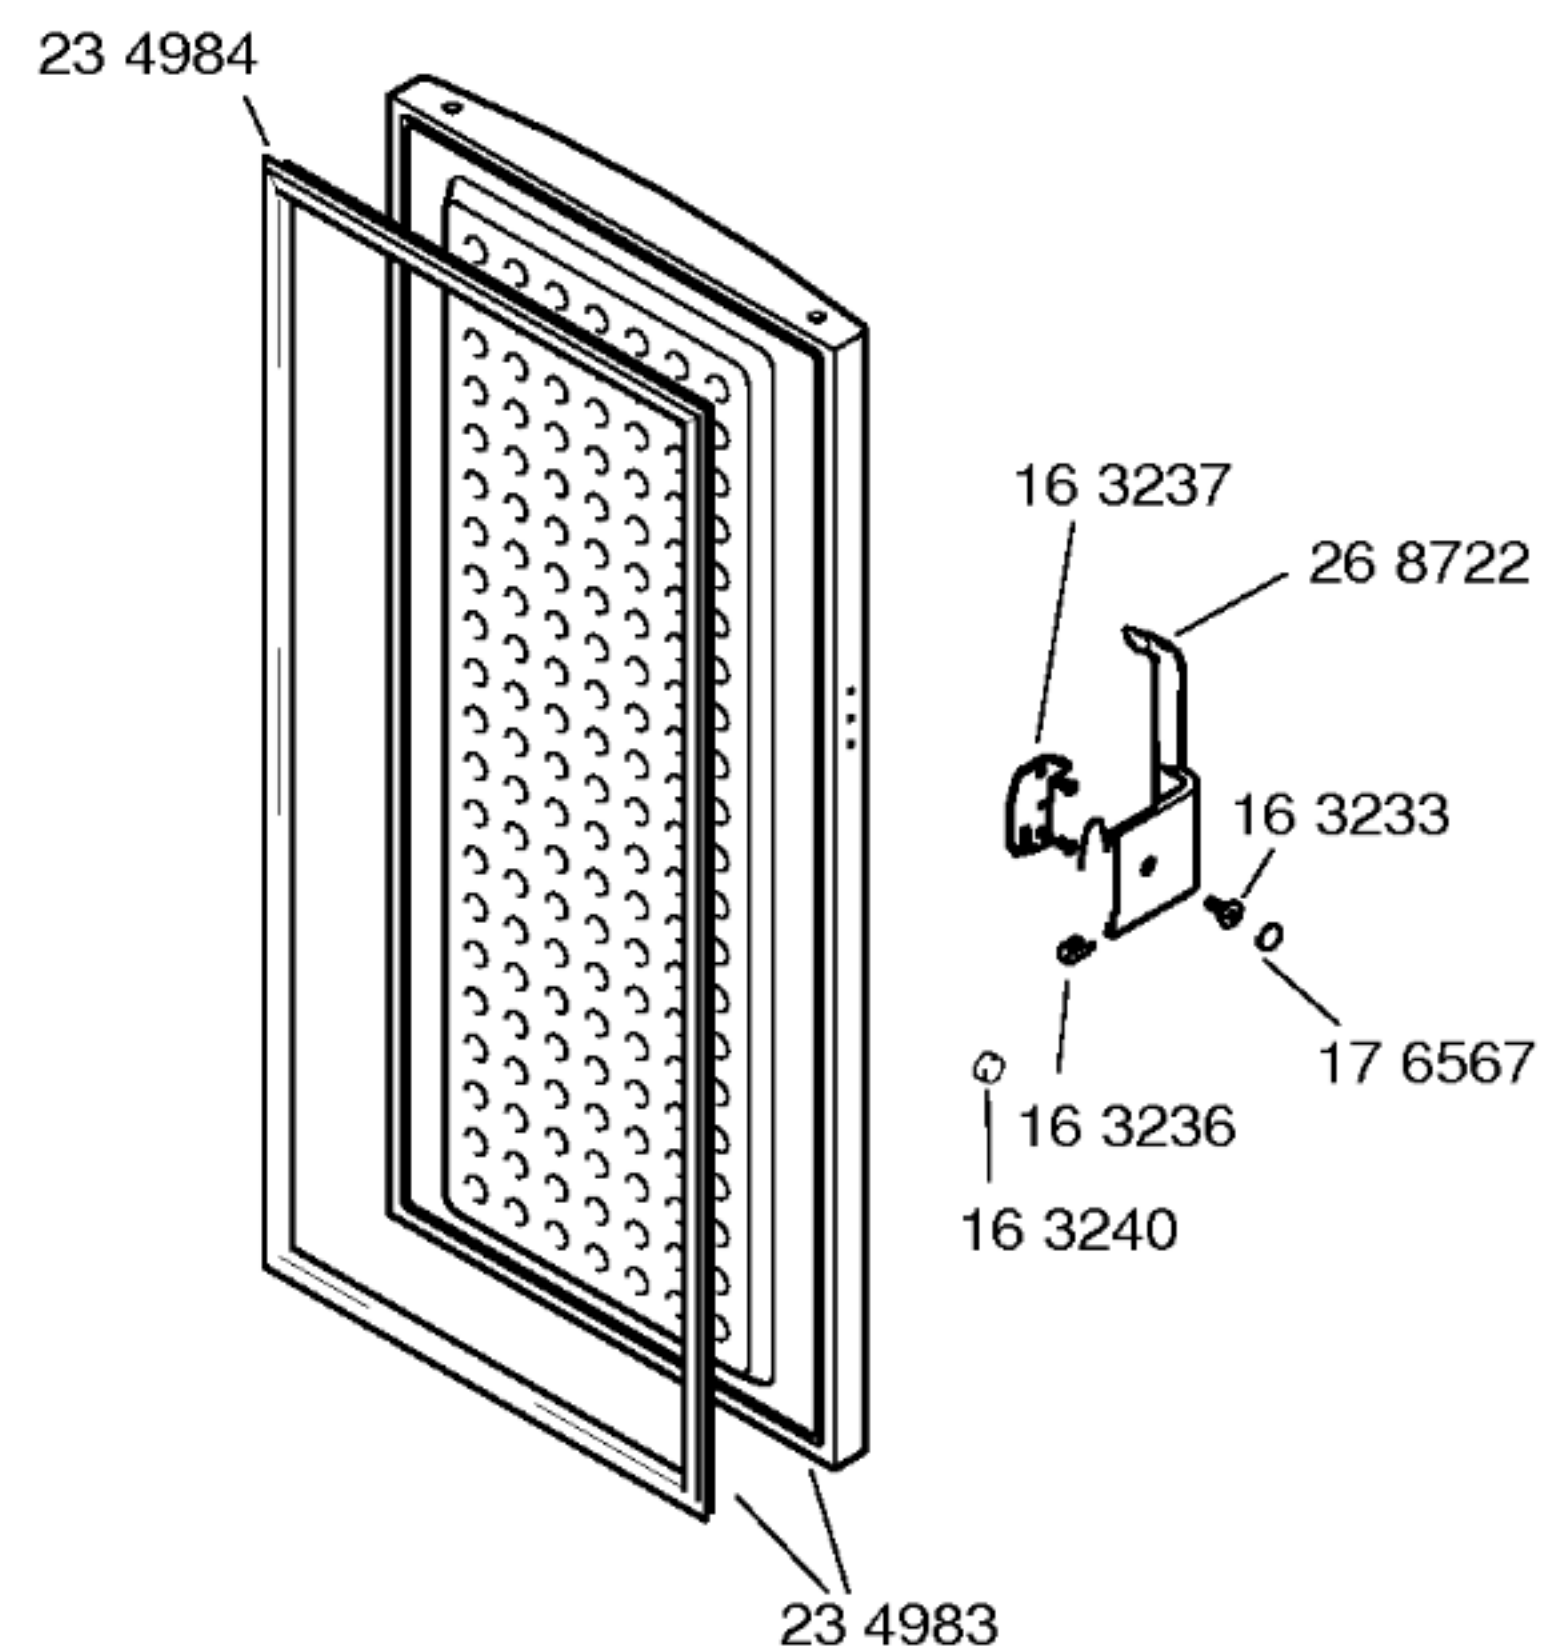

Gebrauchsanweisung
58 6541
(DE,EN,FR,IT,NL)
Montageanleitung
52 2772
Beistellsatz
26 9607

Side by Side
Beistellsatz zu KSR/KSK
48 1044

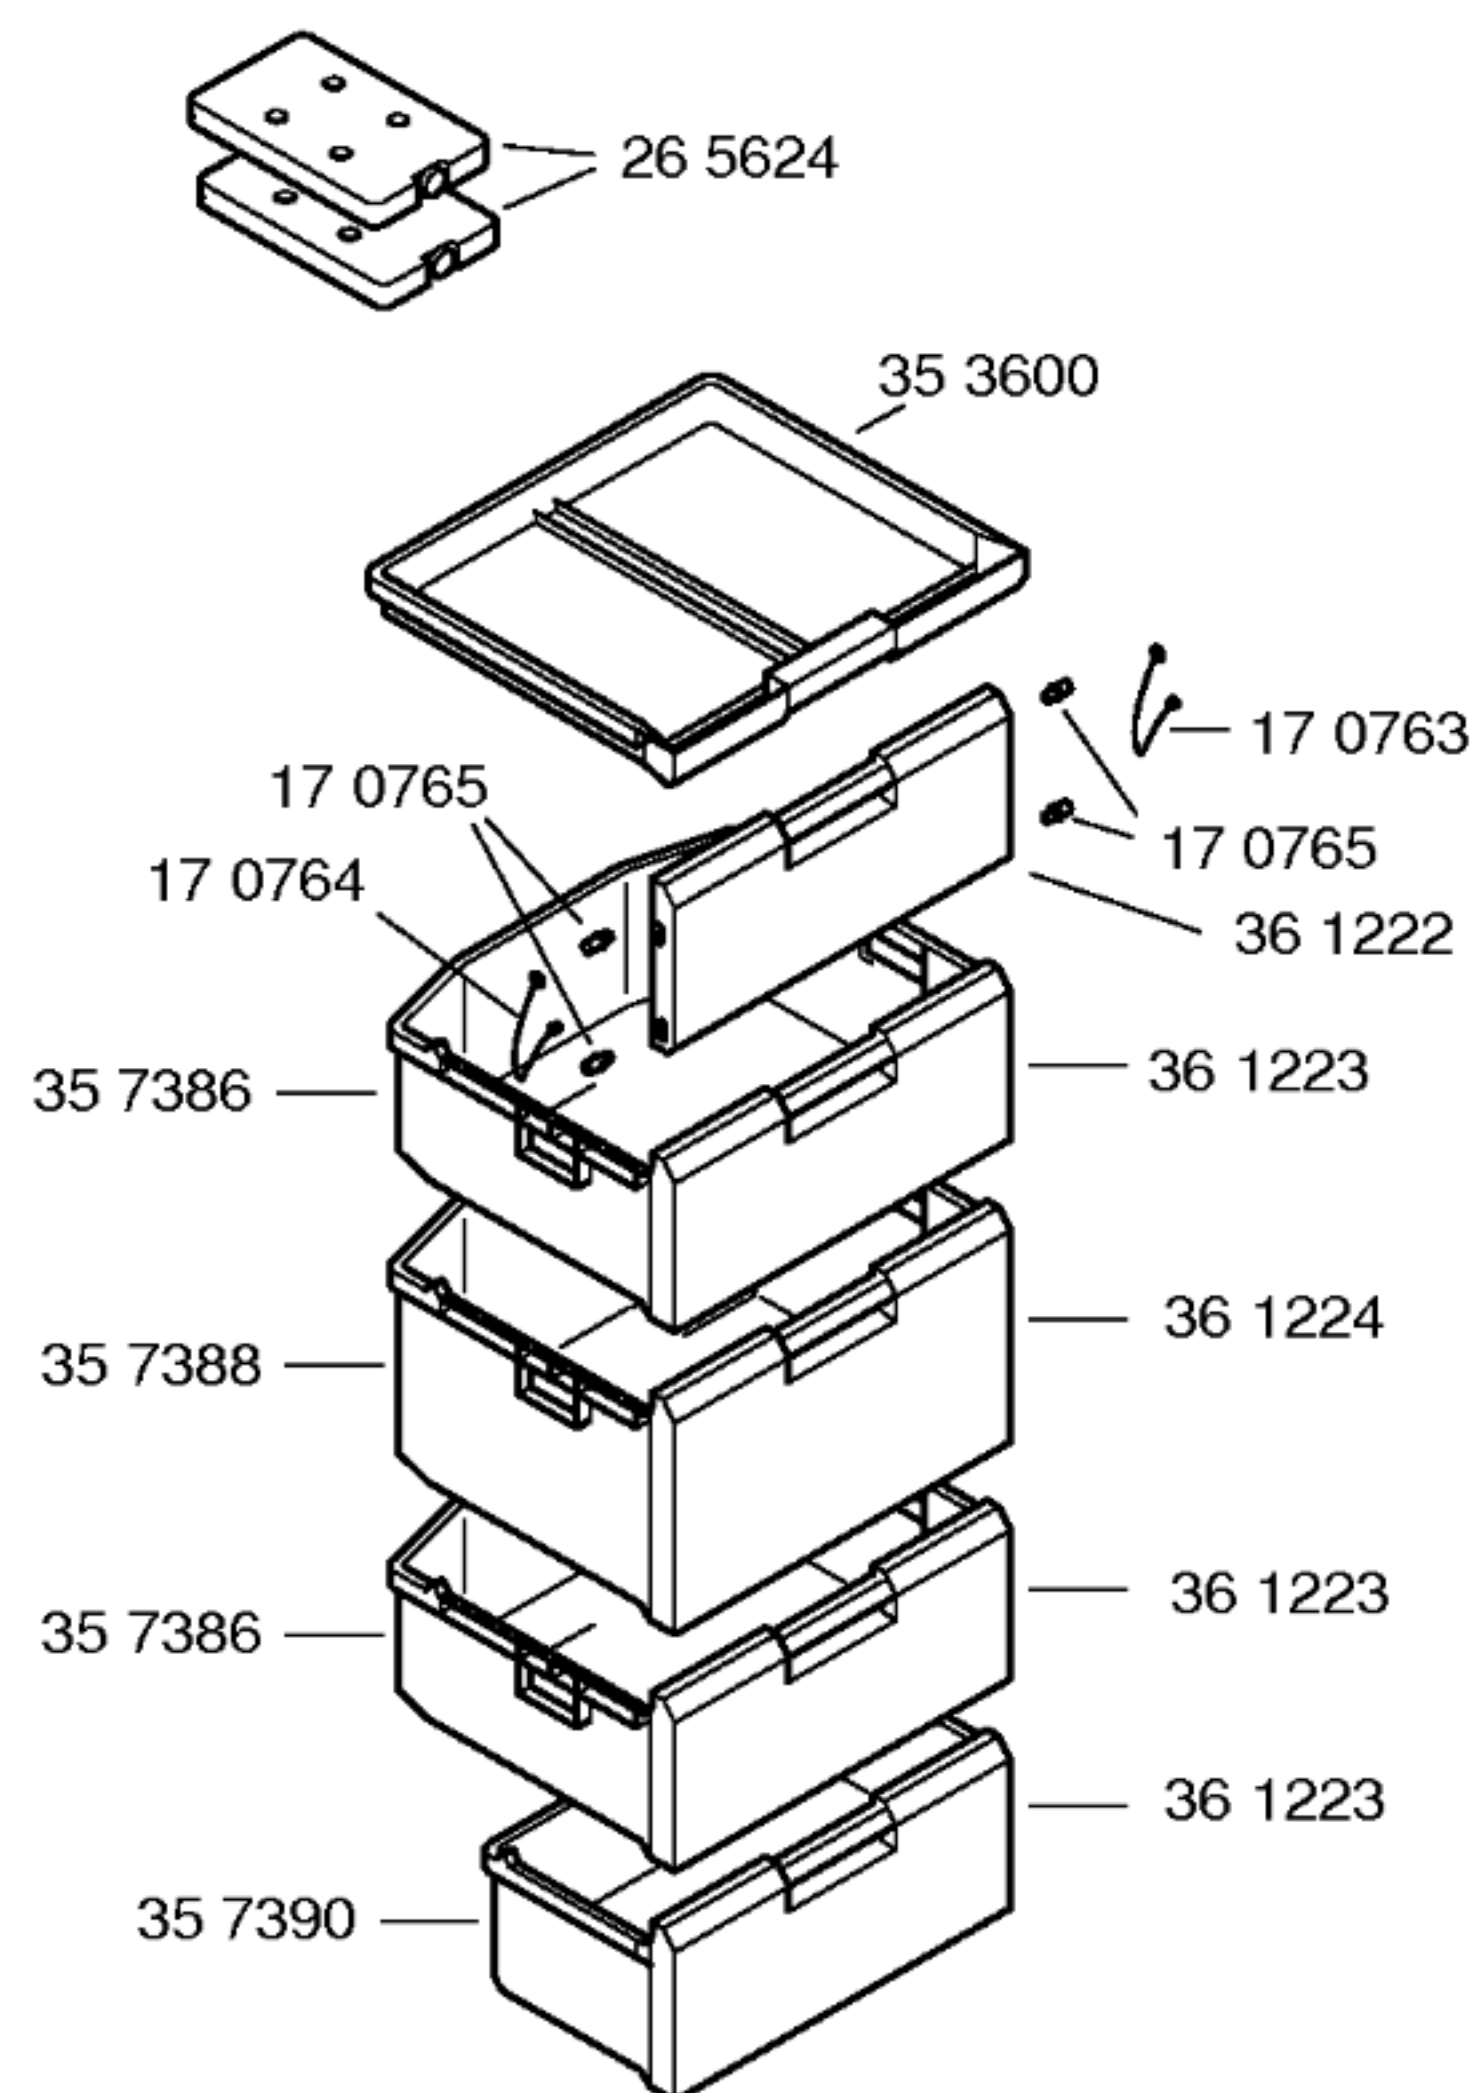

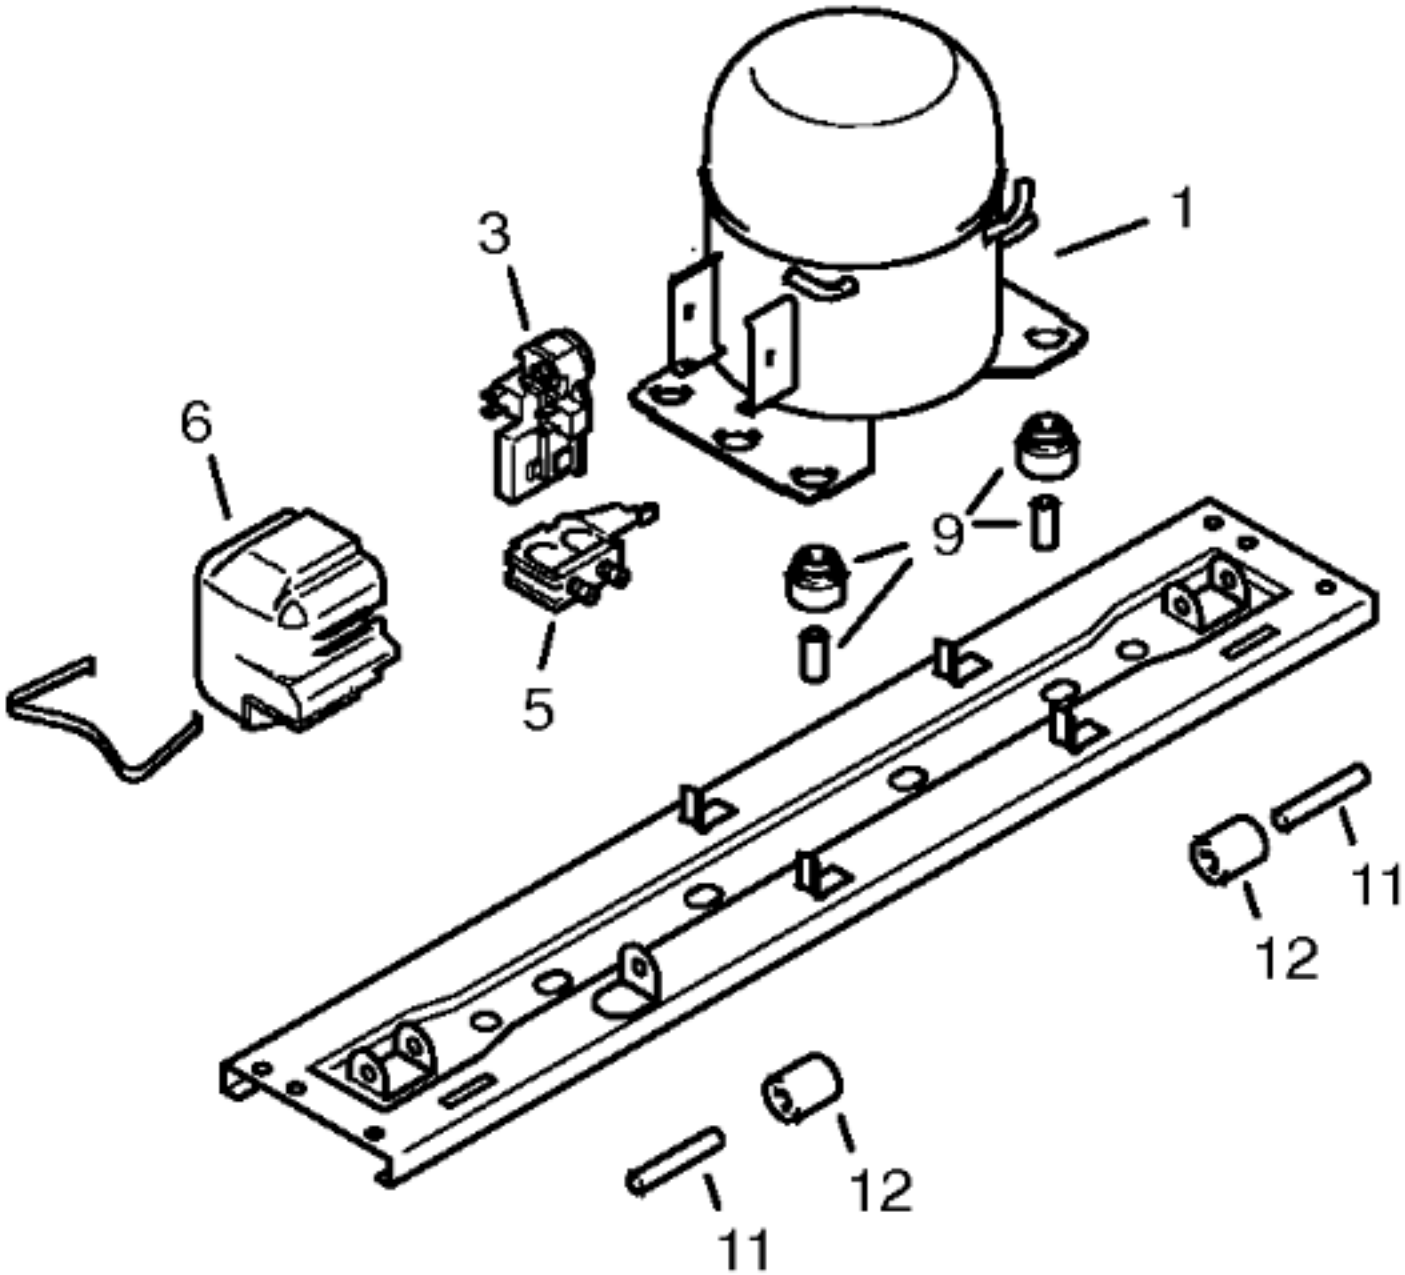

Pos.	V01		
	Danfoss		
	NLE11KK2		
	14 2163		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	20 9294		
9	050166		
10			
11	01 9017		
12	01 9016		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		NLE11KK2		
Förderleistung/Delivery/Débit		2007		
Anlaufstrom/Starting current/Cour de démarrage		A		
Widerstand/Resistance/Résistance Ha/main/prin		Ω		
Hi/aux		Ω		
Temp.–Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values		"warm"		
Valeurs de commutation		"kalt"		
		"alarm"		
Füllmenge/Fill.quantity/Charge		R600a		
Anschlußwert/Conn.load/Puiss. connectée		W		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
NTC–Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	–18 43,31 ±1,10
		+5	12,70 ±0,18	–22 54,66 ±1,59
		0	16,33 ±0,16	–26 69,42 ±2,29
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		