



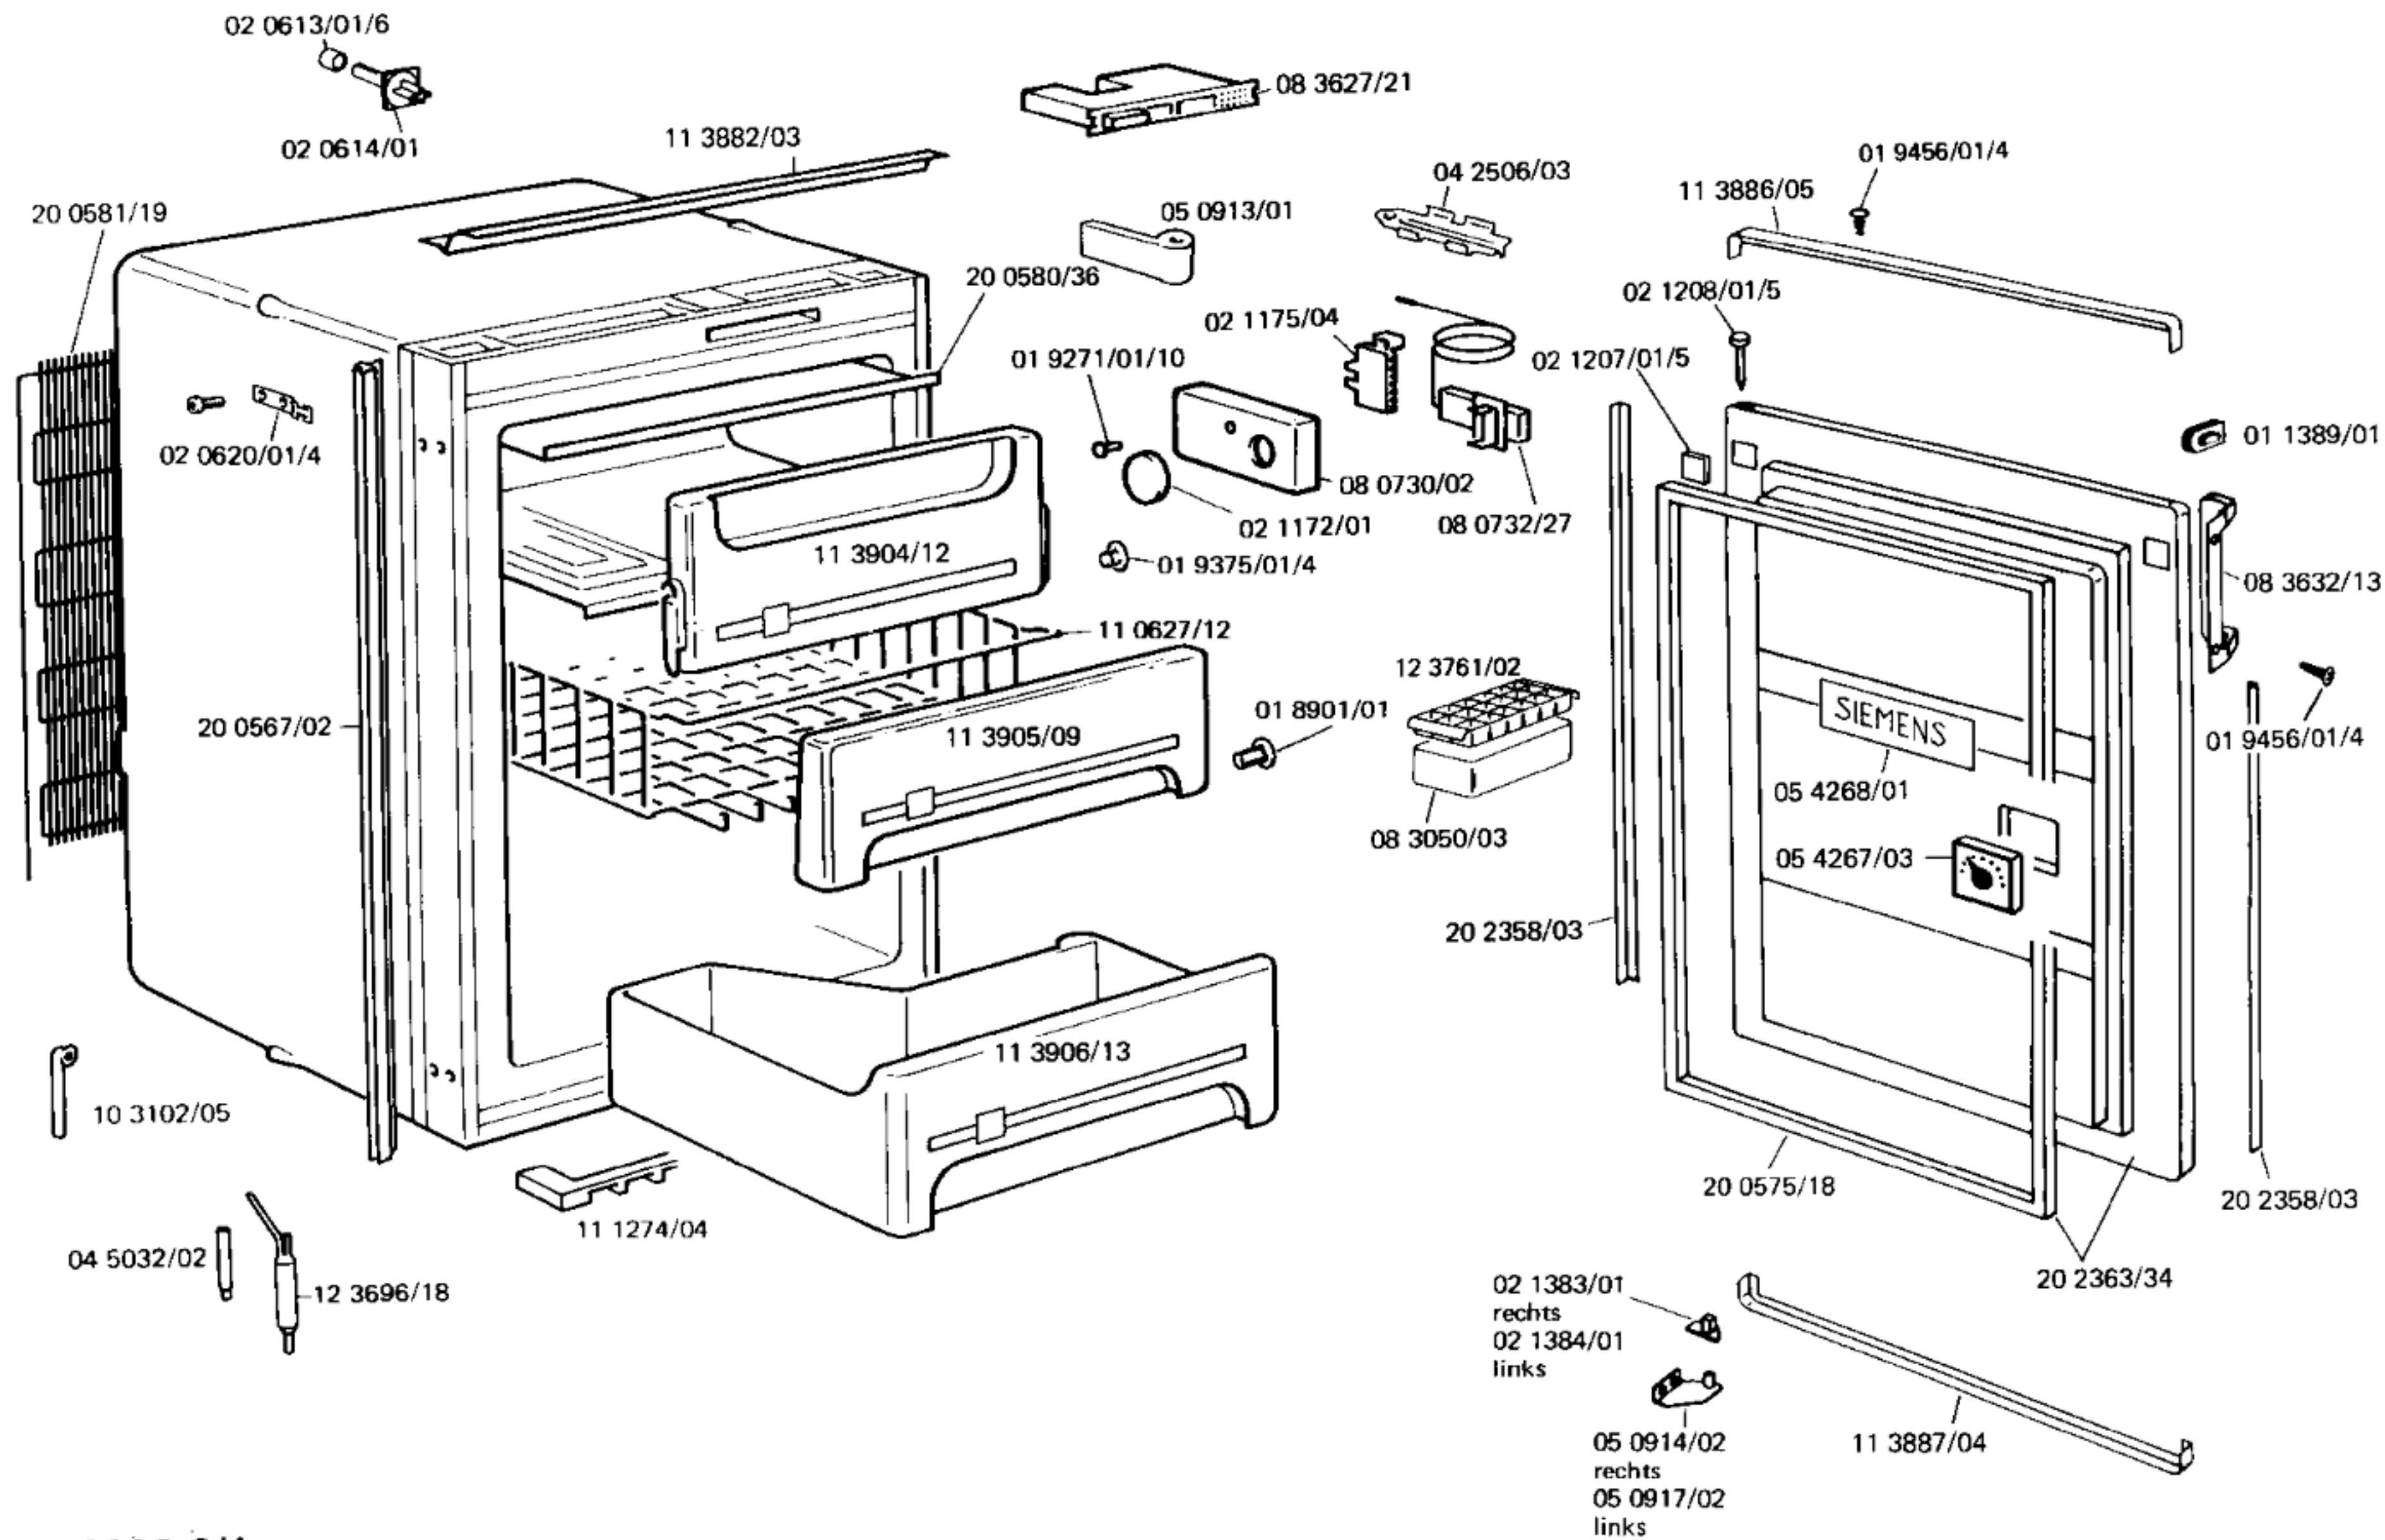

51 1744/00
D1, F1, E1
Gebrauchsanweisung
(D,GB,F,I,NL,DK,N,S,SF,E)

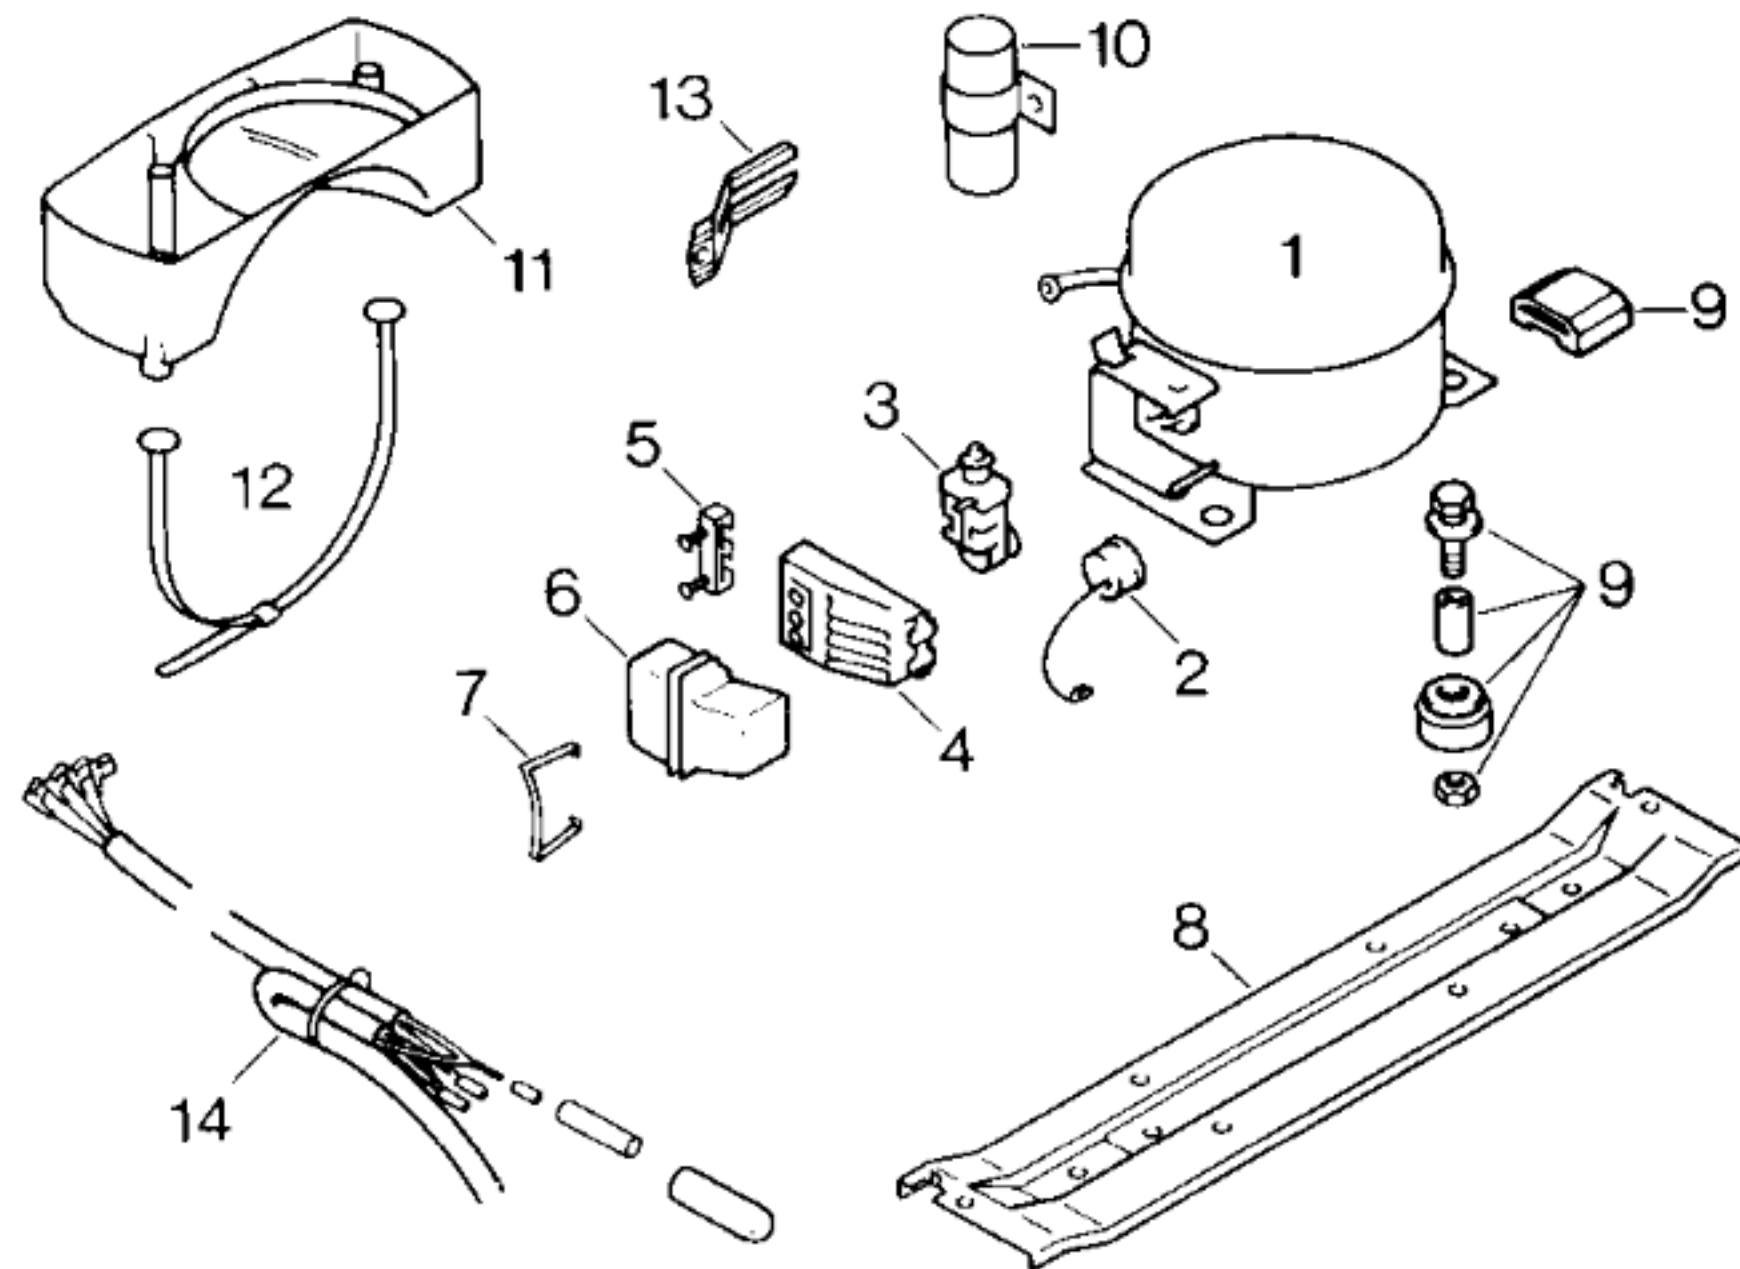

	TL 4 A	TL 5		
Pos.	D1, F1	E1		
	Danfoss	Danfoss		
1	13 1064/45	140065/45		
2				
3	02 0108/27			
4				
5				
6	05 1413/05			
7				
8	11 0437/04			
9	05 0166/05			
10				
11				
12				
13				
14				

TECHNISCHE DATEN / TECHNICAL DATA / DONNÉES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		TL 4 A			
Förderleistung/Delivery/Débit	l/h	V 702			
Anlaufstrom/Starting current/Cour. de démarrage	A	7,8			
Widerstand/Resistance/Résistance	Ha/main/prin. Ω	23,8			
	Hi/aux Ω	19,7			
Temp.-Regler/Thermostat		M + J			
Typ/Type		TF 57 SF			
Reglerstellung/Position		kalt	warm		
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	- 28	- 19		
Valeurs de commutation	„aus“	- 34	- 26		
	(„abtauen“ od.) „alarm“	- 20	- 15		
Füllmenge/Fill.quantity/Charge	R12	g	90		
Anschlußwert/Conn.load/Puiss. connectée		W	110		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance	Ω				
Leistung/Power/Puissance	W				
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance	Ω				
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance	Ω				
Spannung/Voltage/Tension	V				