



Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
	78 2806	Lautsprecherbox	speaker box enceinte acoustique
	75 7985 79 3050**	LCD-Display CD LCD-Display CD	LCD-display cd LCD-display cd
		Leiterplatten	PC boards/plaquettes
	75 8163	Netz, Endstufe	power amplifier
	75 8159	Hauptplatine mit A/W-Schalter	main p.c.b. with R/P switch
	75 8161	EQ	EQ
	75 8162	Tuner Front	tuner front
	75 8006	CD-Laufwerk mit Servoplatine	CD mechanic assy with servo p.c.b.
	75 8552**	CD P.C.B. 3T Servoplatine	CD servo p.c.b.
	75 8553**	CD-Laufwerk	CD mechanic assy
	75 8005	Cassetten Deck komplett	tape deck
	75 8167	A/W-Platine	R/P p.c.b.
		** Stand II ab FD7209 No. 11007501	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
		ELEKTRISCHE TEILE	ELECTRICAL PARTS PIECES ELECTRIQUE
			
IC1	73 7327**	BA4560N	
IC1	79 1577	MN178611RRM	
IC2	73 7327**	BA4560N	
IC3	73 7327**	BA4560N	
IC4	73 6488**	TD6710AN	
IC5	79 3486**	TA7291S	
IC6	79 3487**	TA8192F	
IC7	79 3487**	TA8192F	
IC8	79 3488**	TMP47C820F	
IC9	79 3489**	TC9236AF	
IC10	79 3490**	TA8191F	
IC11	79 3491**	TA8224H	
IC12	79 3492**	T520C	
IC101	73 2503	TA7358AP	
IC201	73 4922	AN7025	
IC302	79 1619	TA8189N	
IC601	73 5456	AN7310	
IC701	73 7642	TDA2822S	
IC702	79 1576	TA8210AH	
IC801	73 5139	TC9153AP	
IC301	73 5456	AN7310	
IC401	79 1574	AN7312	
			
Q1	79 2646	9015C	
Q1	79 3494**	2SC2458	
Q2	79 1651	2N3904	
Q2	79 3493**	2SC2458	
Q3	79 1651	2N3904	
Q3	79 3493**	2SC2458	
Q4	79 1651	2N3904	
		** Stand II ab FD7209 No. 11007501	

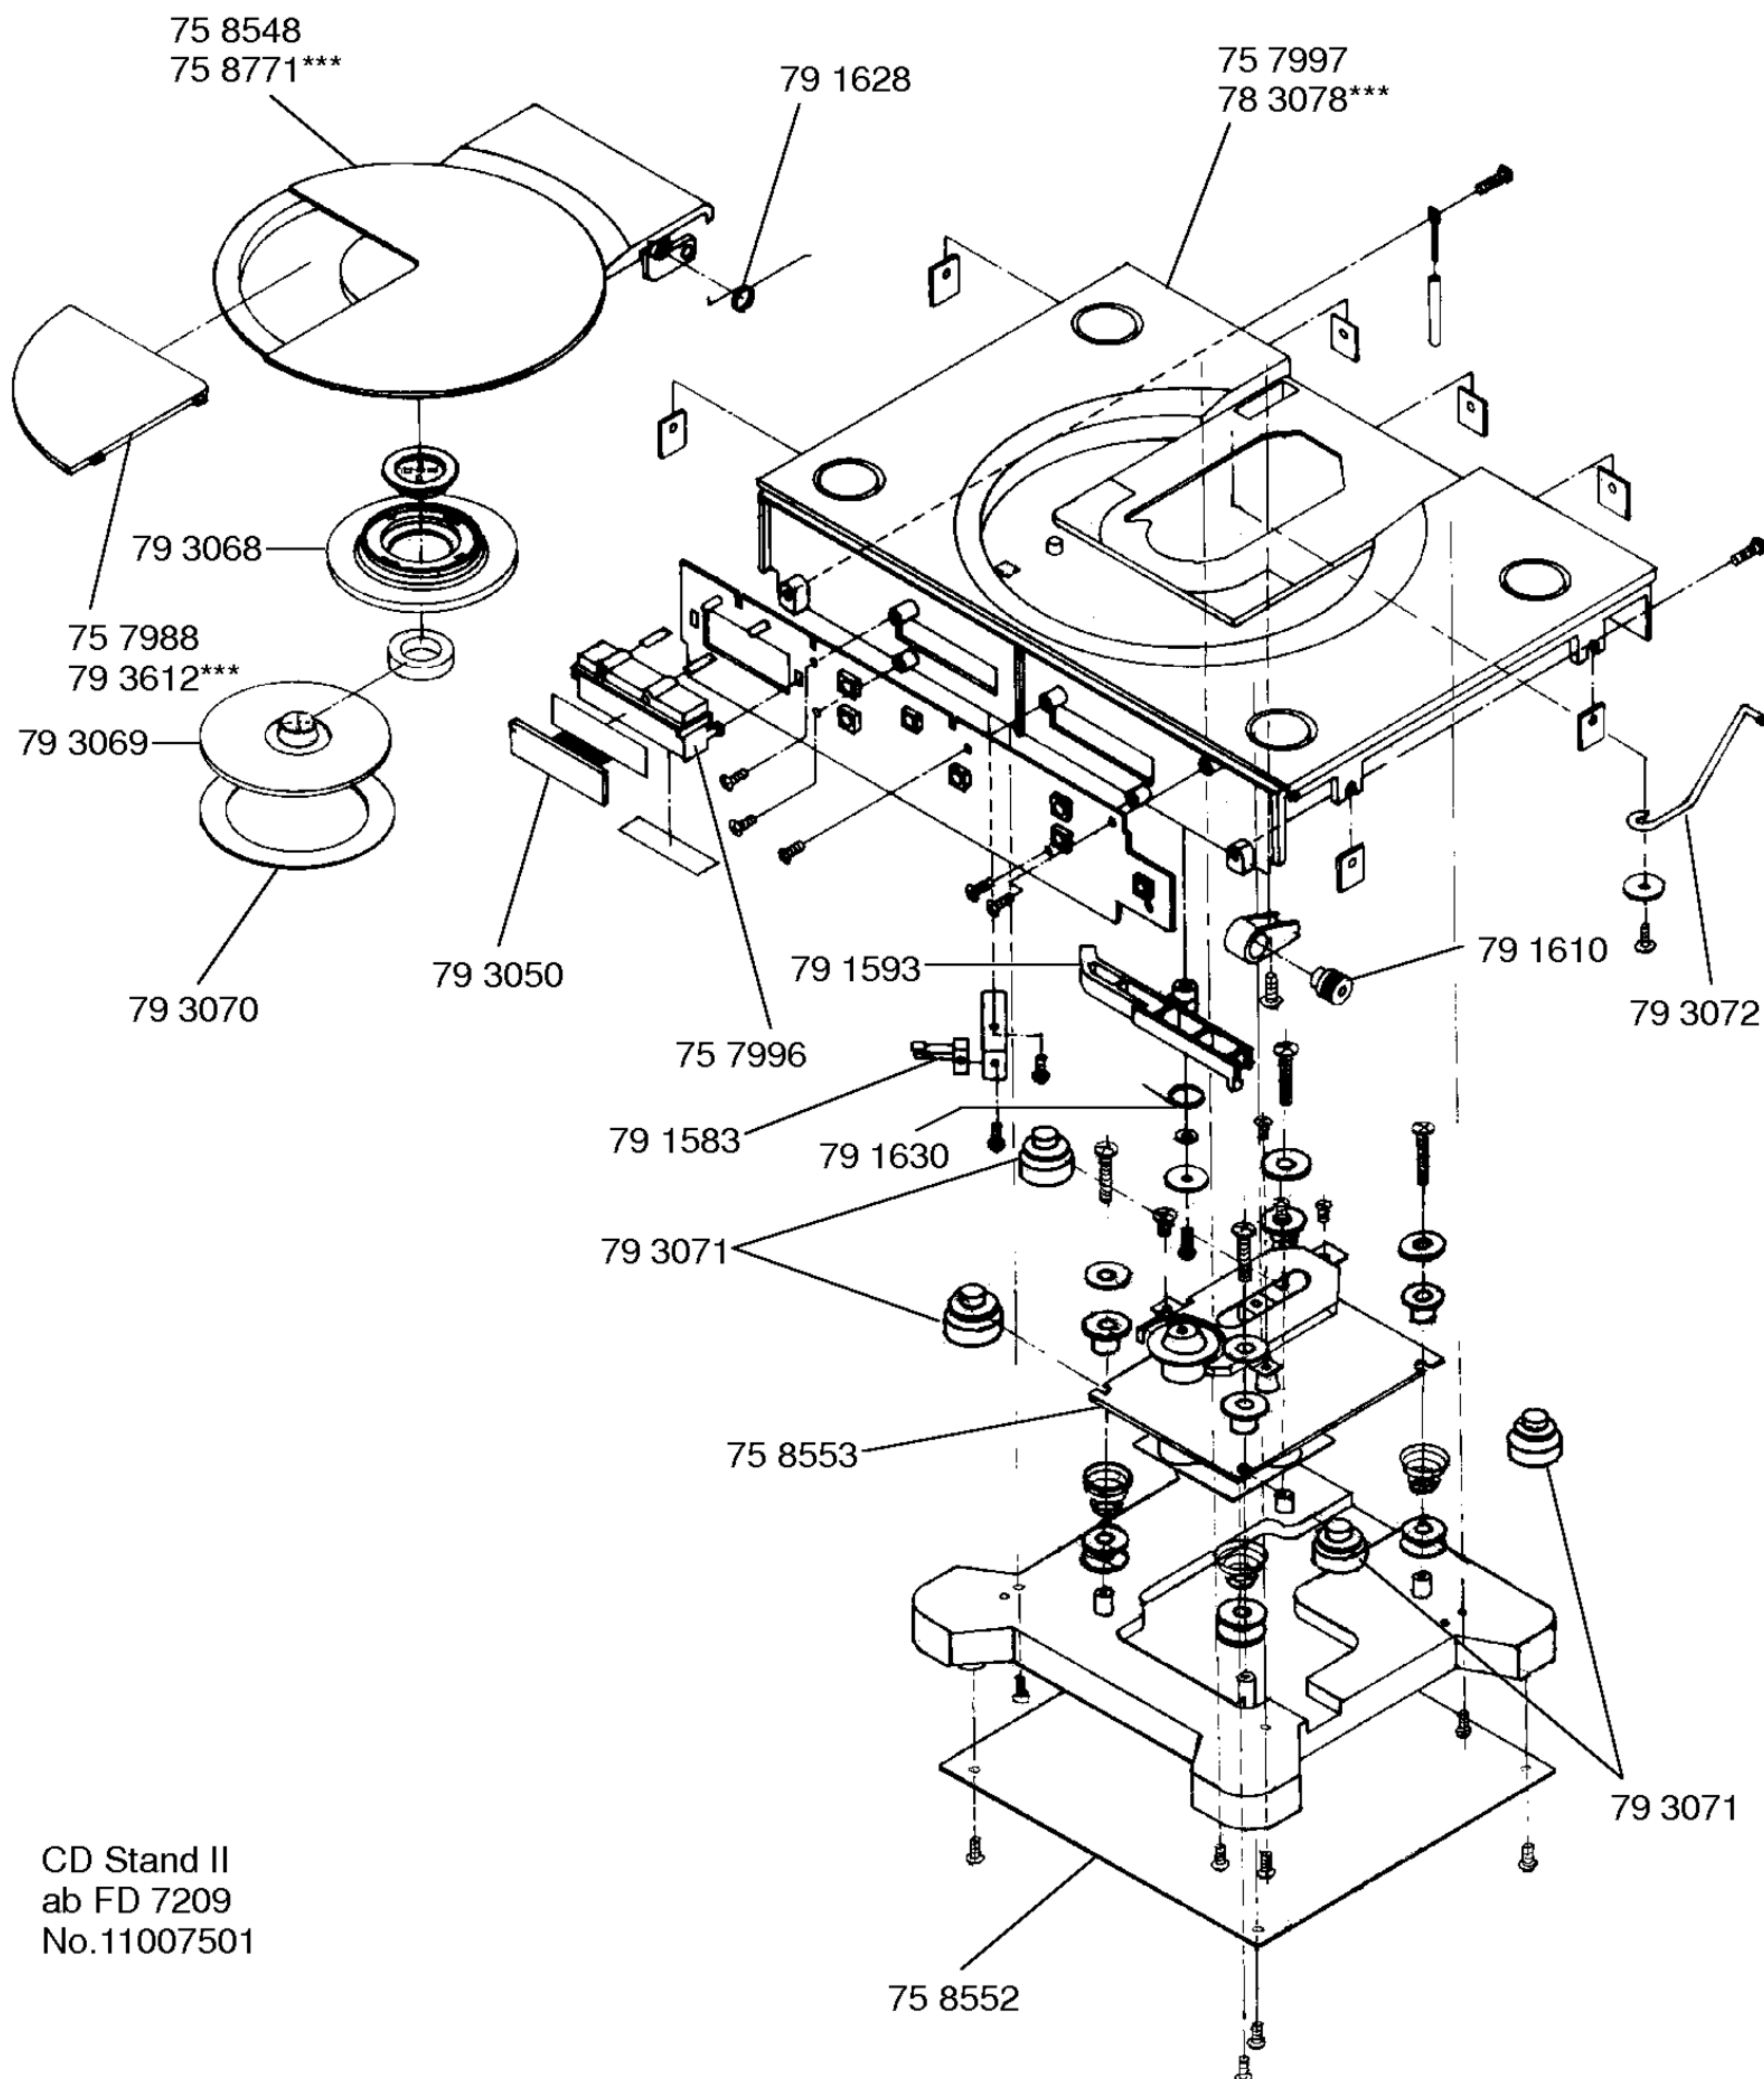


CD Stand II
ab FD 7209
No.11007501

*** = nur RS247G6

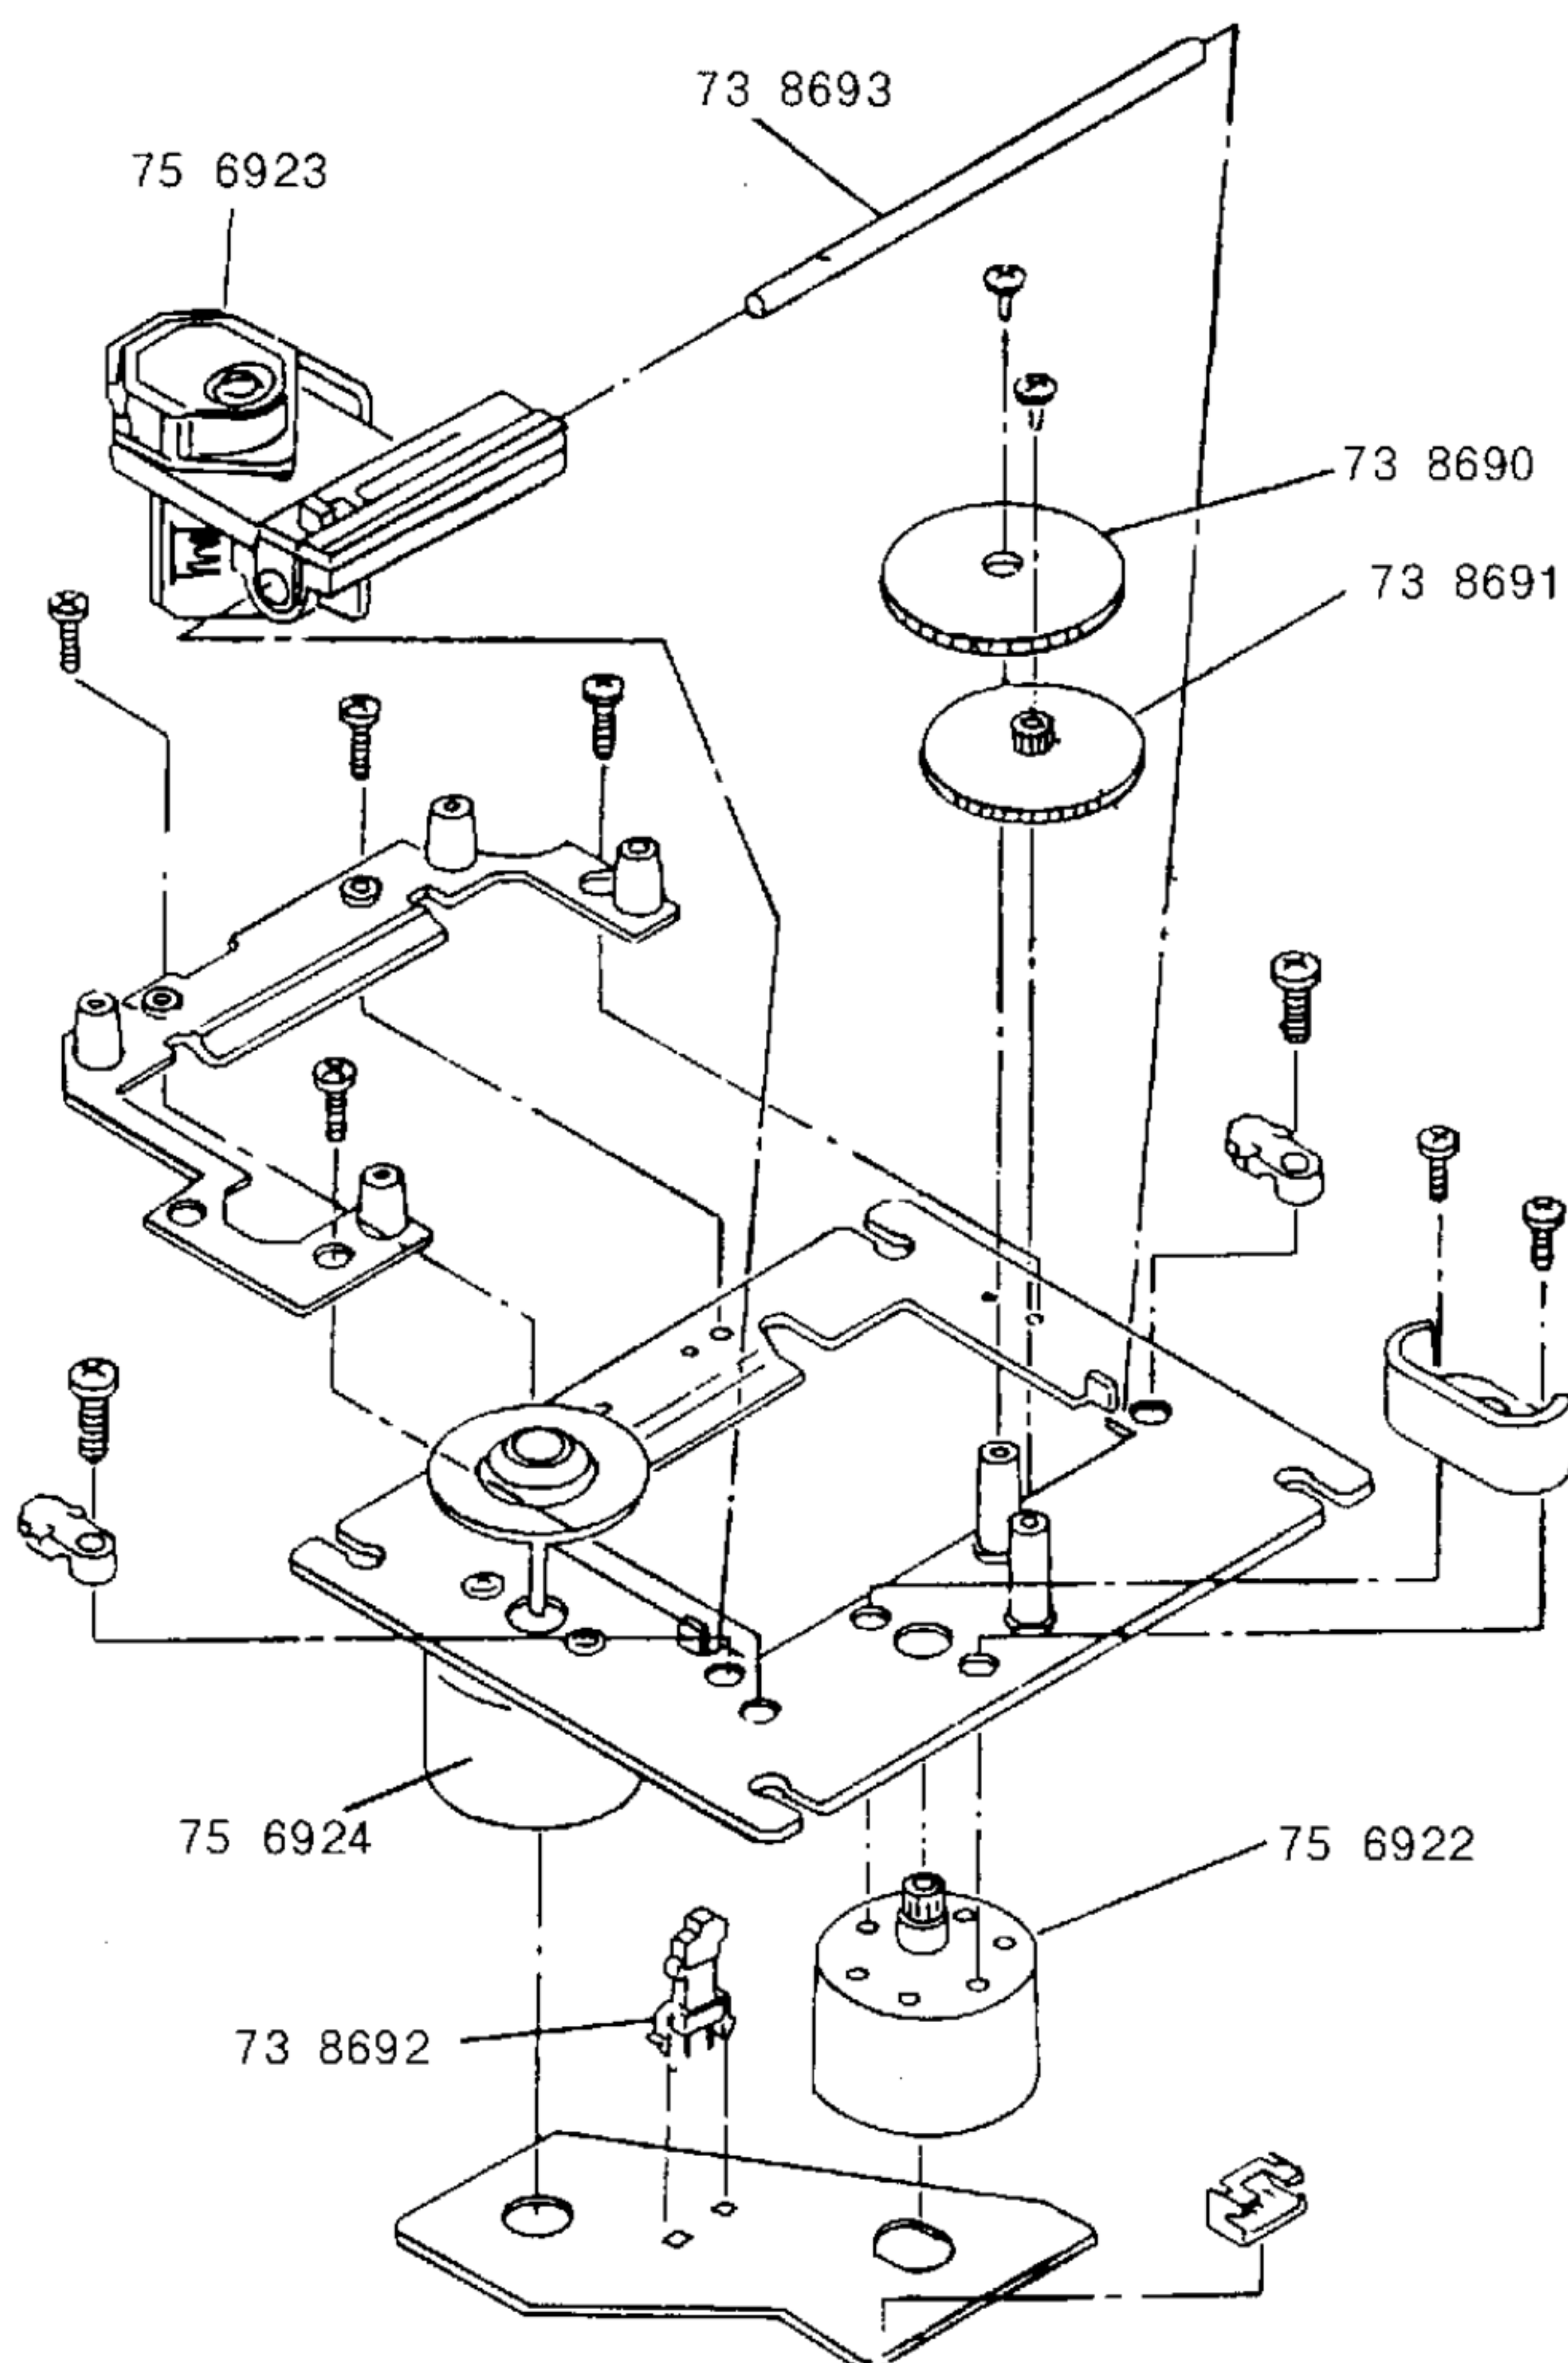


CD Stand II A
ab FD 7209
No.11007501

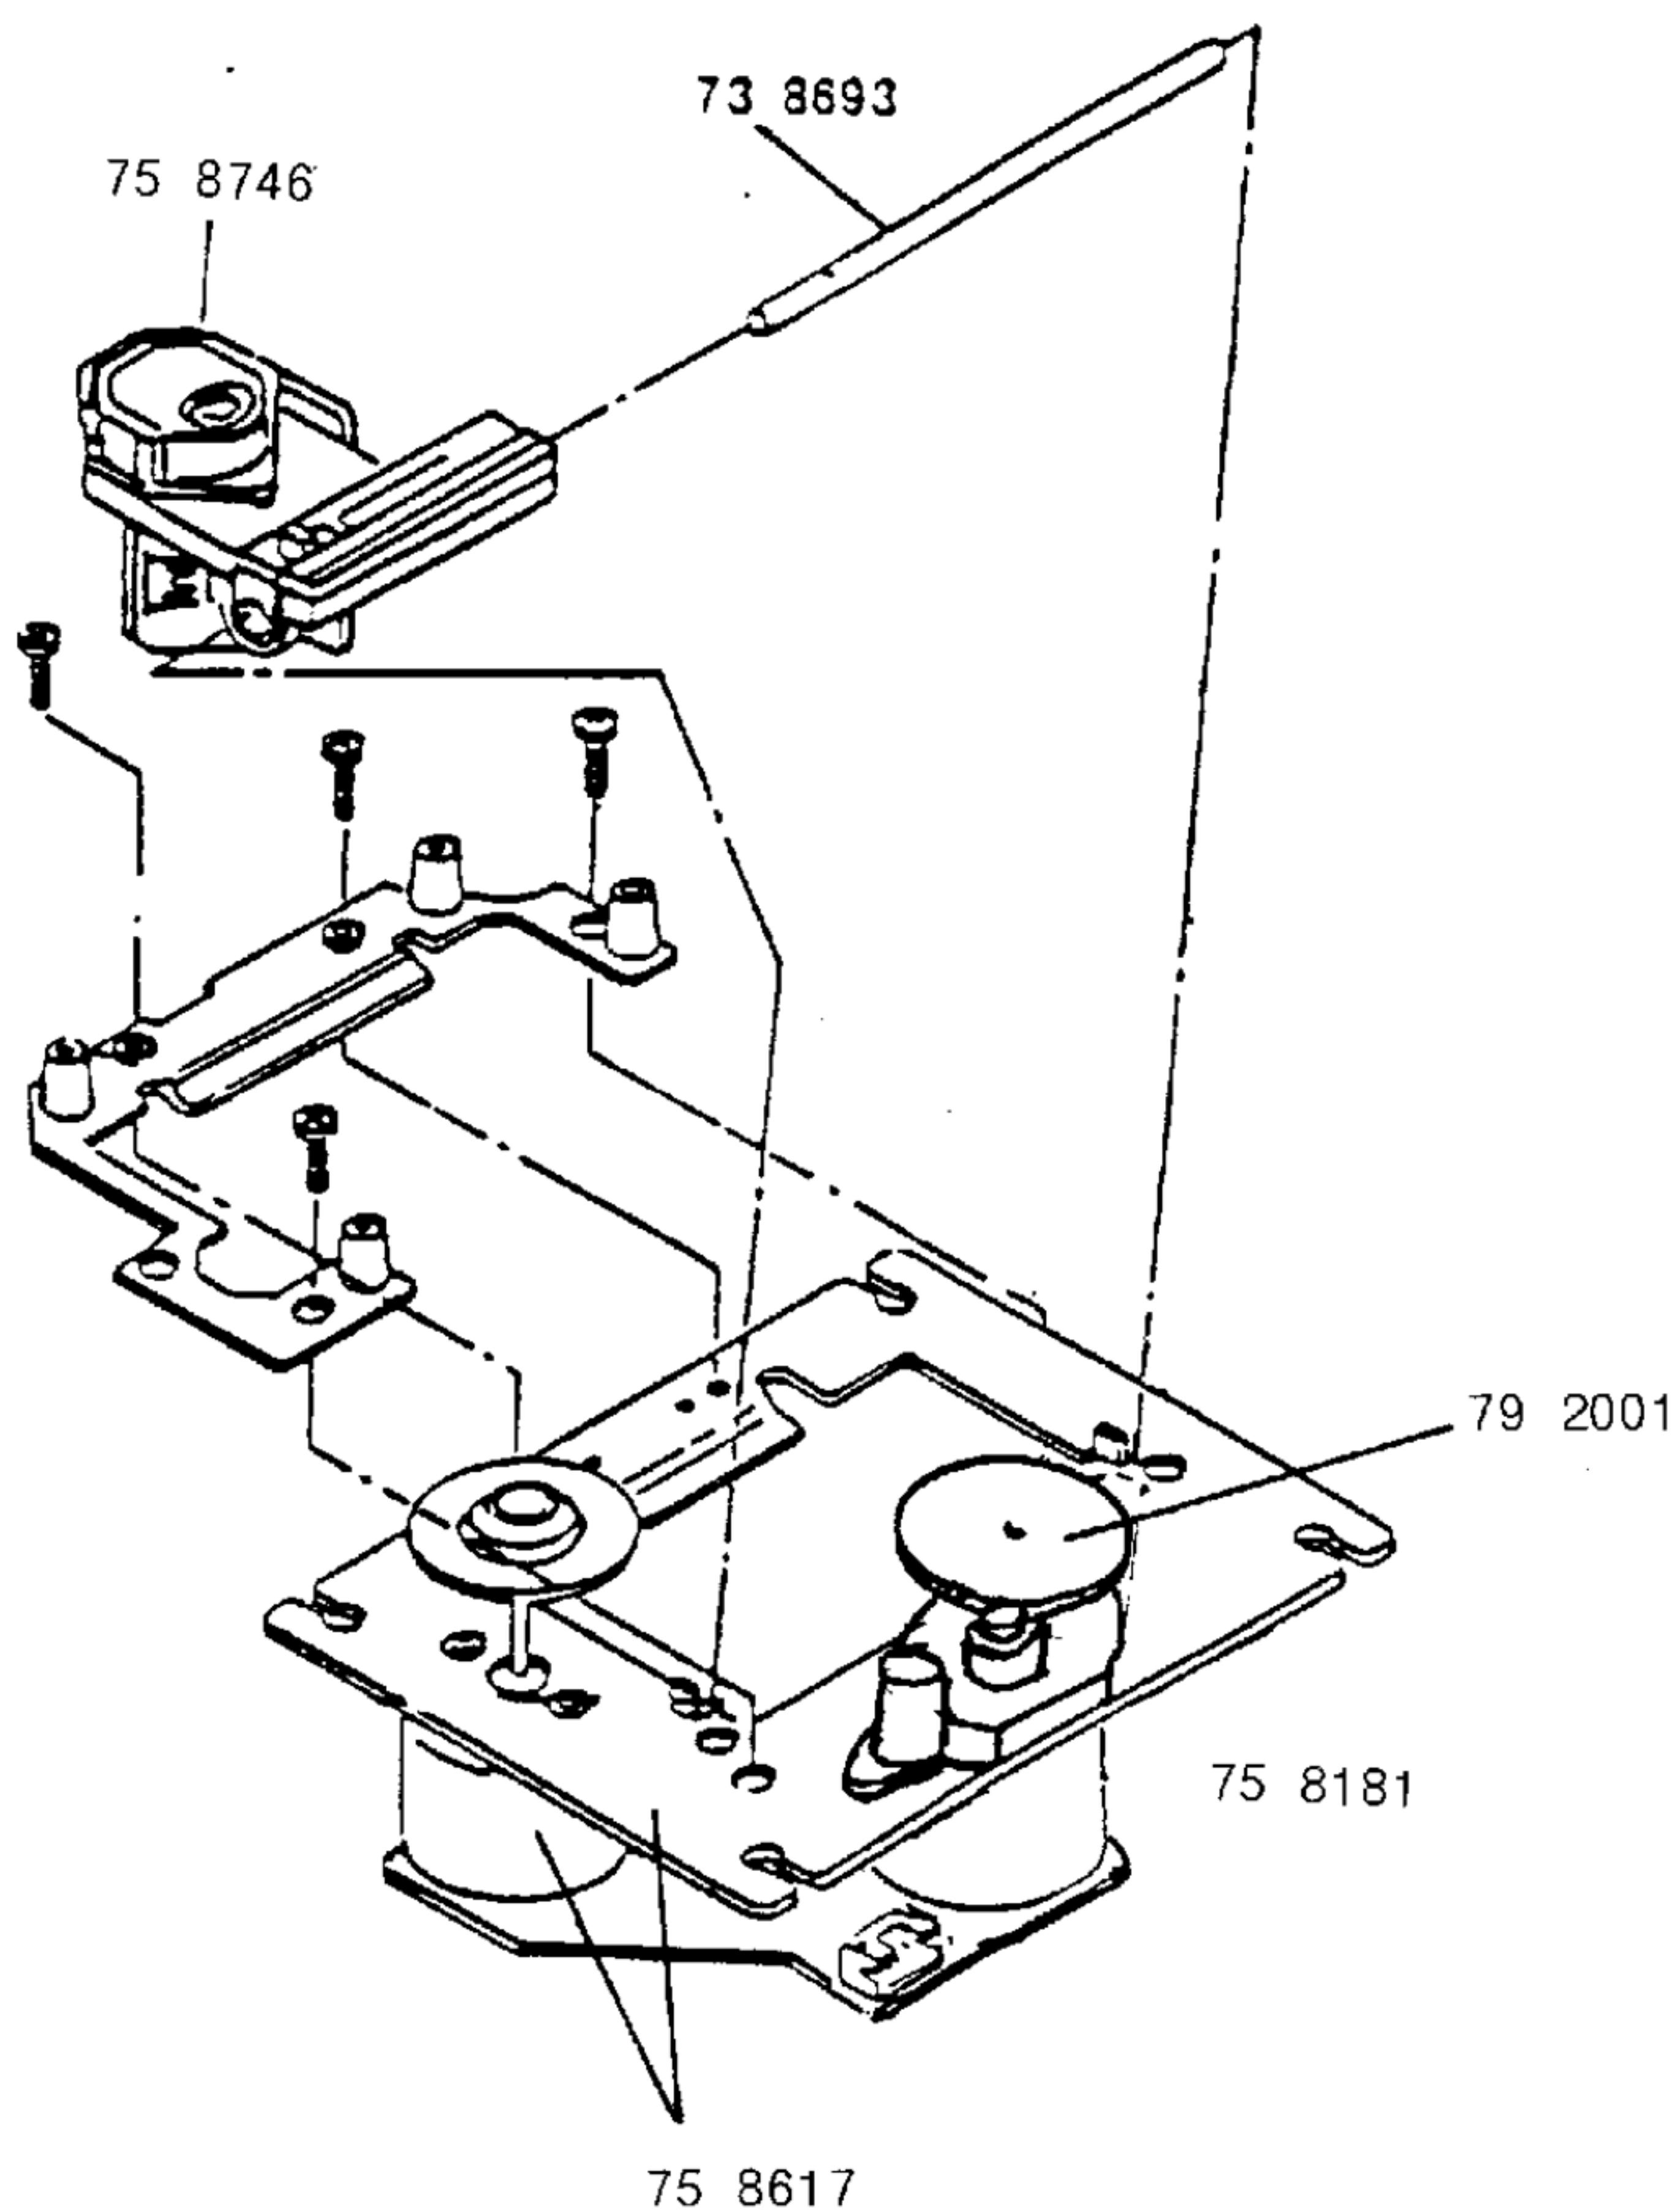

CD Stand II B
ab FD 7209
No.11007501

Laufwerk kompl.
Mechn.compl.
75 8005

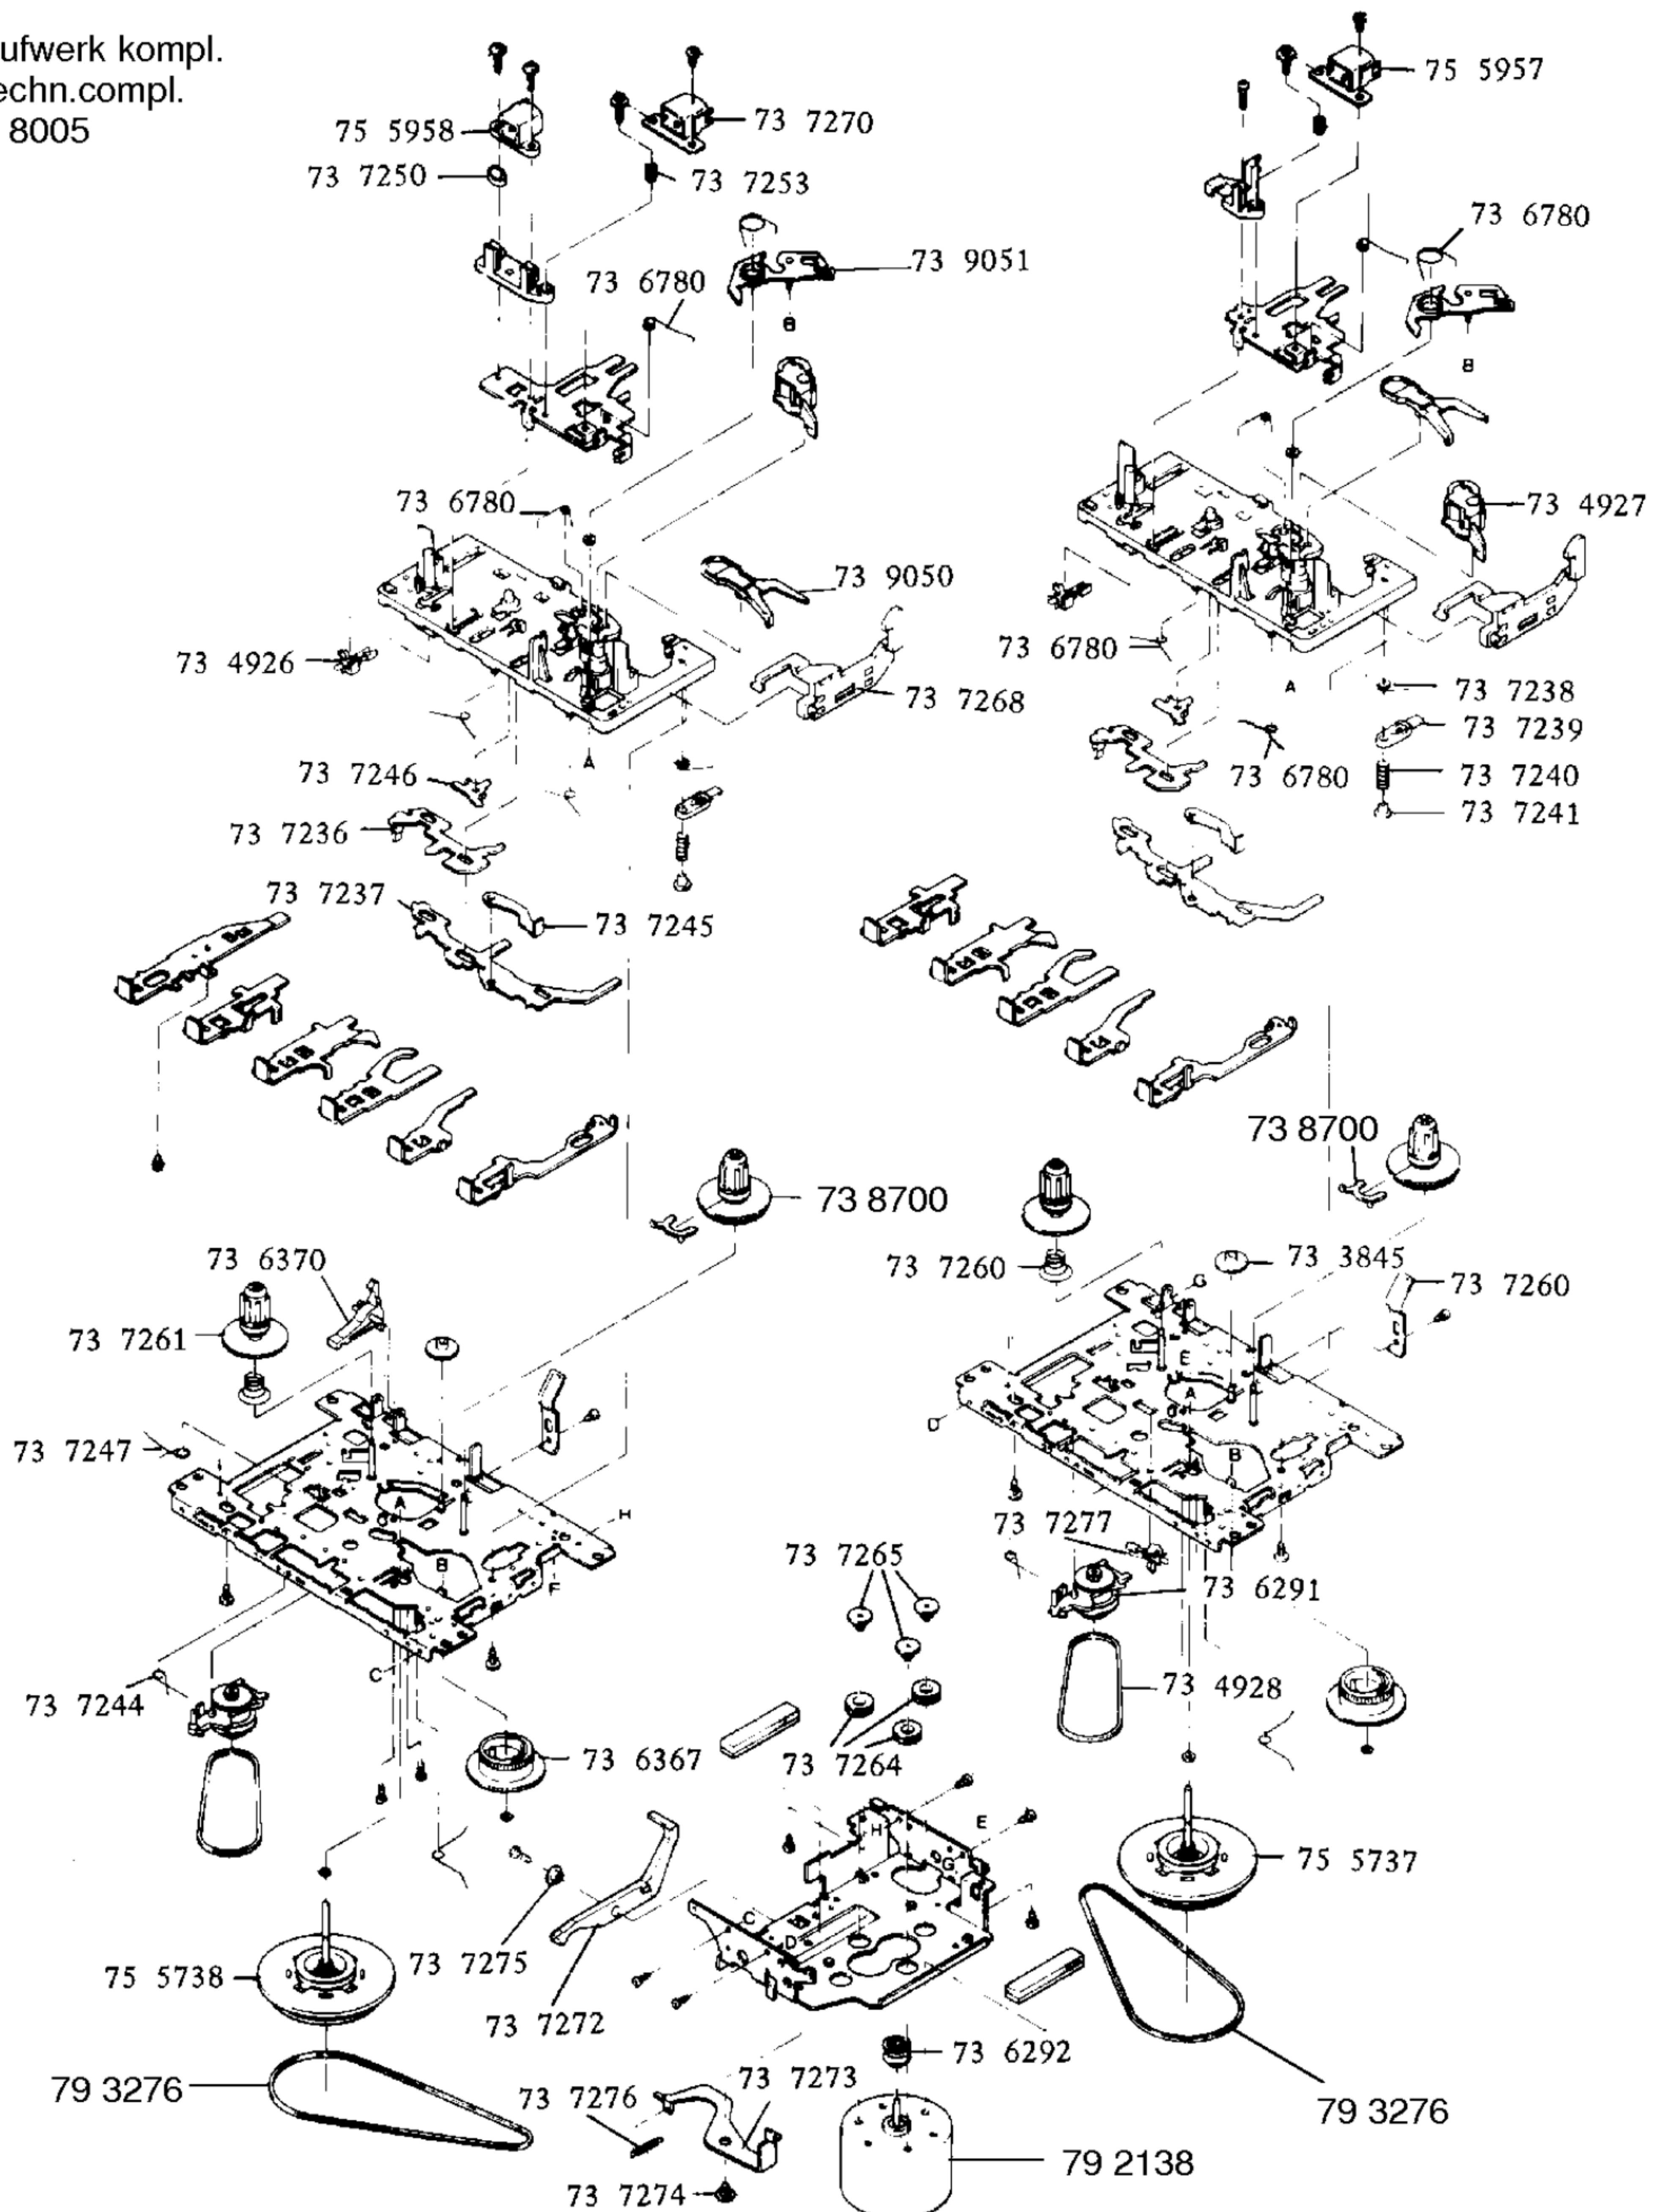


Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
	53 0811 53 0970**	Gebrauchsanweisung Gebrauchsanweisung	instructions for use mode 'd emploi
		Service-Druckschrift	service manual brochure service
	53 5493 53 5525**	Schaltplan kpl. Schaltplan CD	circuit diagram cpl. circuit diagram CD
	53 5504	Abgleich	alignment
		** Stand II ab FD7209 No. 11007501	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
Q4	79 3493**	2SC2458	
Q5	79 1651	2N3904	
Q5	79 3494**	2SA1175	
Q6	79 1651	2N3904	
Q8	79 3494**	2SA1175	
Q9	79 3495**	2SK325M	
Q10	79 3496**	2SK317W	
Q11	79 3494**	2SA1175	
Q101	73 9559	9018G	
Q202	73 7373	9014C	
Q203	79 2646	9015C	
Q204	79 1651	2N3904	
Q205	79 1651	2N3904	
Q206	73 7373	9014C	
Q207	73 7373	9014C	
Q331	73 7373	9014C	
Q332	73 7373	9014C	
Q333	73 7373	9014C	
Q334	79 2646	9015C	
Q335	73 7369	8050D	
Q336	73 7369	8050D	
Q337	73 7373	9014C	
Q338	73 7373	9014C	
Q339	73 7373	9014C	
Q340	73 7373	9014C	
Q341	73 7373	9014C	
Q404	79 1651	2N3904	
Q405	79 1651	2N3904	
Q407	79 2646	9015C	
Q408	73 9560	9013G	
Q409	73 7373	9014C	
Q411	73 7369	8050D	
Q412	73 7369	8050D	
Q413	79 1573	SC1383R	
Q414	73 7373	9014C	
Q415	79 1651	2N3904	
		** Stand II ab FD7209 No. 11007501	


Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
Q416	73 7373	9014C	
Q417	73 7373	9014C	
Q418	79 1651	2N3904	
Q419	79 1651	2N3904	
Q423	79 1651	2N3904	
Q701	79 1651	2N3904	
Q702	79 1573	2SC1383R	
Q703	73 9560	9013G	
Q704	73 9560	9013G	
Q801	73 7373	9014C	
Q802	73 7373	9014C	
Q803	73 7373	9014C	
Q804	73 7373	9014C	
Q805	79 1651	2N3904	
Q806	79 1651	2N3904	
Q807	79 1651	2N3904	
Q808	79 1651	2N3904	
Q809	73 7373	9014C	
Q810	73 7373	9014C	
Q811	73 7373	9014C	
			
D1	79 2046**	1N4001	
D2	79 2046**	1N4001	
D3	79 2046**	1N4001	
D4	79 2046**	1N4001	
D103	79 1616	Tuning-Diode	tuning
D105	79 1616	Tuning-Diode	tuning
D106	79 1617	Tuning-Diode	tuning
D107	79 1617	Tuning-Diode	tuning
D109	79 1617	Tuning-Diode	tuning
D702	71 0892	BY255 (Ersatz f. 1N5400)	
D703	71 0892	BY255 (Ersatz f. 1N5400)	
D704	71 0892	BY255 (Ersatz f. 1N5400)	
D705	71 0892	BY255 (Ersatz f. 1N5400)	
		** Stand II ab FD7209 No. 11007501	

Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
SW1	79 1585	Music Scan	
SW2	79 1585	Play-Stop	
SW3	79 1585	Skip FF	
SW4	79 1585	Skip REW	
SW5	79 1585	Pause Clear	
SW6	79 1585	Repeat	
SW7	79 1585	Programm	
SW201	79 1589	MW	
SW202	79 1589	Stereo/Mono	
SW203	79 1589	FM	
SW204	79 1589	LW	
SW301	79 1588	Tuner	
SW301	79 1624	A/W-Schalter	R/P-switch
SW302	79 1588	Phono	
SW303	79 1588	Tape	
SW304	79 1588	CD/AUX	
SW801	79 1586	Baß	
SW802	79 1584	Volume up/down	
SW803	79 1584	Volume up/down	
SW804	79 1586	High Speed	
SW805	79 1586	Tape Select	
SW901	79 1586	Netzschalter	power
	79 1583	Blattschalter für CD-Klappe	leaf switch for CD door p. porte CD
			
VR801	79 1591	EQ	
VR802	79 1591	EQ	
VR803A	79 1591	EQ	
VR803B	79 1591	EQ	
VR804	79 1590	Balance	balance
		** Stand II ab FD7209 No. 11007501	


Pos. Item Pos.	Ident-Nr. Ident-No N°d'ident	Bezeichnung	Designation Désignation
			
TC5	79 1578	Trimmer 20pF	
TC6	79 1578		
TC101	79 1578		
TC102	79 1578		
TC103	79 1578		
TC104	79 1578		
TC105	79 1578		
C731	75 8182	Elko (stehend)	
C732	75 8182	Elko (stehend)	
C733	75 8182	Elko (stehend)	
			
L105	79 1579	FM Osc. Spule	coil
L202	79 1580	Spule	coil
			
X1	79 1621	7.2 MHz	
X2	**		
			
	70 0604	1,25 A/250 V	
	79 3058	5 A/250 V	
			
LP1	79 1622	Lampe 9 V	lamp 9 V
LP2	79 1622	Lampe 9 V	lamp 9 V
		** Stand II ab FD7209 No. 11007501	

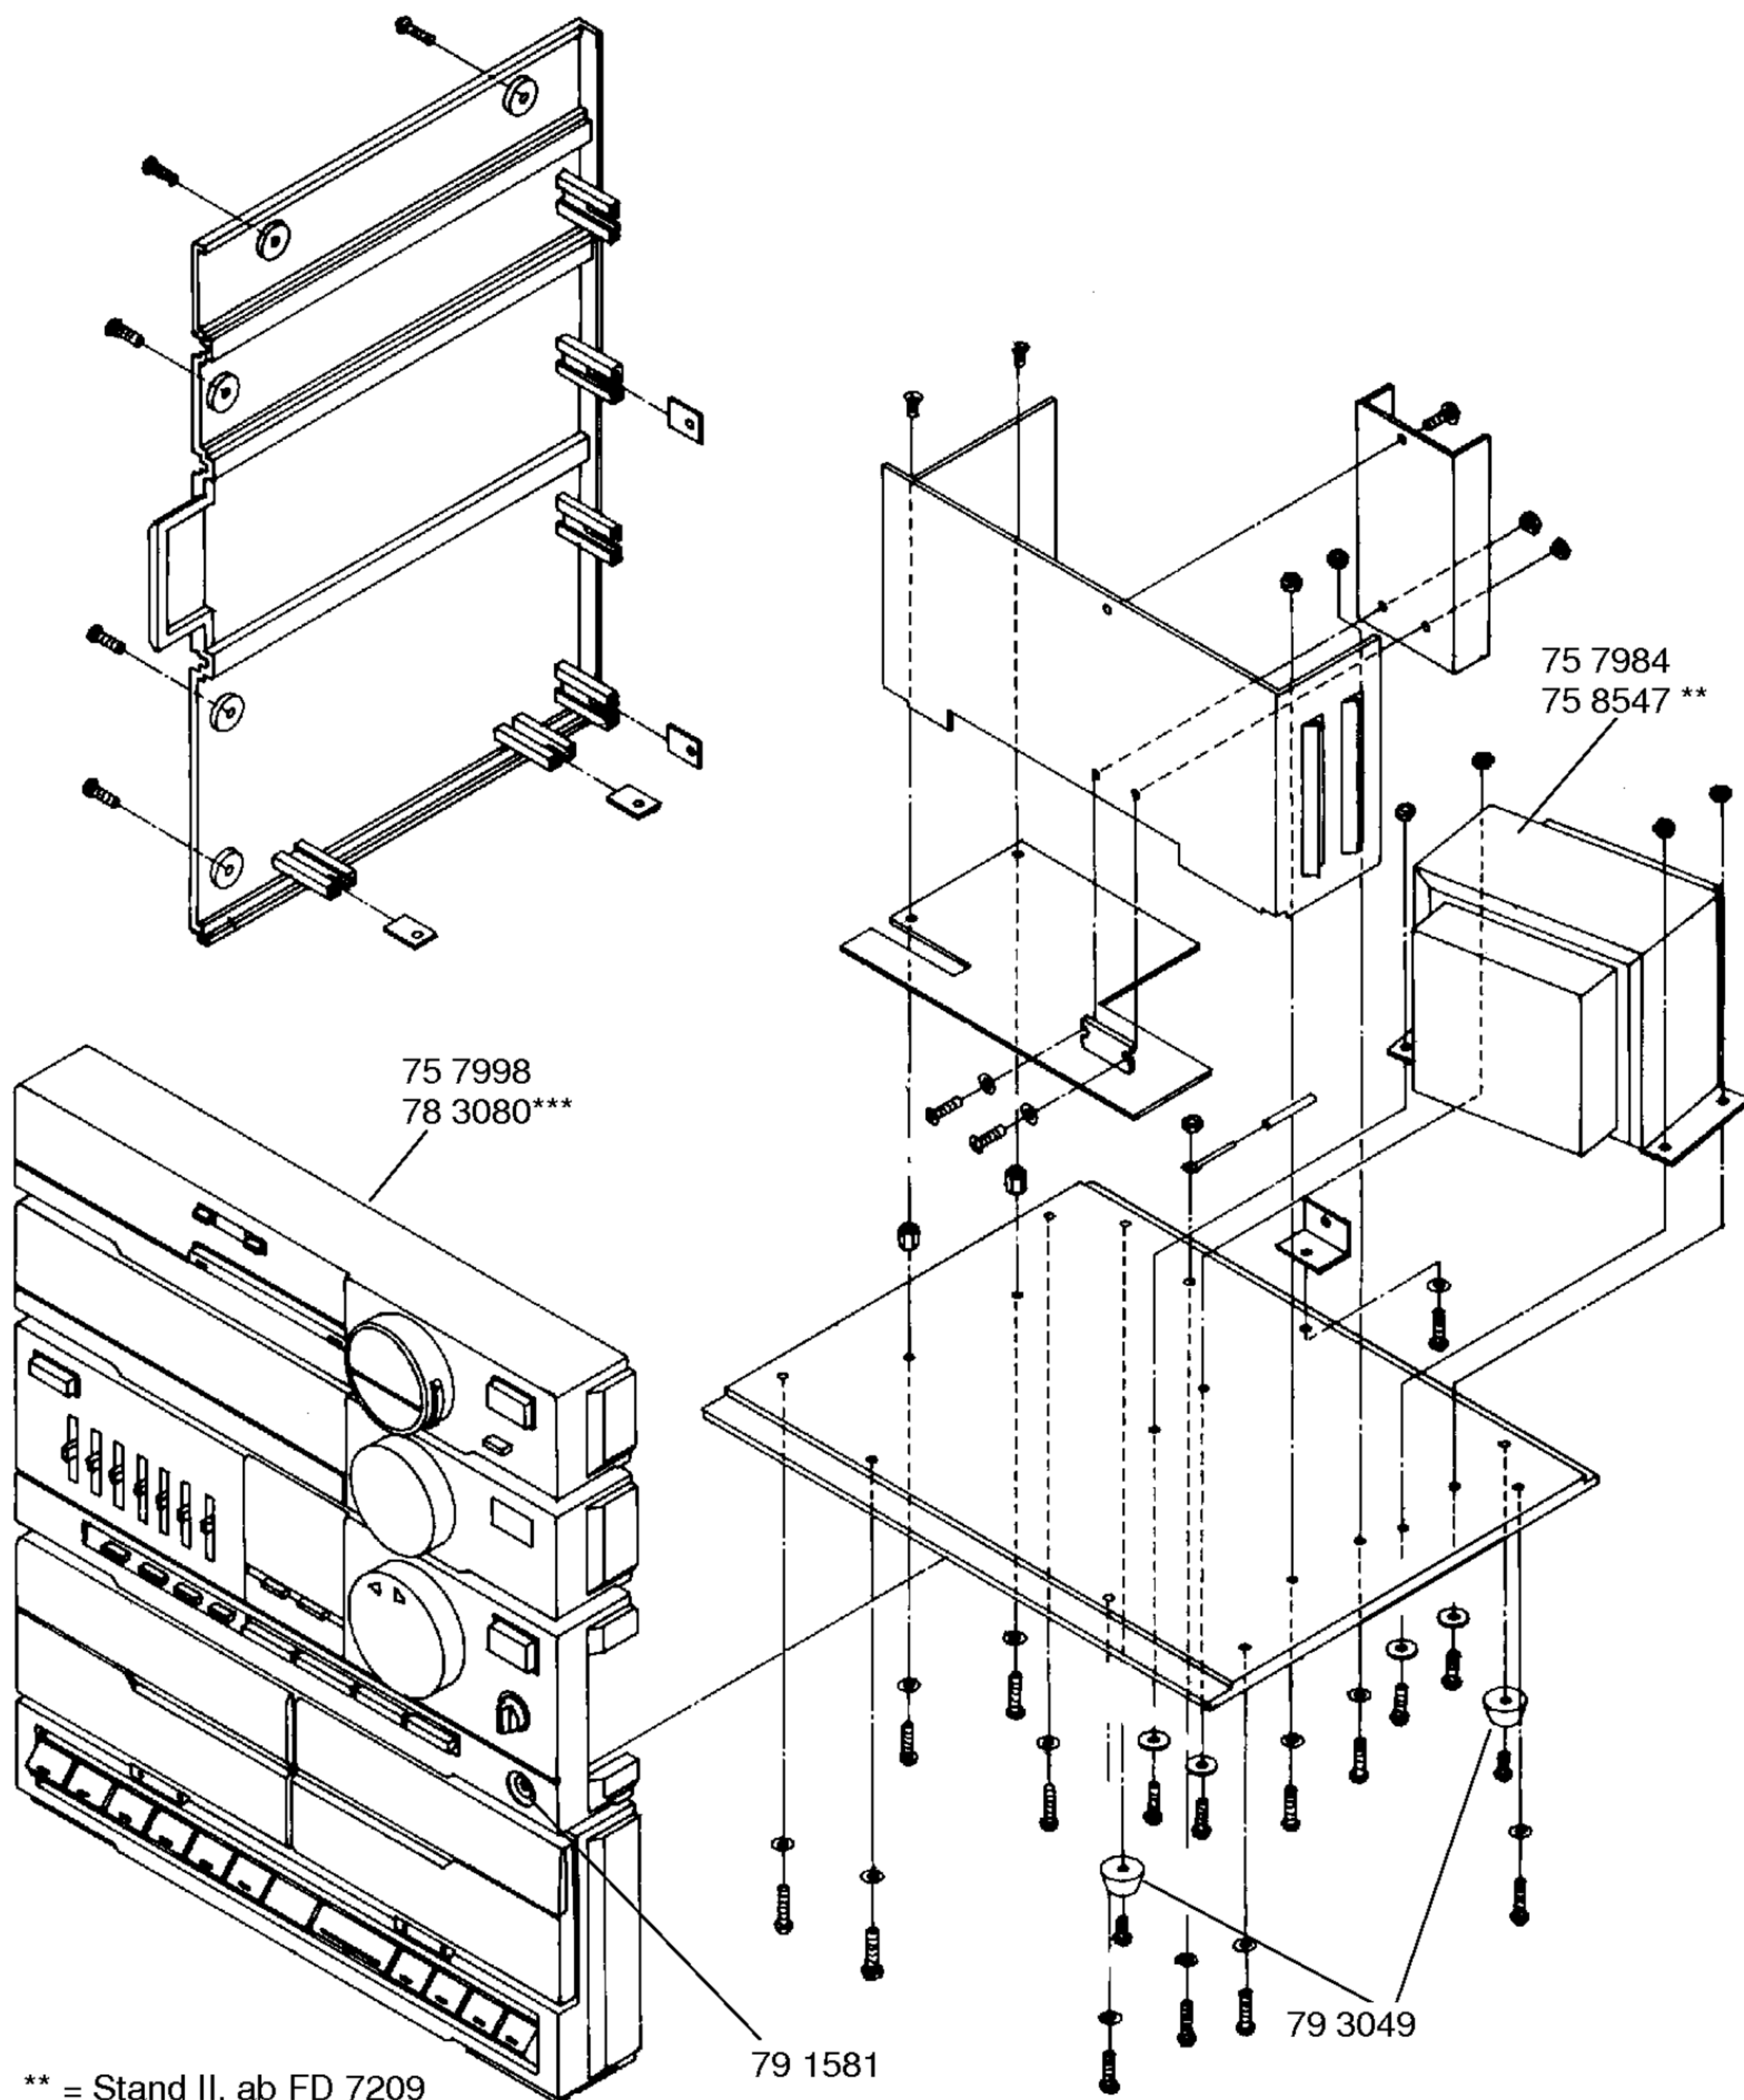


** = Stand II, ab FD 7209
No.11007501
*** = RS247G6

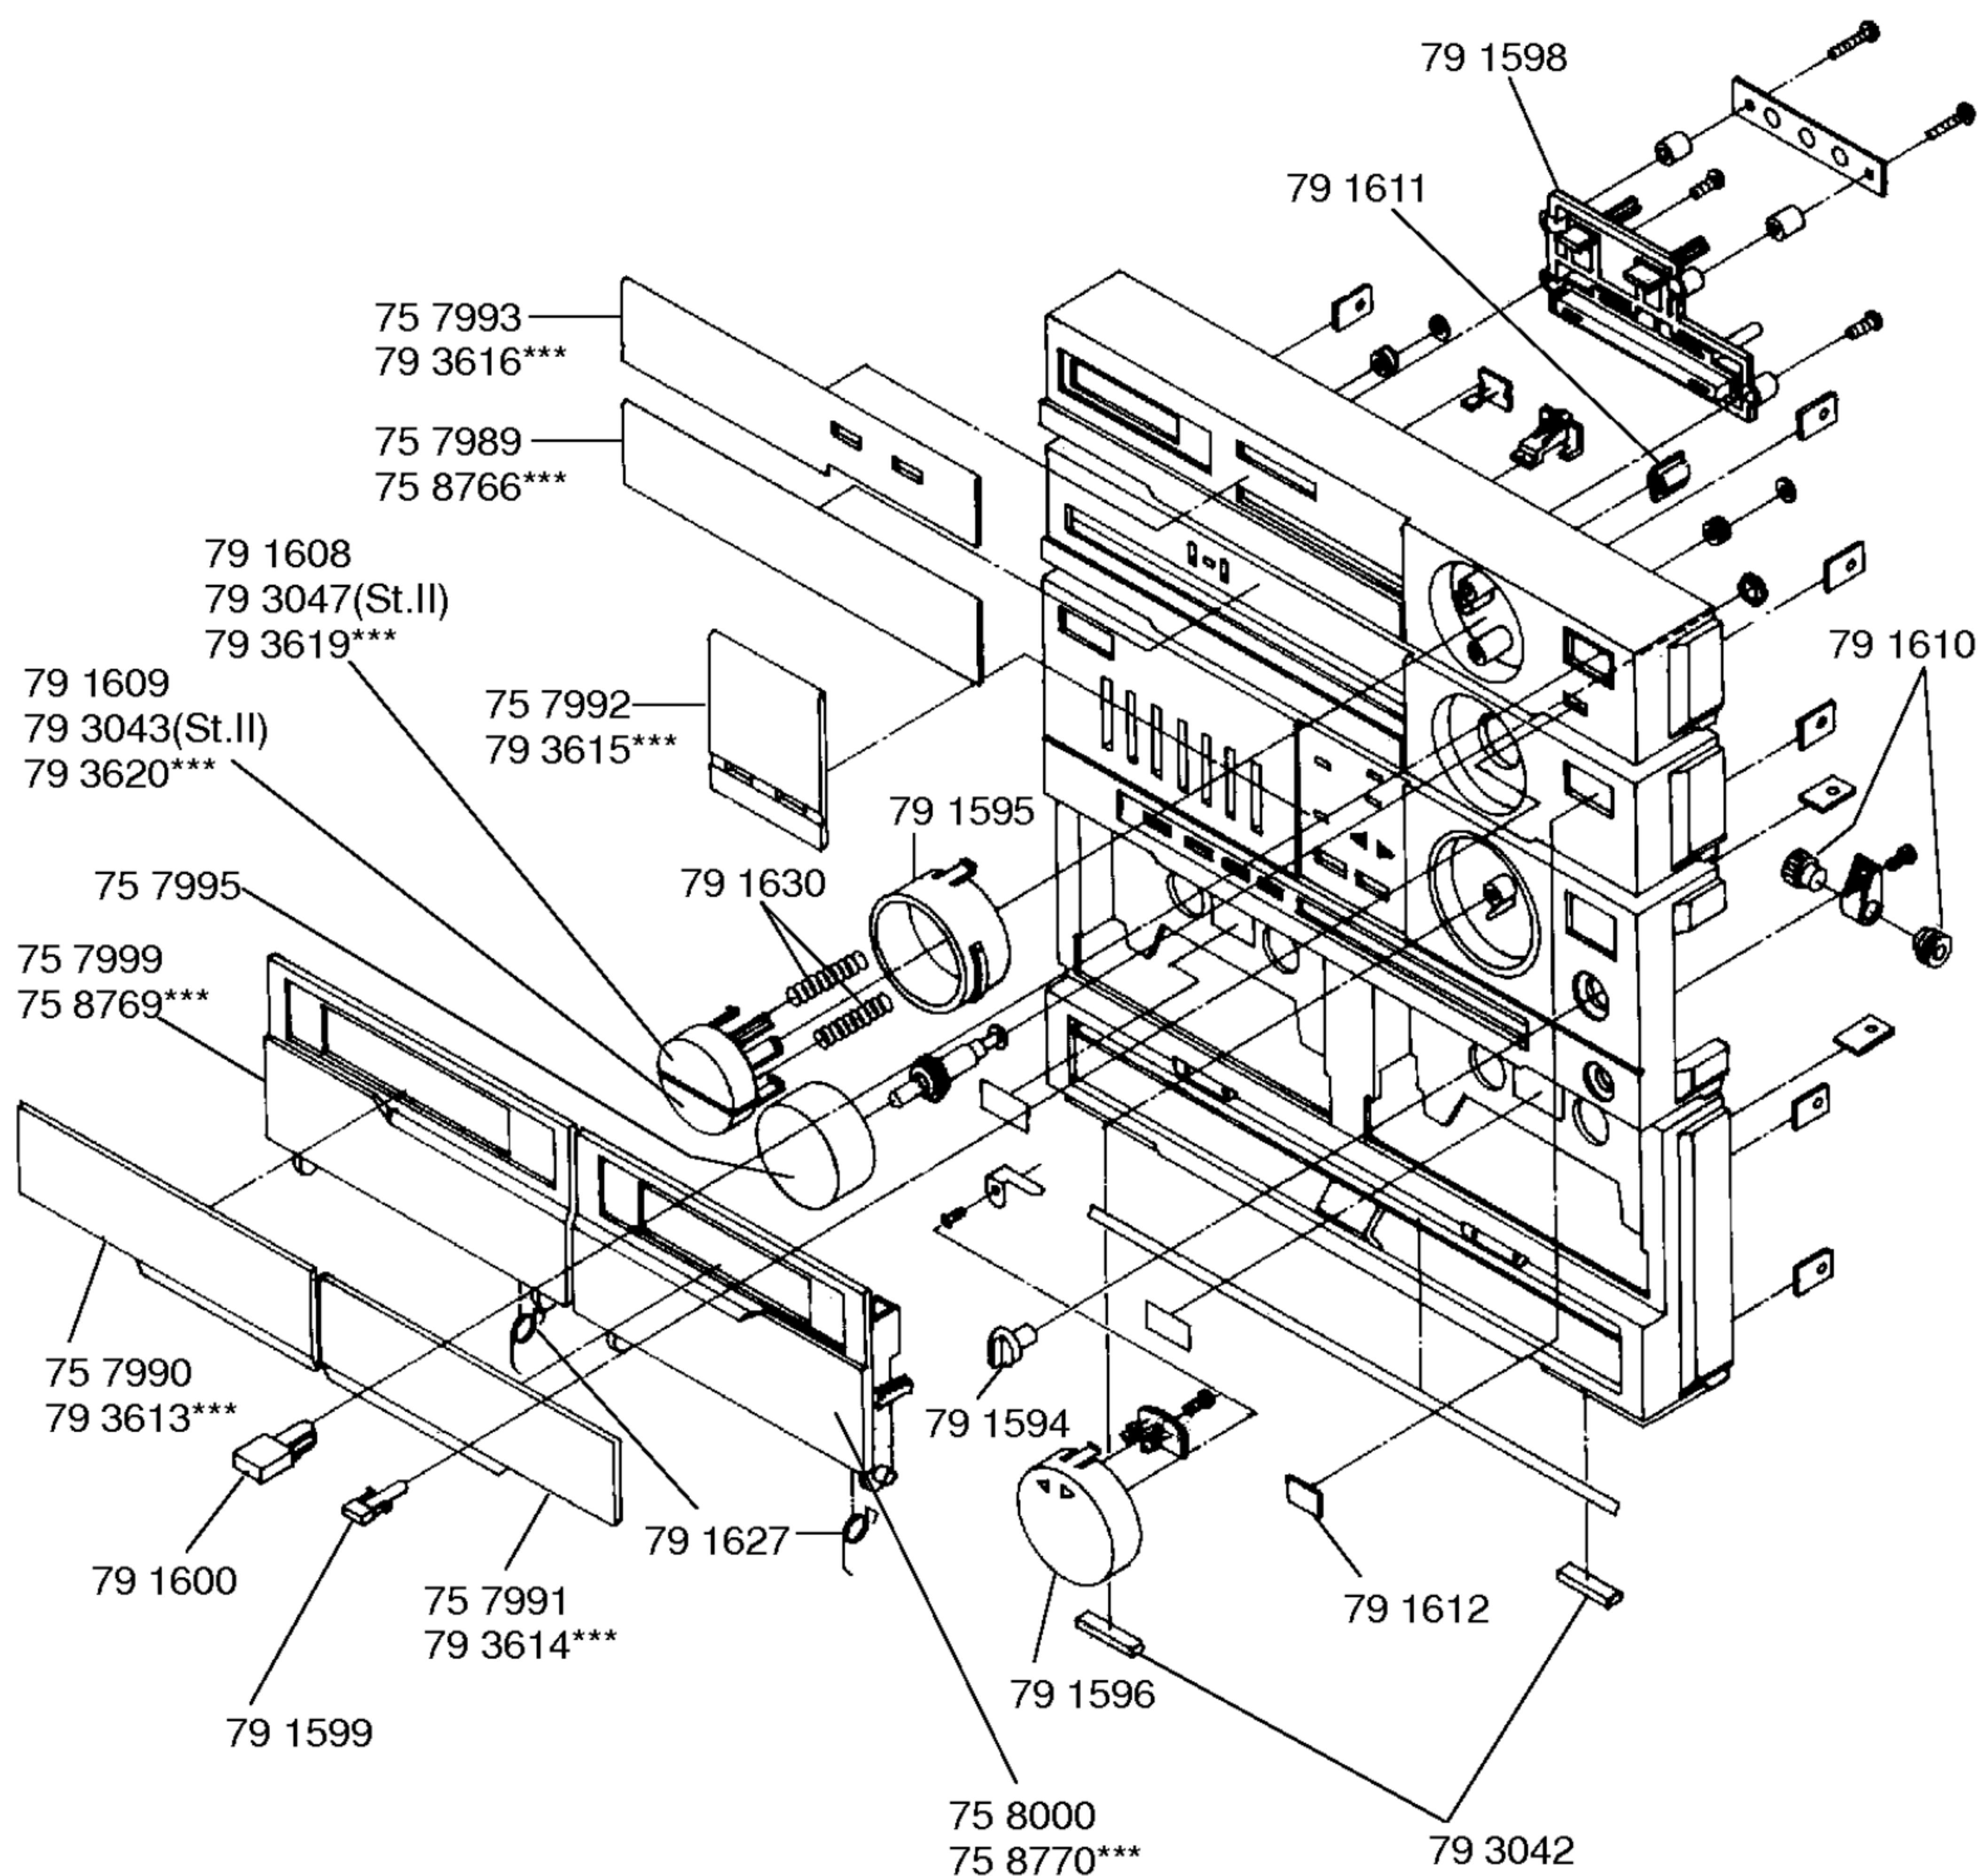

*** = nur RS247G6

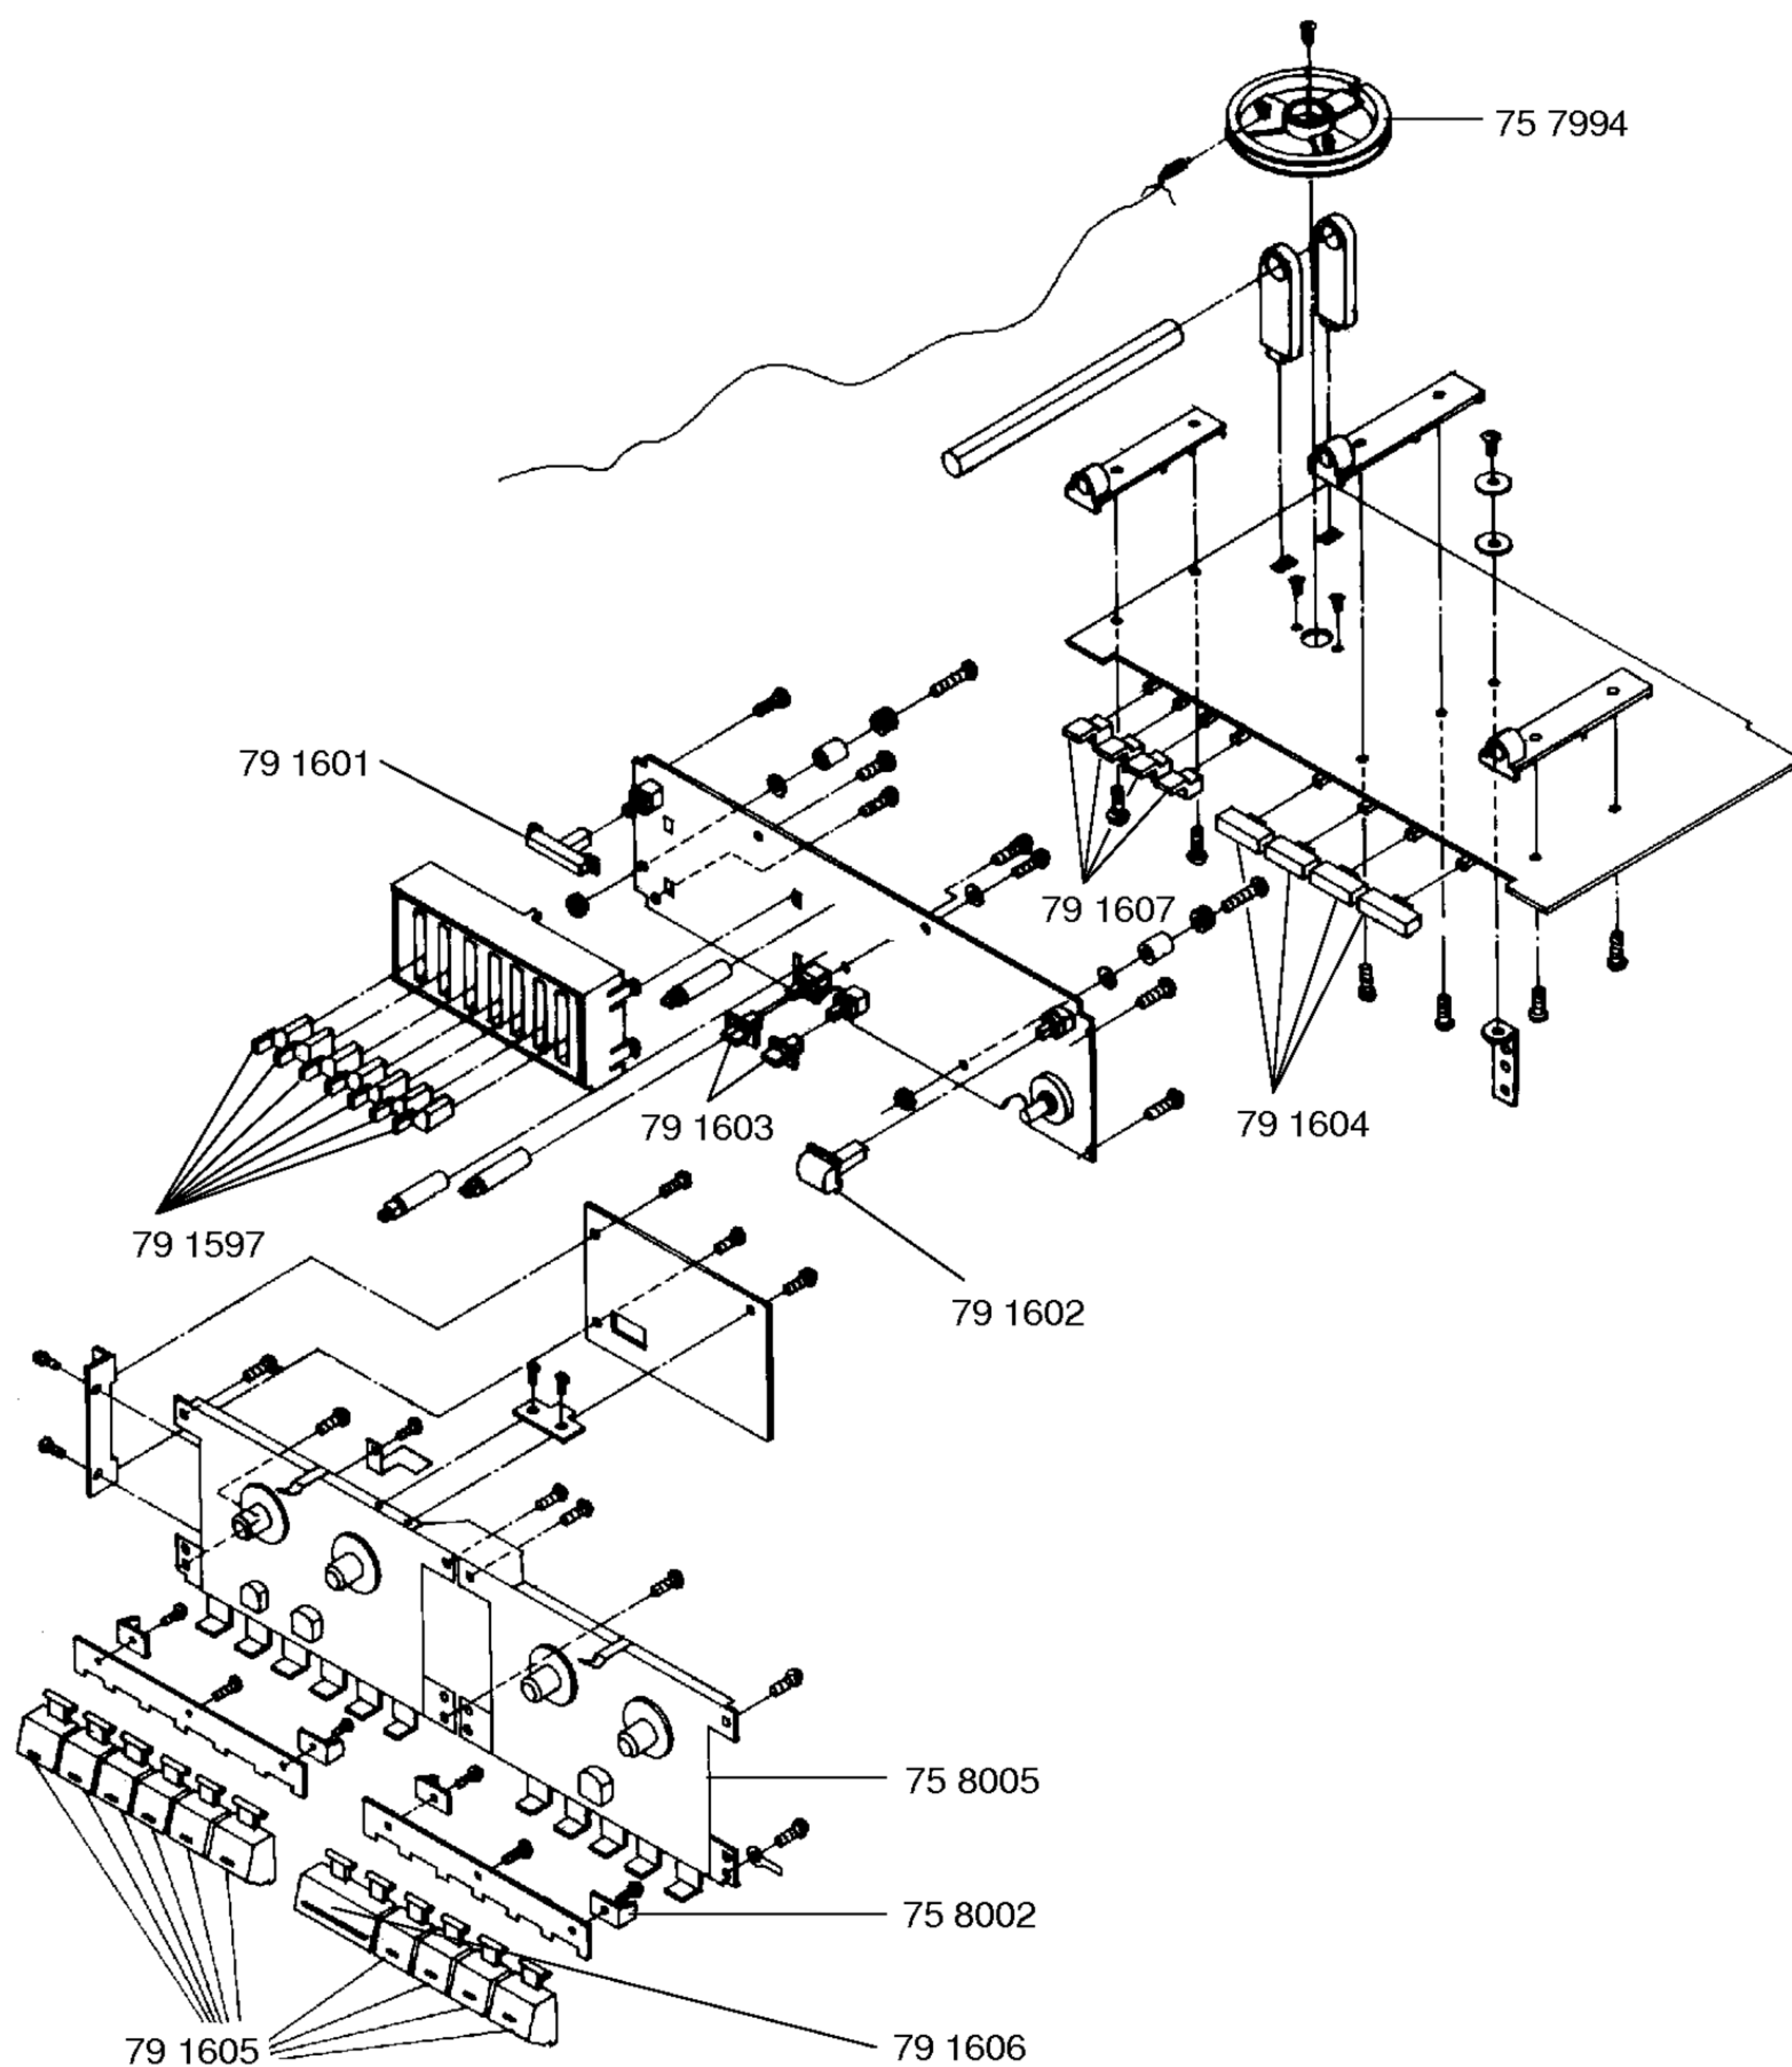

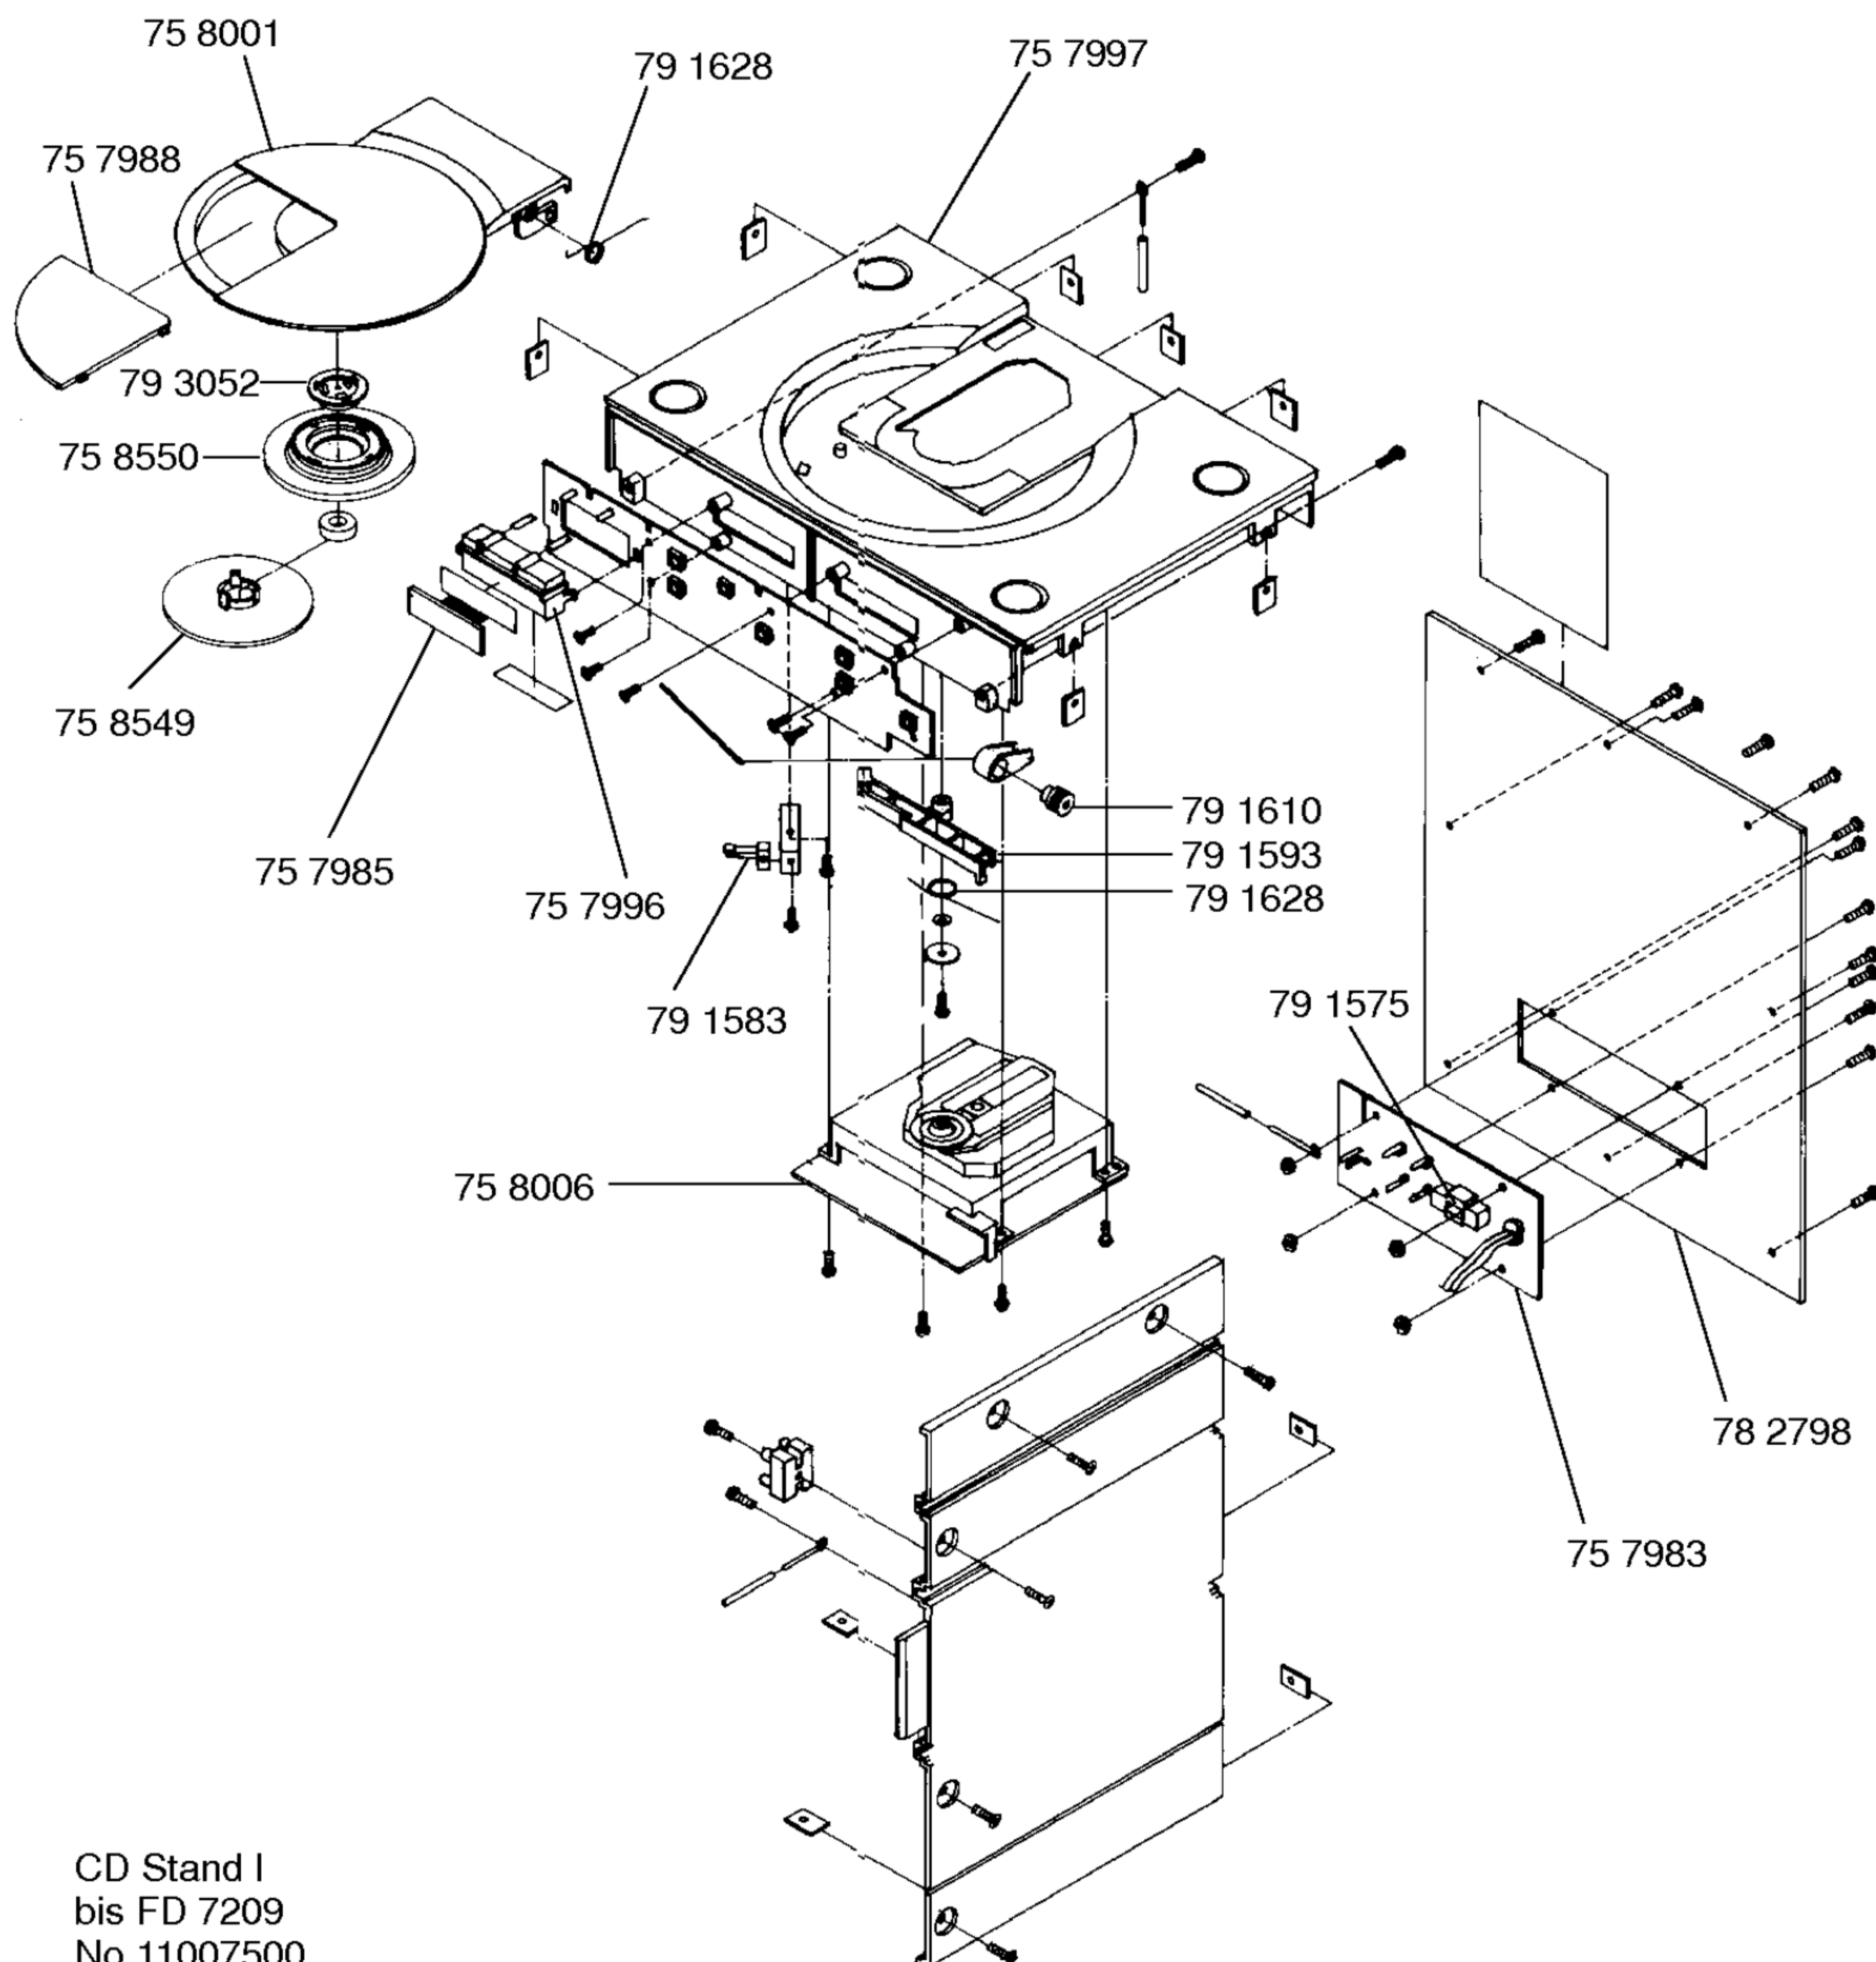

CD Stand I
bis FD 7209
No.11007500