 
 
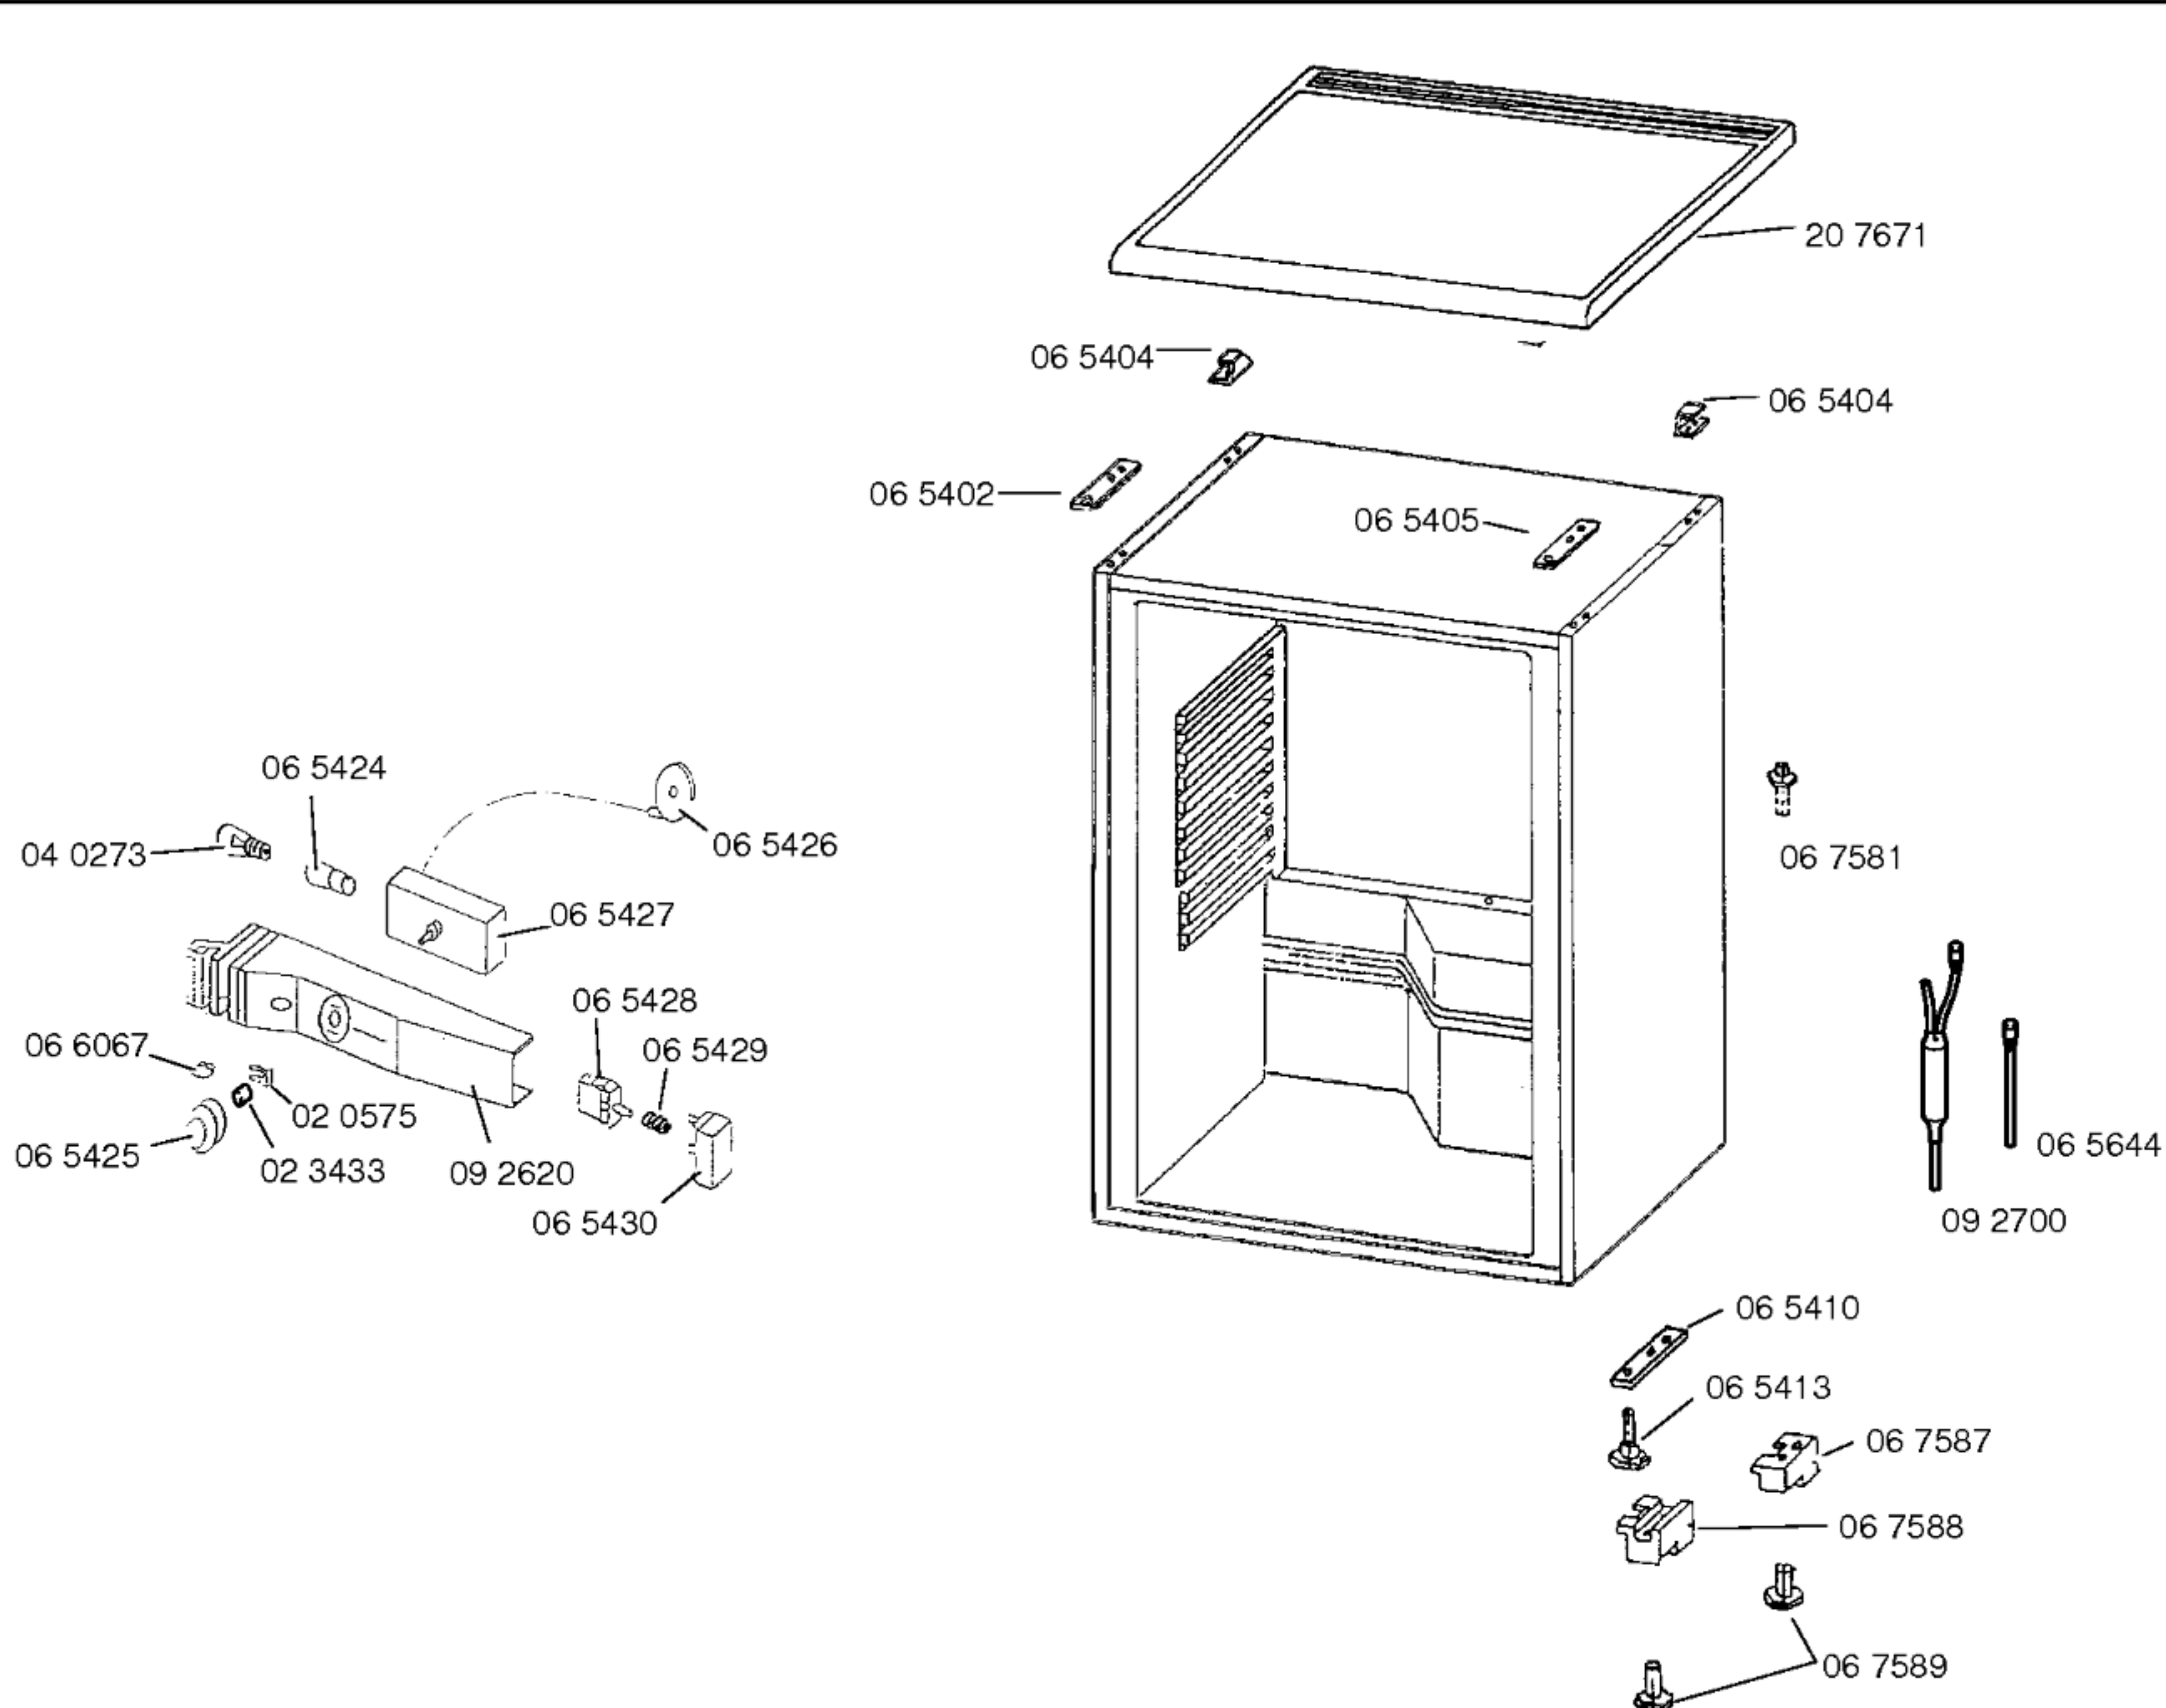 


Ident – Nummern – Konstante
3740Gebrauchsanweisung
51 5686
(D,GB,I,F,E,NL)

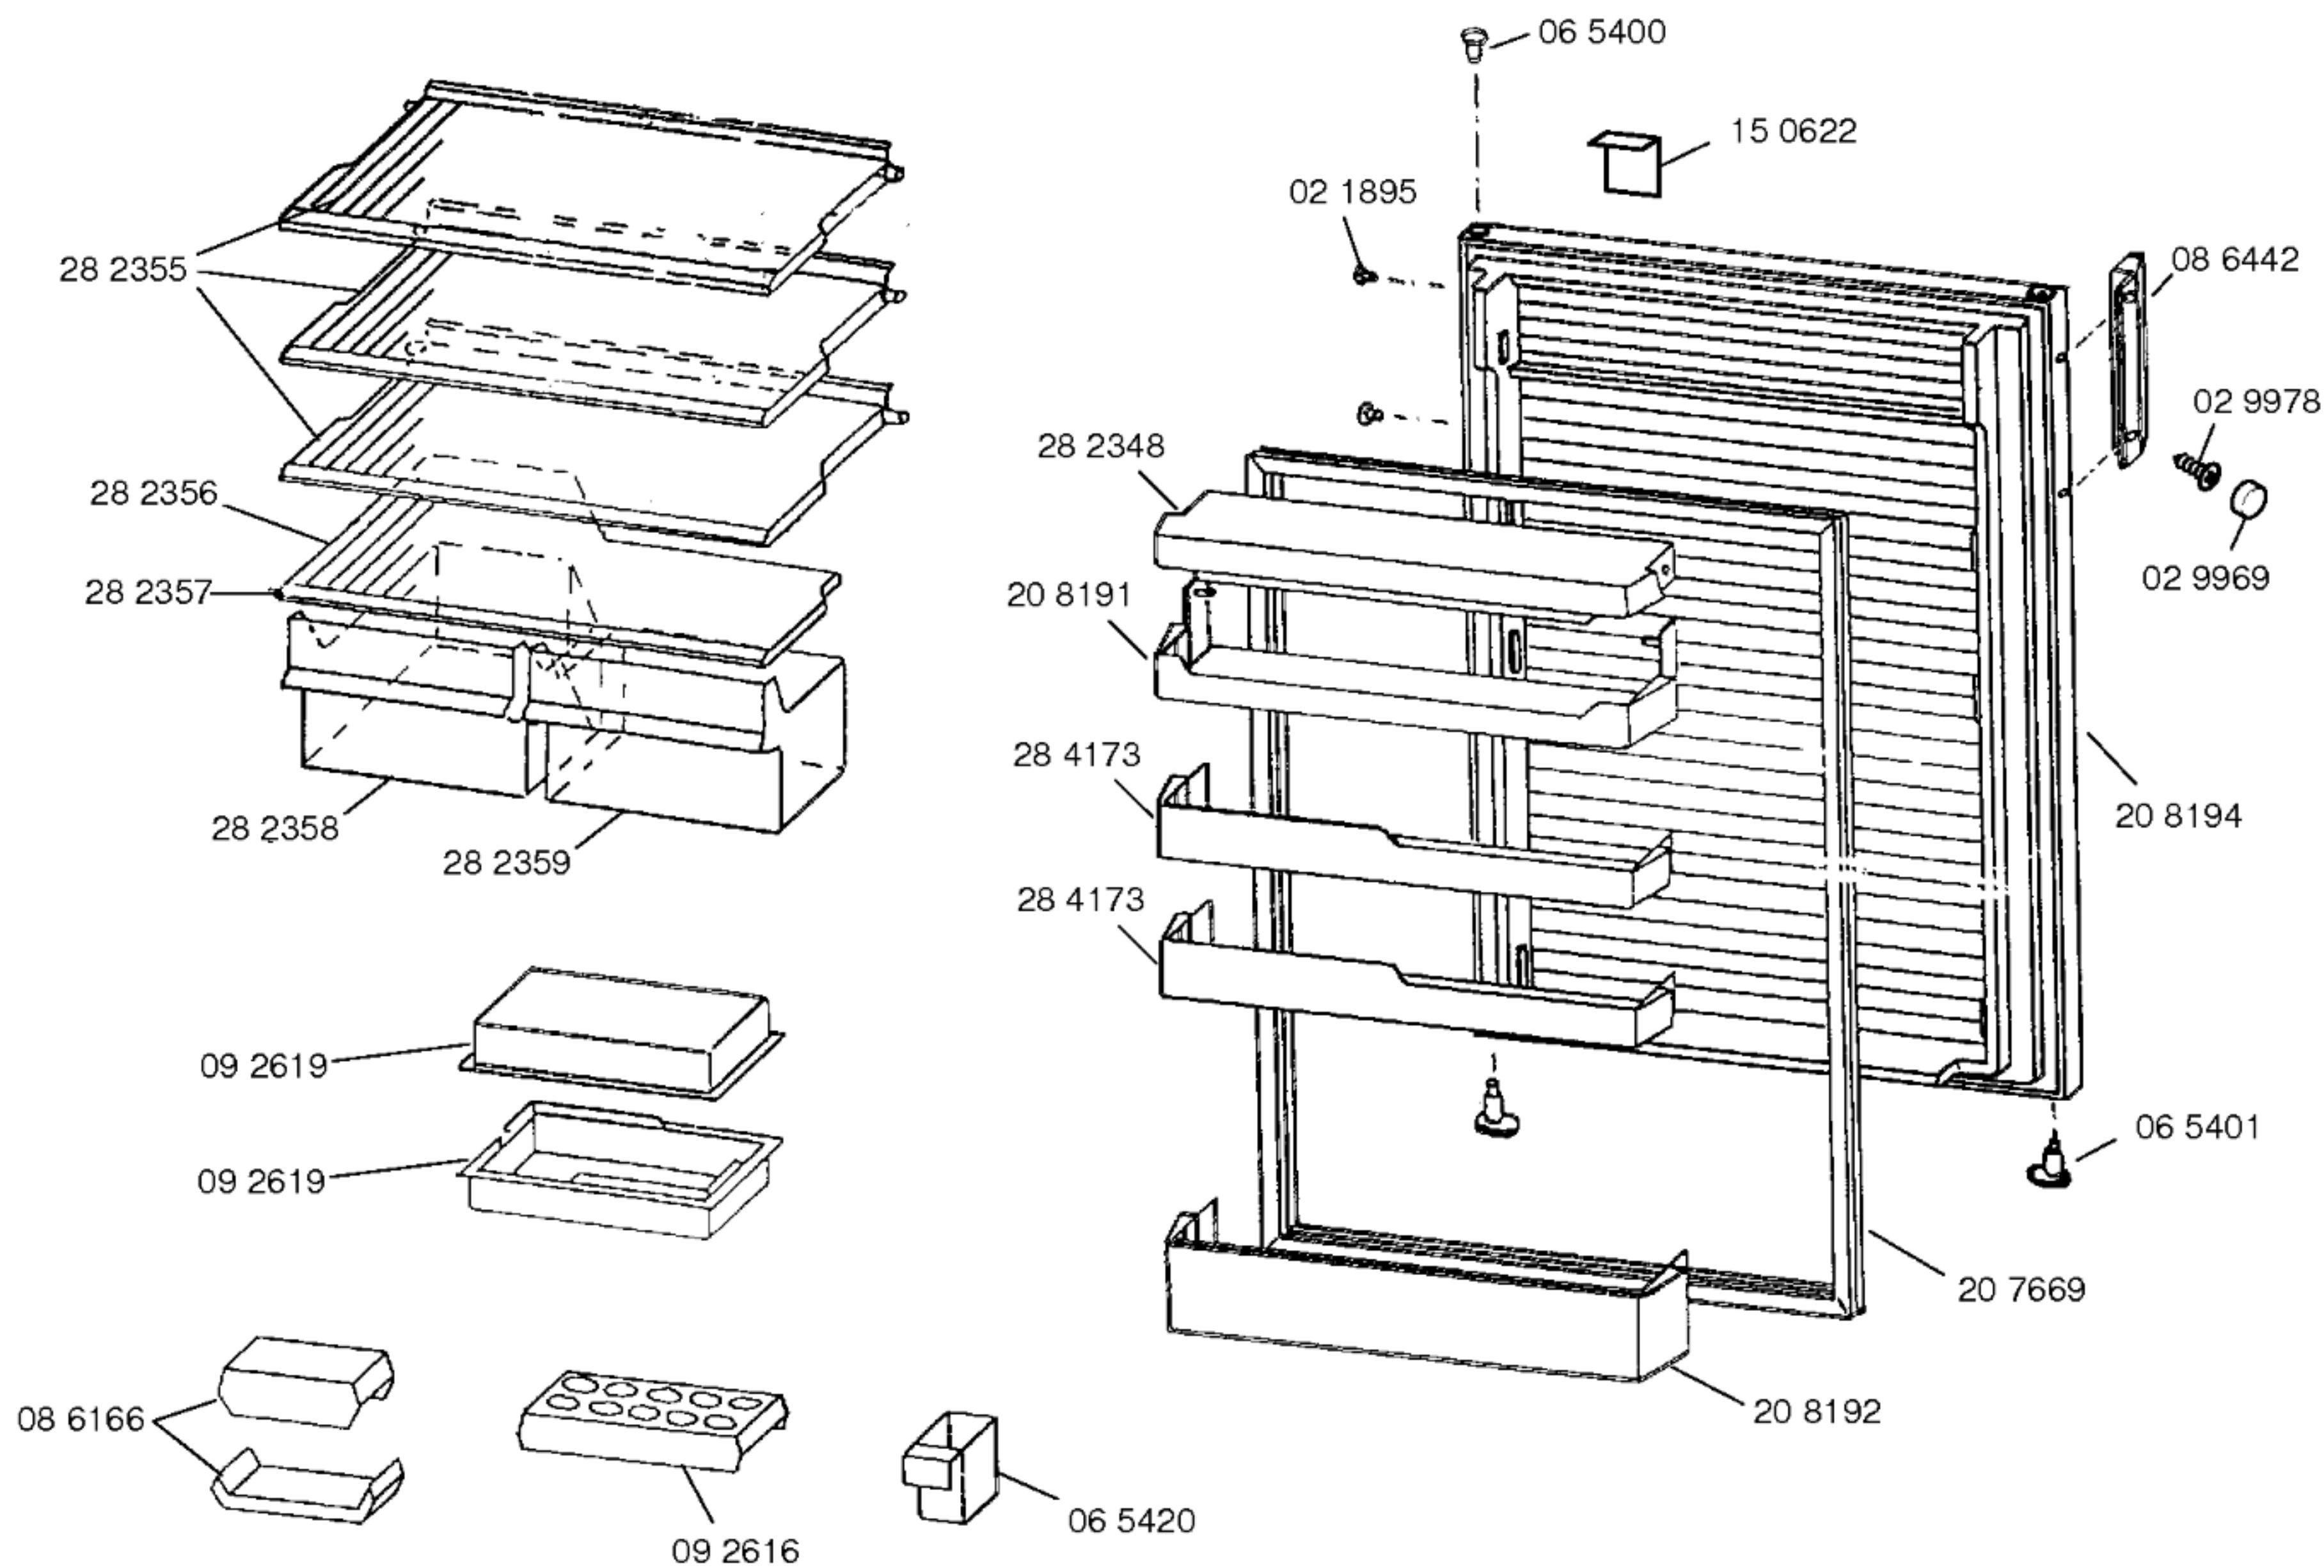

Ident – Nummern – Konstante
3740

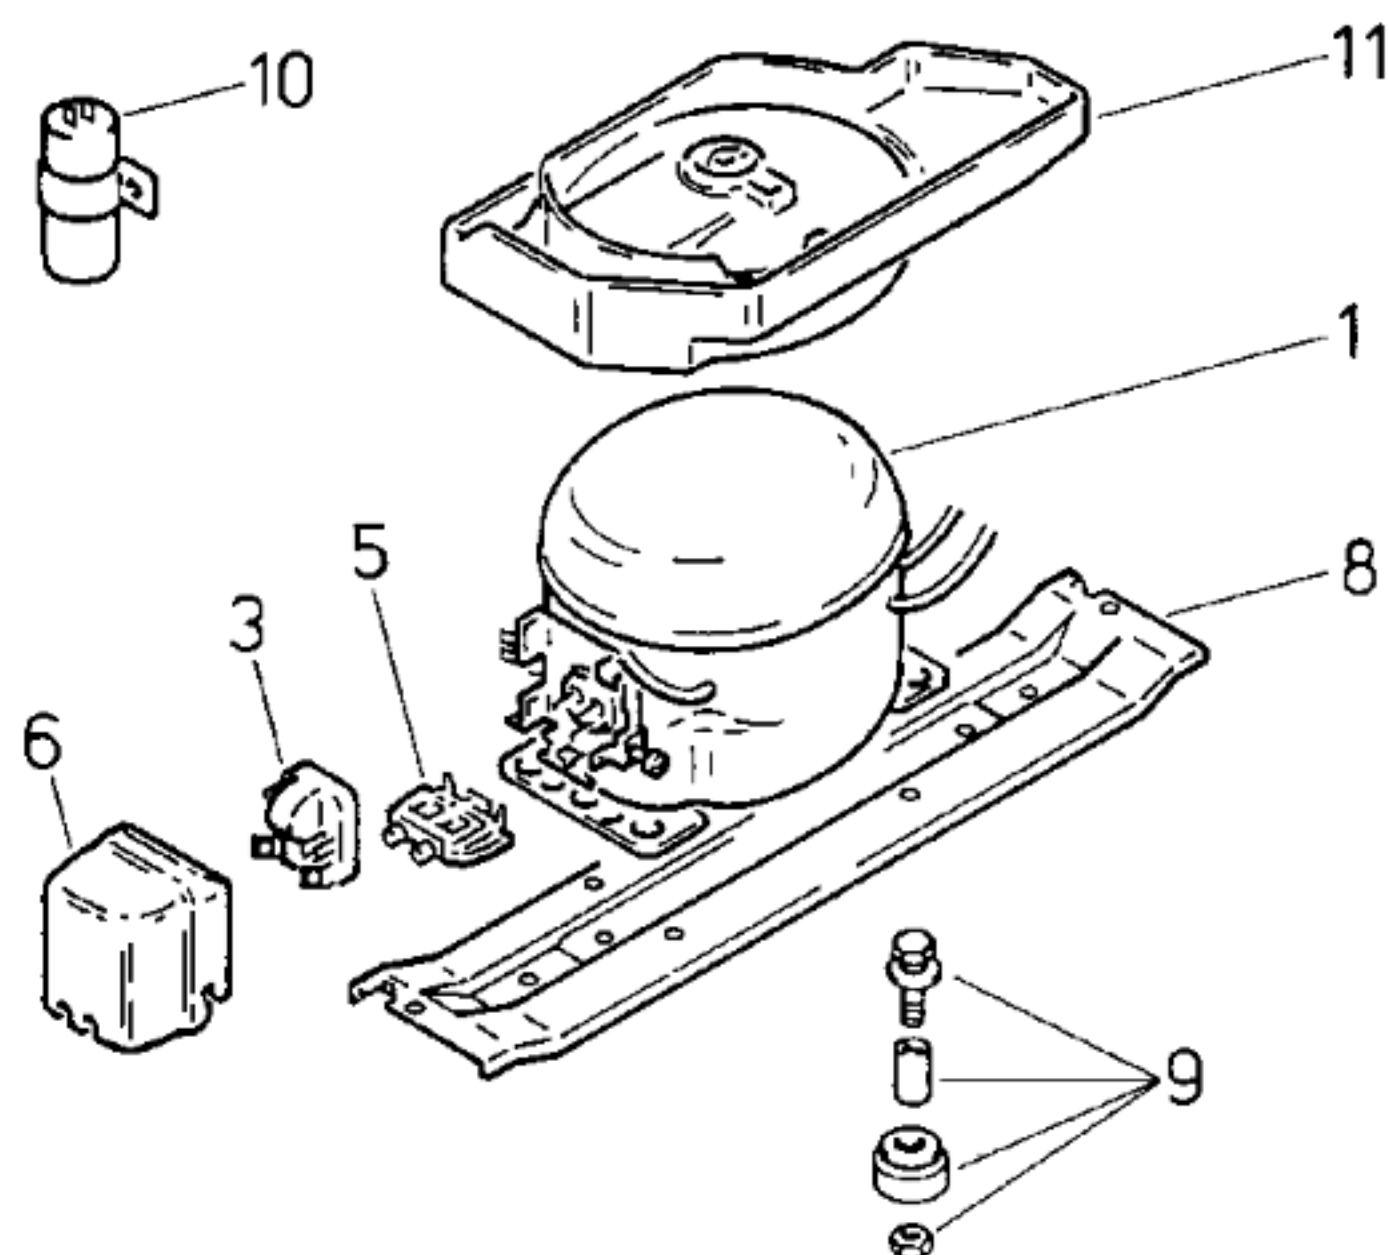

Ident – Nummern – Konstante
3740

Pos.			
	Danfoss		
	TL 3 A		
1	14 0080		
2			
3	05 9191		
4			
5	02 7310		
6	05 1413		
7			
8			
9	05 0166		
10			
11	08 4744		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss			
Typ/Type		TL3A			
Förderleistung/Delivery/Débit		l/h	563		
Anlaufstrom/Starting current/Cour de démarrage		A	7,2		
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	31,4		
		Hi/aux Ω	15,5		
Temp.-Regler/Thermostat		WHF			
Typ/Type		TF 57			
Reglerstellung/Position		warm kalt			
Schaltwerte/Switching values/		+4 +4			
Valeurs de commutation		-16 -28,5			
		(„abtauen“ od.) „alarm“			
Füllmenge/Fill.quantity/Charge		R12	g	80	
Anschlußwert/Conn.load/Puiss. connectée		W	110		
Heizung/Heater/Chauffage					
Widerstand/Resistance/Résistance		Ω			
Leistung/Power/Puissance		W			
Ventilator/Blower/Ventilateur					
Widerstand/Resistance/Résistance		Ω			
Schaltuhr/Timer/Minuterie de contact					
Widerstand/Resistance/Résistance		Ω			
Magnetventil/Magnetic valve/Electrovanne					
Widerstand/Resistance/Résistance		Ω			
Spannung/Voltage/Tension		V			