 


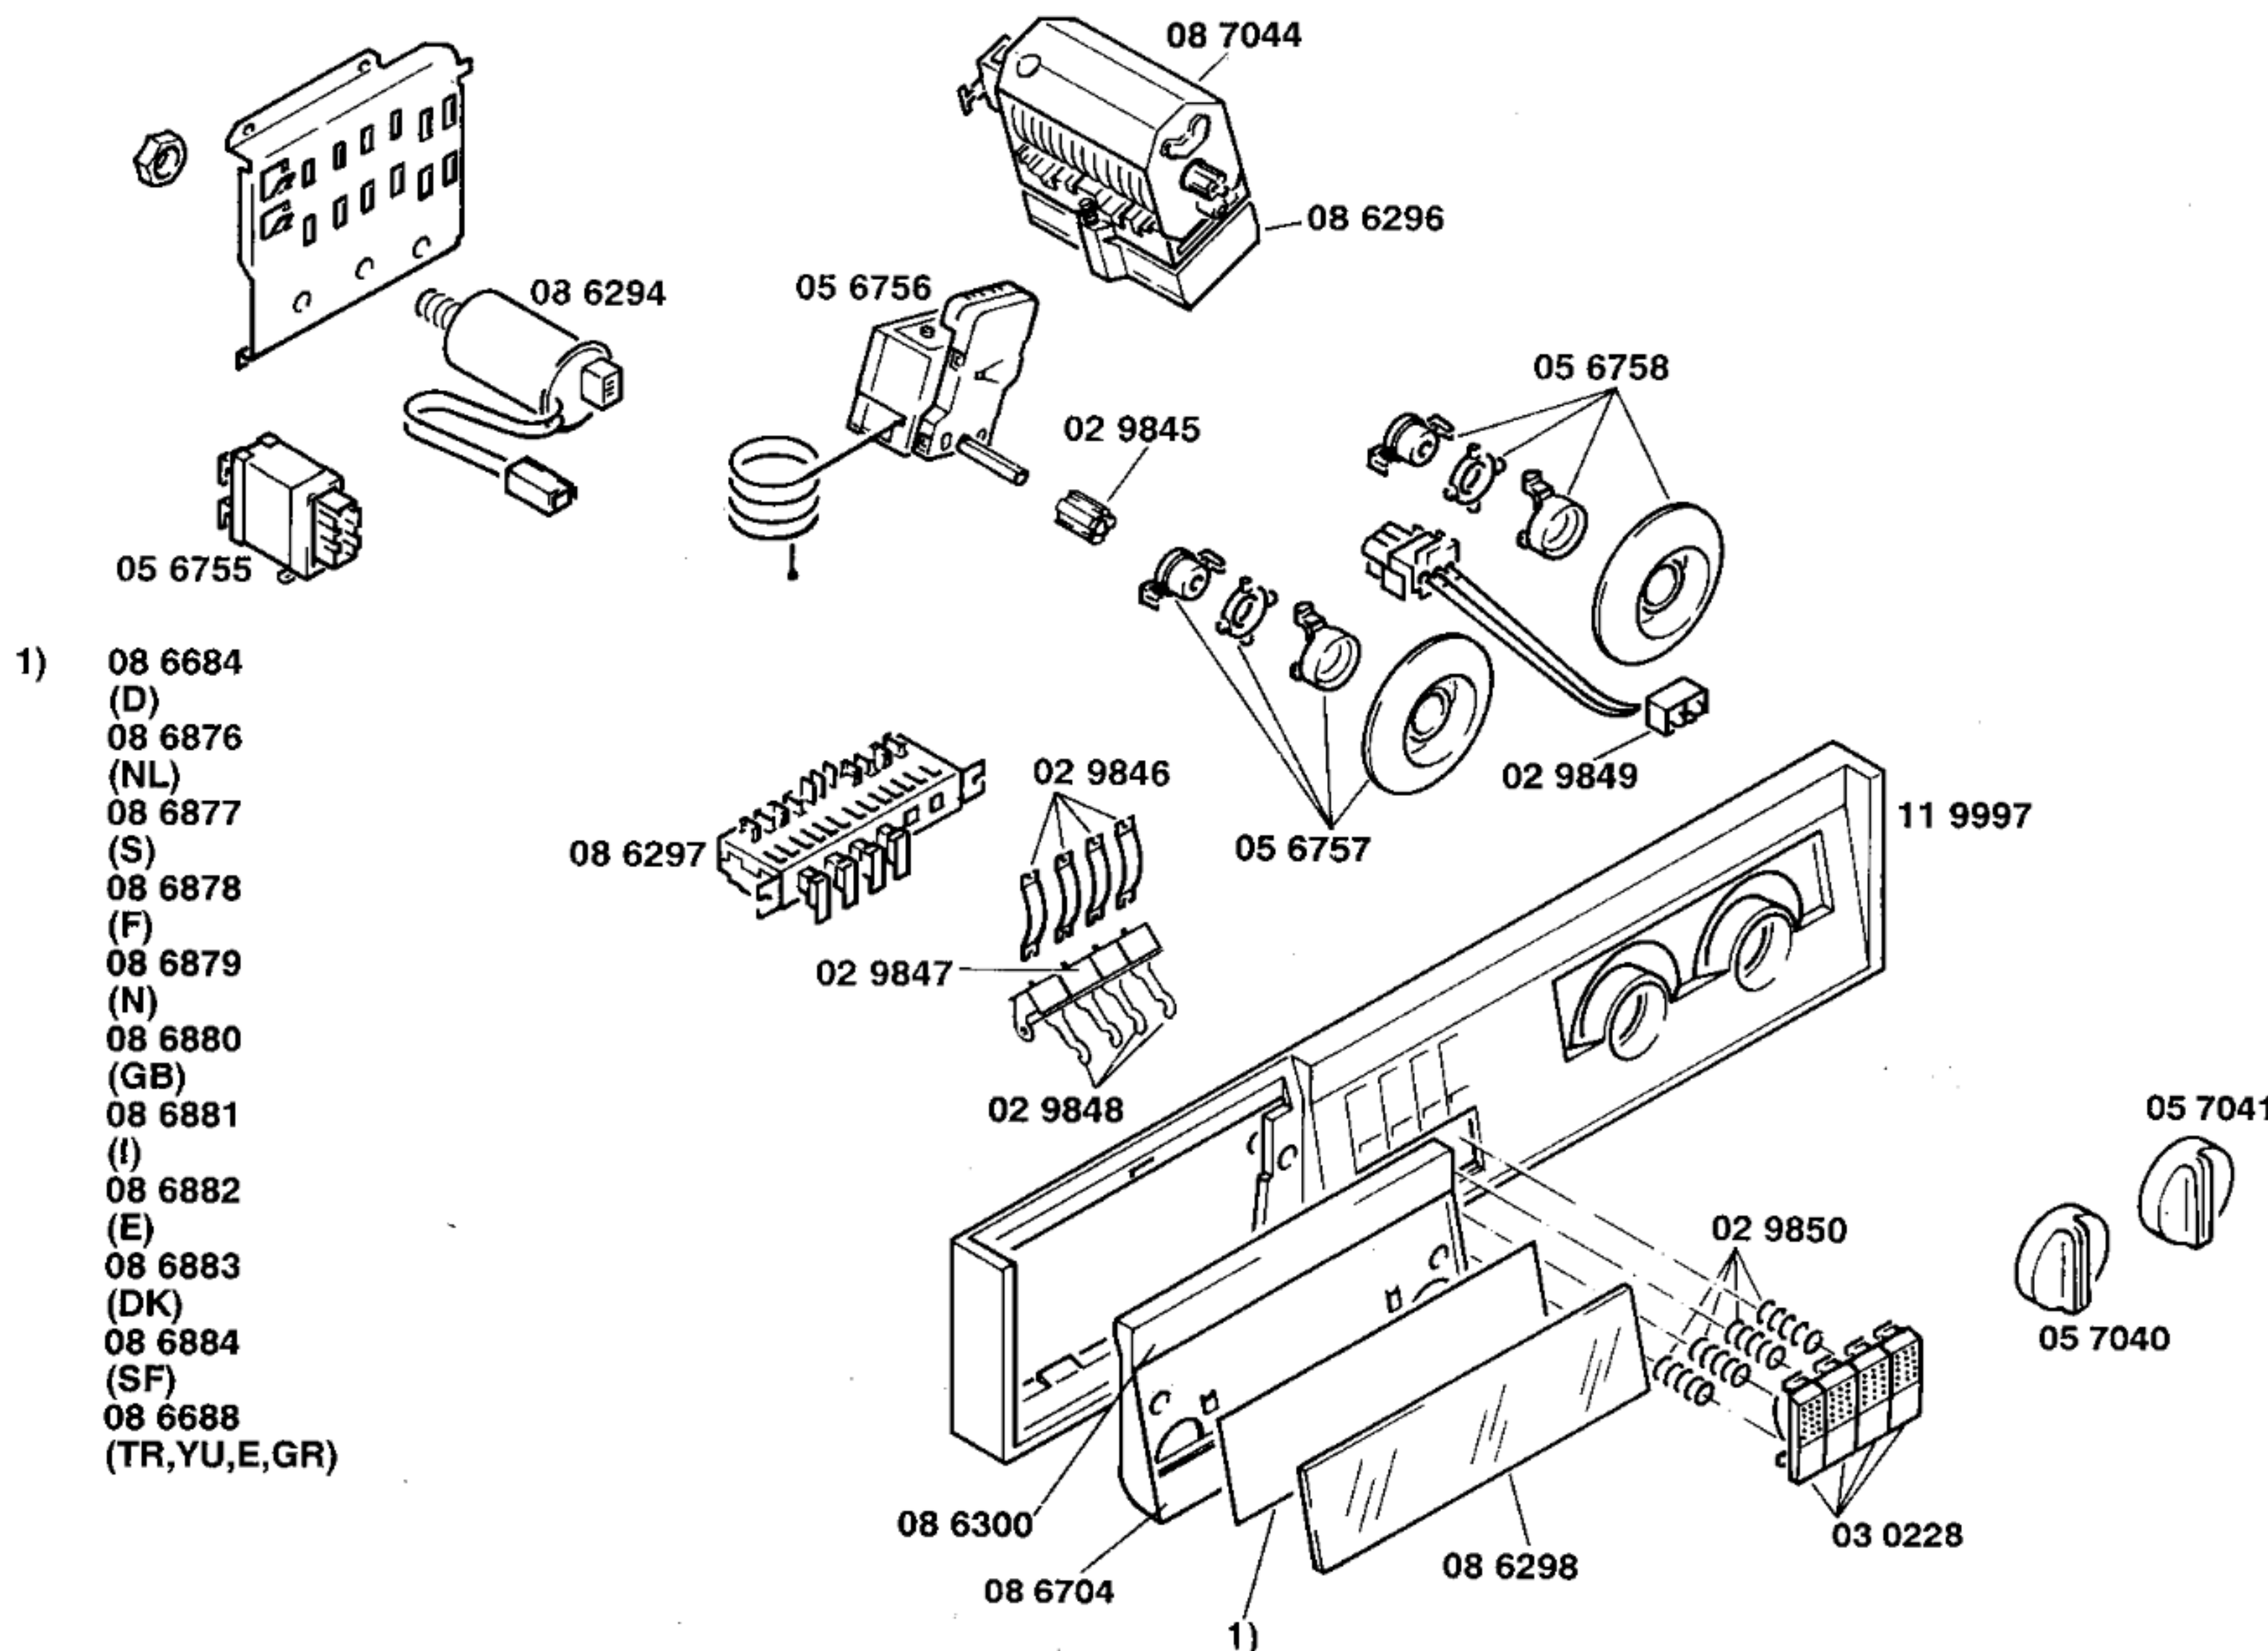

Gebrauchsanweisungen:

 
51 3549
(D,I,S,N,SF)
51 3550
(S,DK)
51 3551
(NL,F,E,GB)

 
Programmtabellen:

51 3552
(D)
51 3553
(I,S,N,SF)
51 3554
(S,DK)
51 3555
(NL,F,E,GB)

Aufstellanweisungen:

51 3556
(D,I,S,N,SF)
51 3557
(S,DK)
51 3558
(NL,F,E,GB)

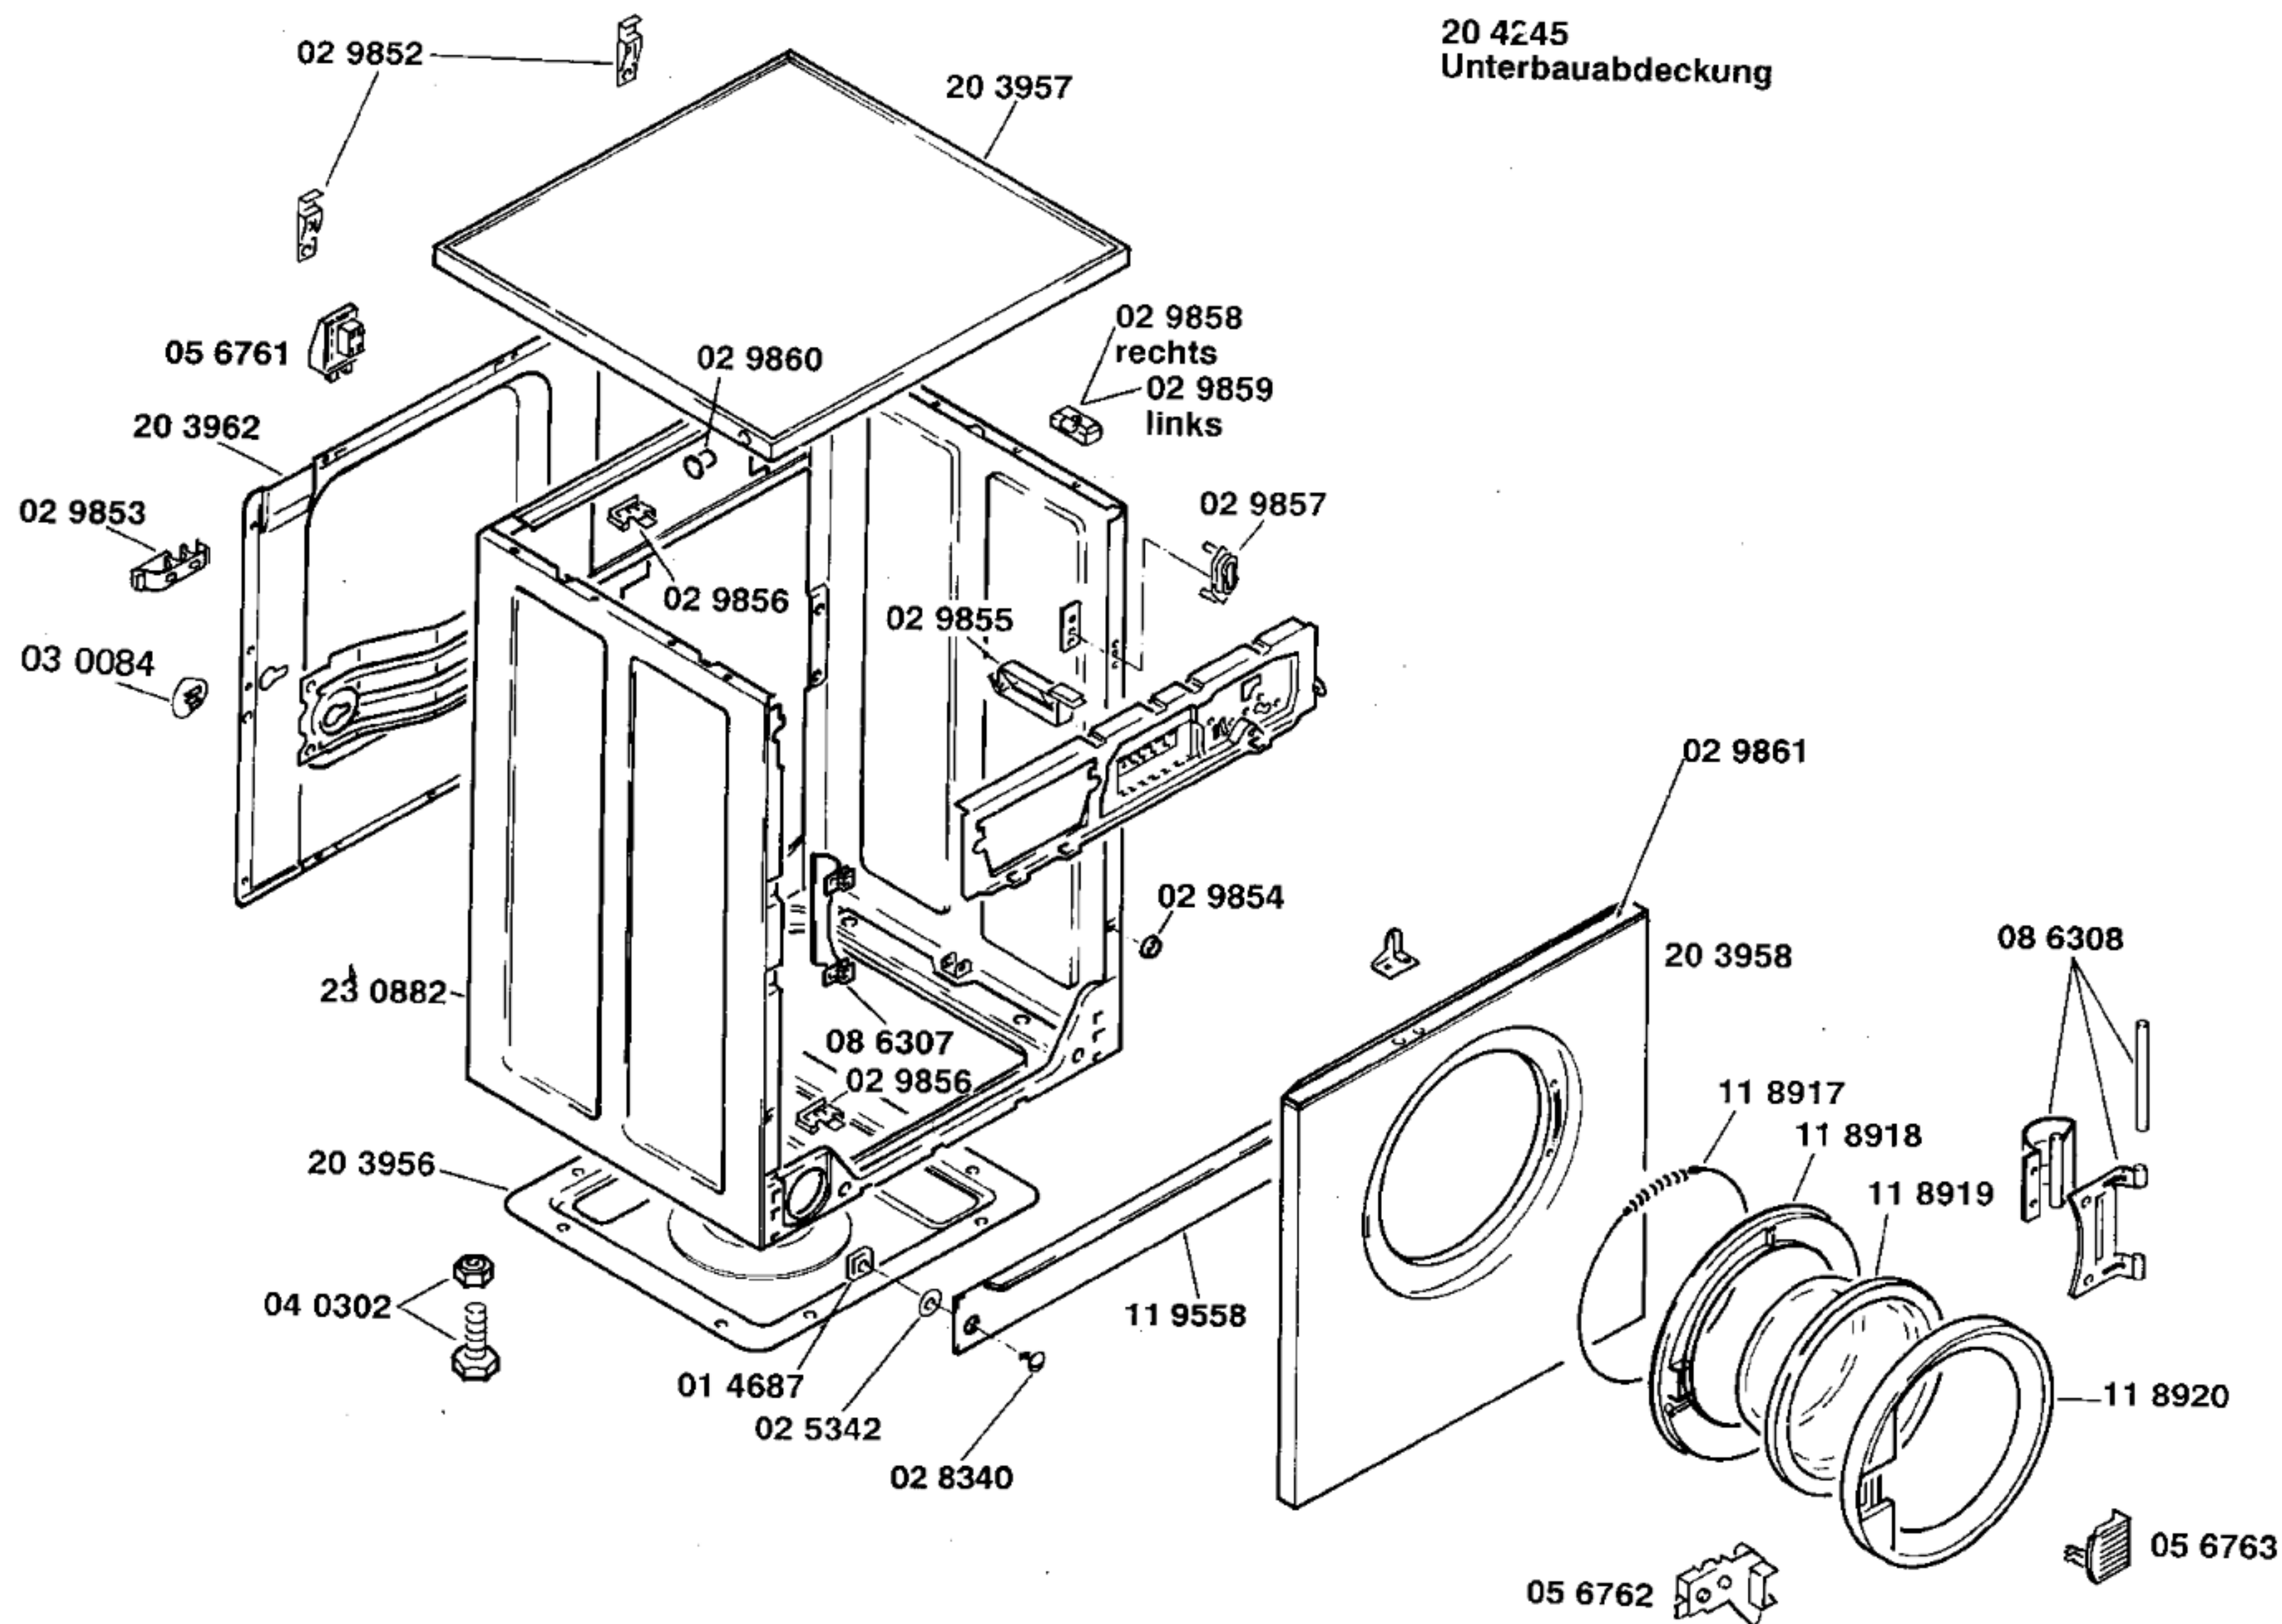

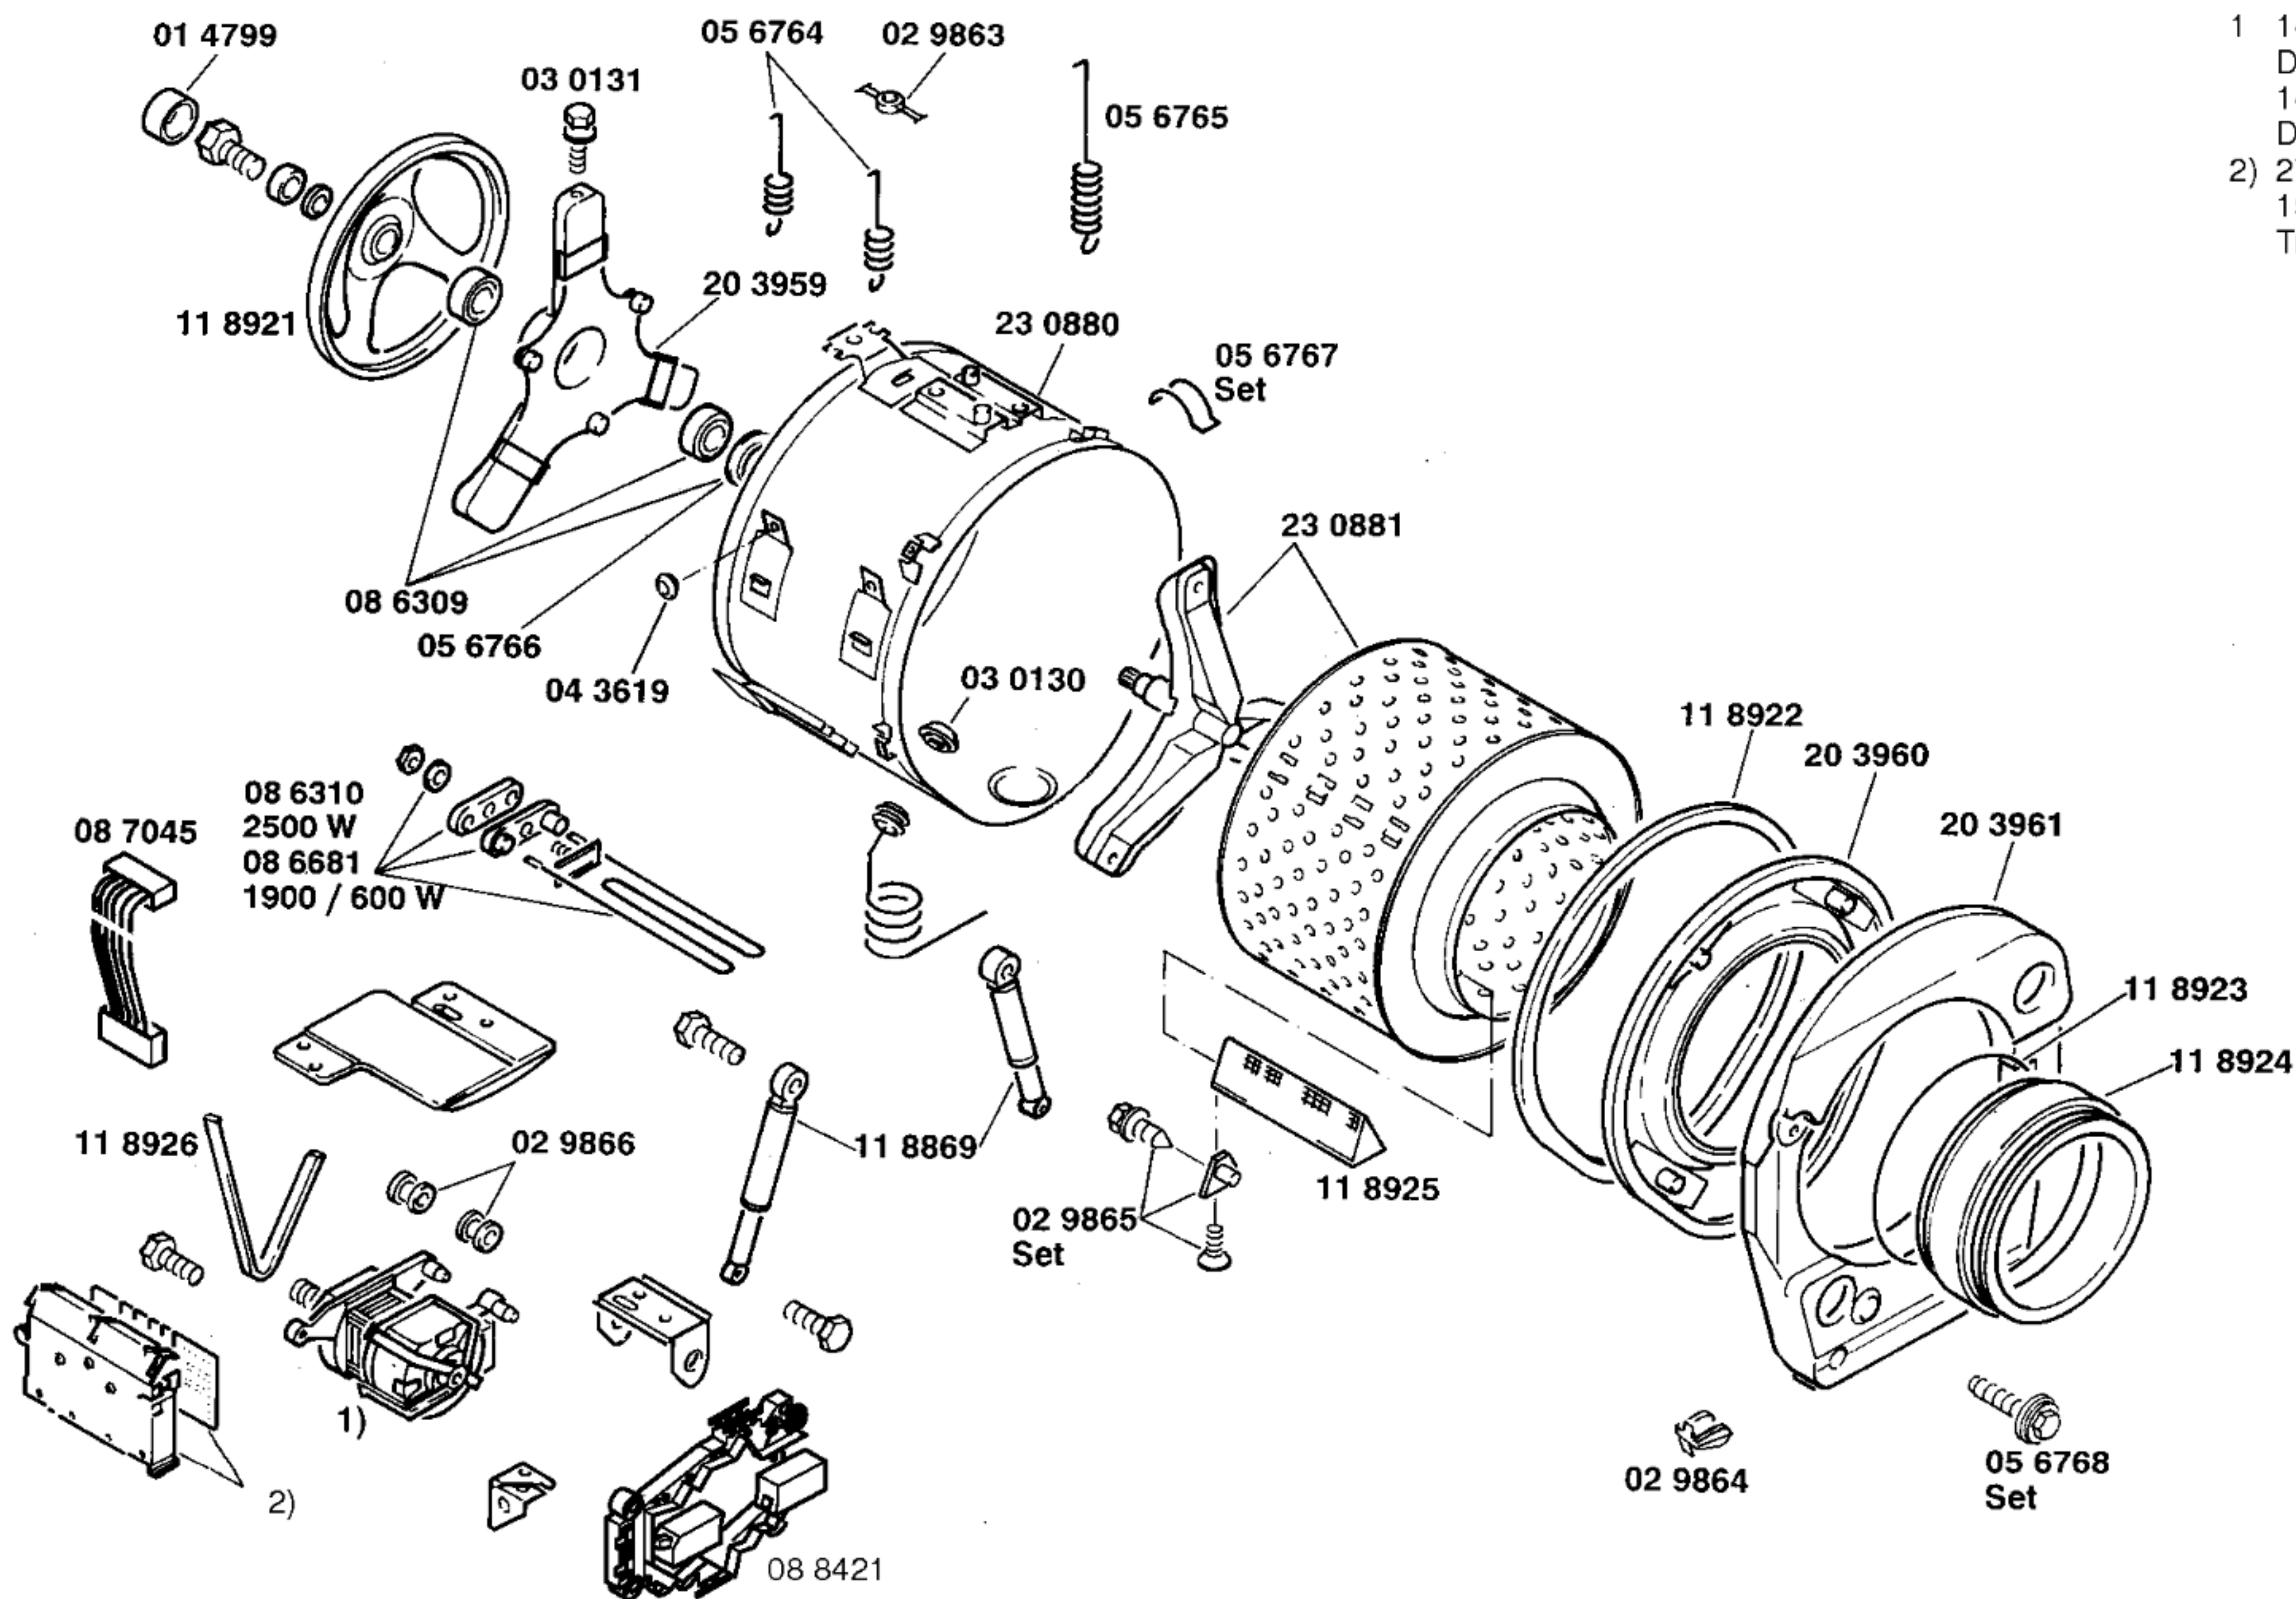

- 1 14 0469
DS1,FG1,SI1
14 0552
DS2,FG2,SI2
- 2) 27 0444
15 5272
Triac-Motorleistung

