



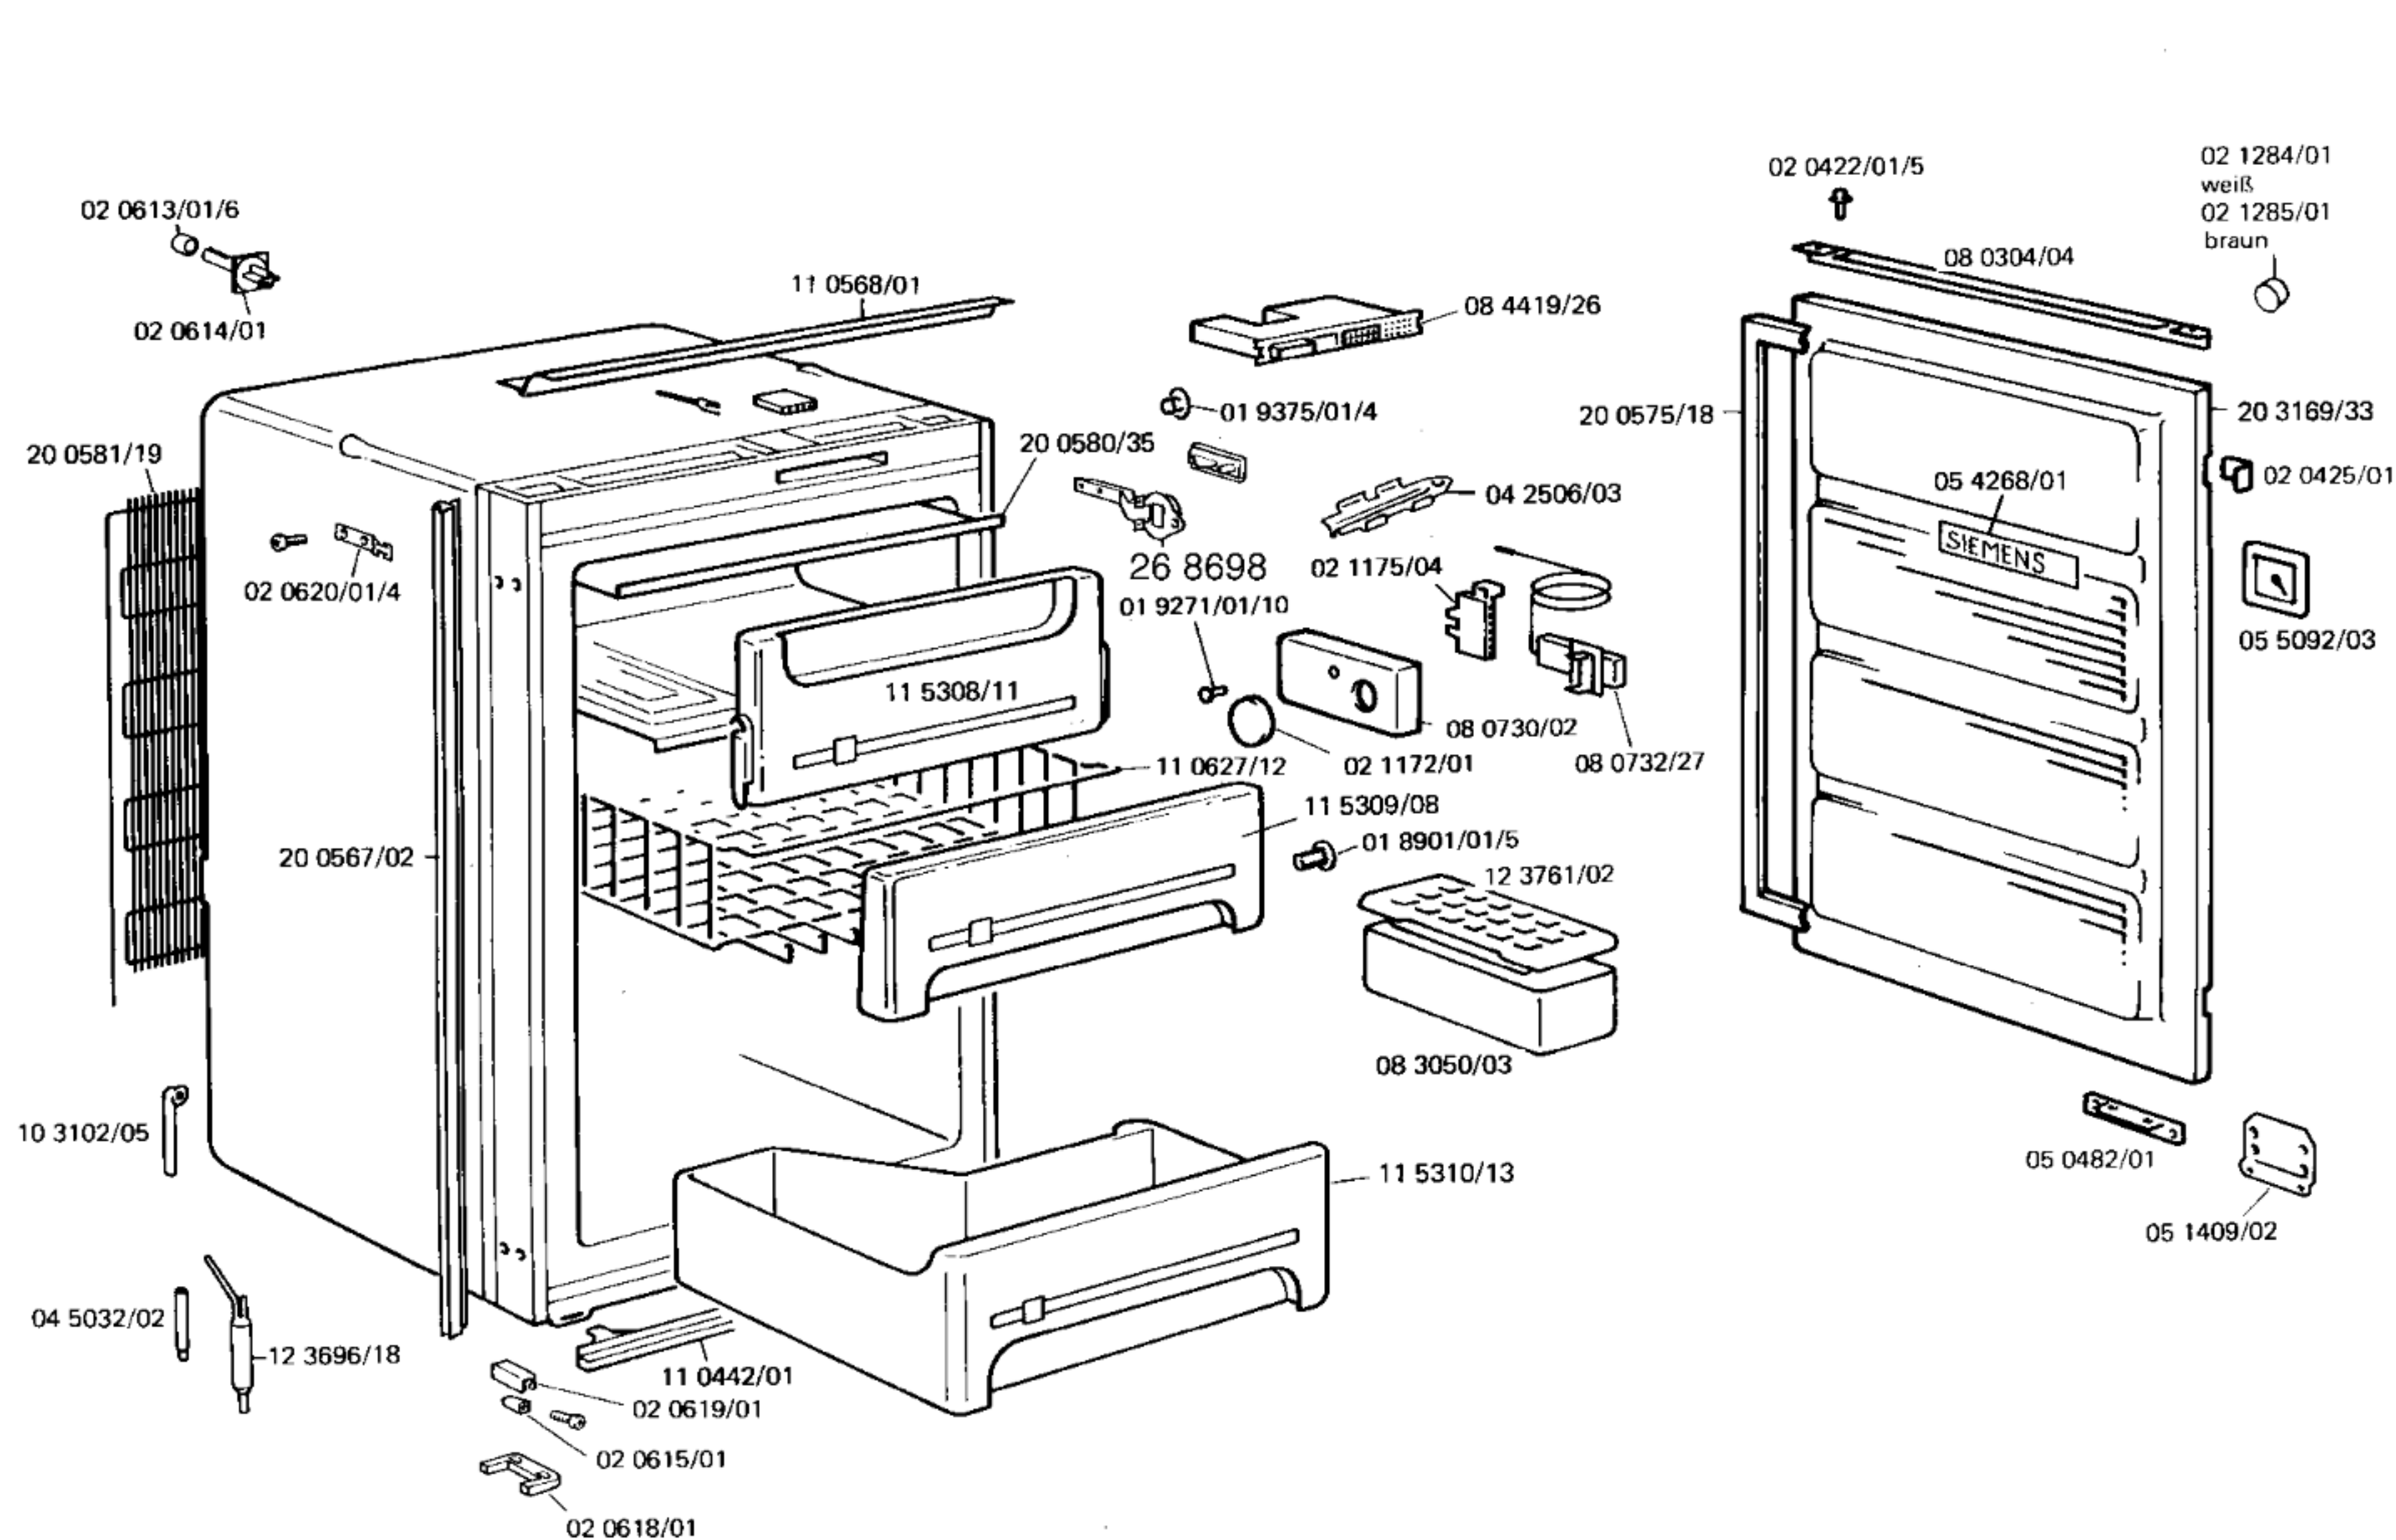

51 0384/00
D1,CH1
Aufstellanleitung
(D,GB,F,I,NL,DK,N,S,SF,E)

51 1079/00
D1,CH1
Gebrauchsanweisung
(D,GB,F,I,NL,DK,N,S,SF,E)

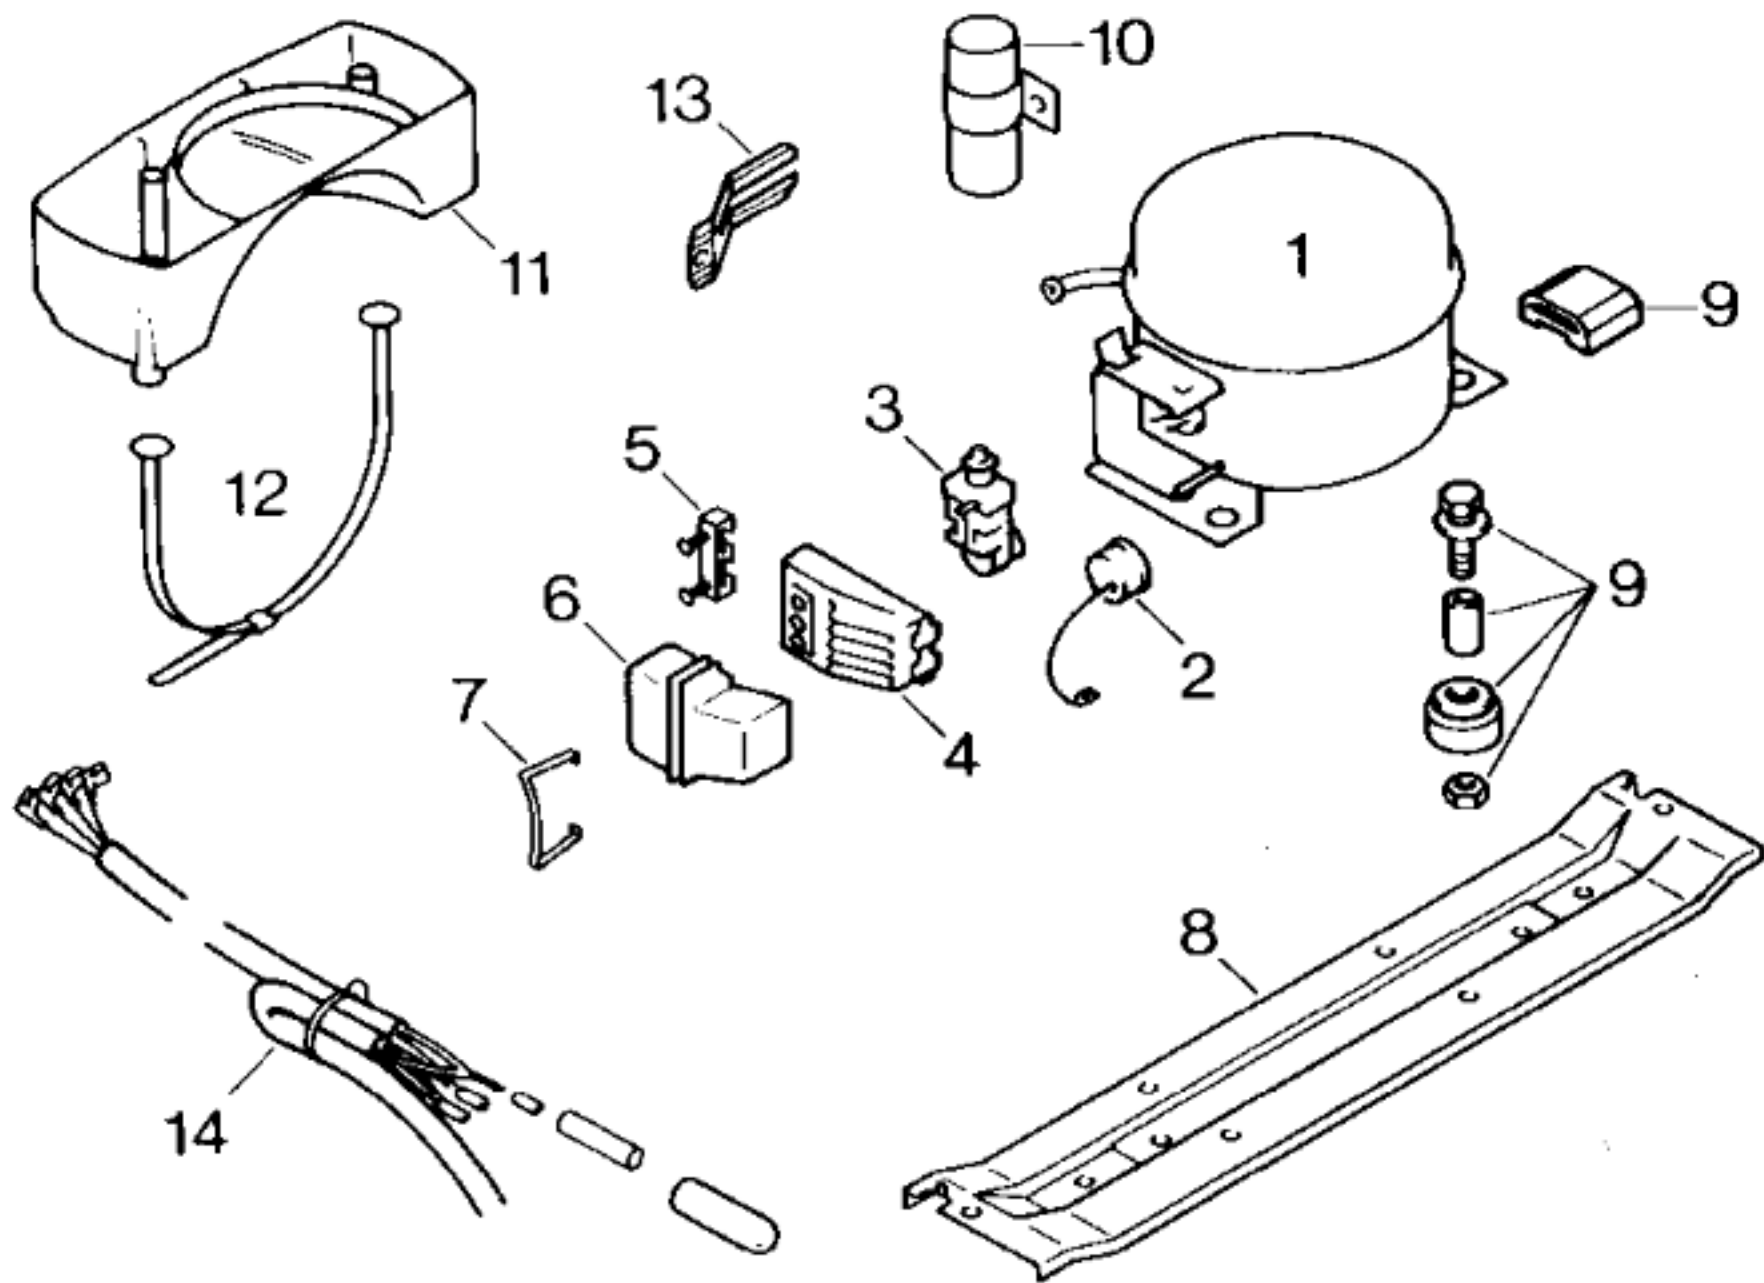

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss				
Typ/Type		TL 4 A				
Förderleistung/Delivery/Débit		V 702				
Anlaufstrom/Starting current/Cour. de démarrage		A 7,8				
Widerstand/Resistance/Résistance		Ha/main/prin. Ω 23,8				
		Hi/aux Ω 19,7				
Temp.-Regler/Thermostat		M + J				
Typ/Type		TF 57 SF				
Reglerstellung/Position		kalt warm				
Schaltwerte/Switching values/		- 28 - 19				
Valeurs de commutation		- 34 - 26				
(„abtauen“ od.)		- 20 - 15				
Füllmenge/Fill.quantity/Charge		R12	g	90		
Anschlußwert/Conn.load/Puiss. connectée			W	110		
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance			Ω			
Leistung/Power/Puissance			W			
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance			Ω			
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance			Ω			
Spannung/Voltage/Tension			V			

Pos.				
	Danfoss			
1	13 1064/45			
2				
3	02 0108/27			
4				
5				
6	05 1413/05			
7				
8	11 0437/04			
9	05 0166/05			
10				
11				
12				
13				
14				