



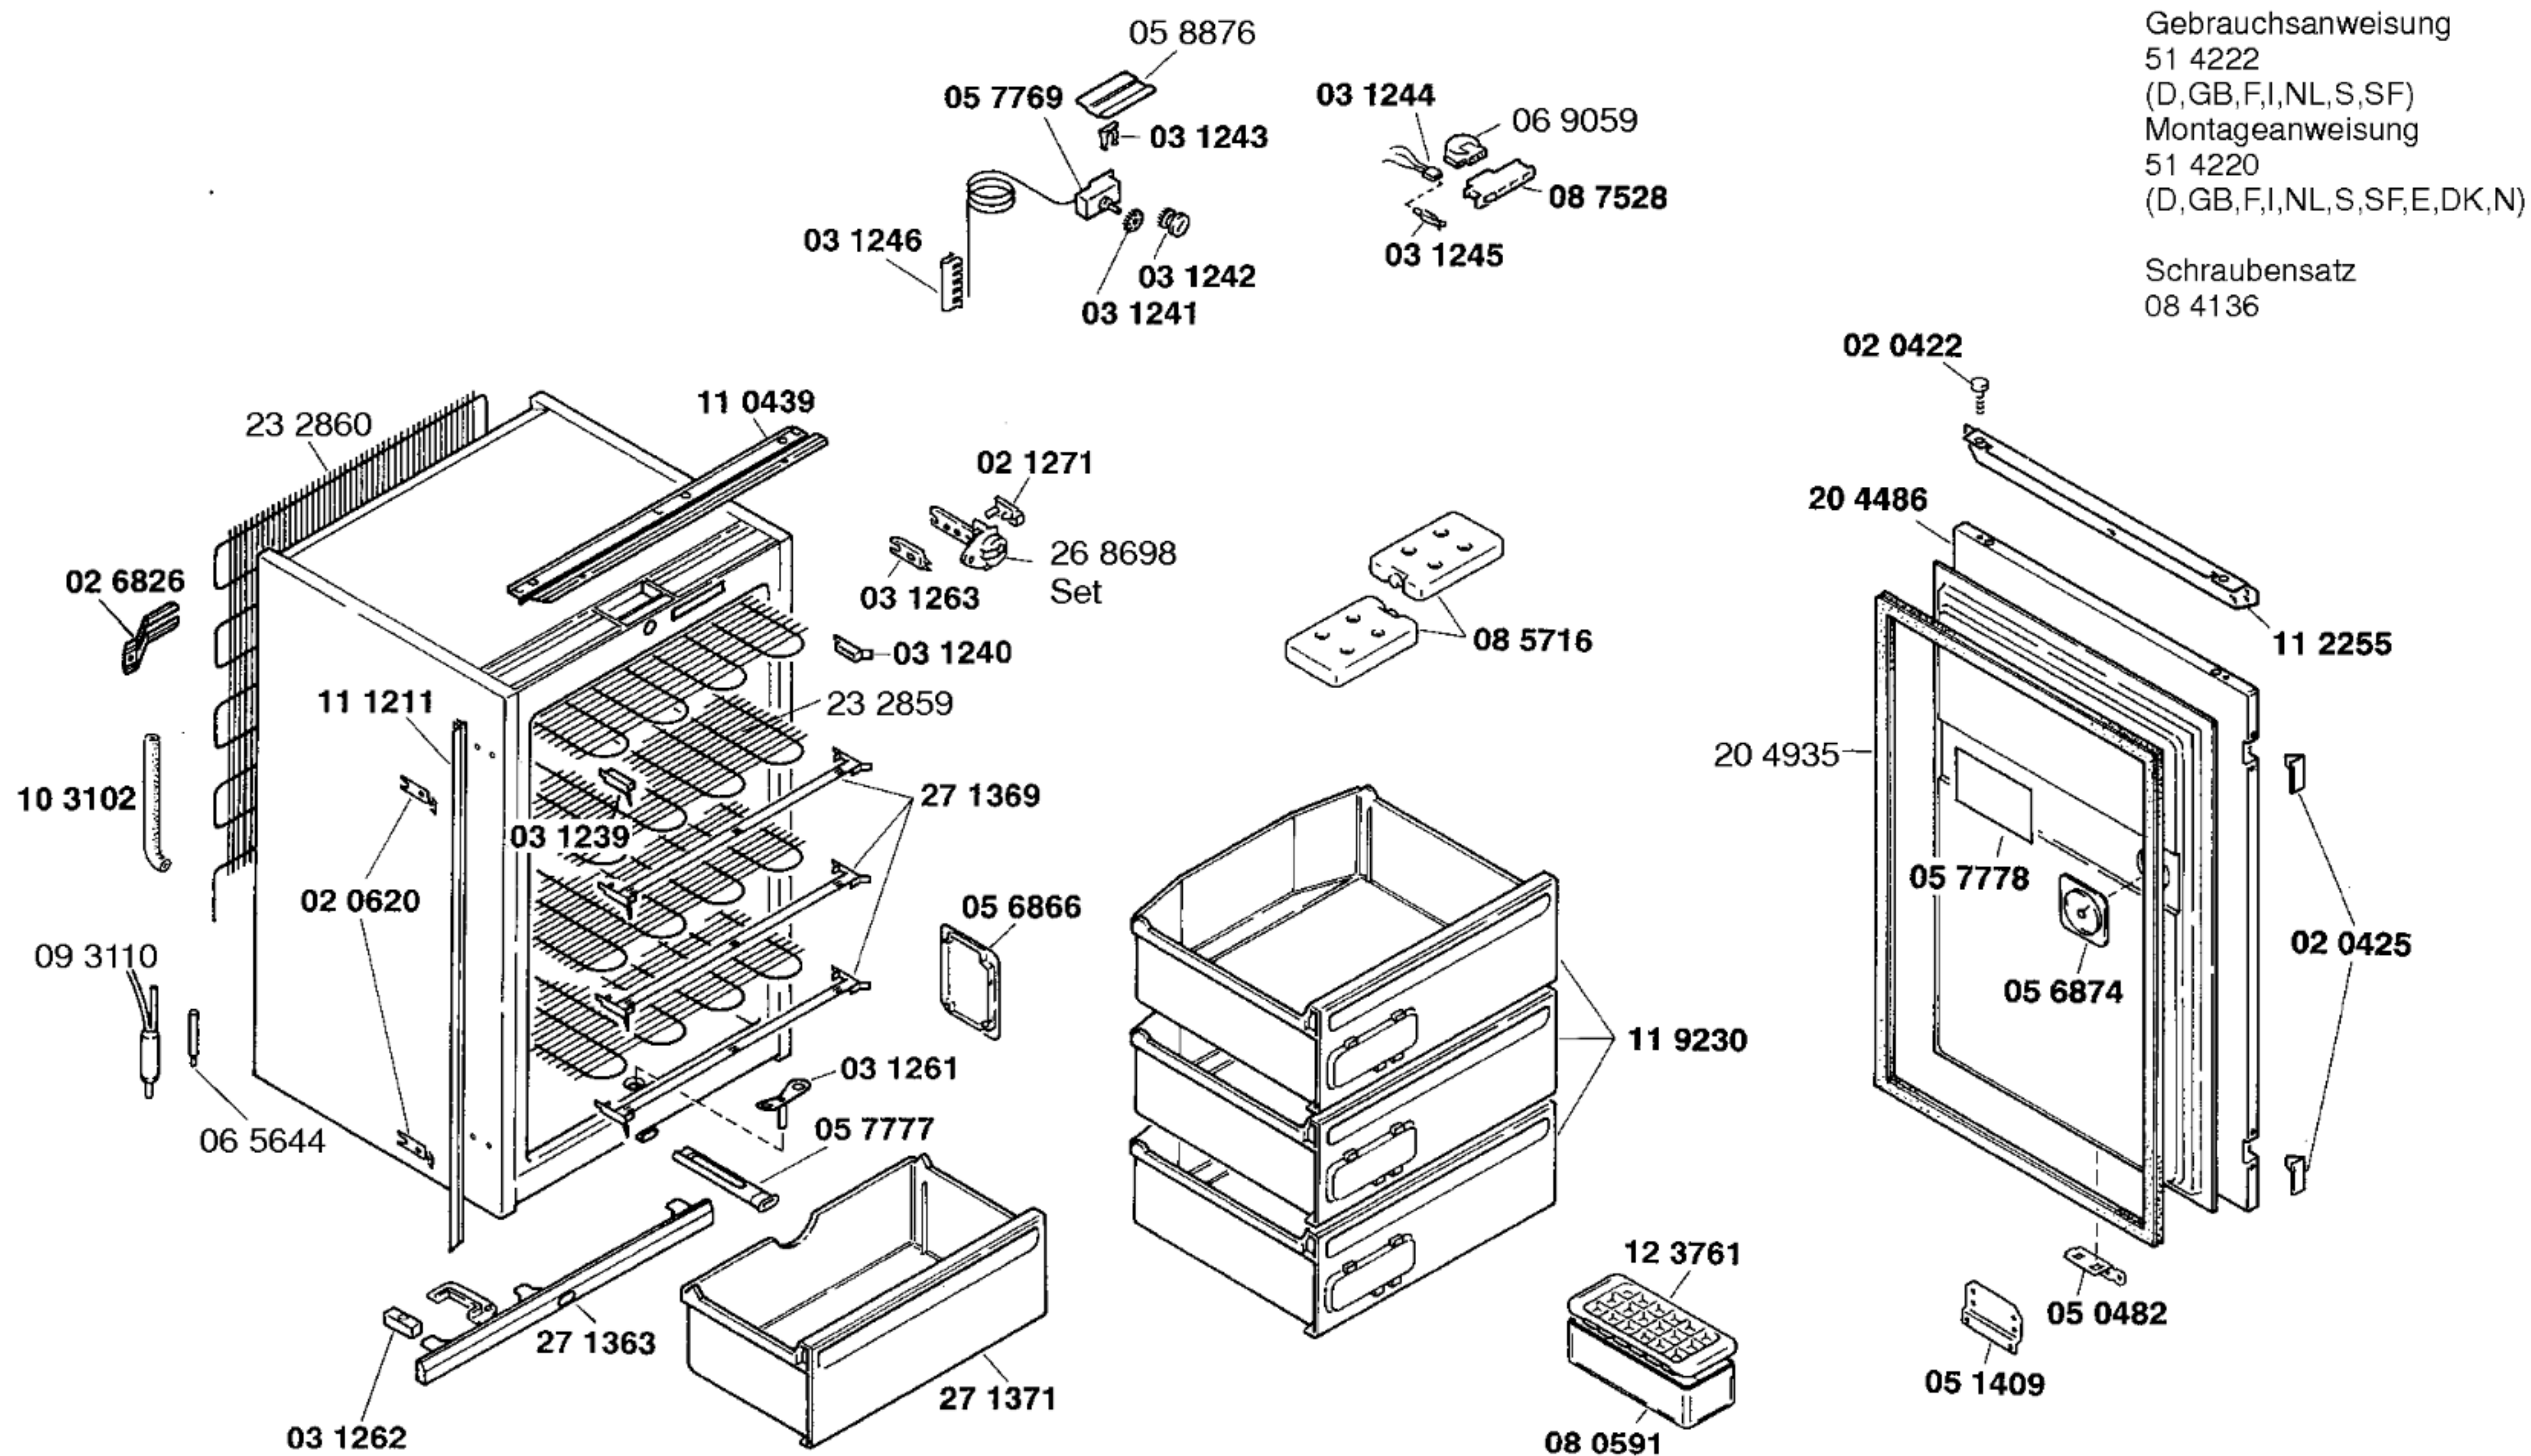

Gebrauchsanweisung
51 4222
(D,GB,F,I,NL,S,SF)
Montageanweisung
51 4220
(D,GB,F,I,NL,S,SF,E,DK,N)

Schraubensatz
08 4136

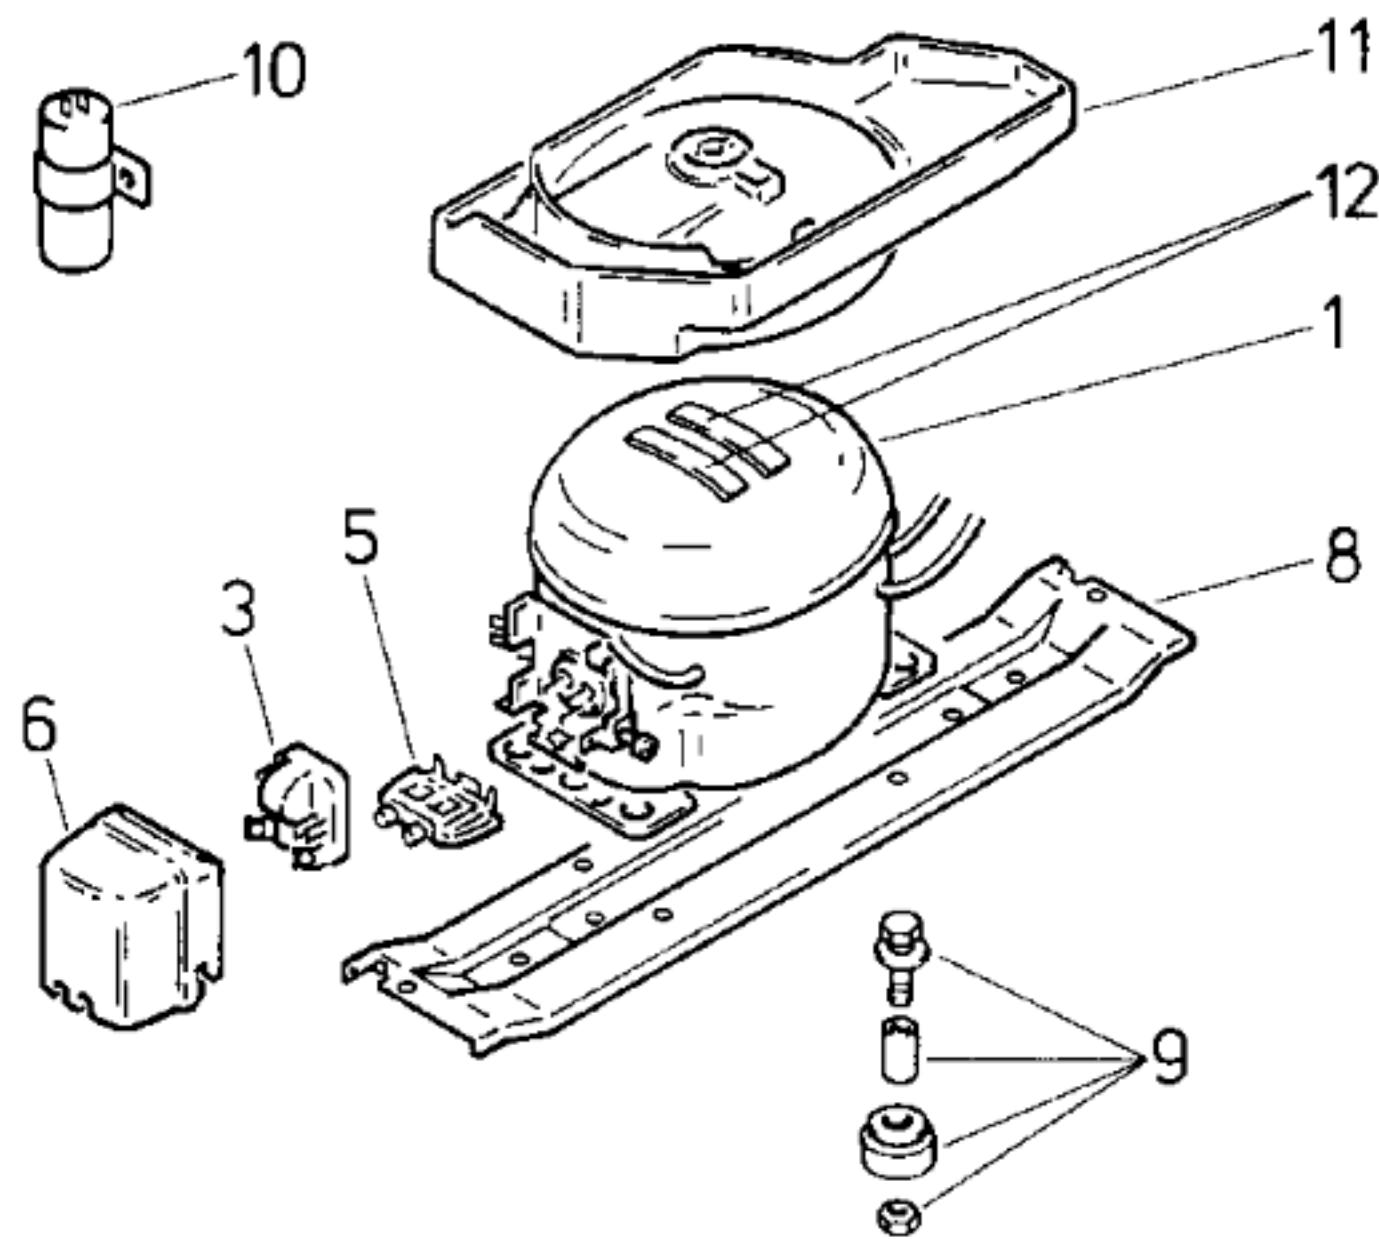

Pos.	Danfoss		
	TLES 5 F		
1	14 1242		
2			
3	05 9191		
4			
5	02 7310		
6	15 1072		
7			
8	27 1375		
9	05 0166		
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLES 5 F		
Förderleistung/Delivery/Débit		l/h	914	
Anlaufstrom/Starting current/Cour de démarrage		A	4,0	
Widerstand/Resistance/Résistance		Ha/main/prin. Ω	18,9	
		Hi/aux Ω	15,3	
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF57SF2		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/		„ein“ $^{\circ}\text{C}$	-25	-17
Valeurs de commutation		„aus“	-33	-23
		(„abtauen“ od.) „alarm“	-19,5	-13
Füllmenge/Fill.quantity/Charge		R134a	g	110
Anschlußwert/Conn.load/Puiss. connectée		W	120	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		