 
 


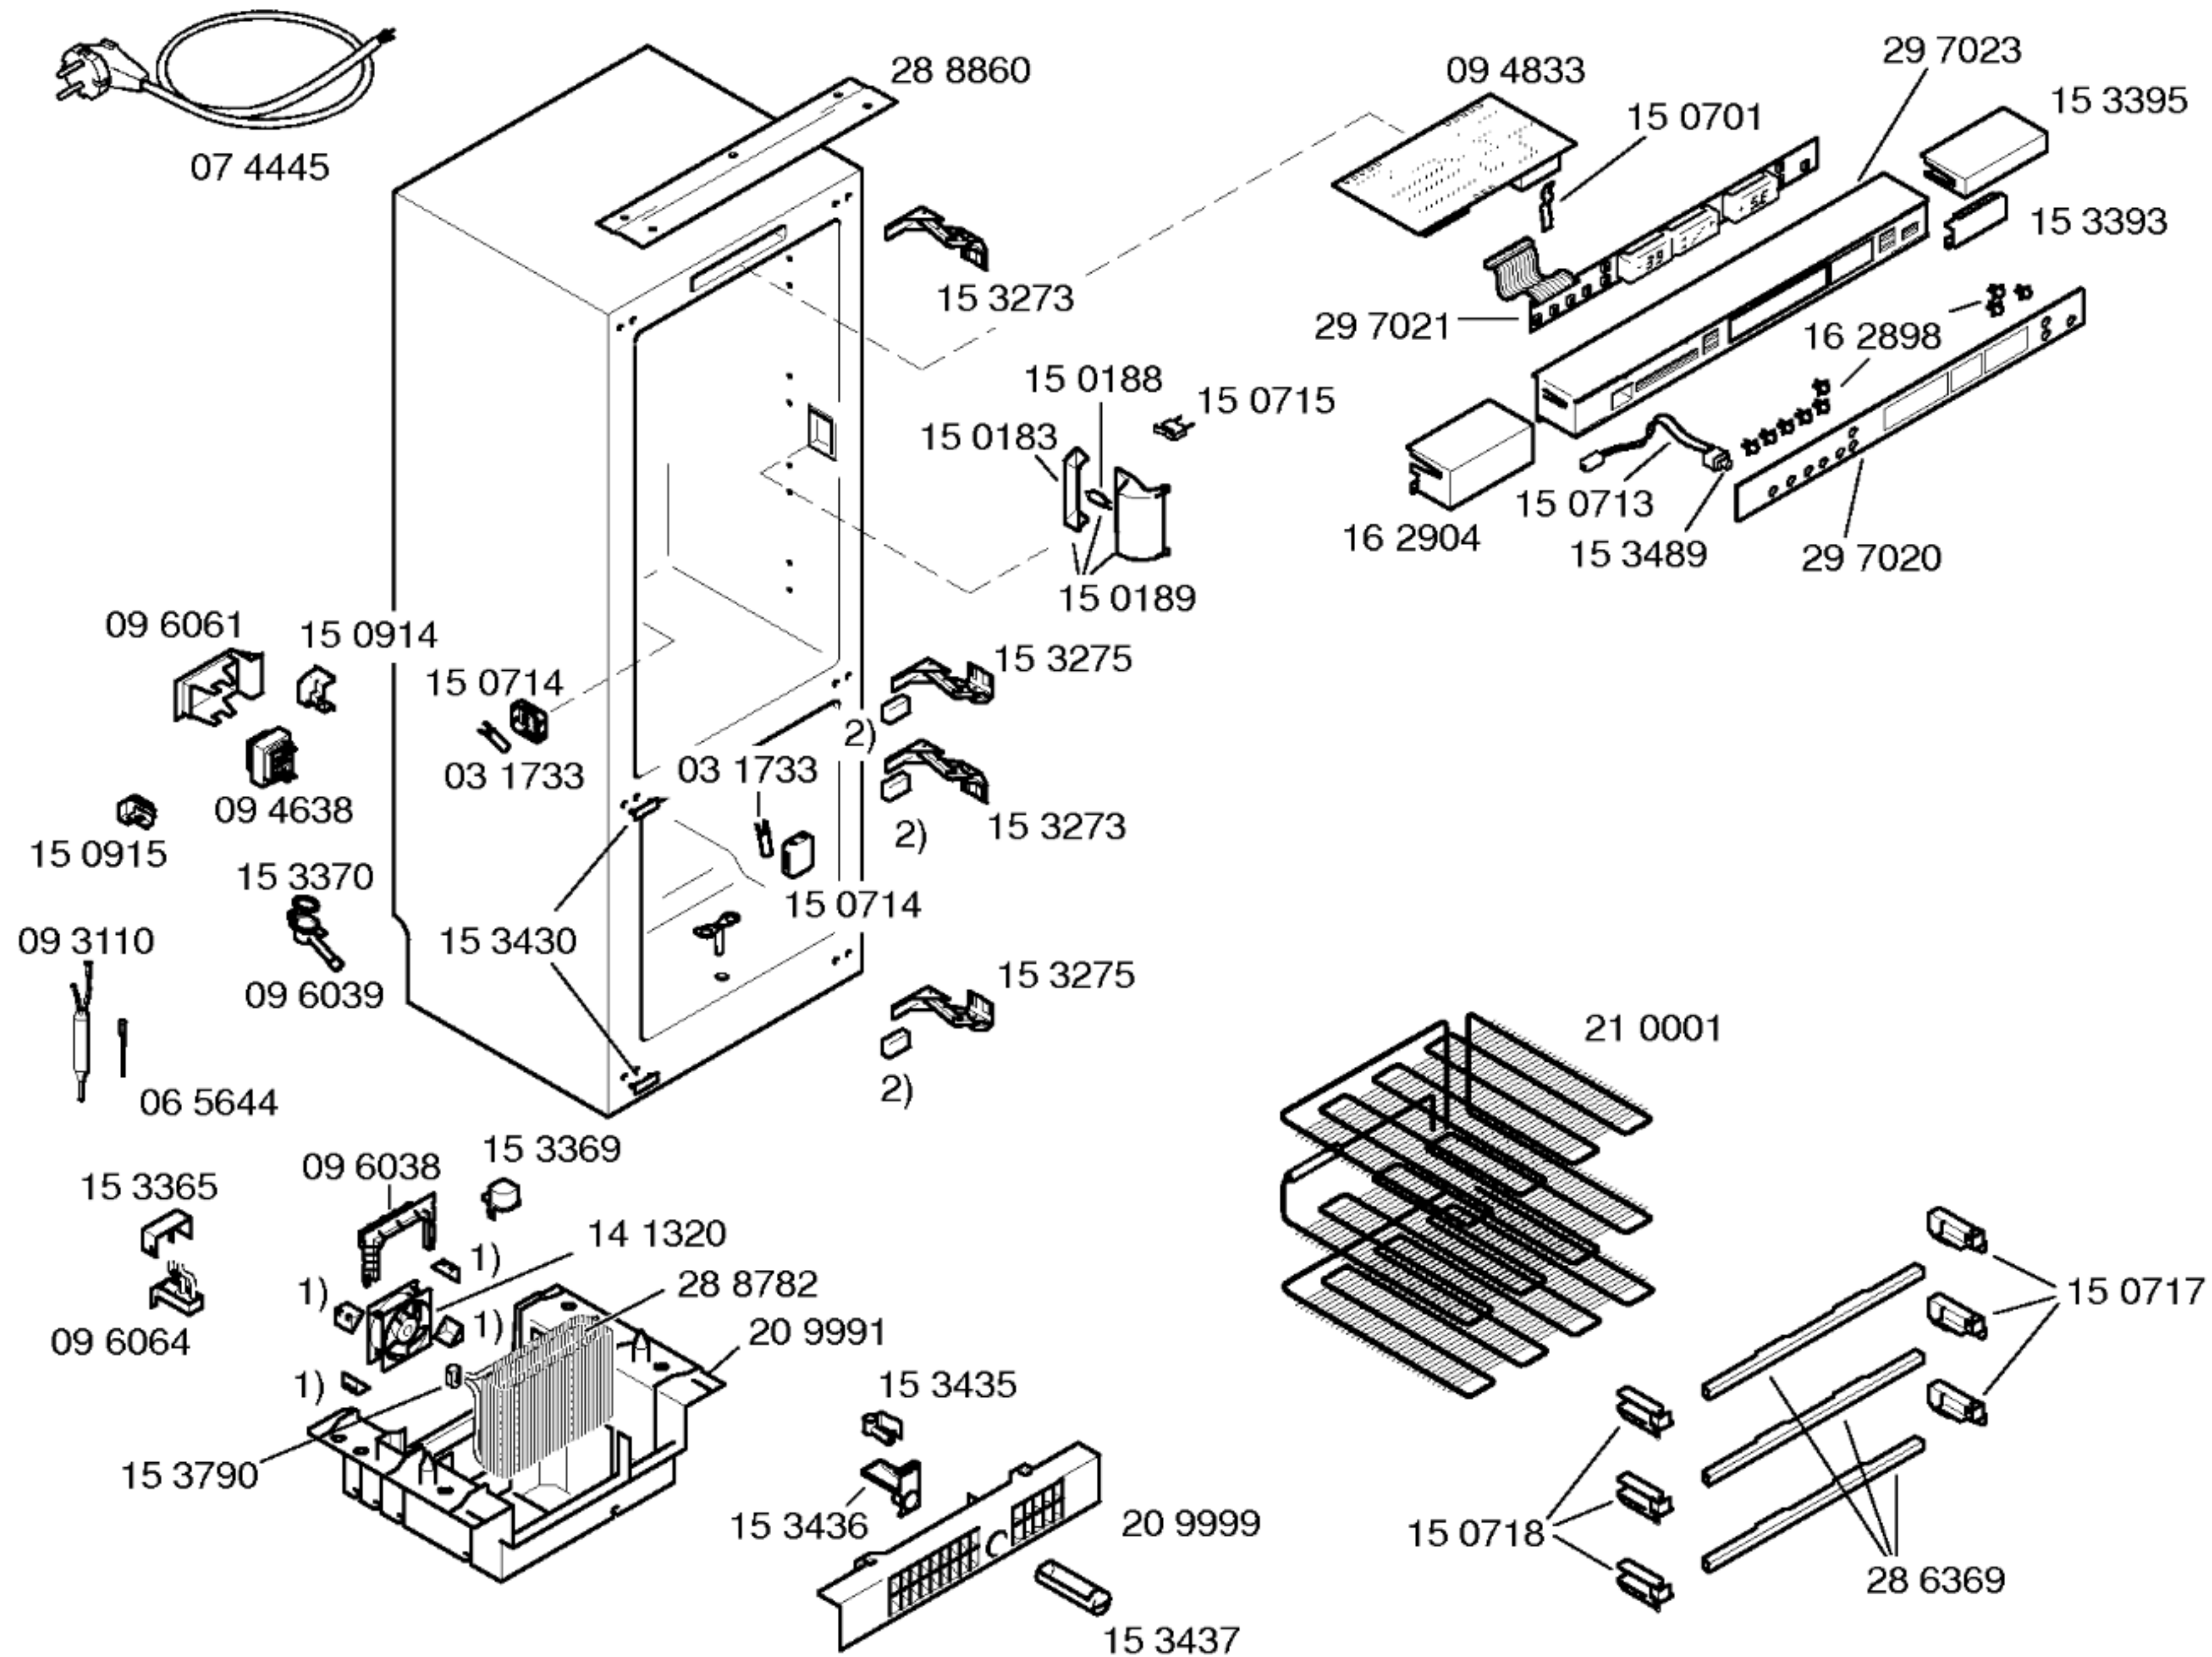 


Gebrauchsanweisung
51 9994
Montageanleitung
51 7892

Befestigungssatz
09 6065

- 1) 15 3368
- 2) 15 3397

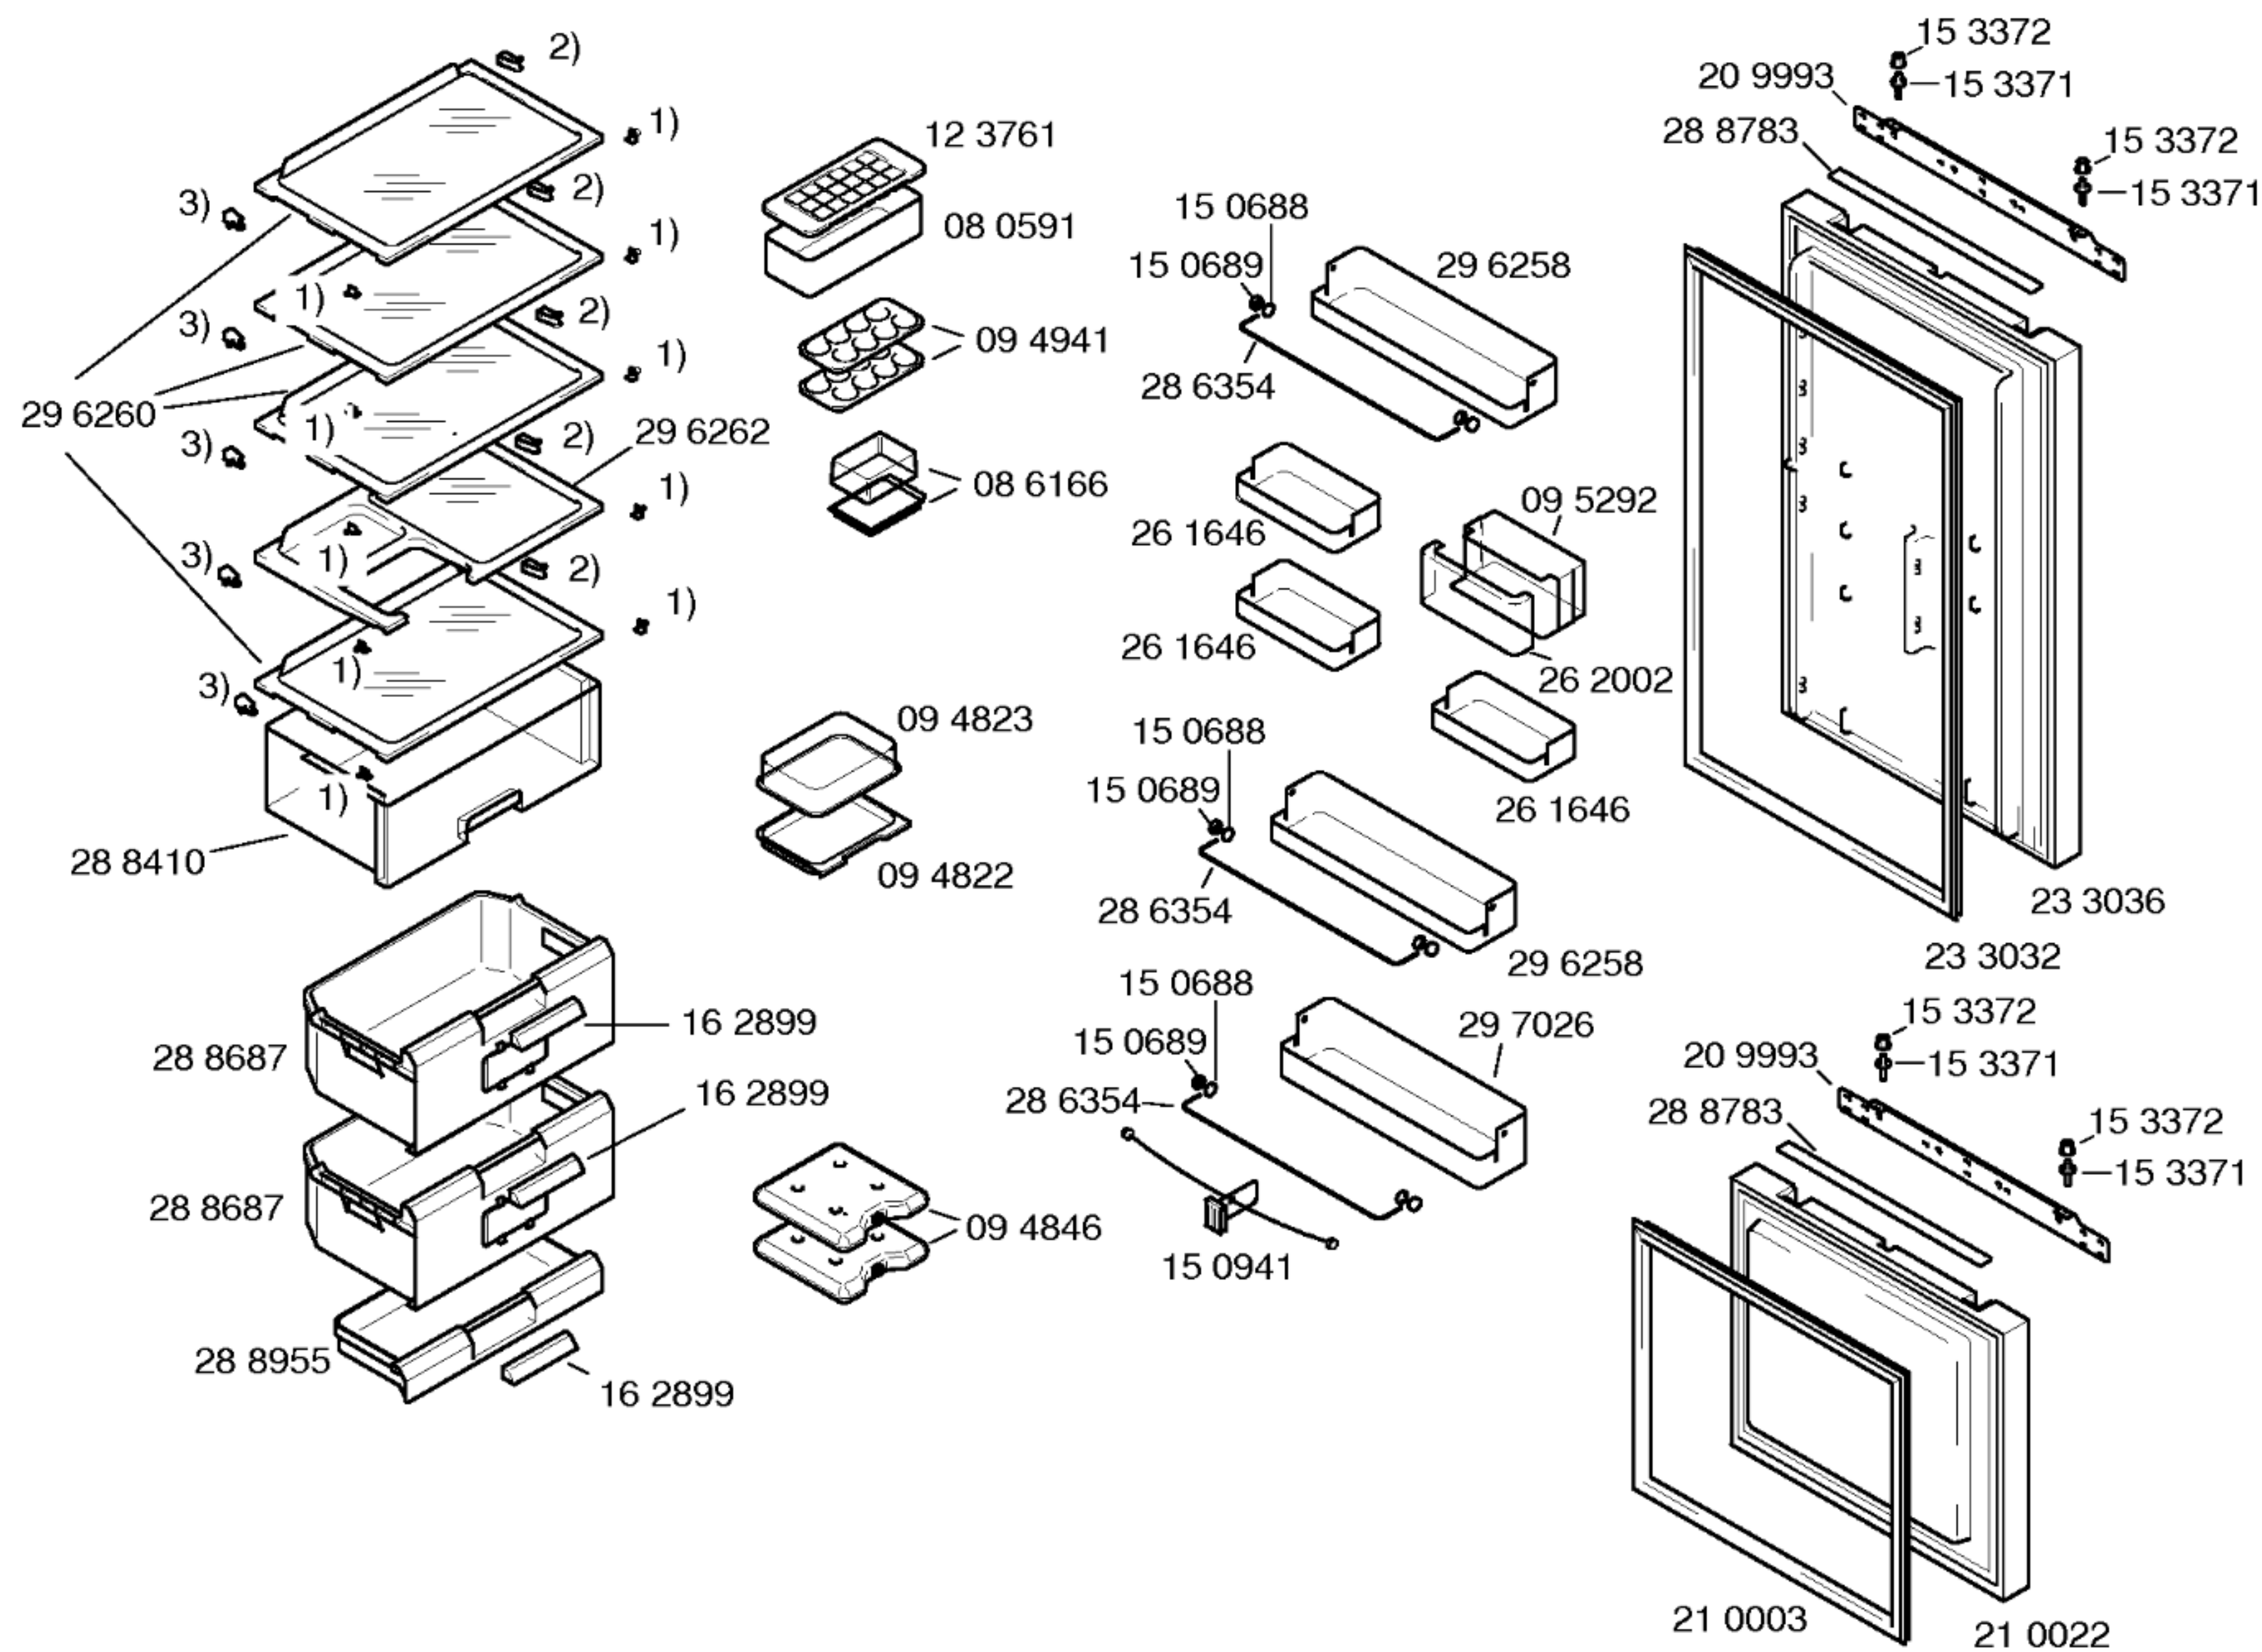

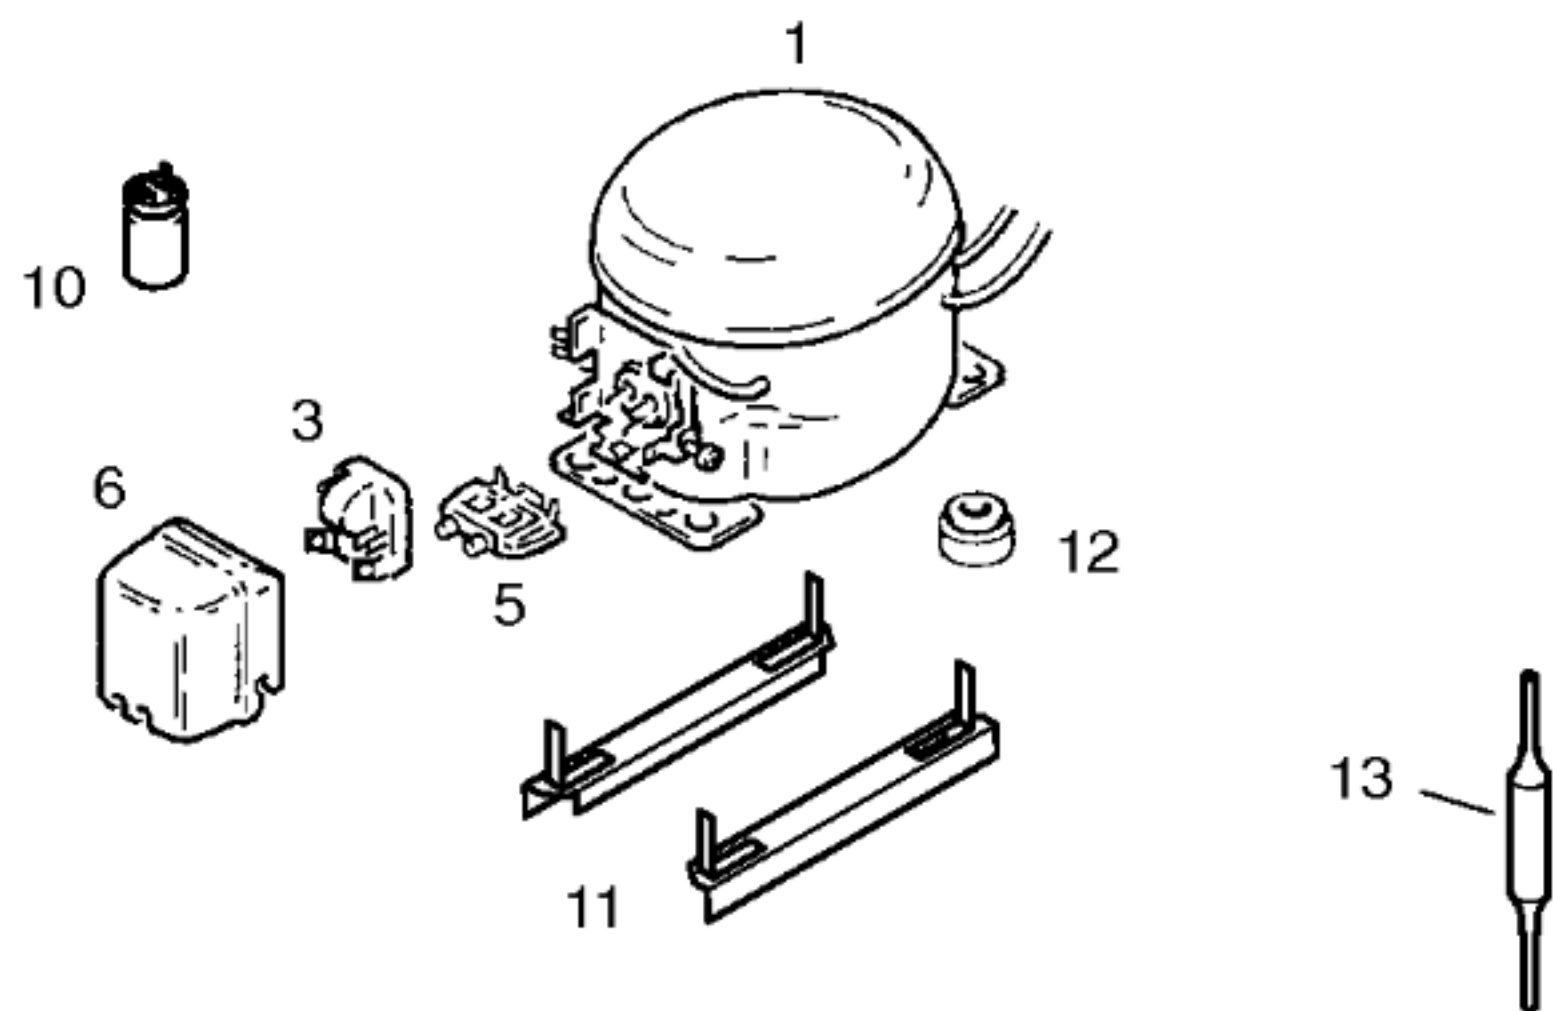

Pos.	V01		
	Matsushita		
	DA 110 E		
1	14 1324		
2			
3	05 8506		
4			
5	16 2549		
6	05 8458		
7			
8			
9			
10	15 3367		
11	15 3365		
12	15 3364		
13	35 0026		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Matsushita		
Typ/Type	DA 110 E		
Förderleistung/Delivery/Débit	1980		
Anlaufstrom/Starting current/Cour de démarrage	A		
Widerstand/Resistance/Résistance	Ha/main/prin.		
	Hi/aux		
Temp.-Regler/Thermostat			
Typ/Type			
Reglerstellung/Position			
Schaltwerte/Switching values/	„ein“	°C	
Valeurs de commutation	„aus“		
(„abtauen“ od.)	„alarm“		
Füllmenge/Fill.quantity/Charge	R600a	g	*
Anschlußwert/Conn.load/Puiss. connectée	W		
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

* siehe Typenschild