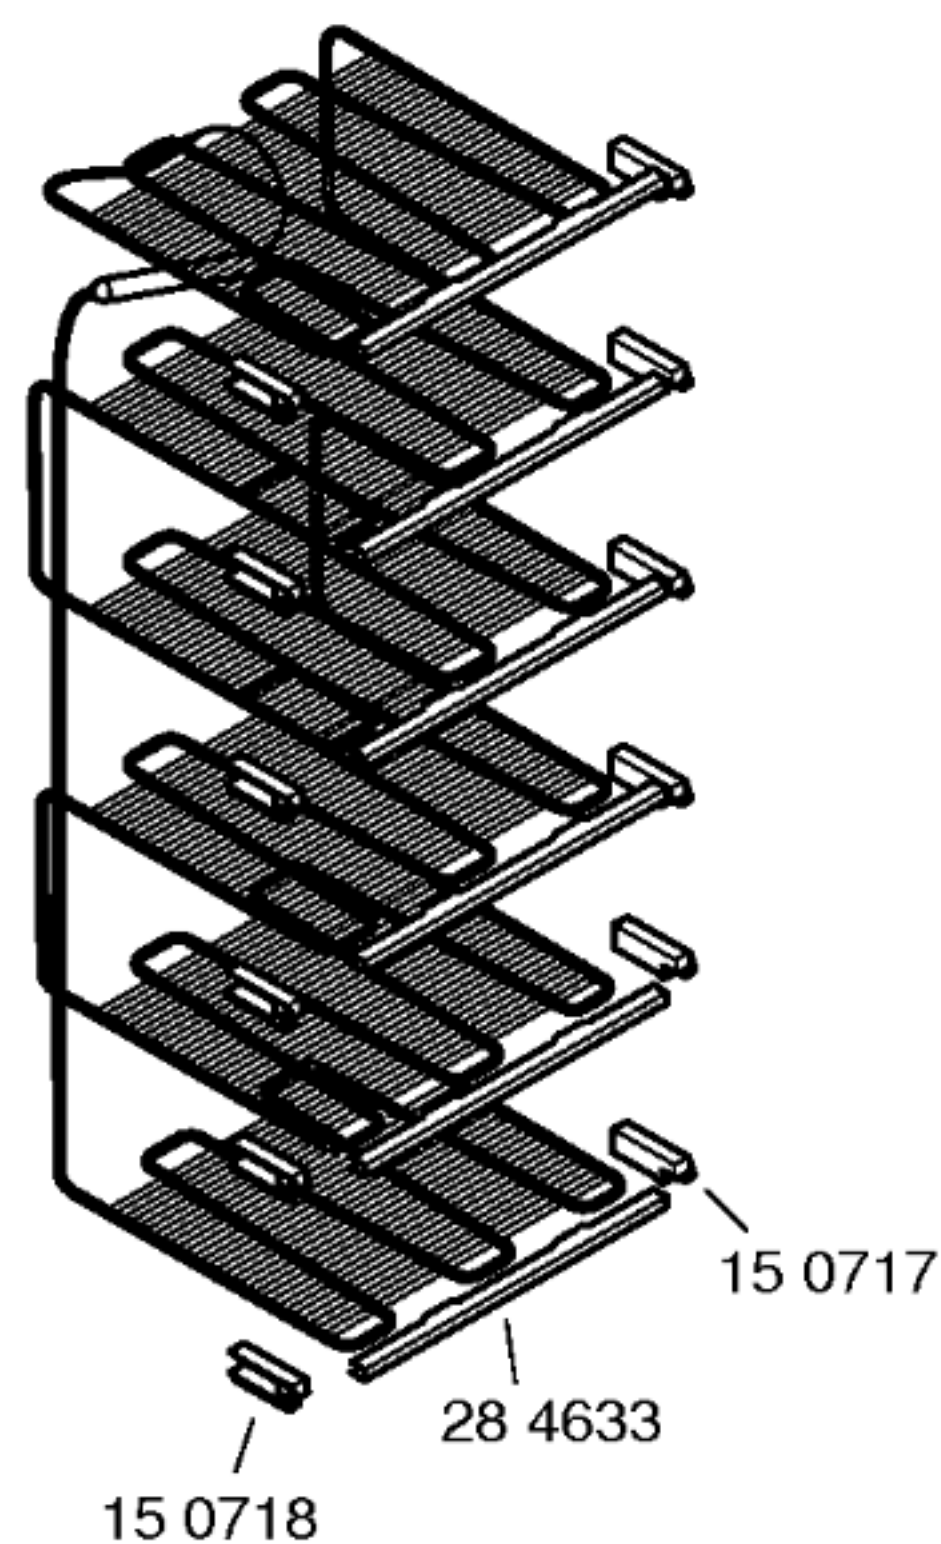
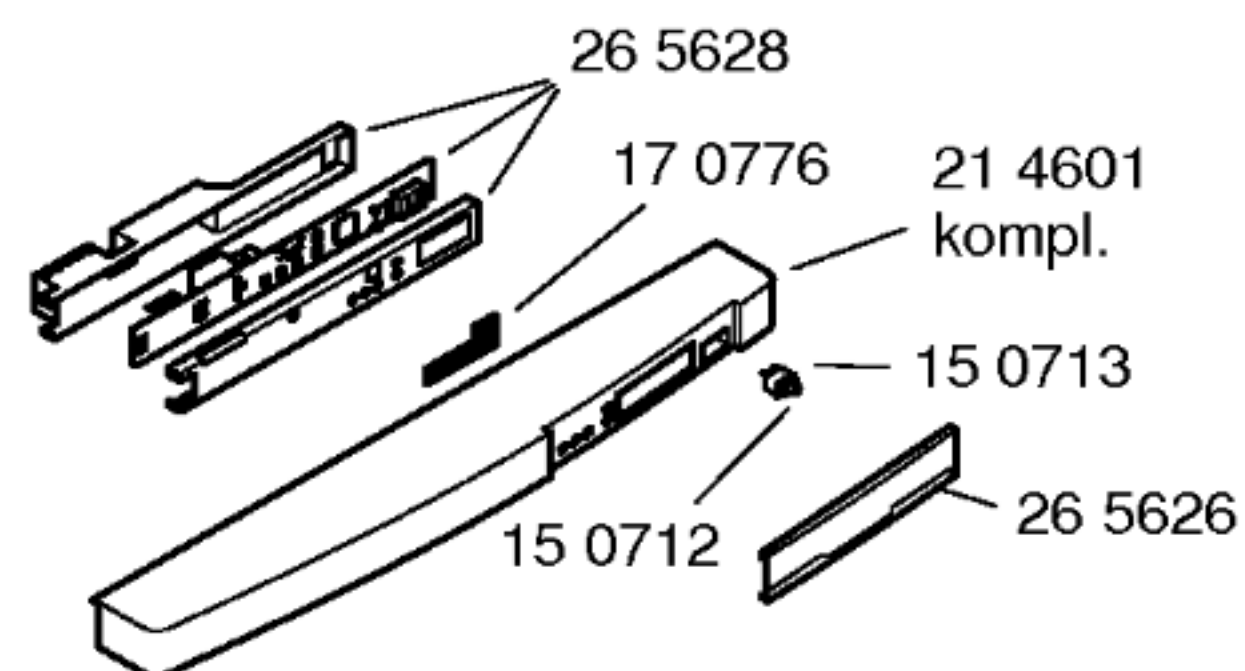
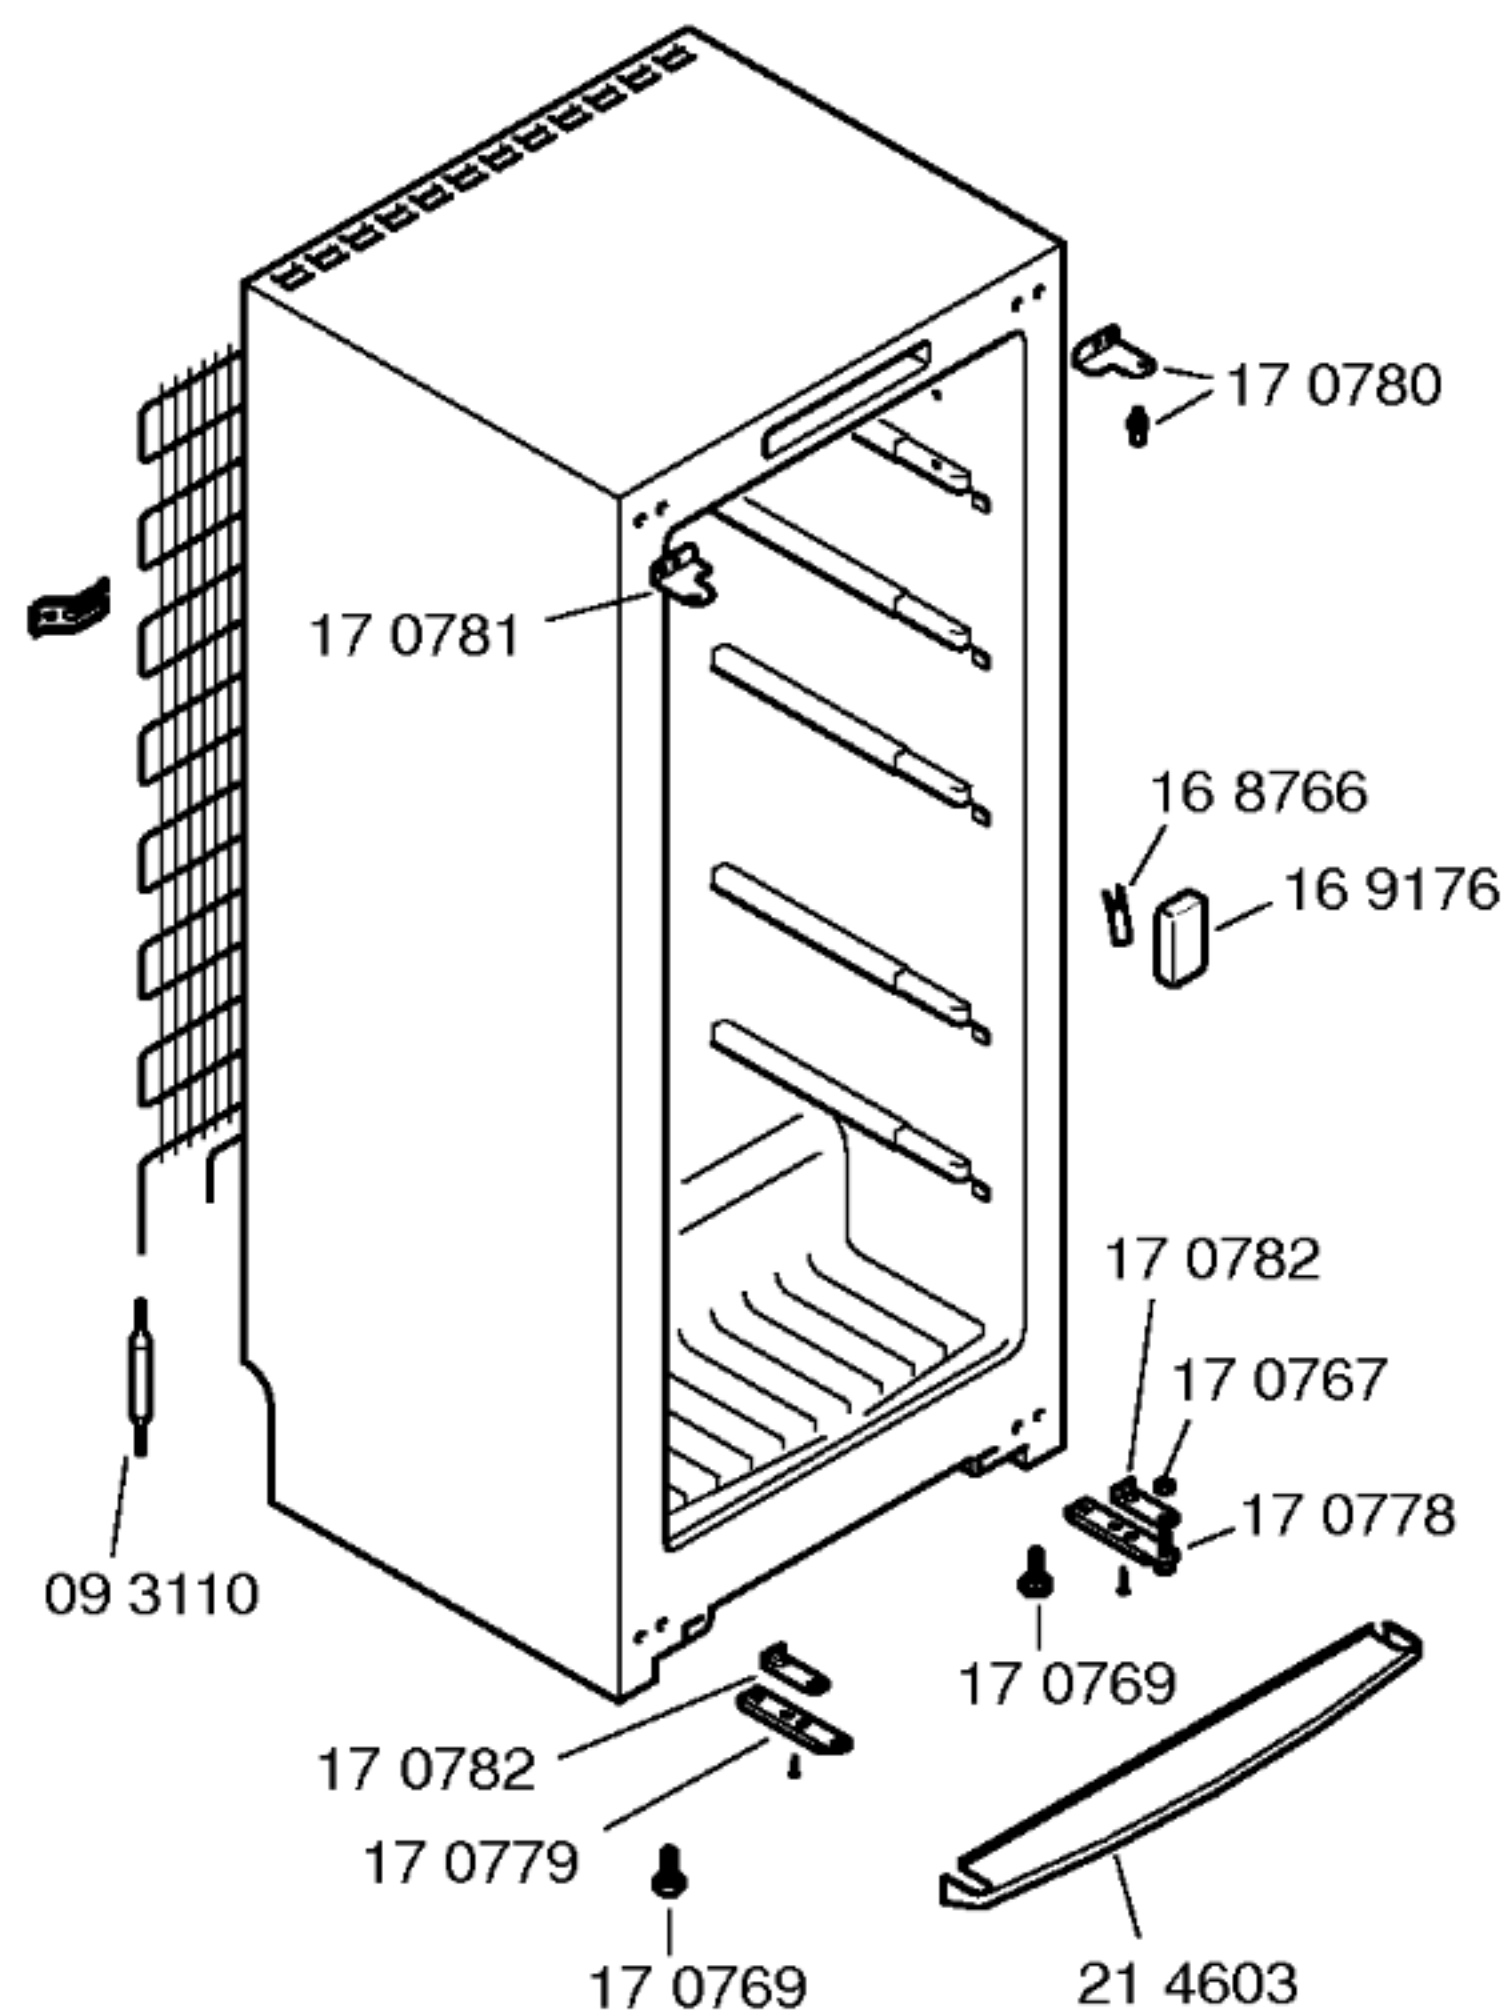





 Mat. – Nr. – Konstante
 3740


 Gebrauchsanweisung
 52 2769
 (D,GB,F,I,NL)

 Montageanleitung
 52 2772
 (D,GB,F,I,NL,DK,N,SF,
 SE,TR)

 Beistellsatz
 26 5629

 Side by Side
 Beistellsatz zu KSR/KSK
 48 1044

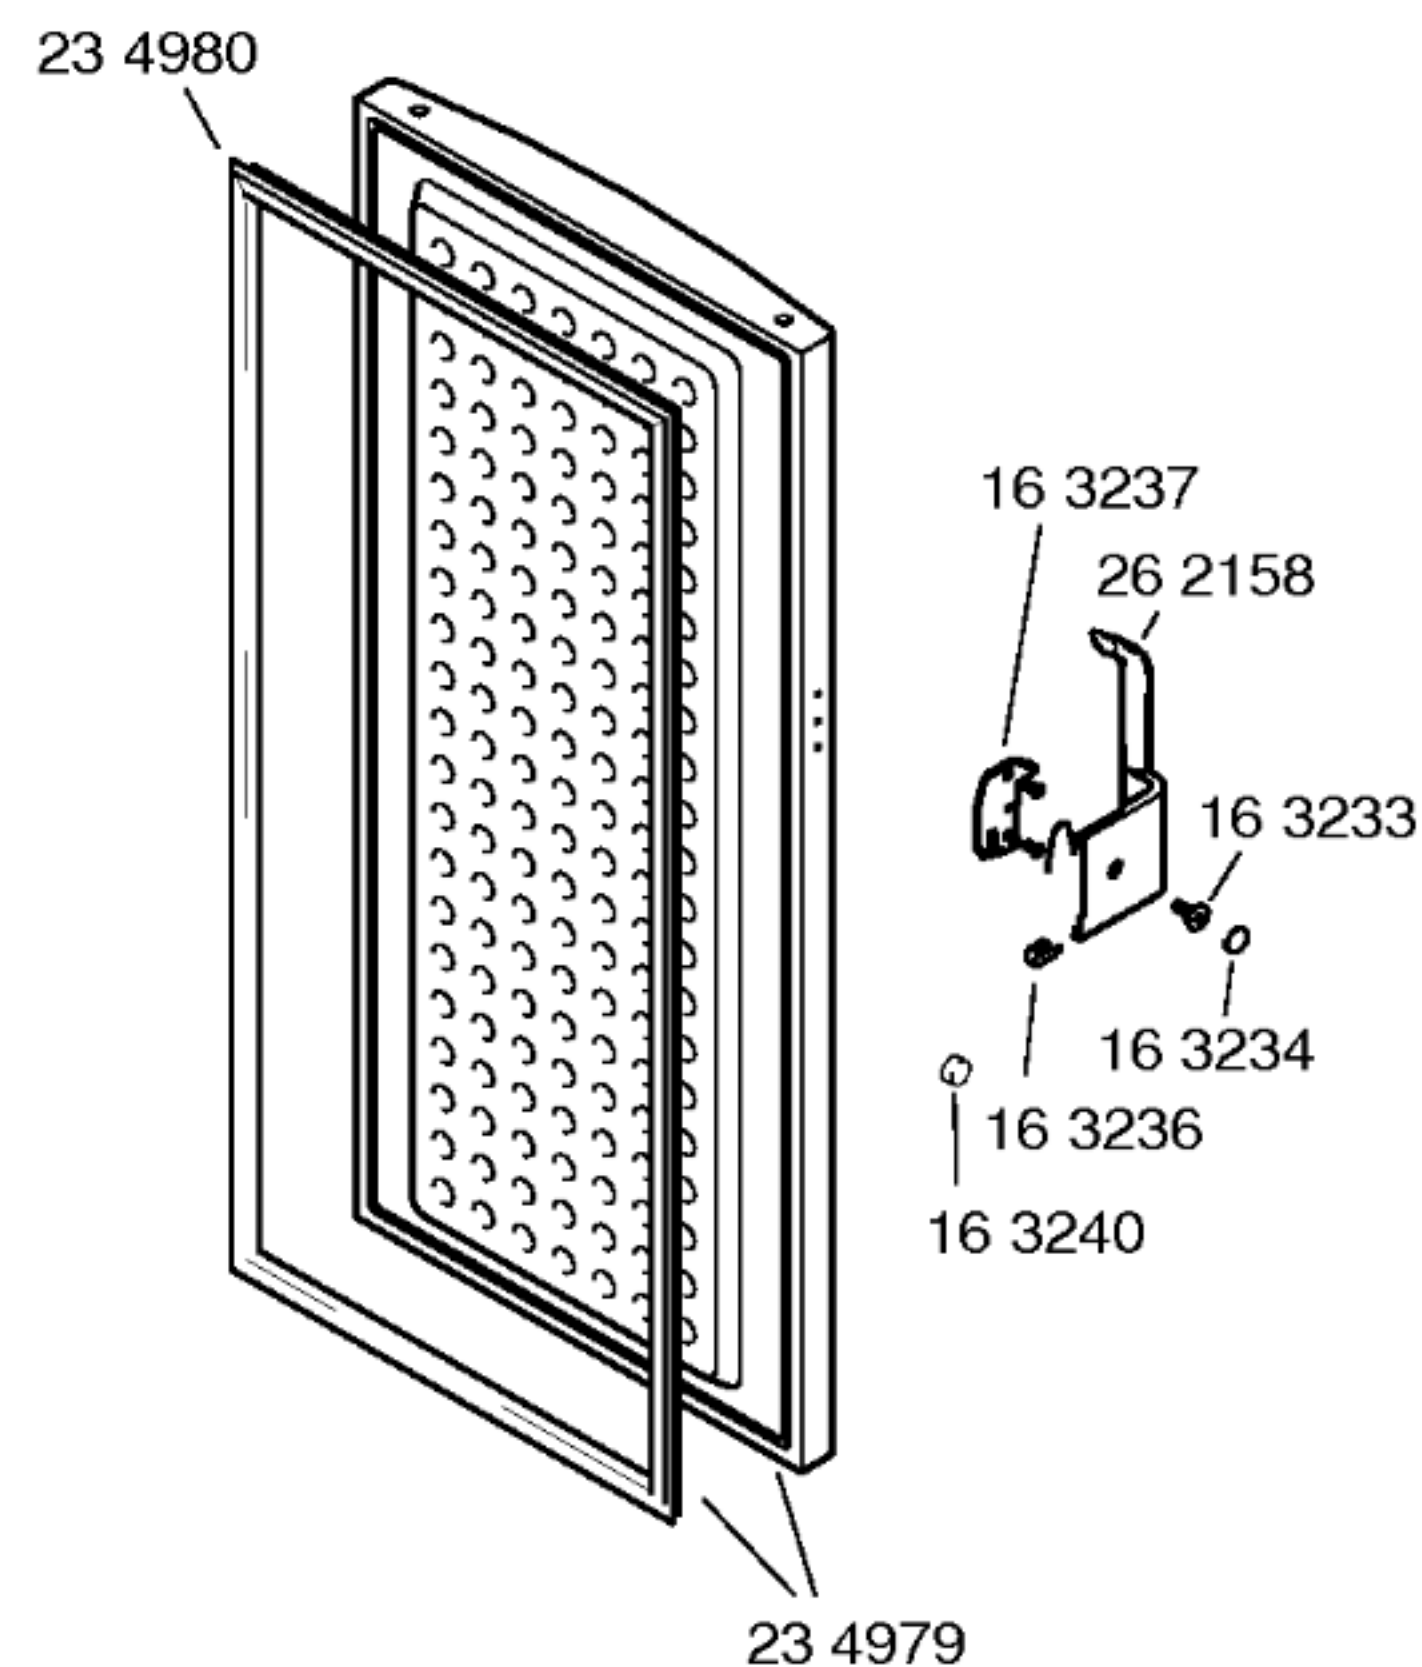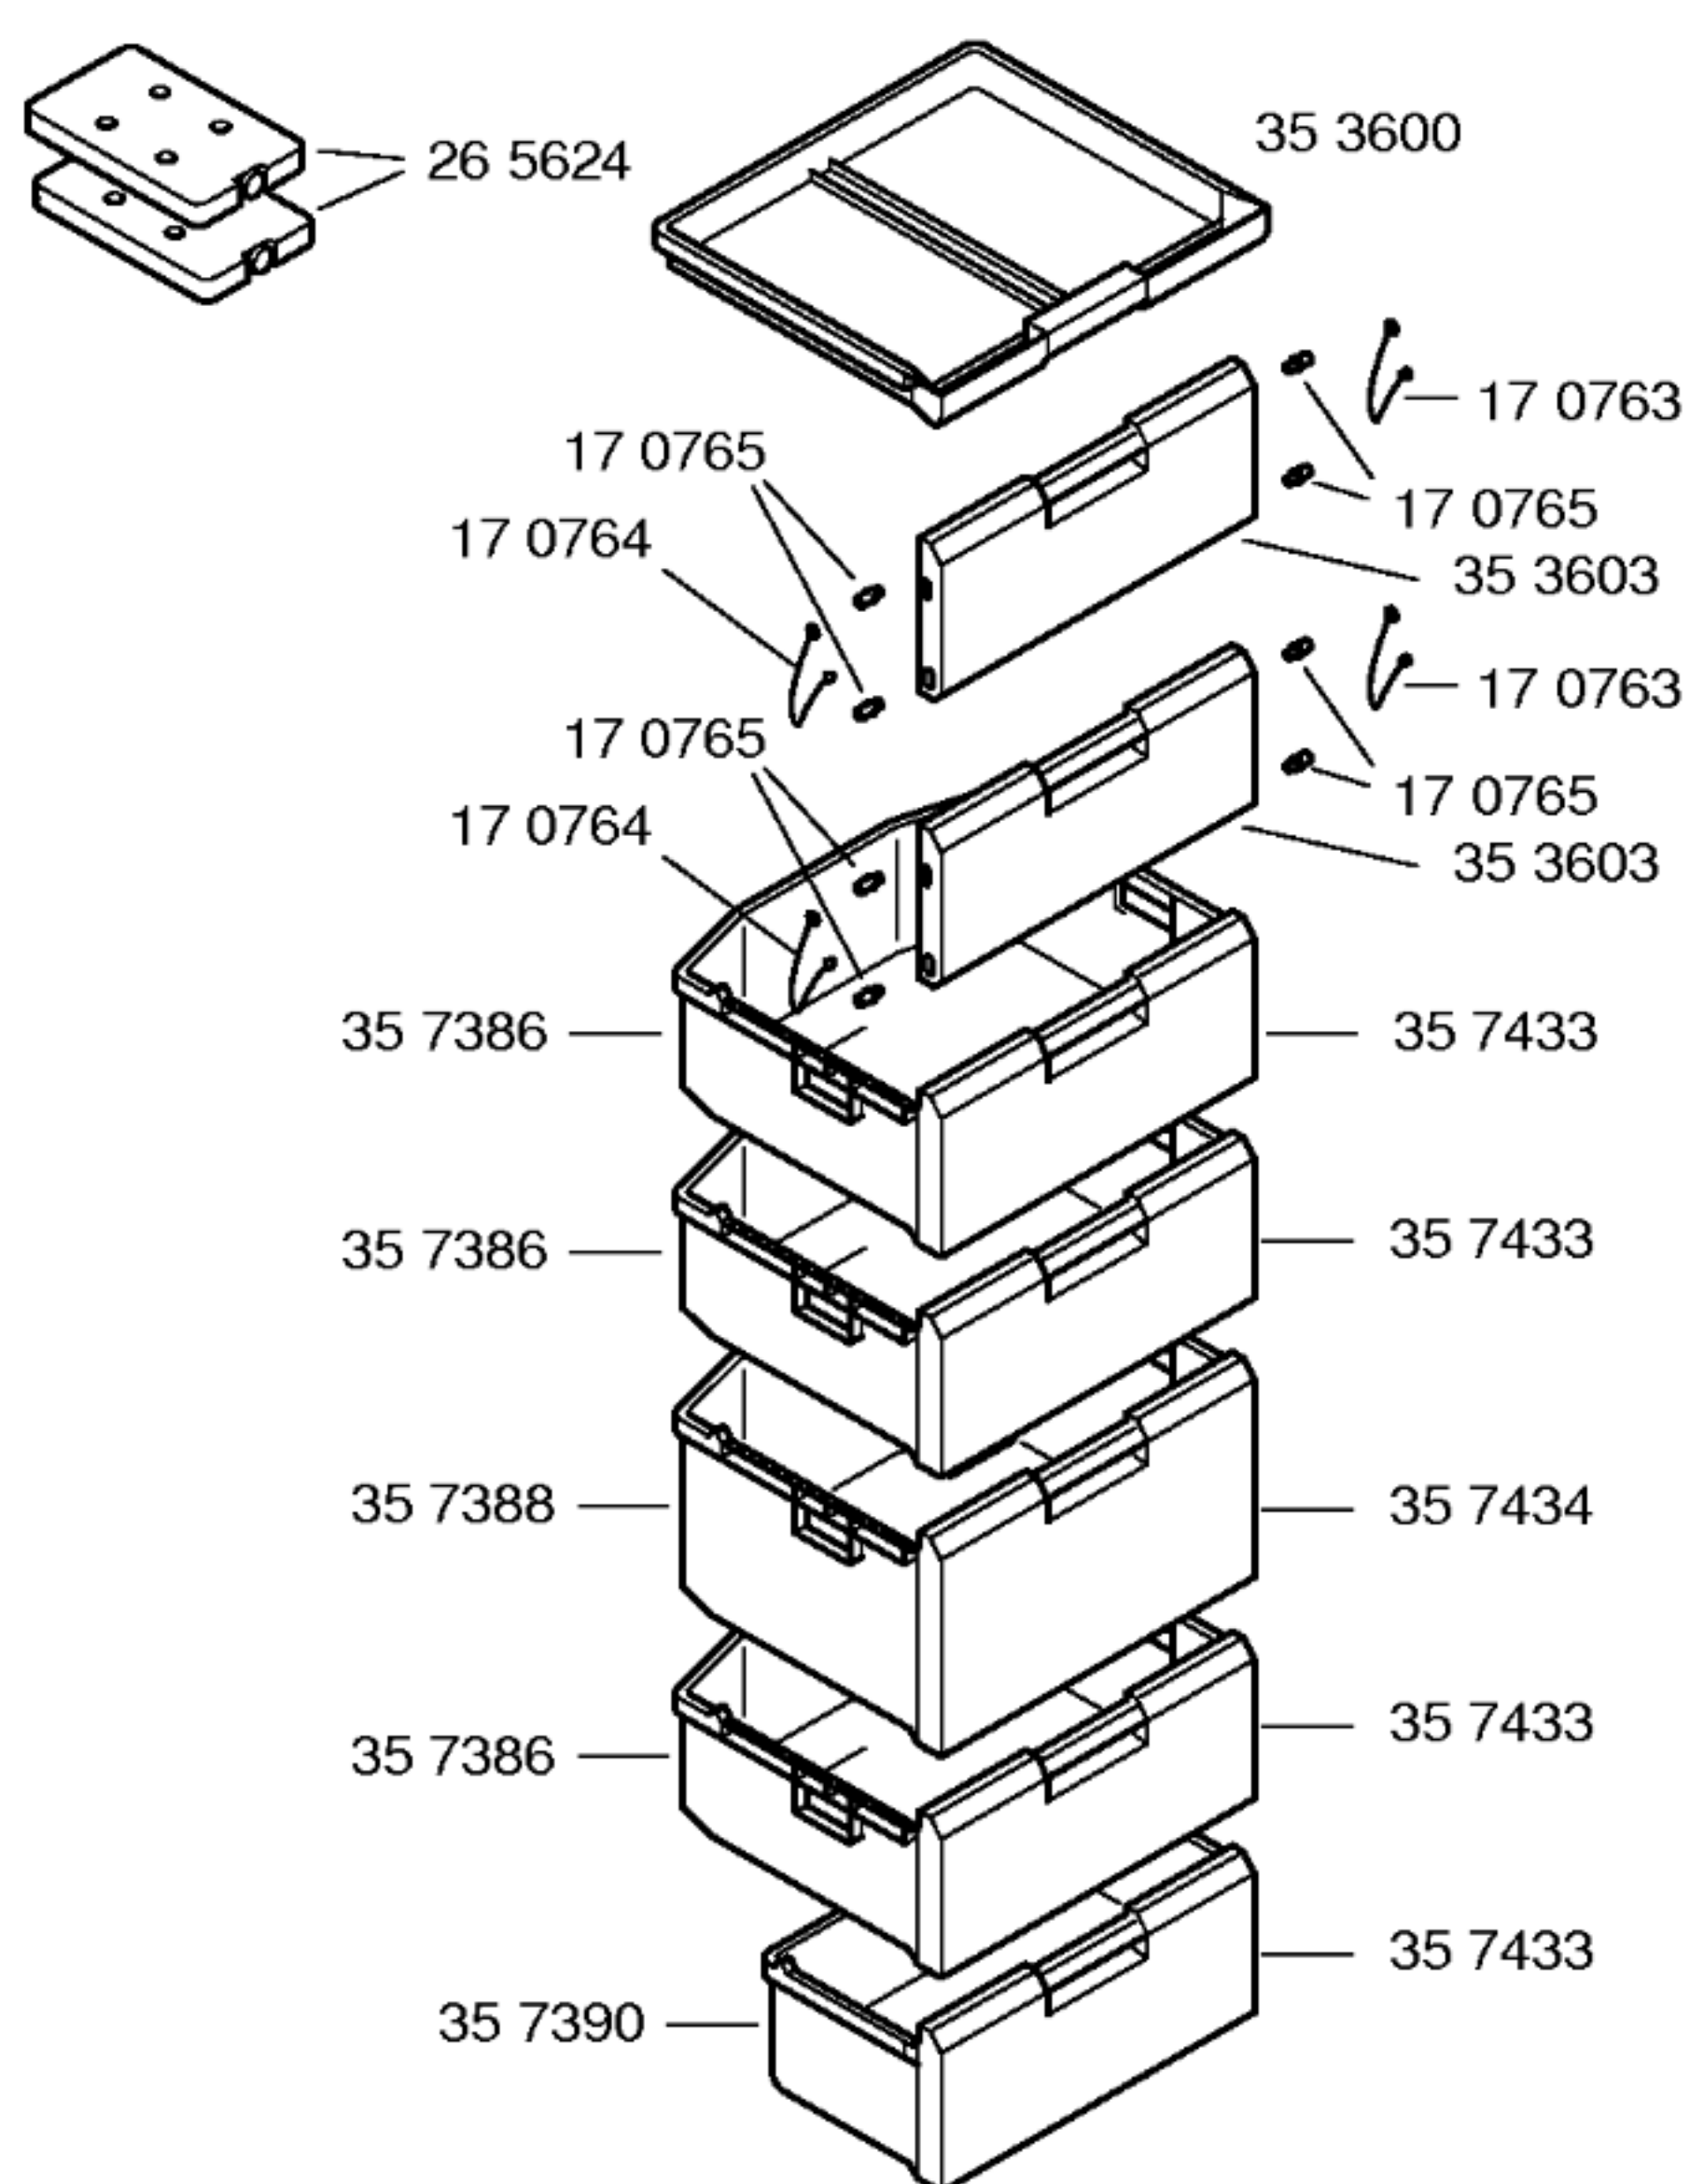

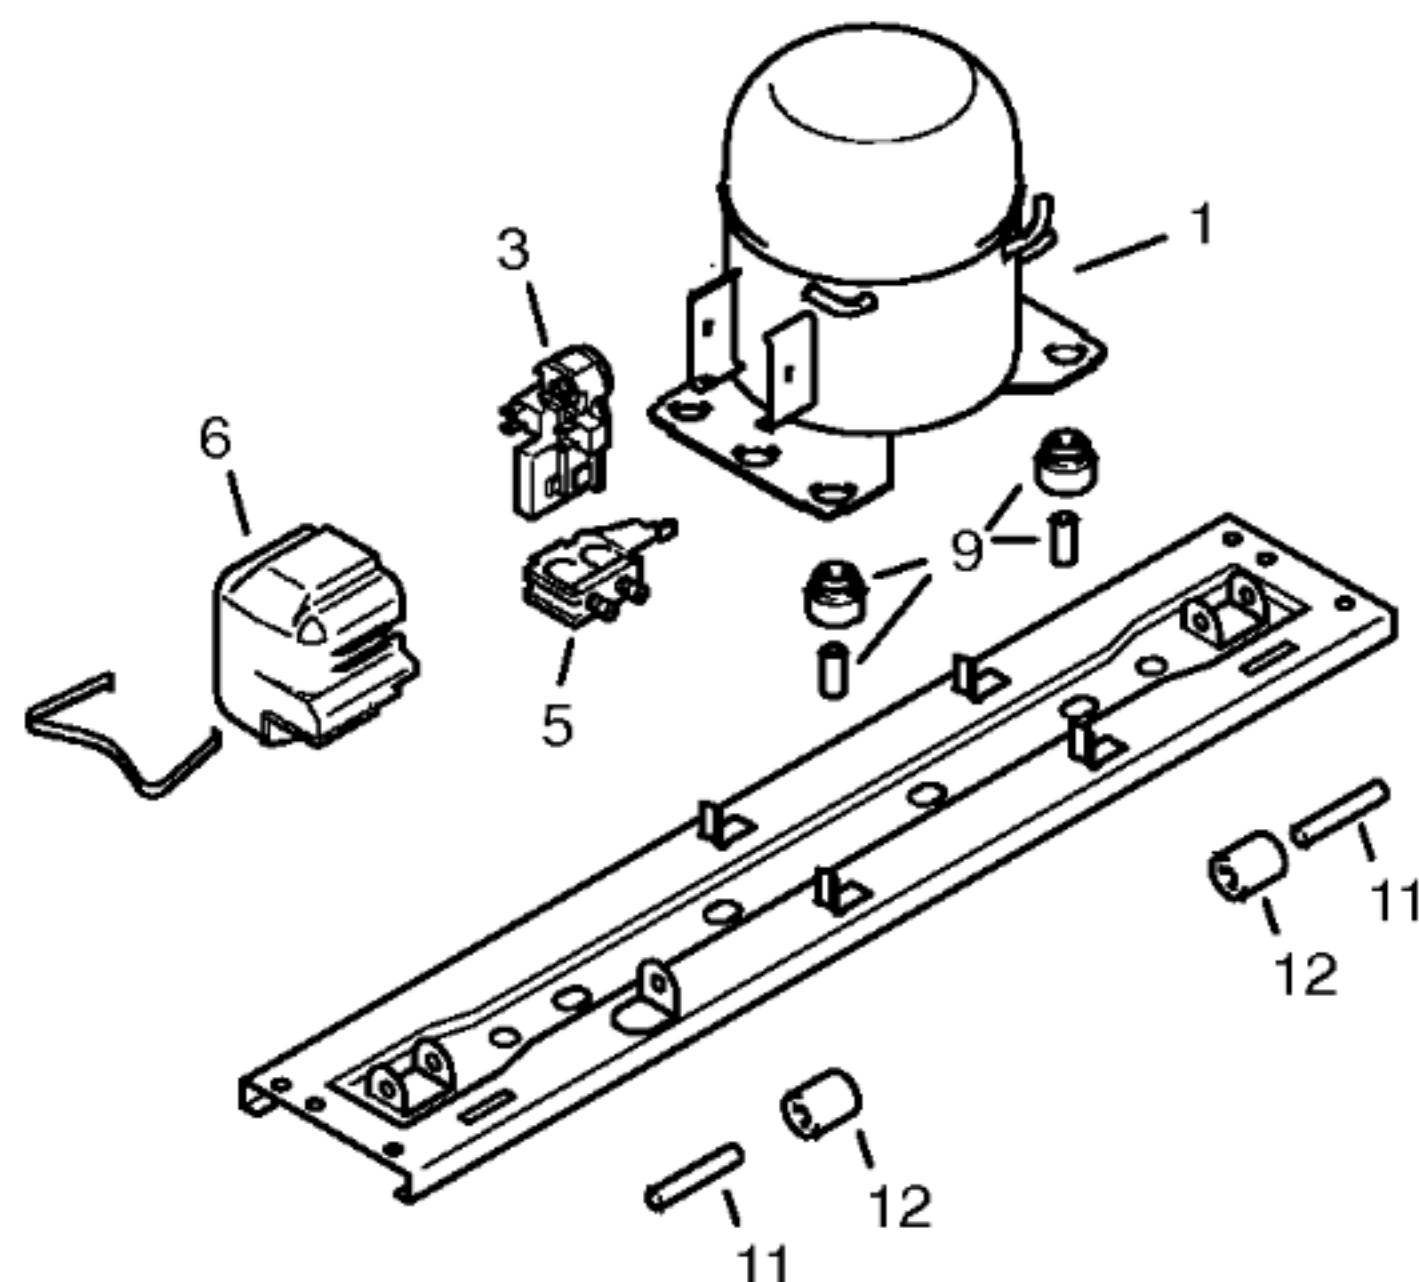

Pos.	V01	V02	V03
	Matsushita DA 110 E	Danfoss NLE 11K	Matsushita DA 110 E
1	14 1324	14 1750	14 2130
2			
3	05 8506	15 1055	17 2671
4			
5	16 2549	15 0762	16 2549
6	16 6782	15 1072	16 6782
7			
8	21 4604	21 4604	21 4604
9	05 0166	05 0166	05 0166
10			
11	01 9017	01 9017	01 9017
12	01 1916	01 1916	01 1916

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Matsushita	Danfoss	Matsushita
Typ/Type		DA 110 E	NLE 11K	DC 110 E
Förderleistung/Delivery/Débit		1980 l/h	2007	1954
Anlaufstrom/Starting current/Cour de démarrage		A	10,7	8,6
Widerstand/Resistance/Résistance Ha/main/prin		Ω	12,9	14,2
Hi/aux		Ω	18,0	12,8
Temp.-Regler/Thermostat				
Typ/Type				
Regelstellung/Position				
Schaltwerte/Switching values "warm"				
Valeurs de commutation "kalt"				
"alarm"				
Füllmenge/Fill.quantity/Charge		R600a	112	113
Anschlußwert/Conn.load/Puiss. connectée		W		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance				
Leistung/Power/Puissance				
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance				
NTC-Fühler / Sensor		°C	kΩ	°C
		+10	9,95 ±0,18	-18
		+5	12,70 ±0,18	-22
		0	16,33 ±0,16	-26
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		