

**BOSCH**


GSD2616/01-V01
 GSD2616FF/01-V02
 GSD2616IE/01-V03
 GSD2616GB/01-V04

GSD2616/02-V05
 GSD2616FF/02-V06
 GSD2616IE/02-V07

KÜHL-,GEFRIERGERÄTE
 Gefrierschränke, Stand



07 4445
 V01-V03,V05-V07
 09 6325
 V04 11 8383

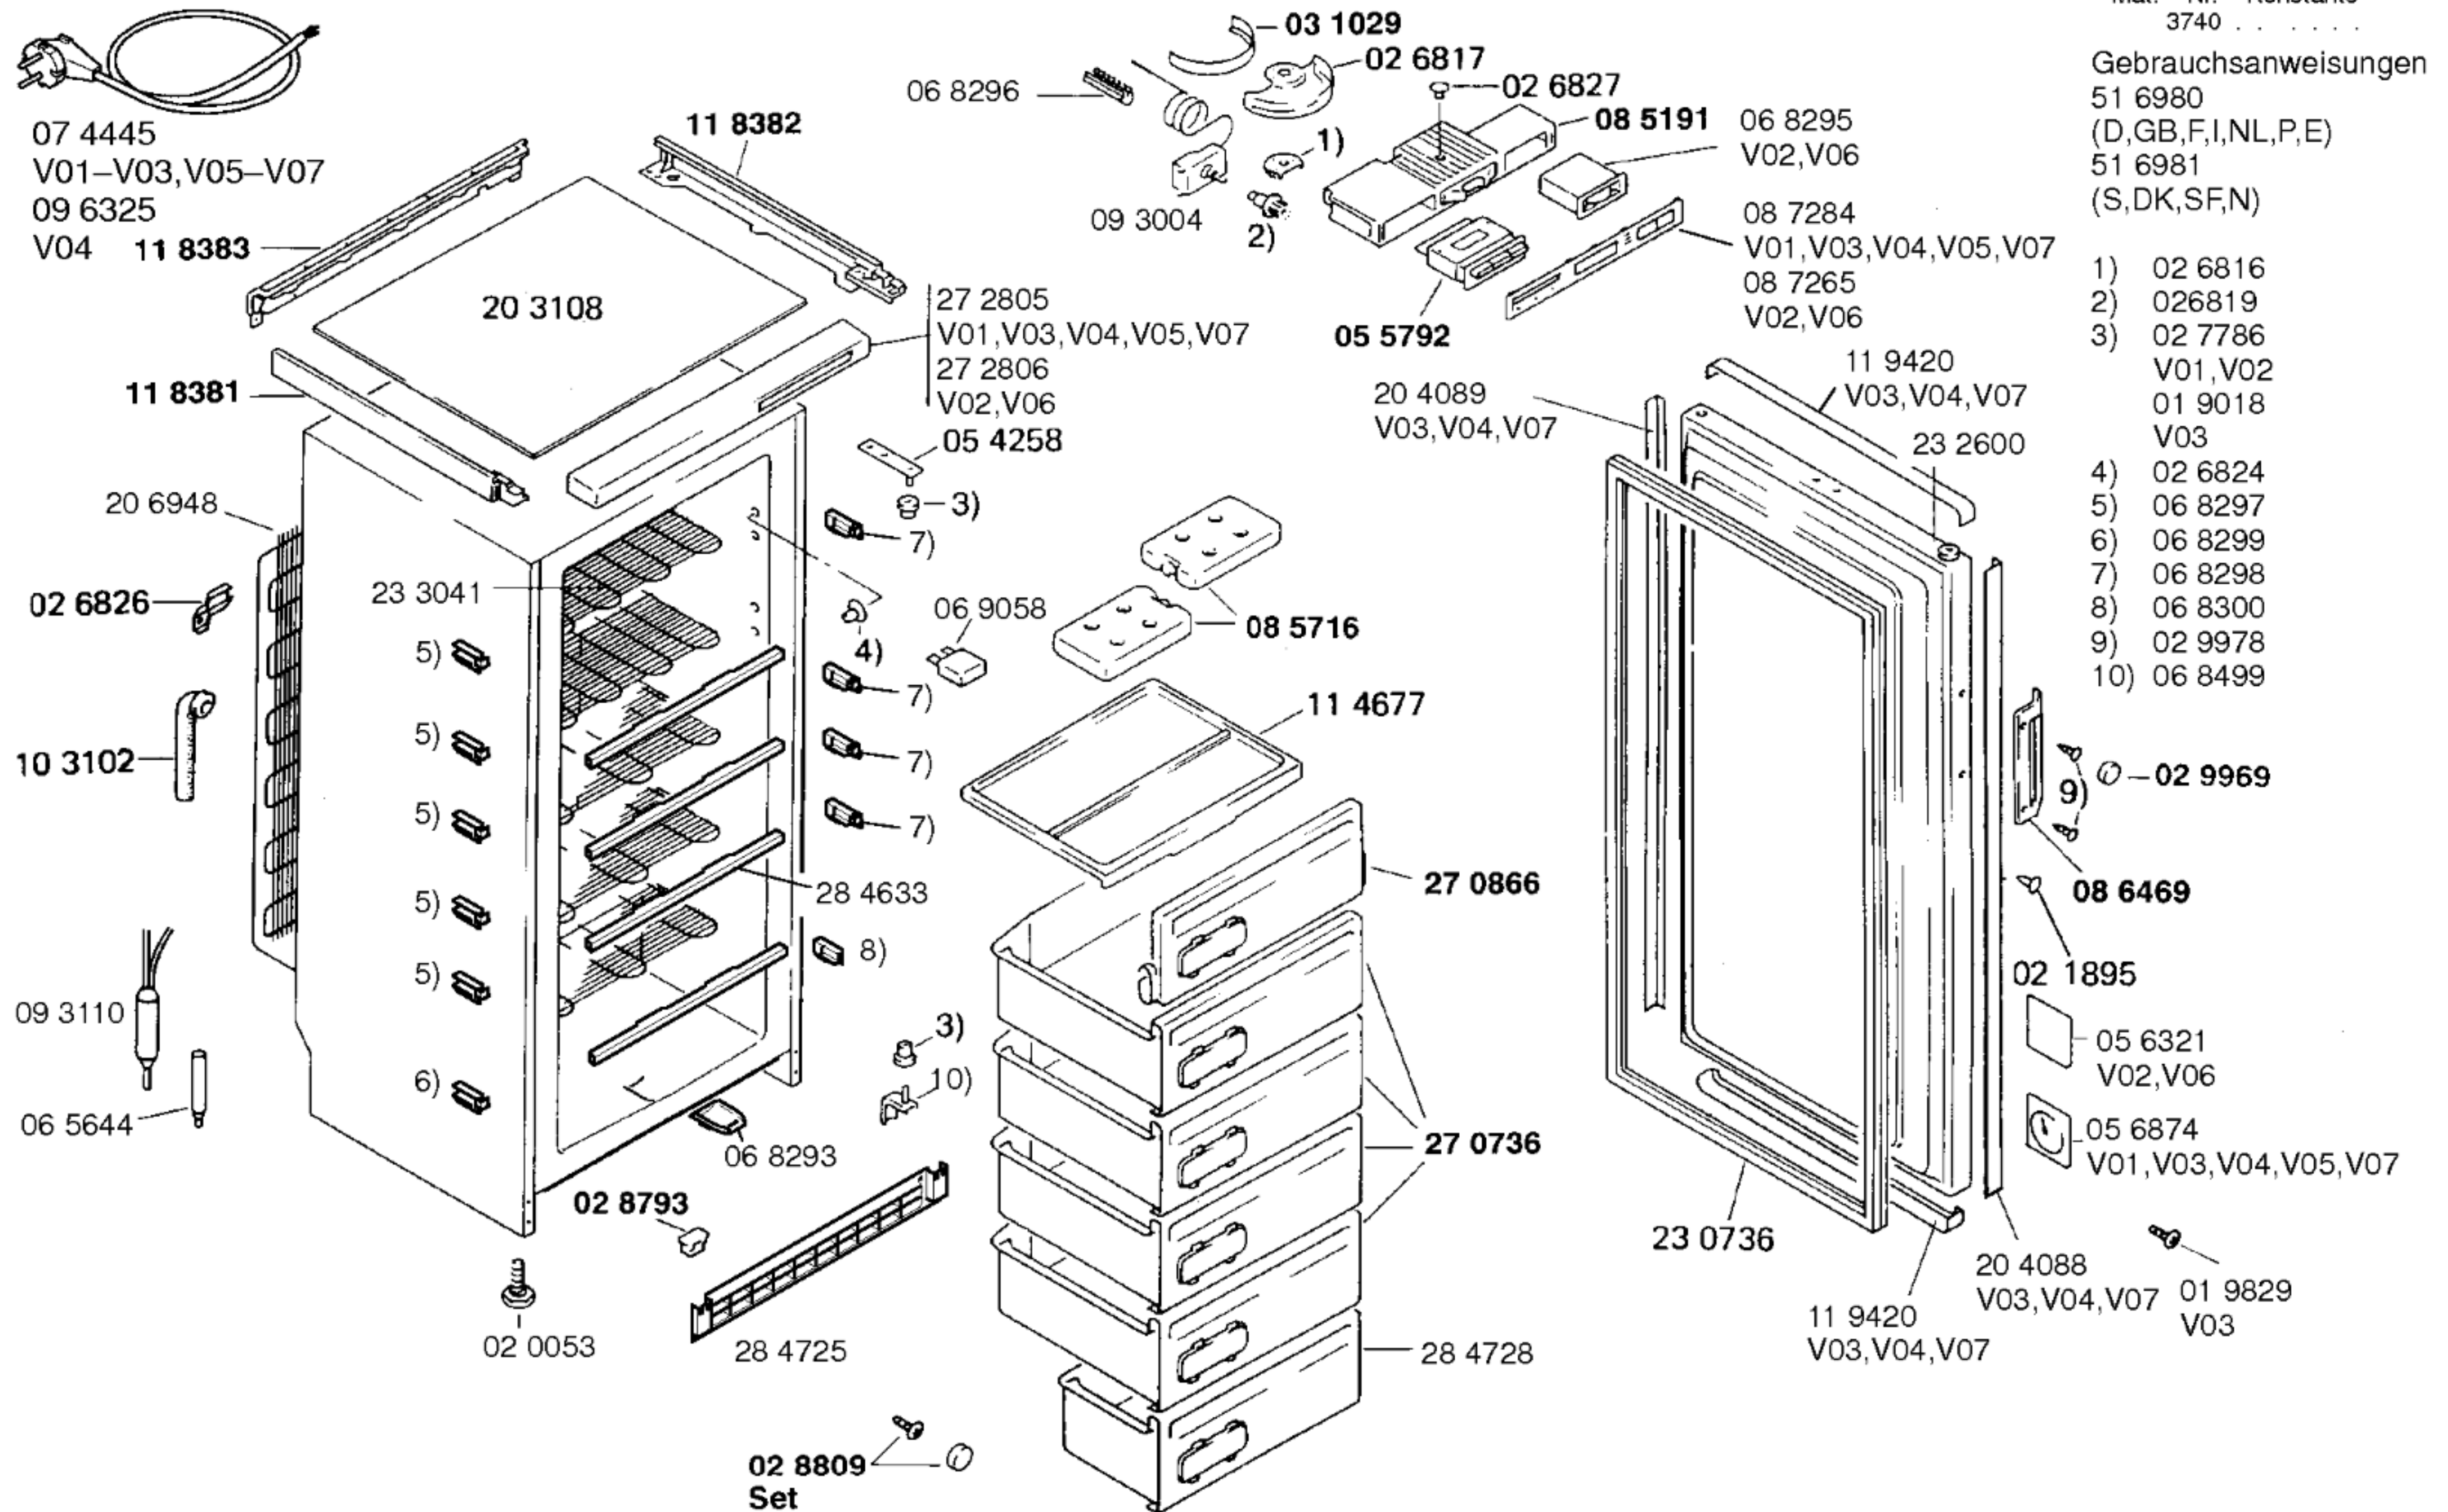

Mat. - Nr. - Konstante
 3740

Gebrauchsanweisungen

51 6980

(D,GB,F,I,NL,P,E)

51 6981

(S,DK,SF,N)

1) 02 6816

2) 026819

3) 02 7786

V01,V02

01 9018

V03

4) 02 6824

5) 06 8297

6) 06 8299

7) 06 8298

8) 06 8300

9) 02 9978

10) 06 8499


**BOSCH**

GSD2616/01-V01
GSD2616FF/01-V02
GSD2616IE/01-V03
GSD2616GB/01-V04

GSD2616/02-V05
GSD2616FF/02-V06
GSD2616IE/02-V07

KÜHL-,GEFRIERGERÄTE
Gefrierschränke, Stand

Mat. – Nr. – Konstante
3740

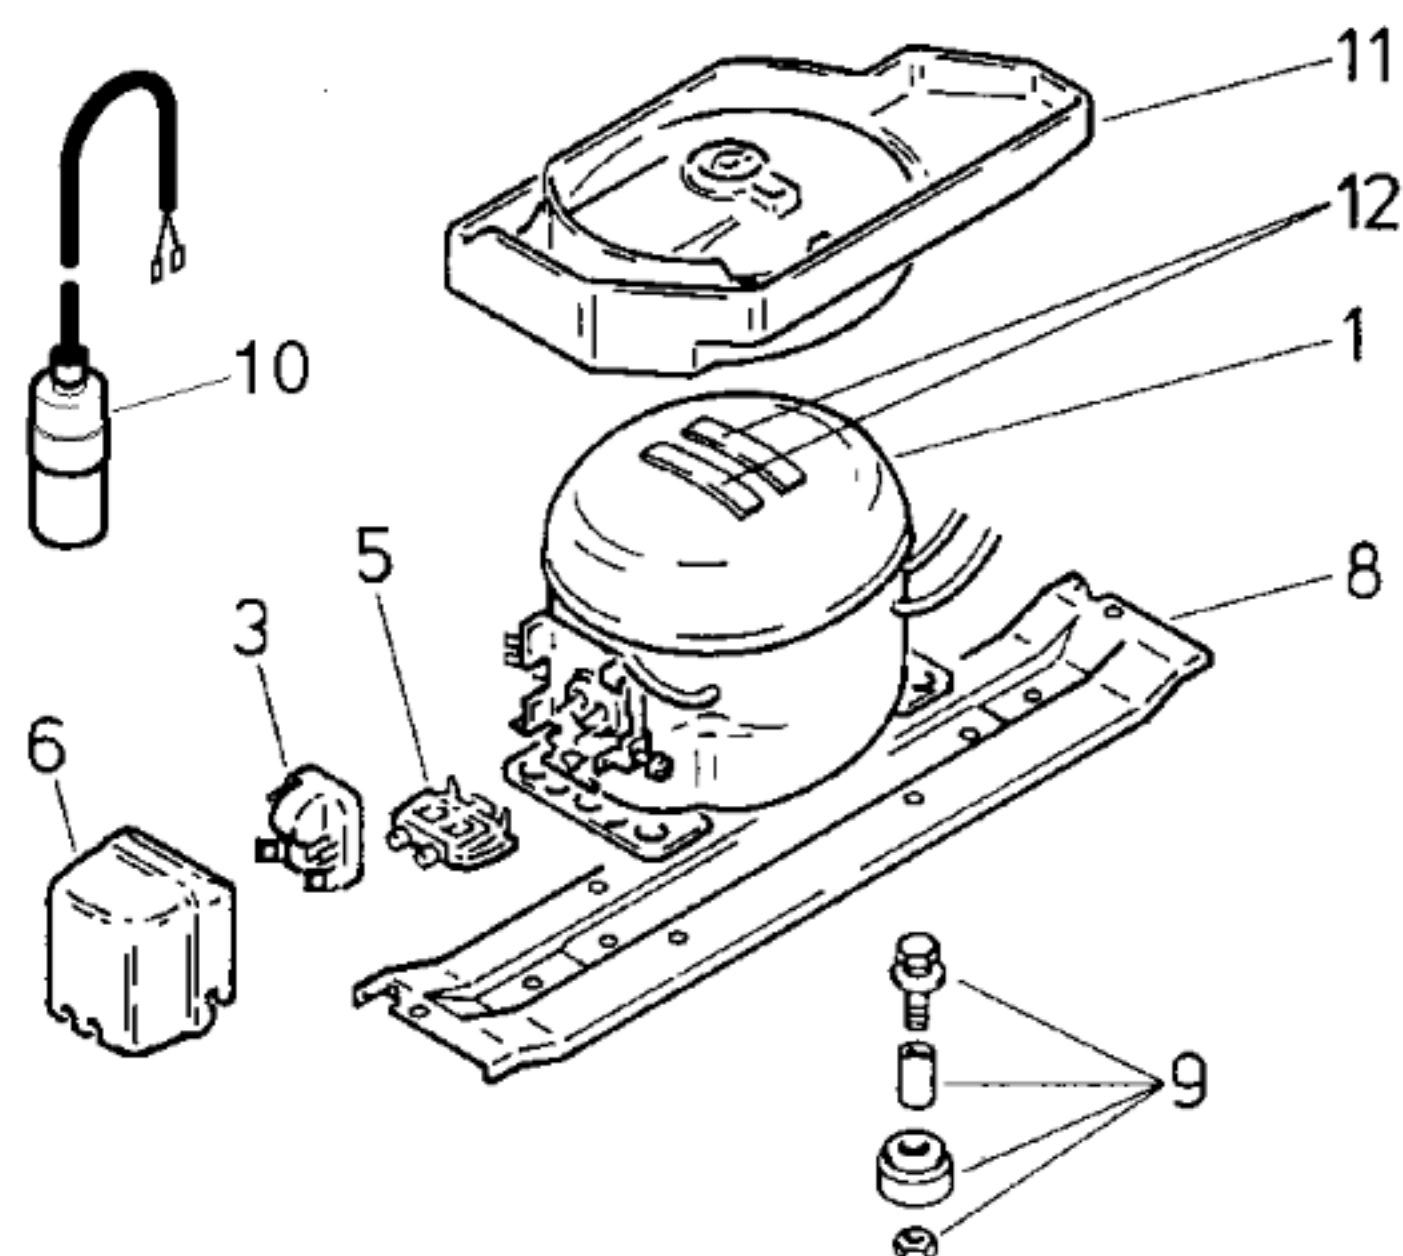

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Danfoss		
Typ/Type	NLE 15 K		
Förderleistung/Delivery/Débit	l/h		
Anlaufstrom/Starting current/Cour de démarrage	A		
Widerstand/Resistance/Résistance	Ha/main/prin. Ω		
	Hi/aux Ω		
Temp.-Regler/Thermostat	Danfoss		
Typ/Type	077B2157		
Reglerstellung/Position	kalt warm		
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$		
Valeurs de commutation	„aus“		
	(„abtauen“ od.) „alarm“		
Füllmenge/Fill.quantity/Charge	R600a g		
Anschlußwert/Conn.load/Puiss. connectée	W		
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

Pos.	Danfoss		
	NLE 15 K		
1	14 1311		
2			
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	11 1567		
9	05 0166		
10			
11			
12			