
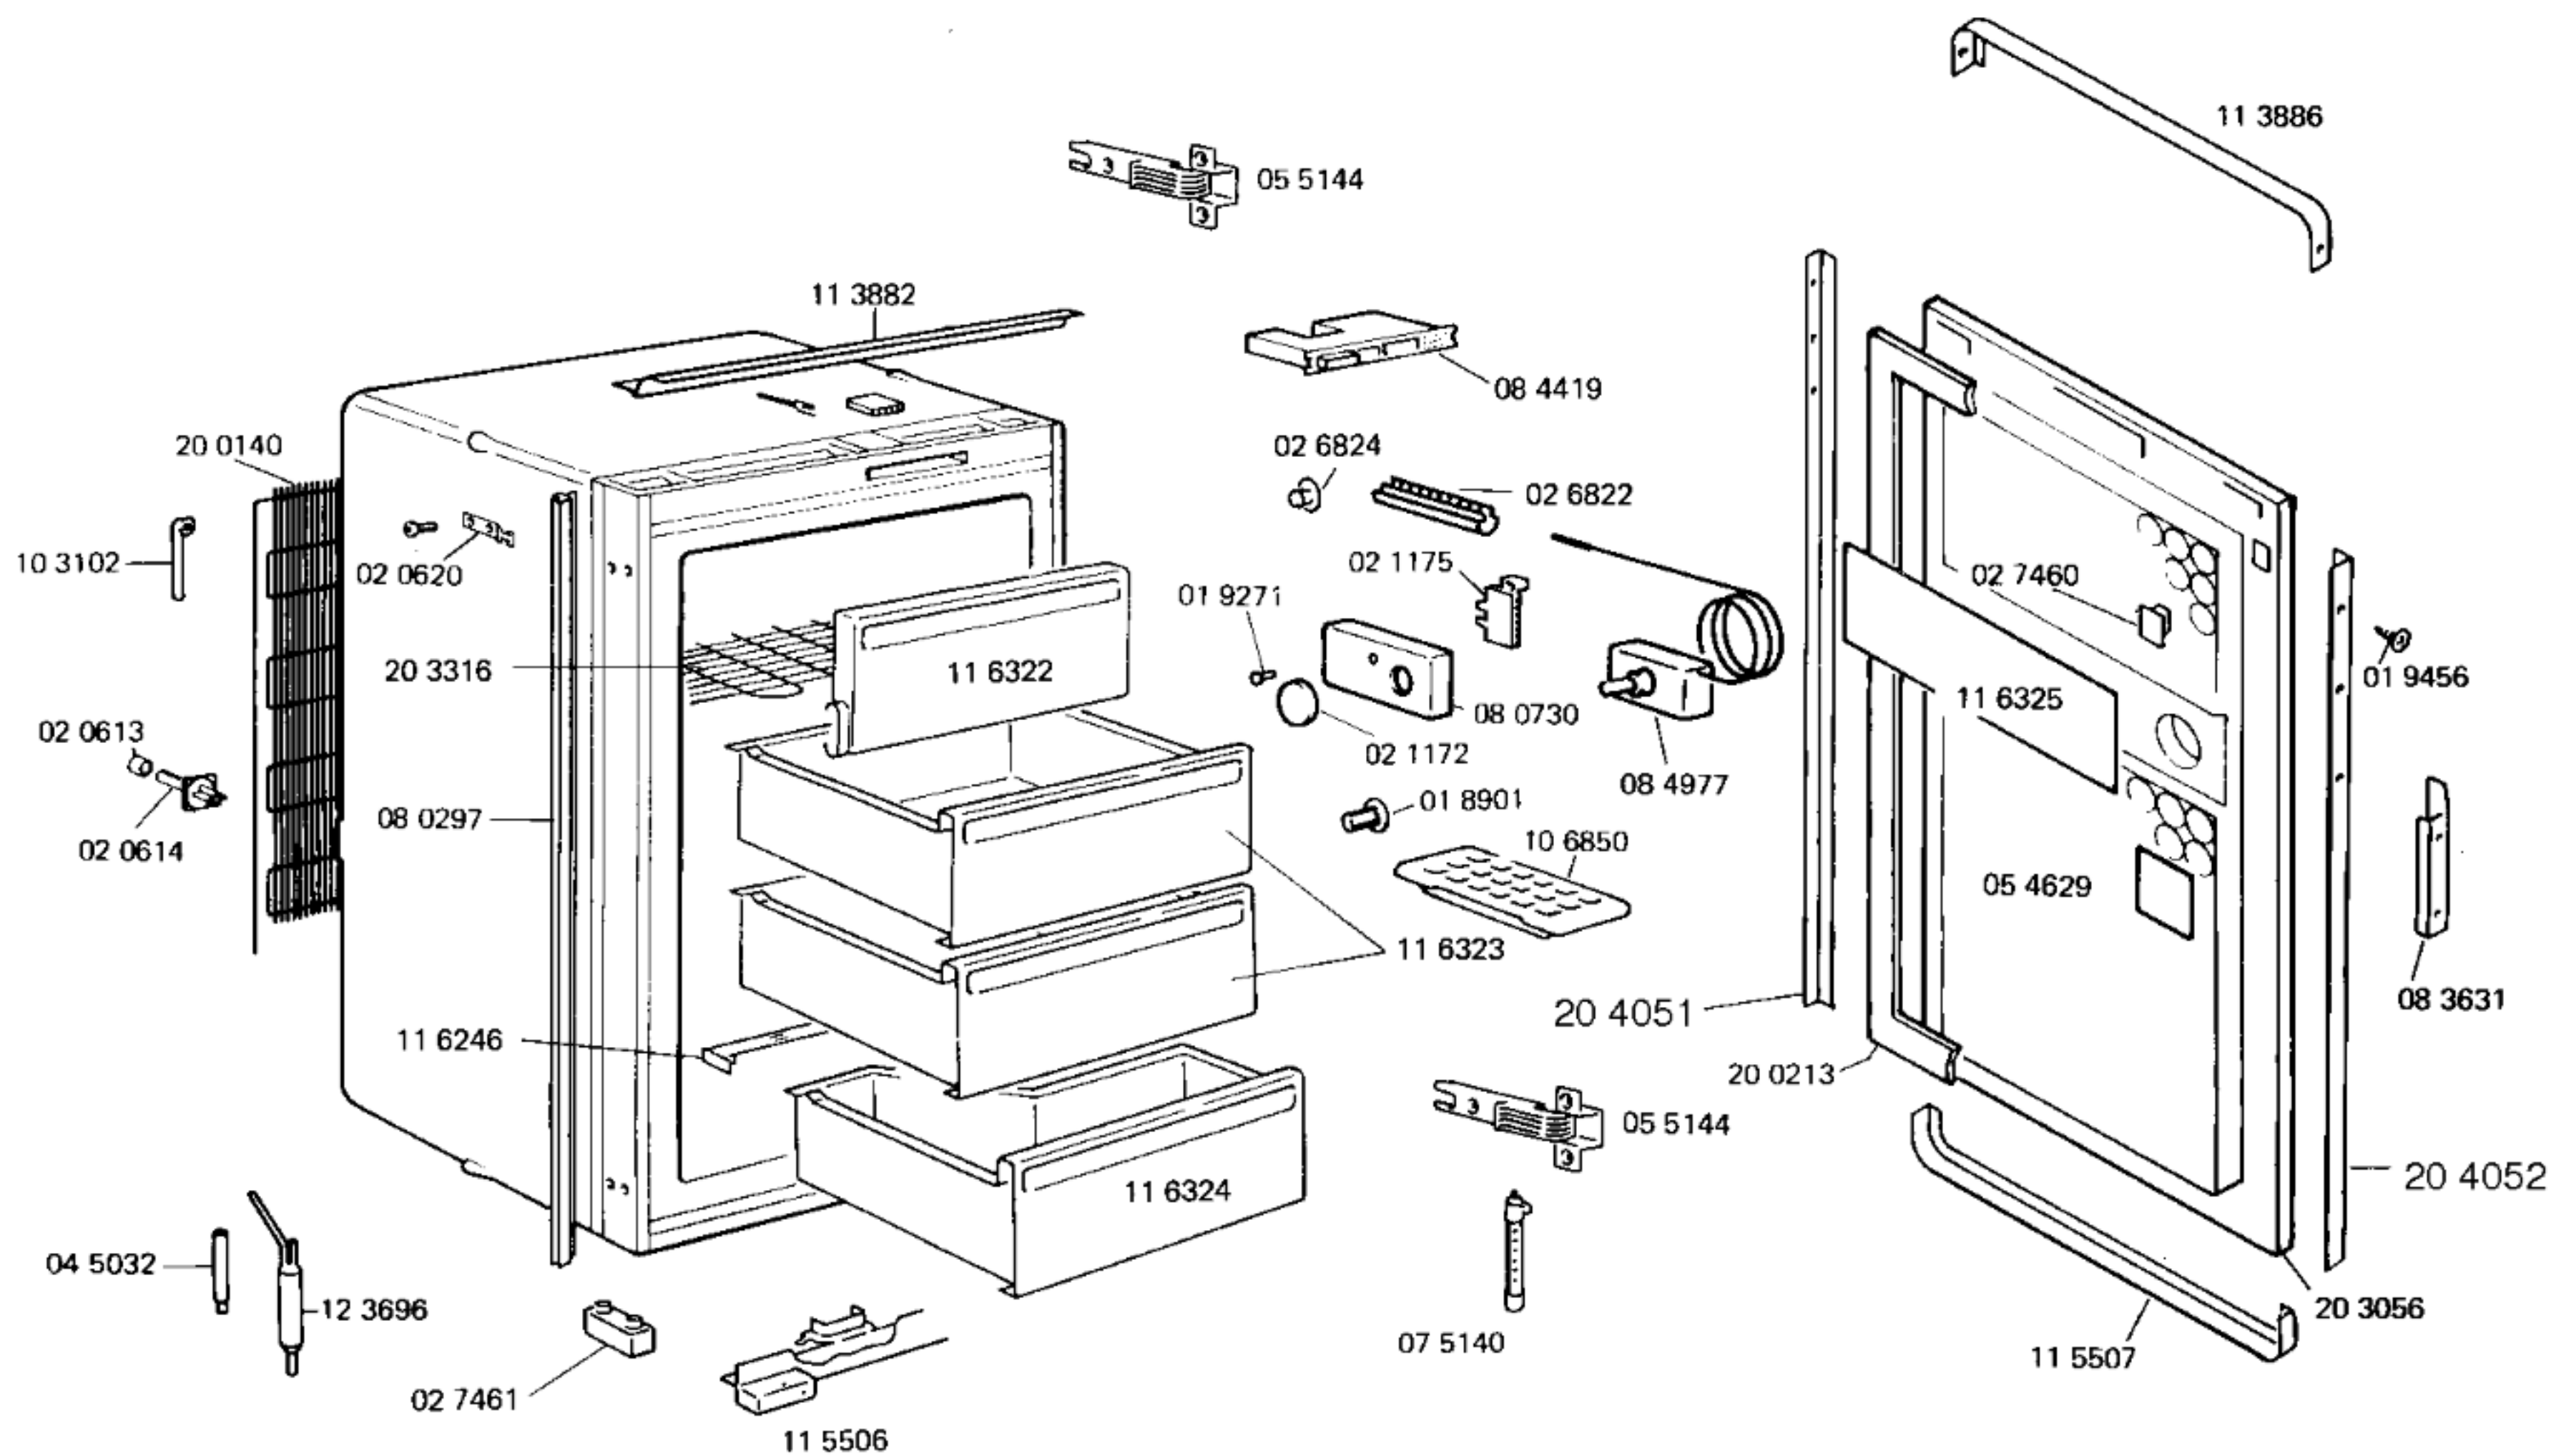


Ident – Nummern – Konstante
3740

51 2674
D1
Gebrauchsanweisung
(D,GB,F,I,NL,S,E,SF,N)
51 2304
D1
Aufstellanweisung
(D,GB,F,I,NL,S,E,SF,N,DK)

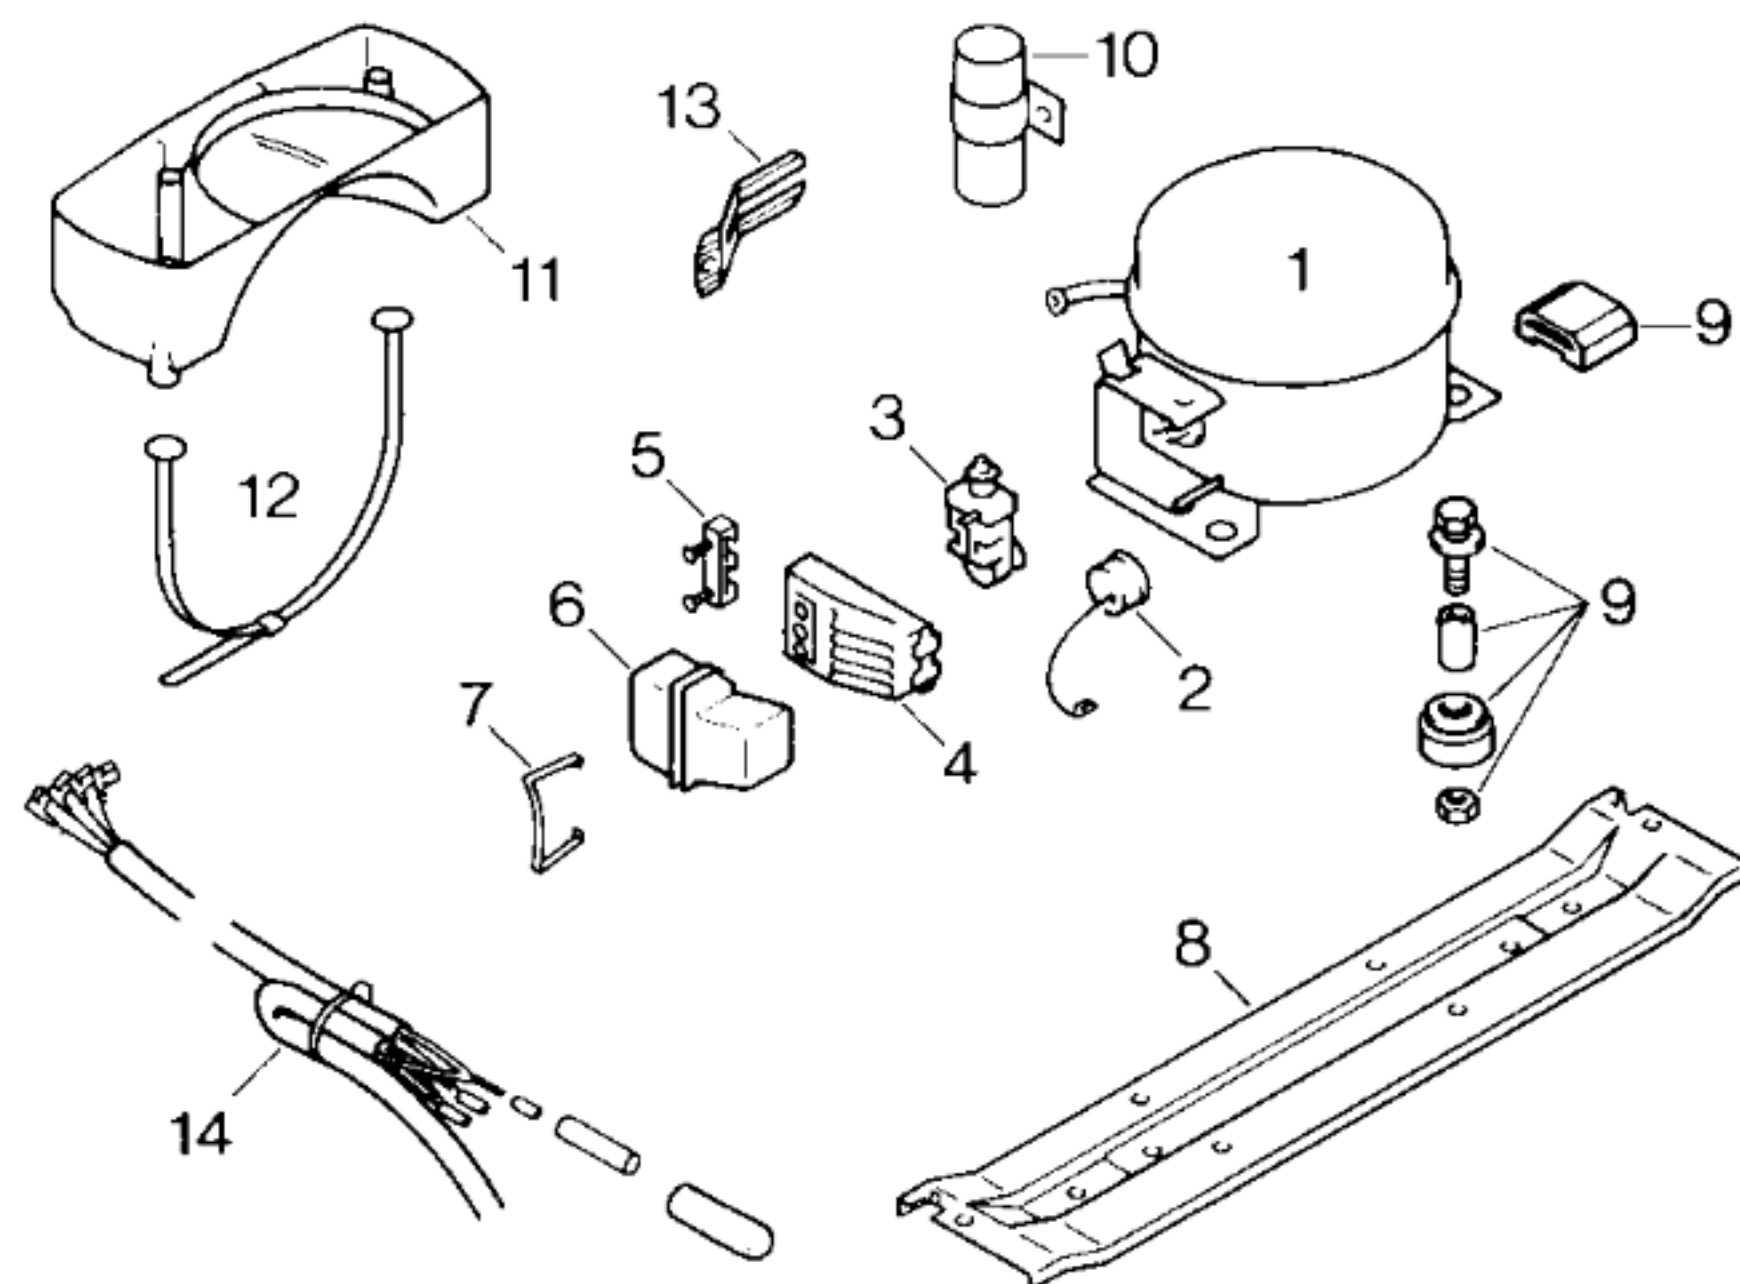

Ident – Nummern – Konstante
3740

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Danfoss			
Typ/Type	TL 5 A			
Förderleistung/Delivery/Débit	V 920			
Anlaufstrom/Starting current/Cour. de démarrage	A 9,0			
Widerstand/Resistance/Résistance	Ha/main/prin. Ω 15,7			
	Hi/aux Ω 18,8			
Temp.-Regler/Thermostat	M & J			
Typ/Type	TF 57 SF 2			
Reglerstellung/Position	kalt warm			
Schaltwerte/Switching values/	- 24 - 16			
Valeurs de commutation	- 34 - 24			
(„abtauen“ od.)	- 19 - 12			
Füllmenge/Fill.quantity/Charge	R12 g 175			
Anschlußwert/Conn.load/Puiss. connectée	W 120			
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

Pos.	Danfoss			
1	14 0065			
2				
3	02 0108			
4				
5				
6	05 1413			
7				
8	11 0437			
9	05 0166			
10				
11				
12				
13				
14				