 


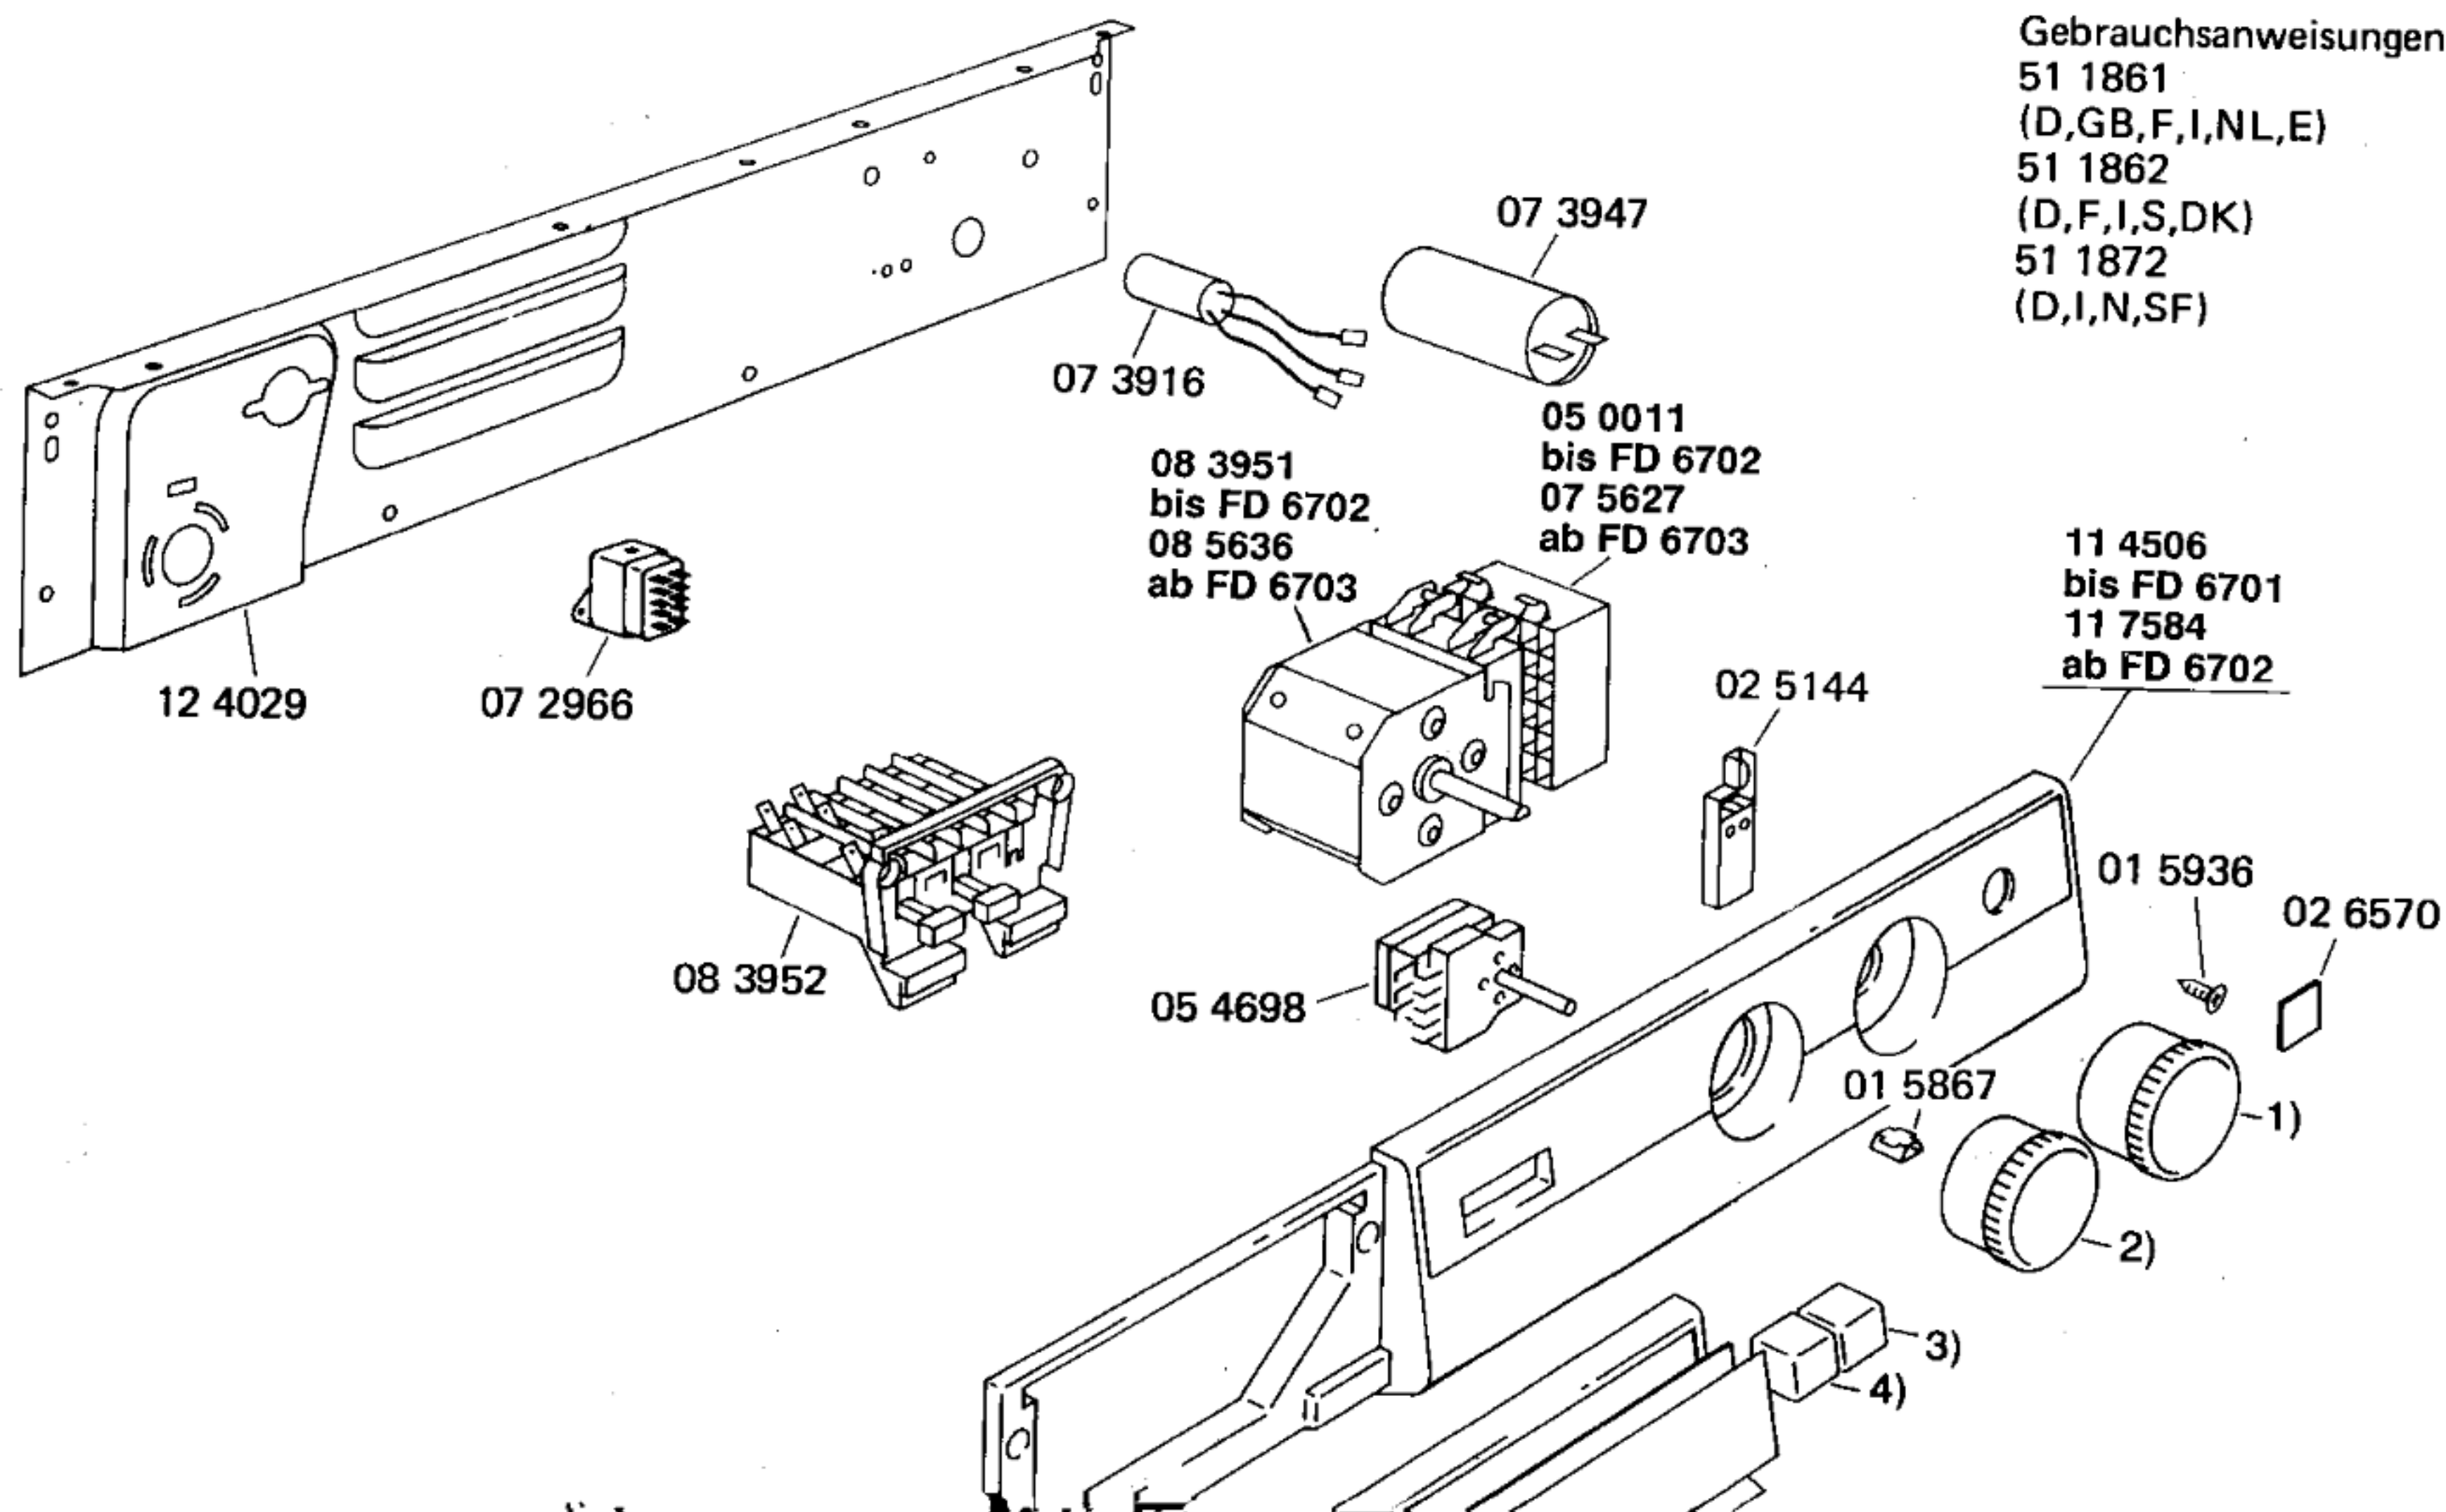

Gebrauchsanweisungen

51 1861
(D,GB,F,I,NL,E)
51 1862
(D,F,I,S,DK)
51 1872
(D,I,N,SF)

 
Aufstellanweisungen

 
51 1820
(D,GB,F,I,NL,E,P)
51 1821
(D,F,I,S,DK)
bis FD 6409
51 2223
(D,F,I,S,DK)
ab FD 6410
51 1868
(D,I,N,SF)

 
Programmtabellen

51 1858
(D,GB,F,I,NL,E)
51 1860
(D,F,I,S,DK)
51 1832
(D,I,N,SF)
51 3164
(TR,YU,GR,E)

- 1) 05 4707
bis FD 6701
05 6167
ab FD 6702
- 2) 05 4706
bis FD 6701
05 6166
ab FD 6702
- 3) 02 6617
bis FD 6701
02 8940
ab FD 6702

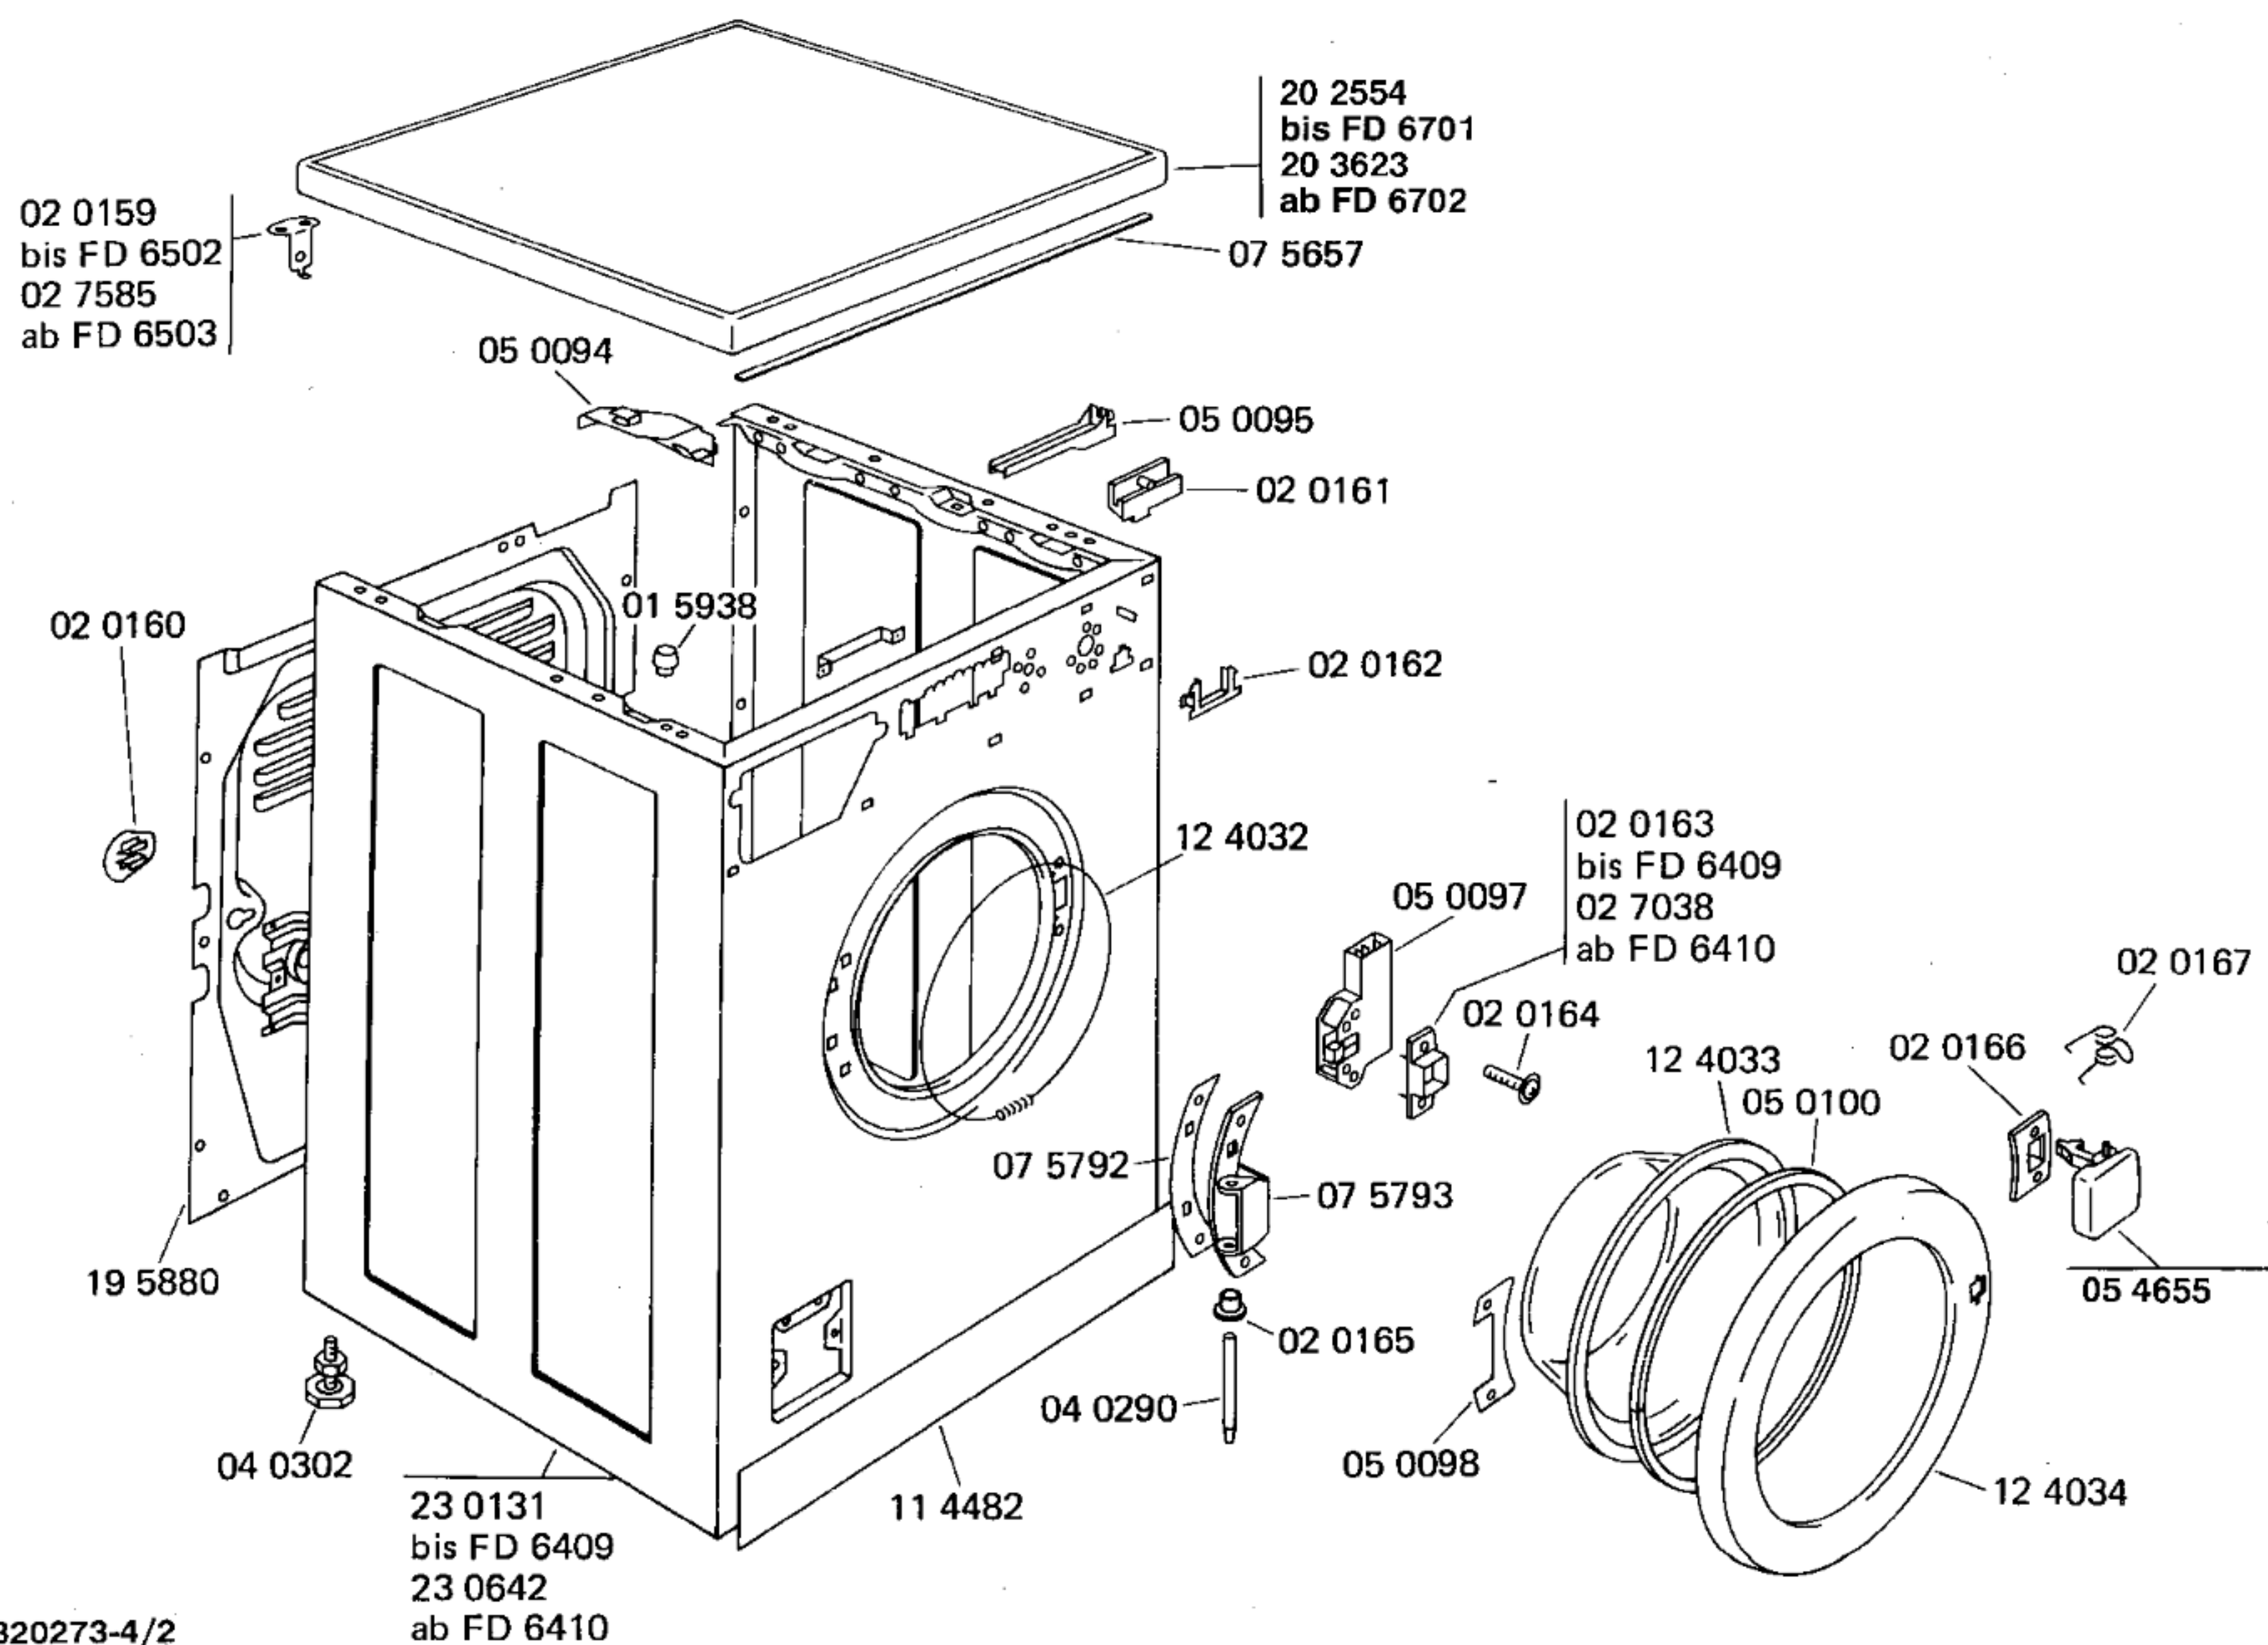

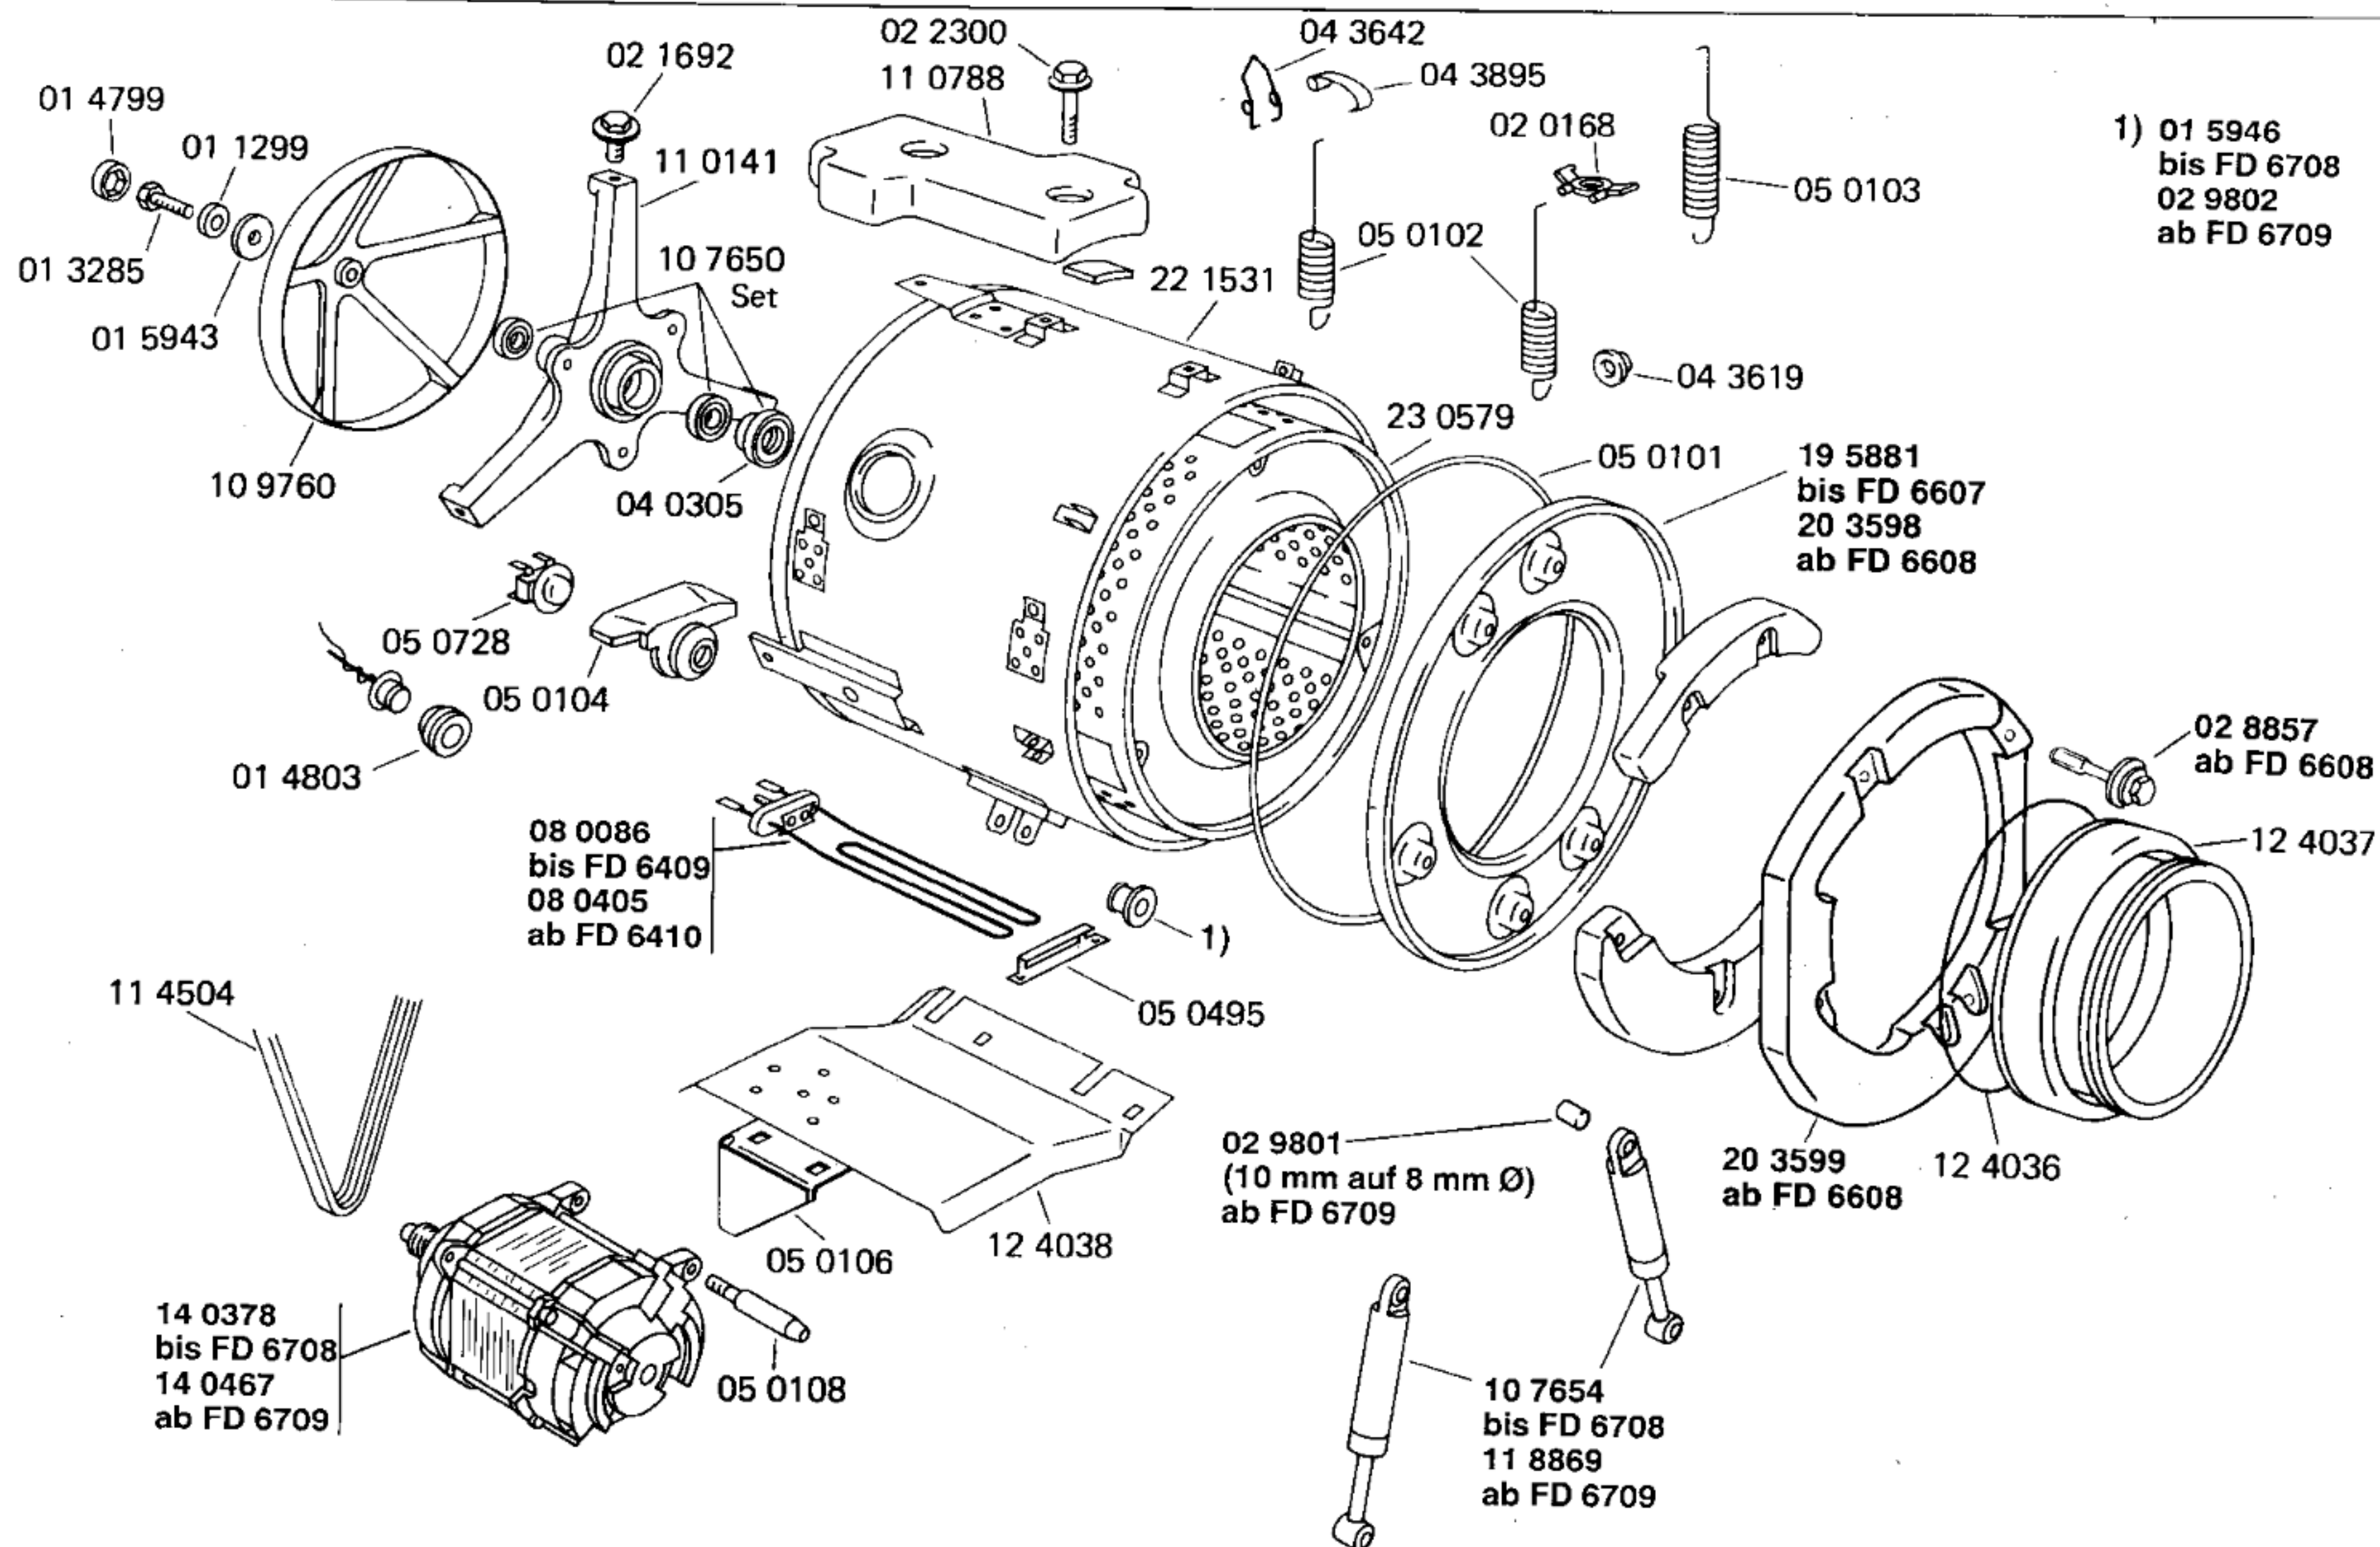

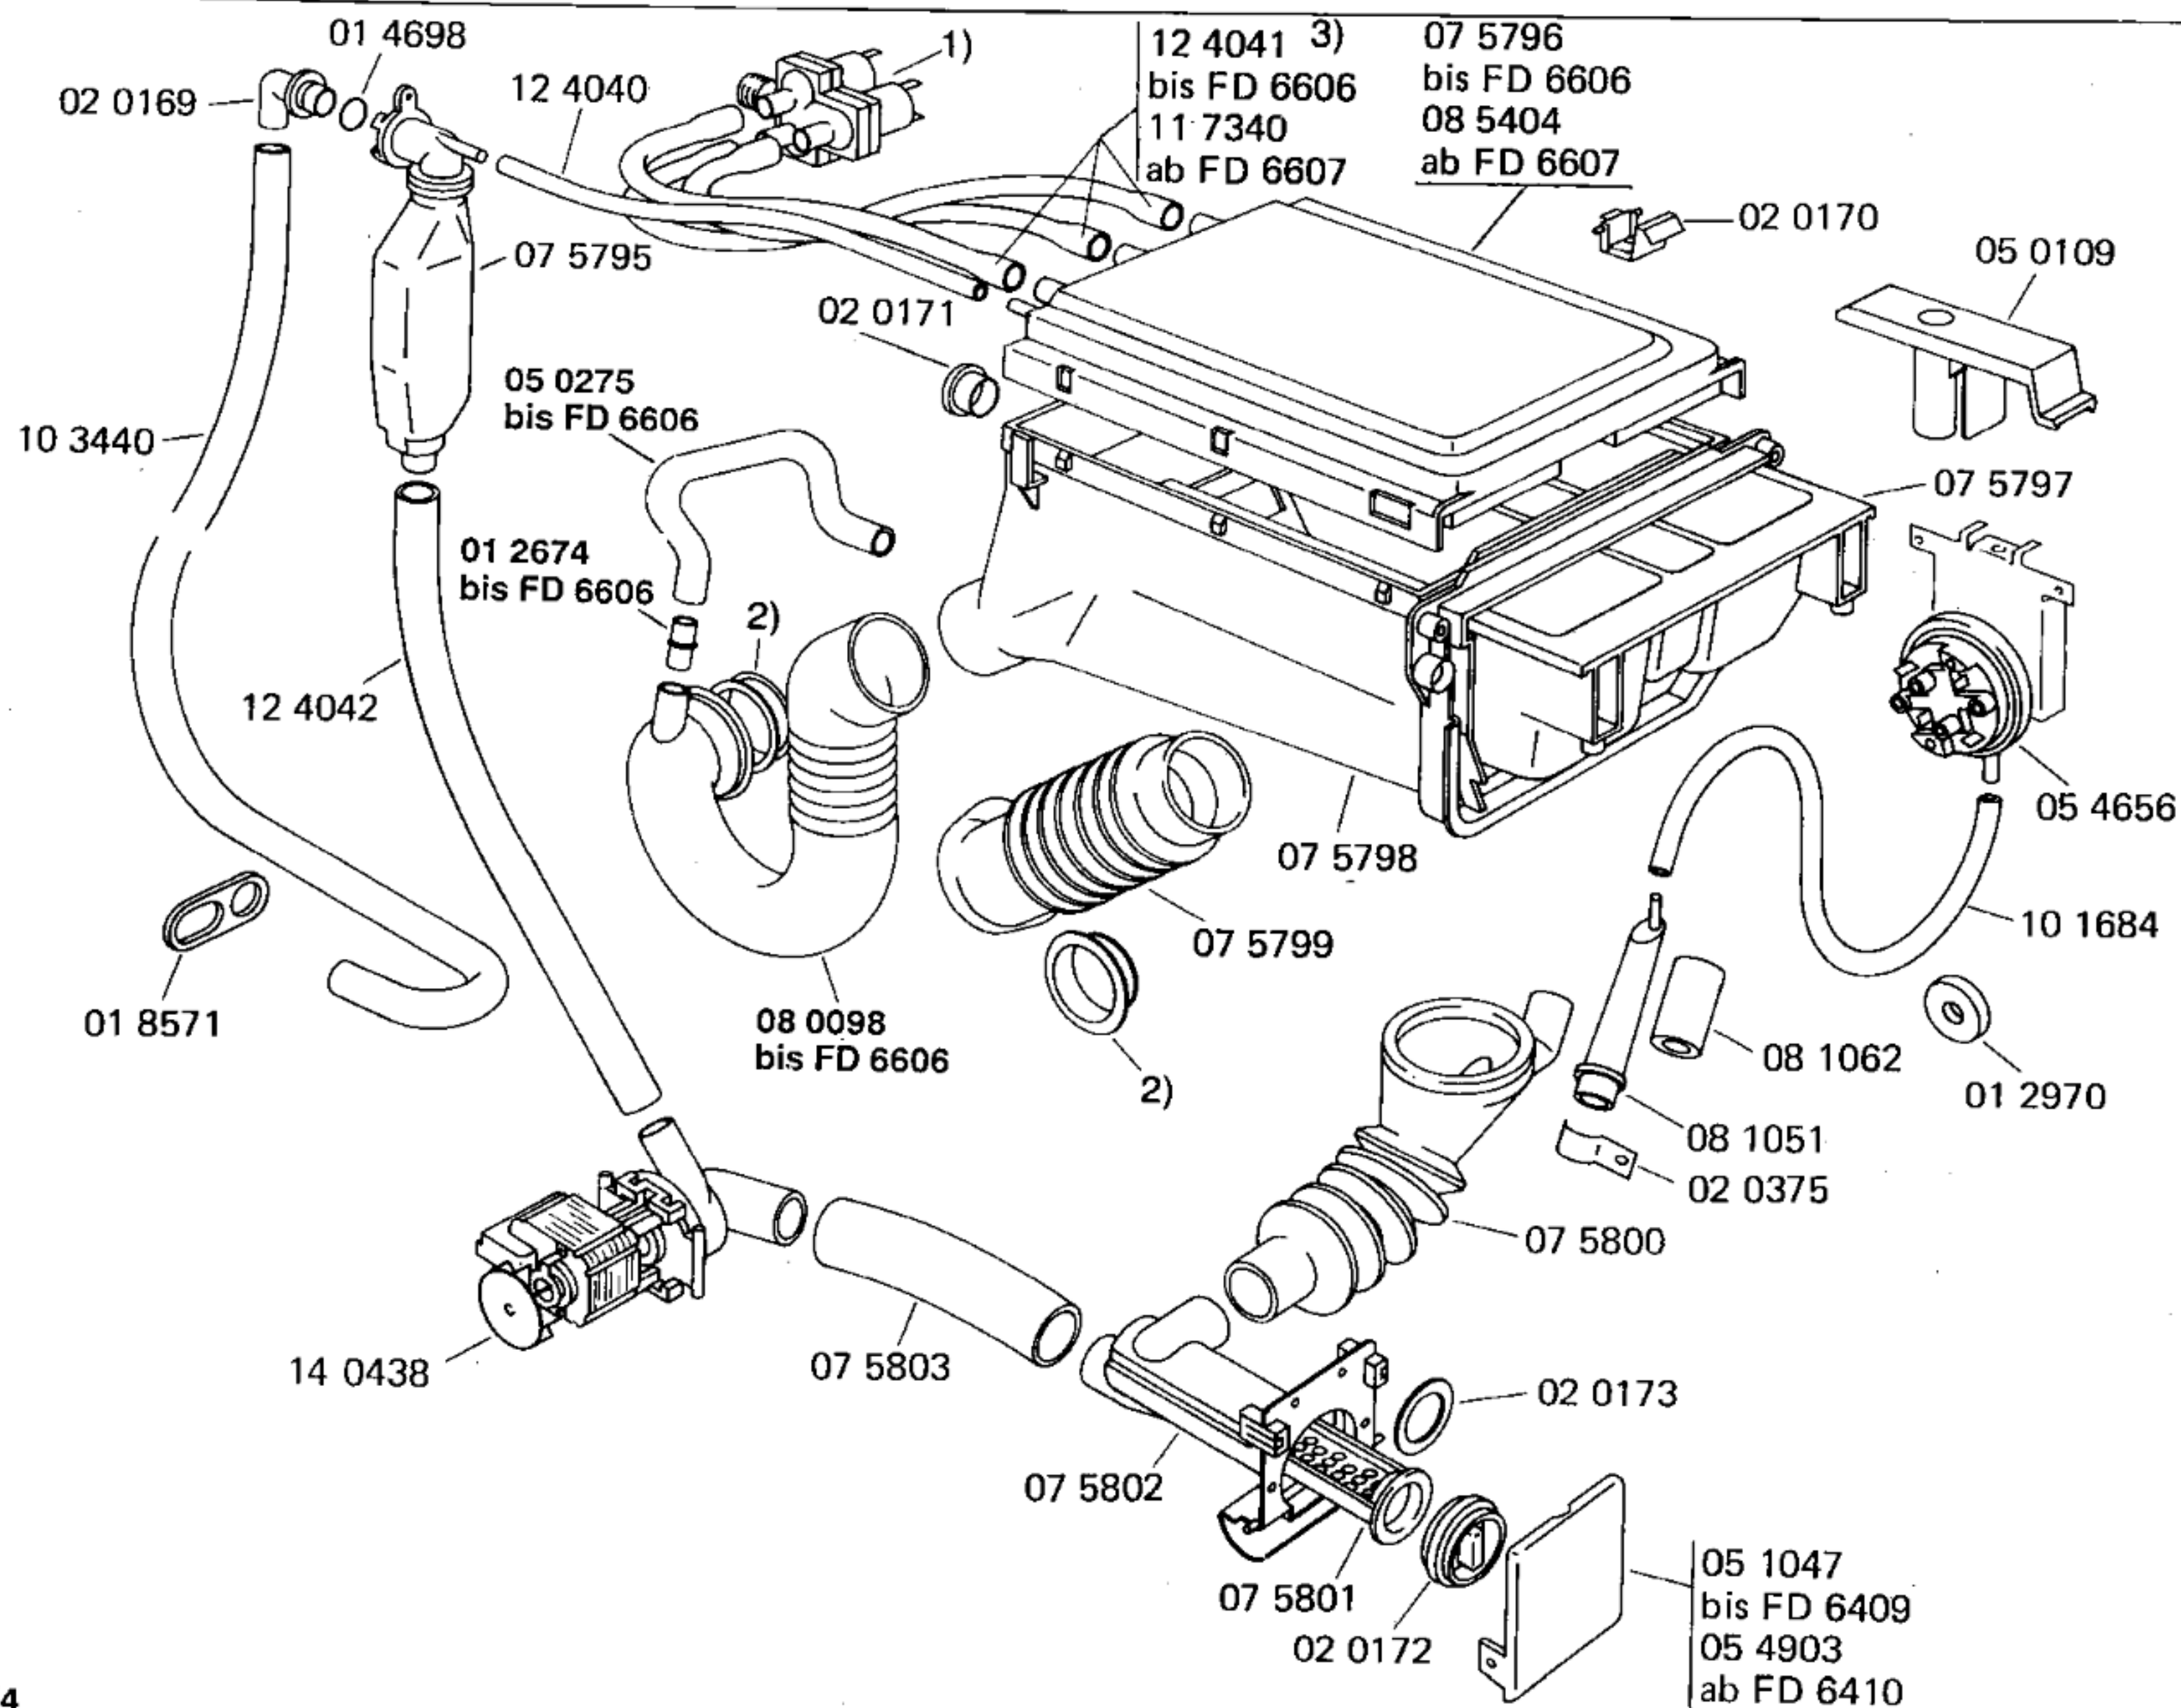

1) 08 4896
bis FD 6606
08 5401
ab FD 6607

2) 02 0177

3) Nur für D1:
FD 6407
11 5559