
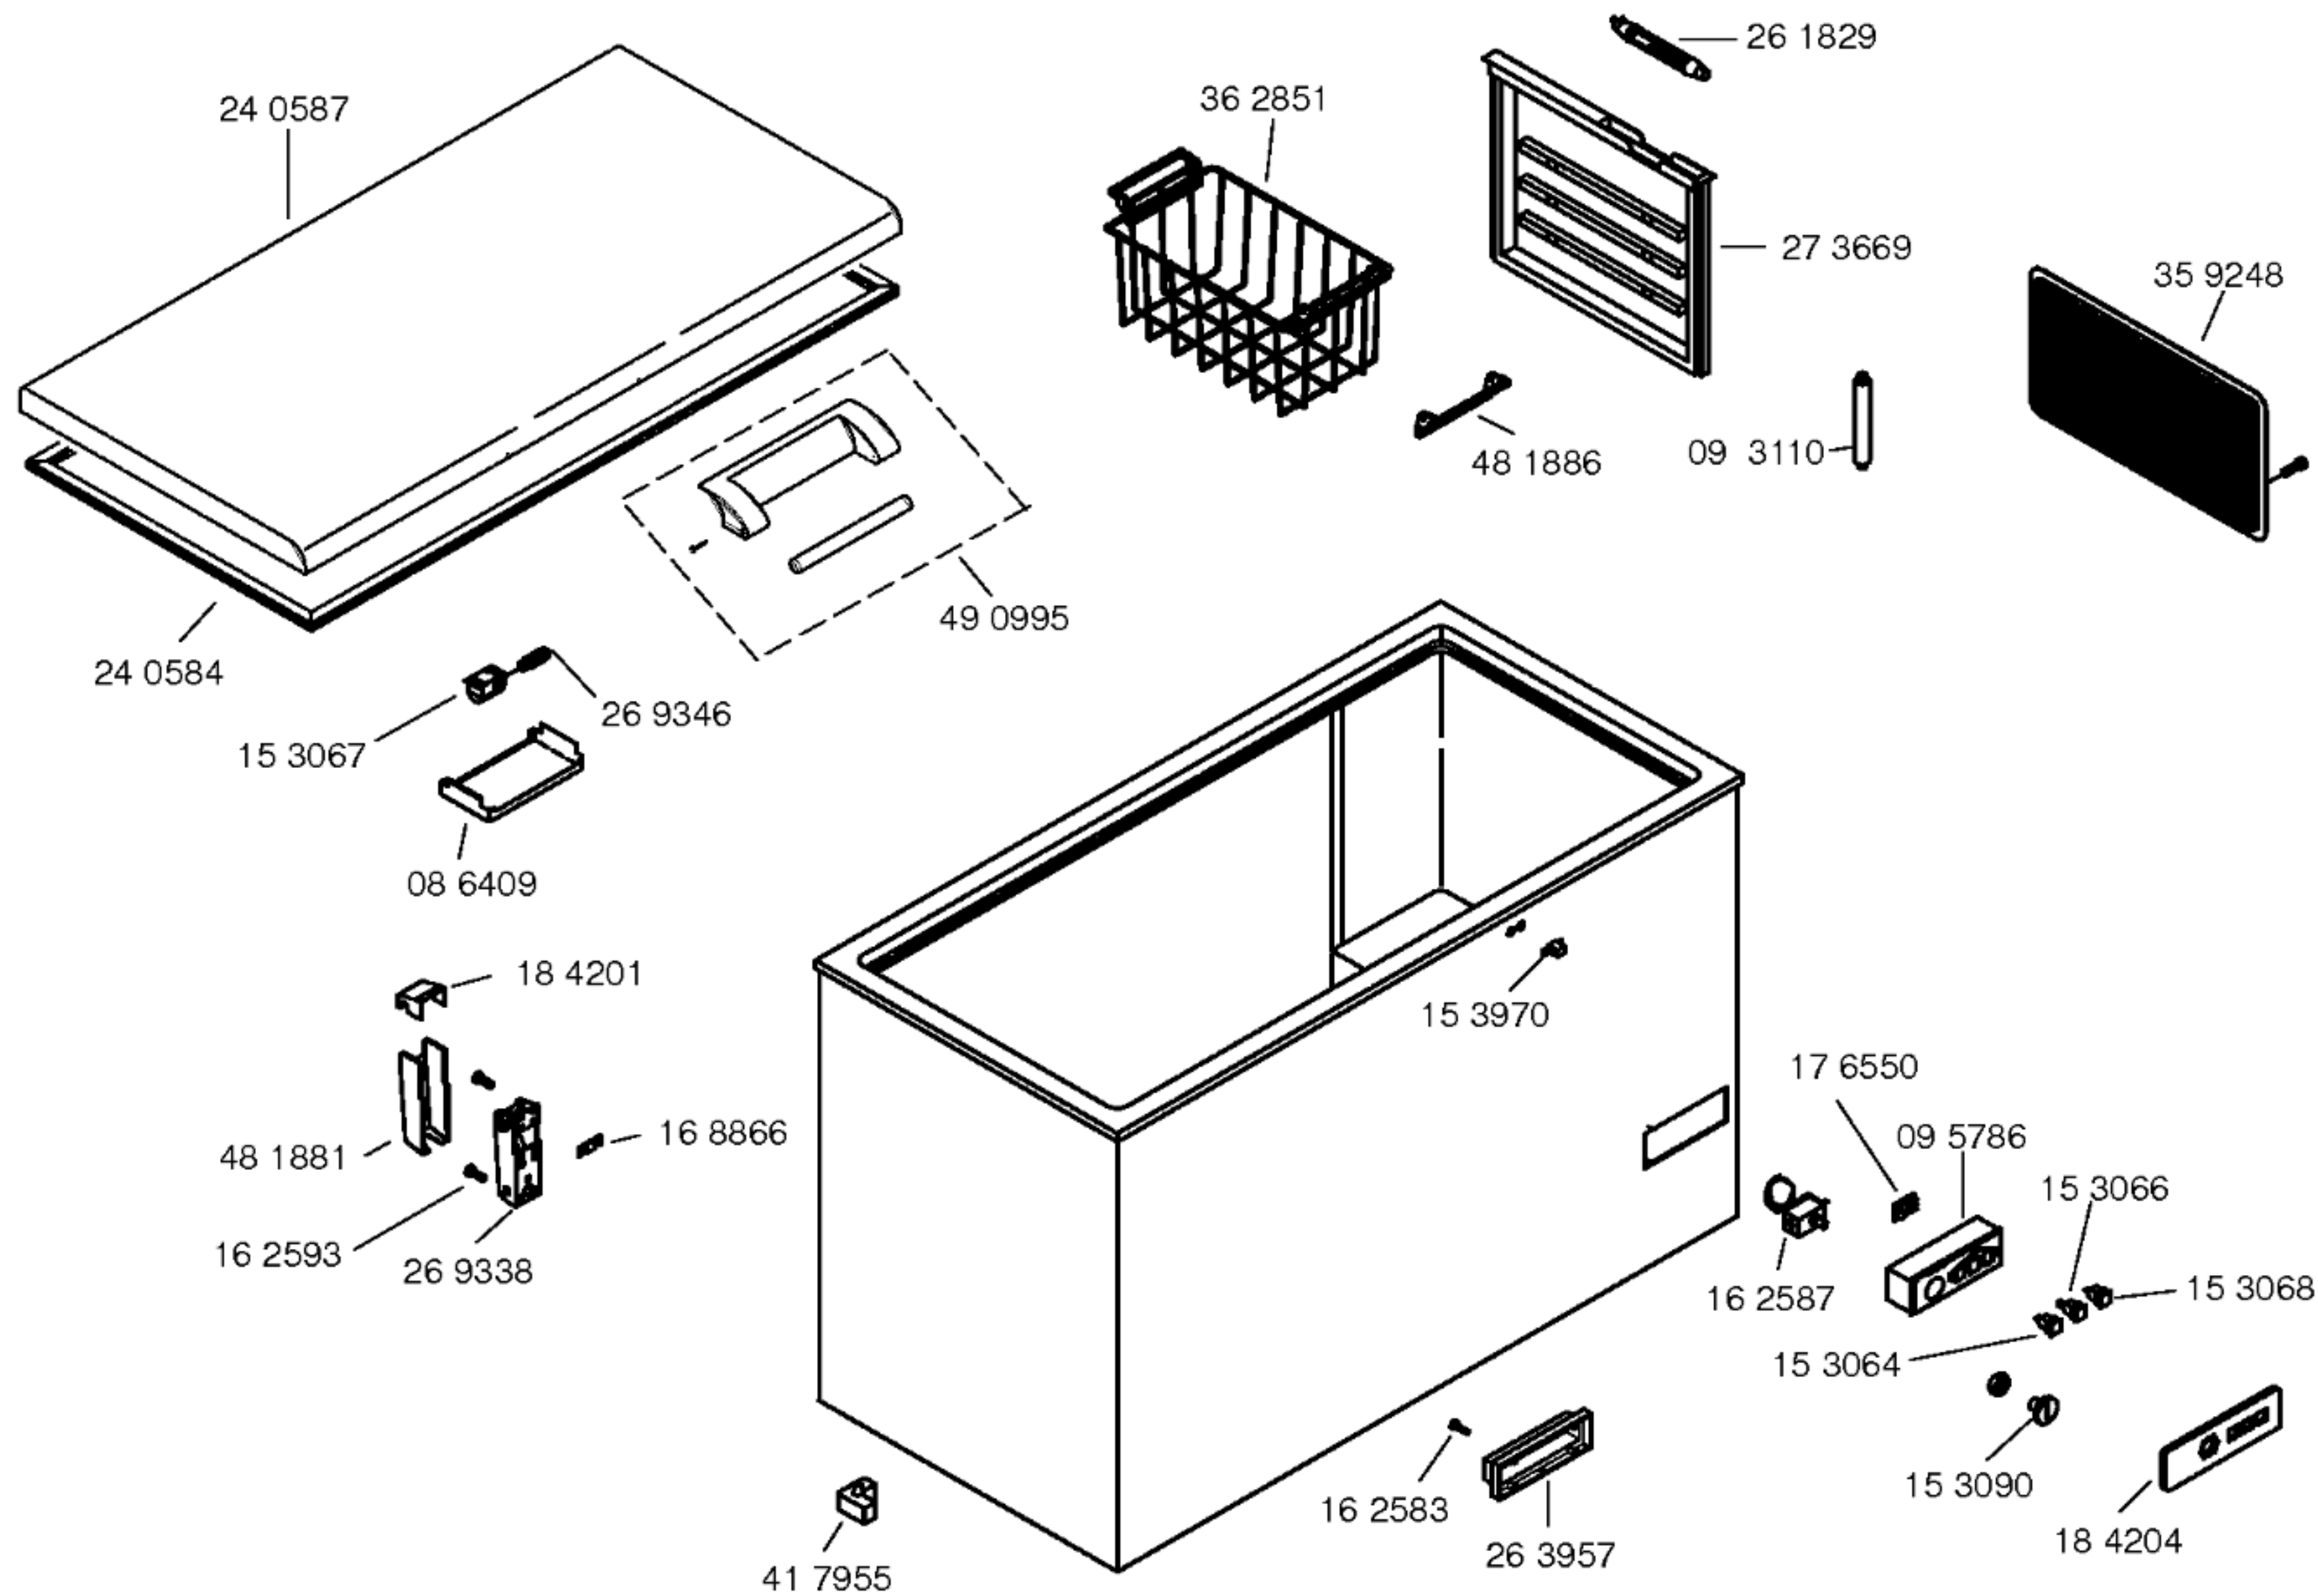


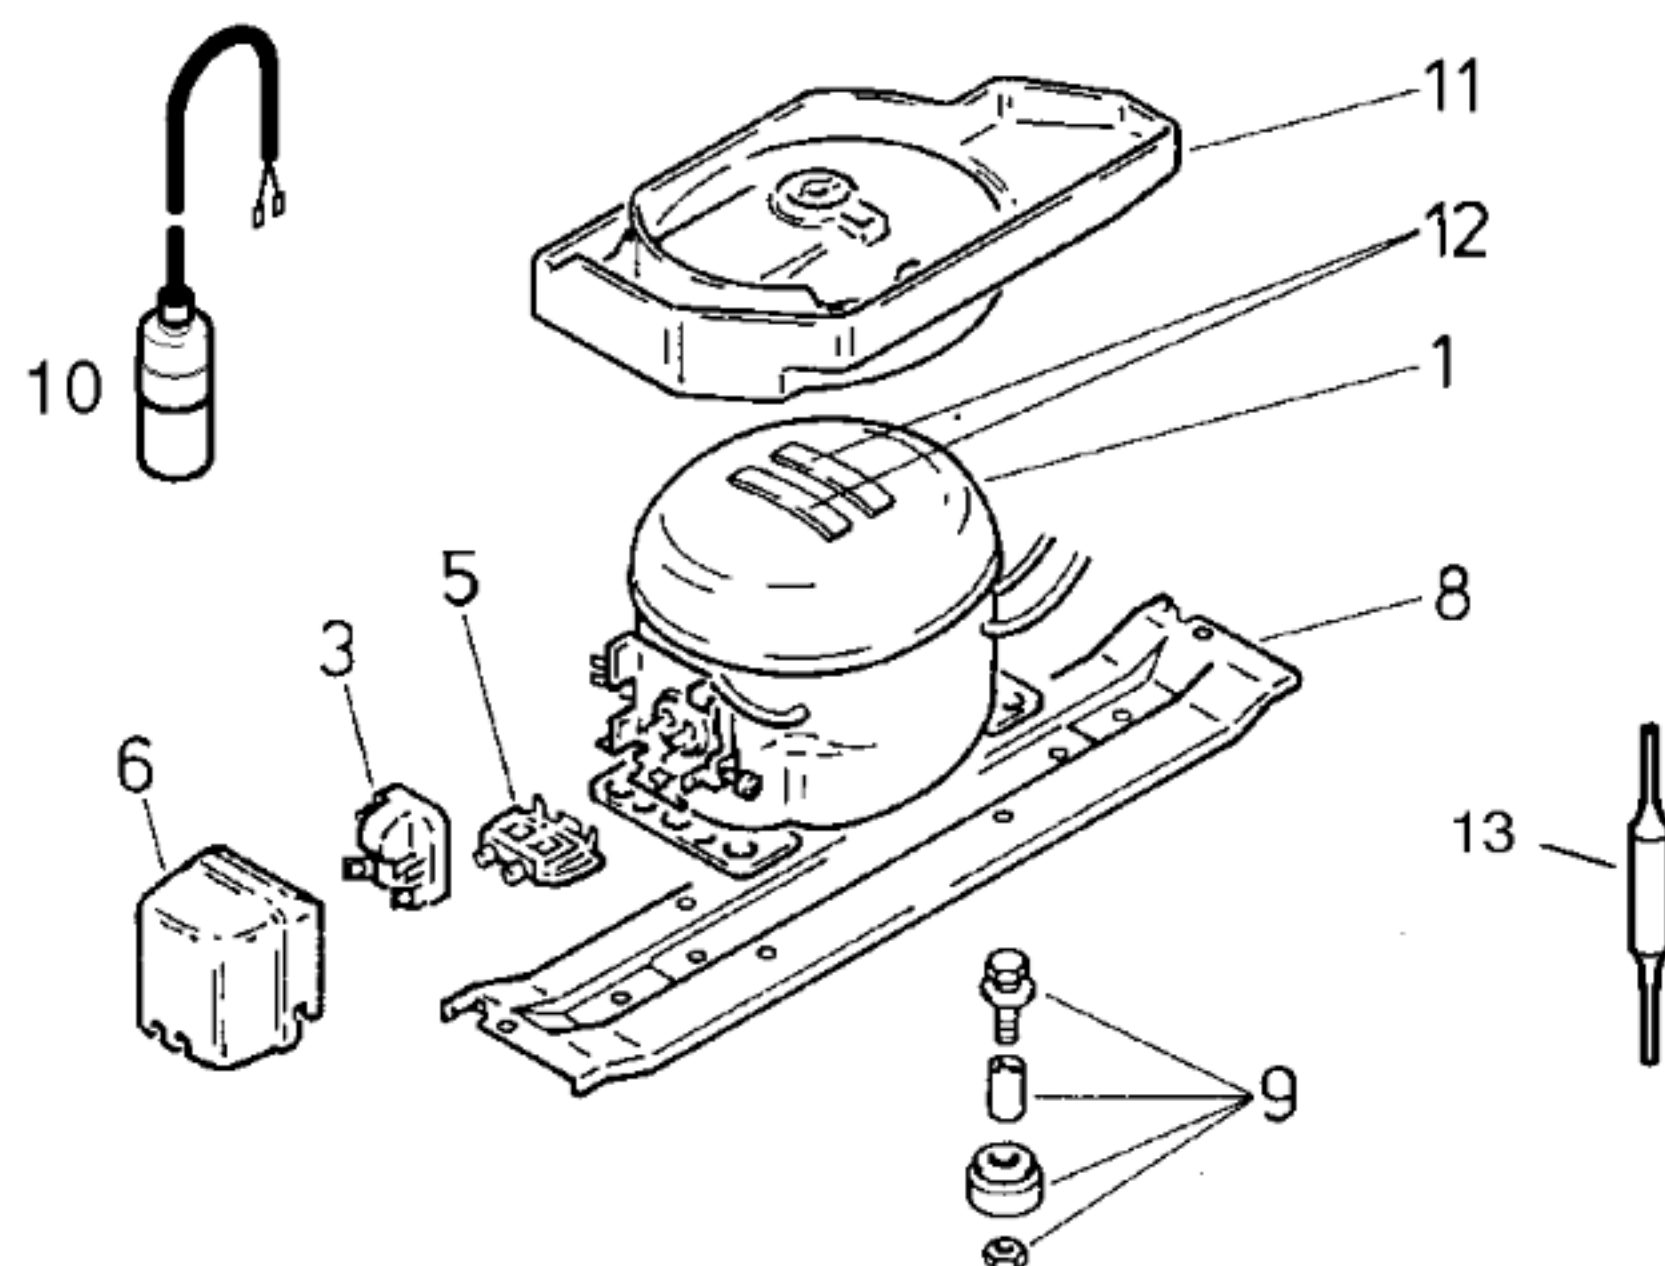

Gebrauchsanweisung
58 8071

Ident – Nummern – Konstante
3740

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur	Embraco	Danfoss	
Typ/Type	HTK70AA	TLX7,5KK	
Förderleistung/Delivery/Débit	l/h		
Anlaufstrom/Starting current/Cour de démarrage	A		
Widerstand/Resistance/Résistance	Ω		
Hi/main/prin	Ω		
Hi/aux	Ω		
Temp.-Regler/Thermostat			
Typ/Type			
Regelstellung/Position			
Schaltwerte/Switching values	"warm"		
Valeurs de commutation	"kalt"		
	"alarm"		
Füllmenge/Fill.quantity/Charge	R600a		
Anschlußwert/Conn.load/Puiss. connectée	W		
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Temp.-Regler/Thermostat			
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		

	V01,V02	V03	
Pos.	Embraco	Danfoss	
	HTK70AA	TLX7.5KK	
1	14 3405	14 3860	
2			
3	18 8574	151055	
4			
5			
6	18 8573	151072	
7			
8			
9	15 3069	15 3069	
10	26 8335	26 8335	
11			
12			
13			