 
 
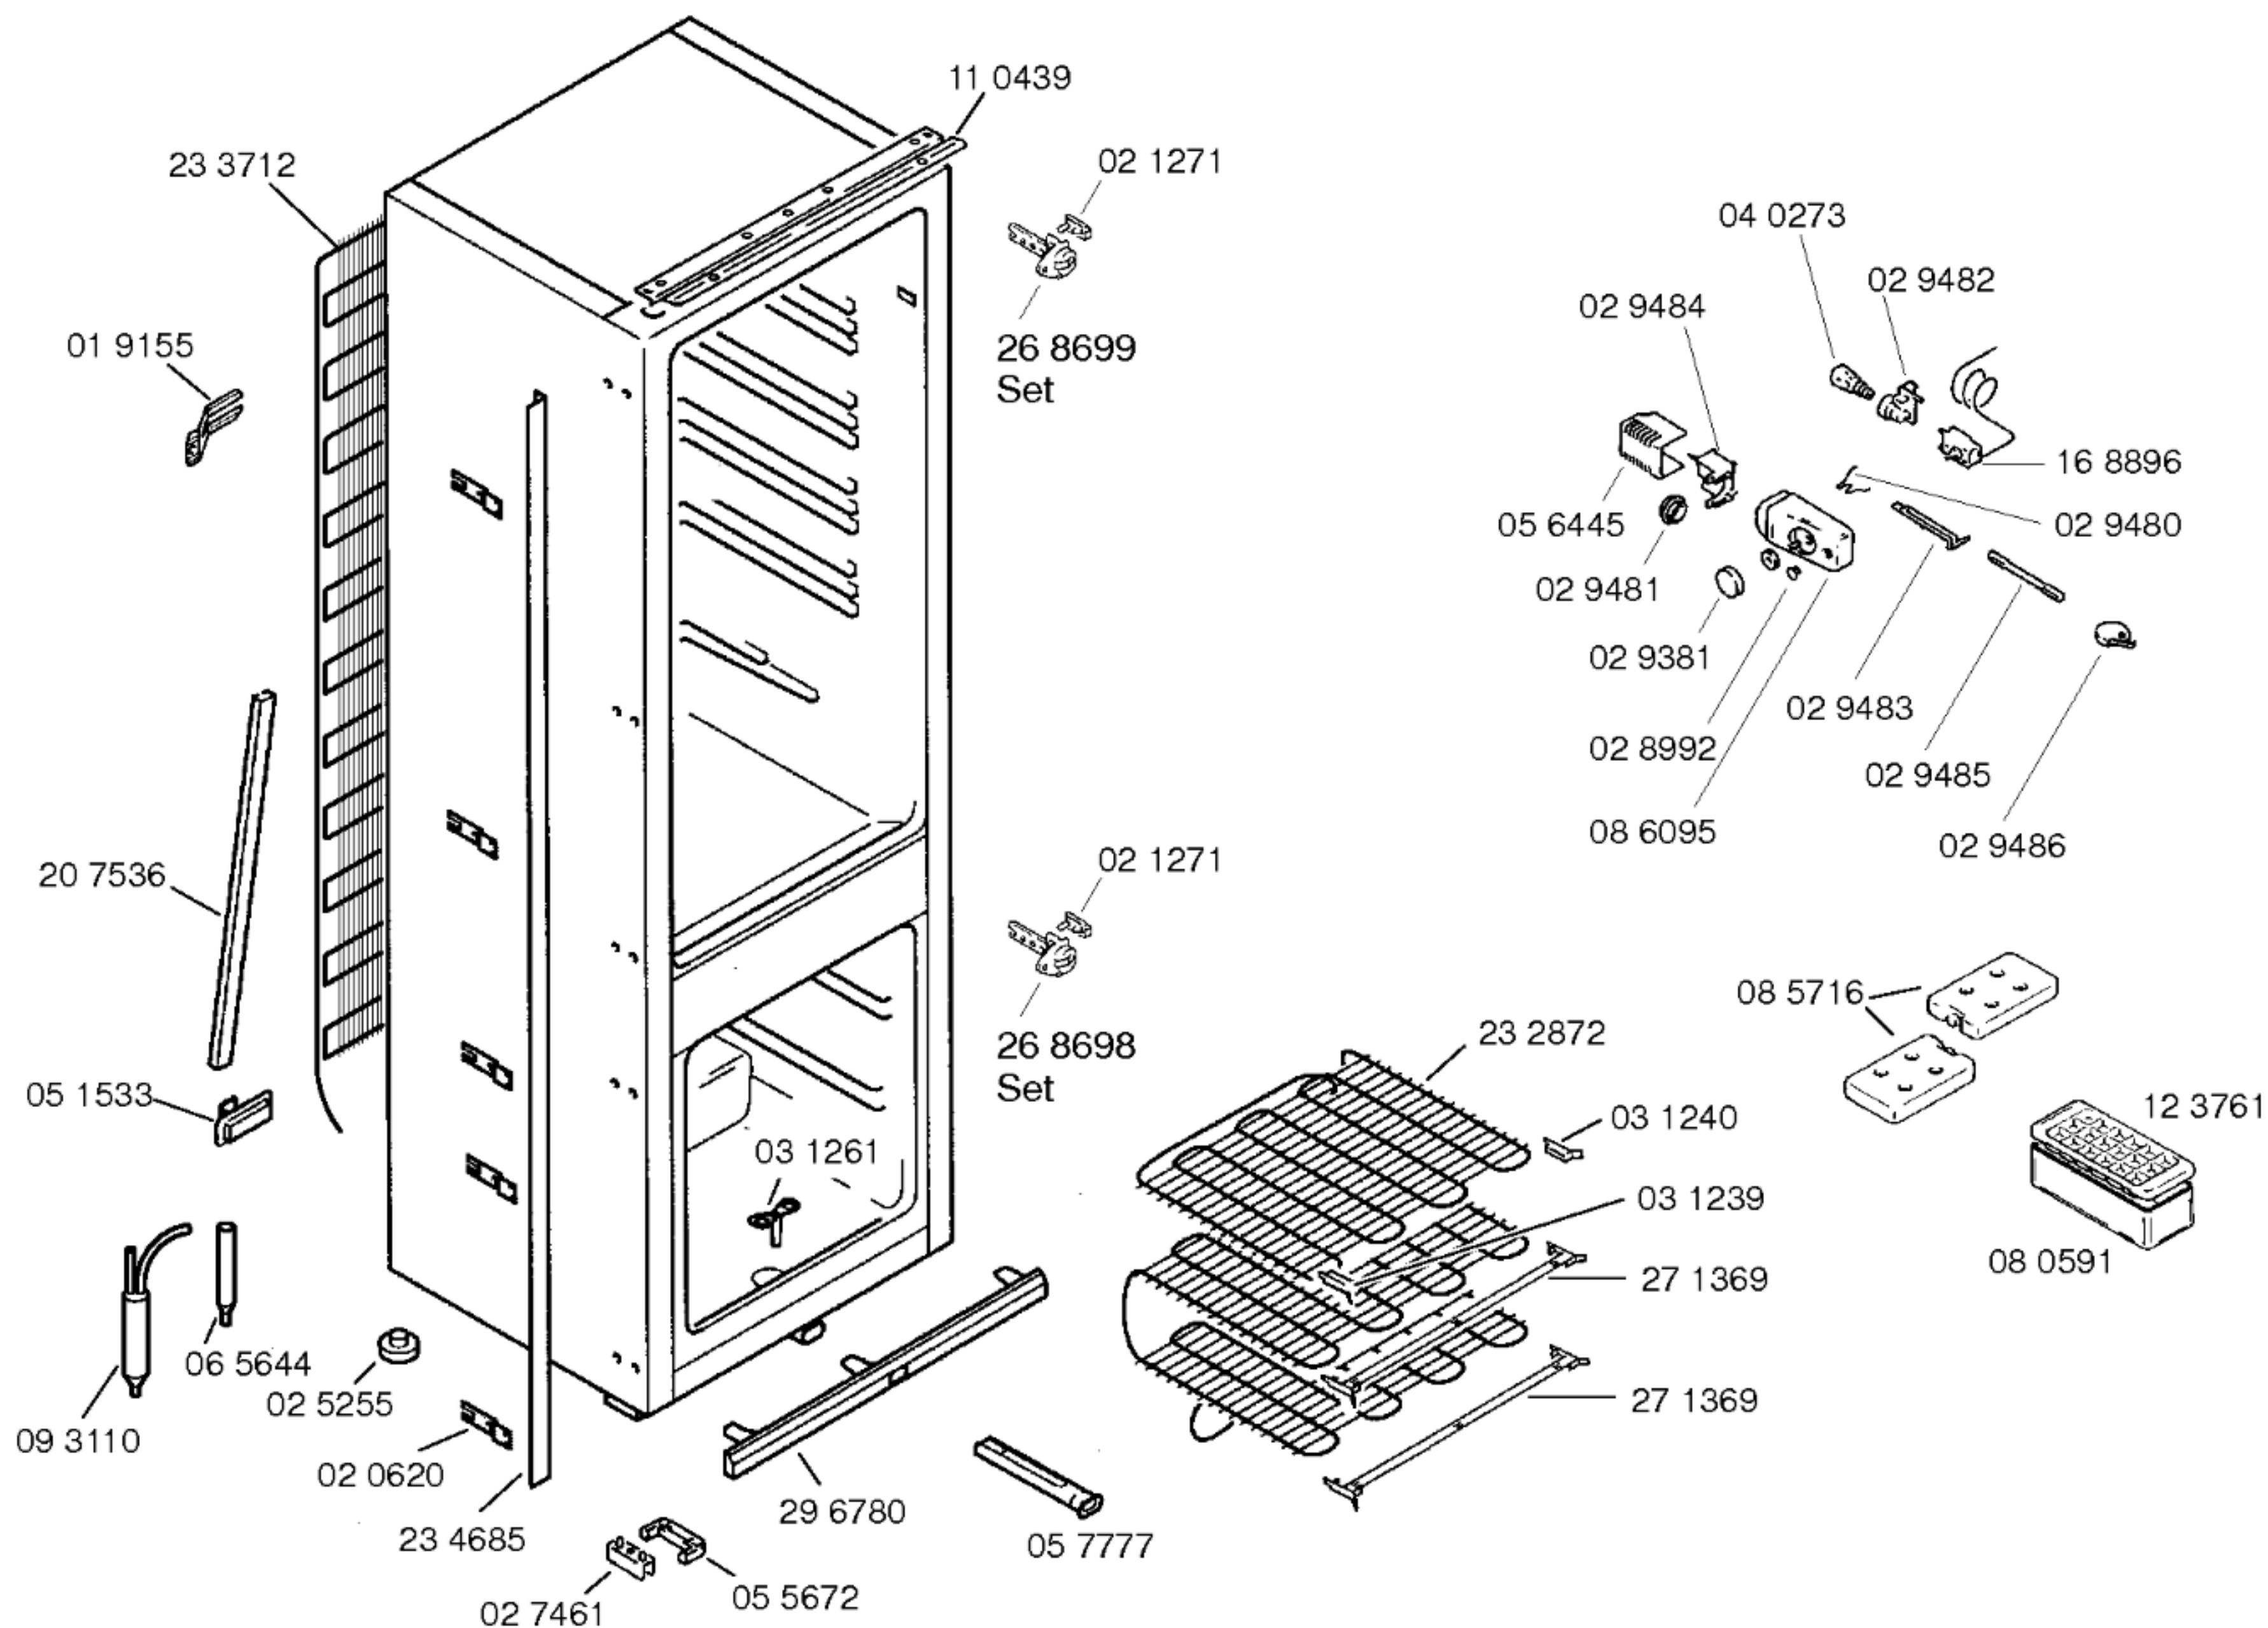 


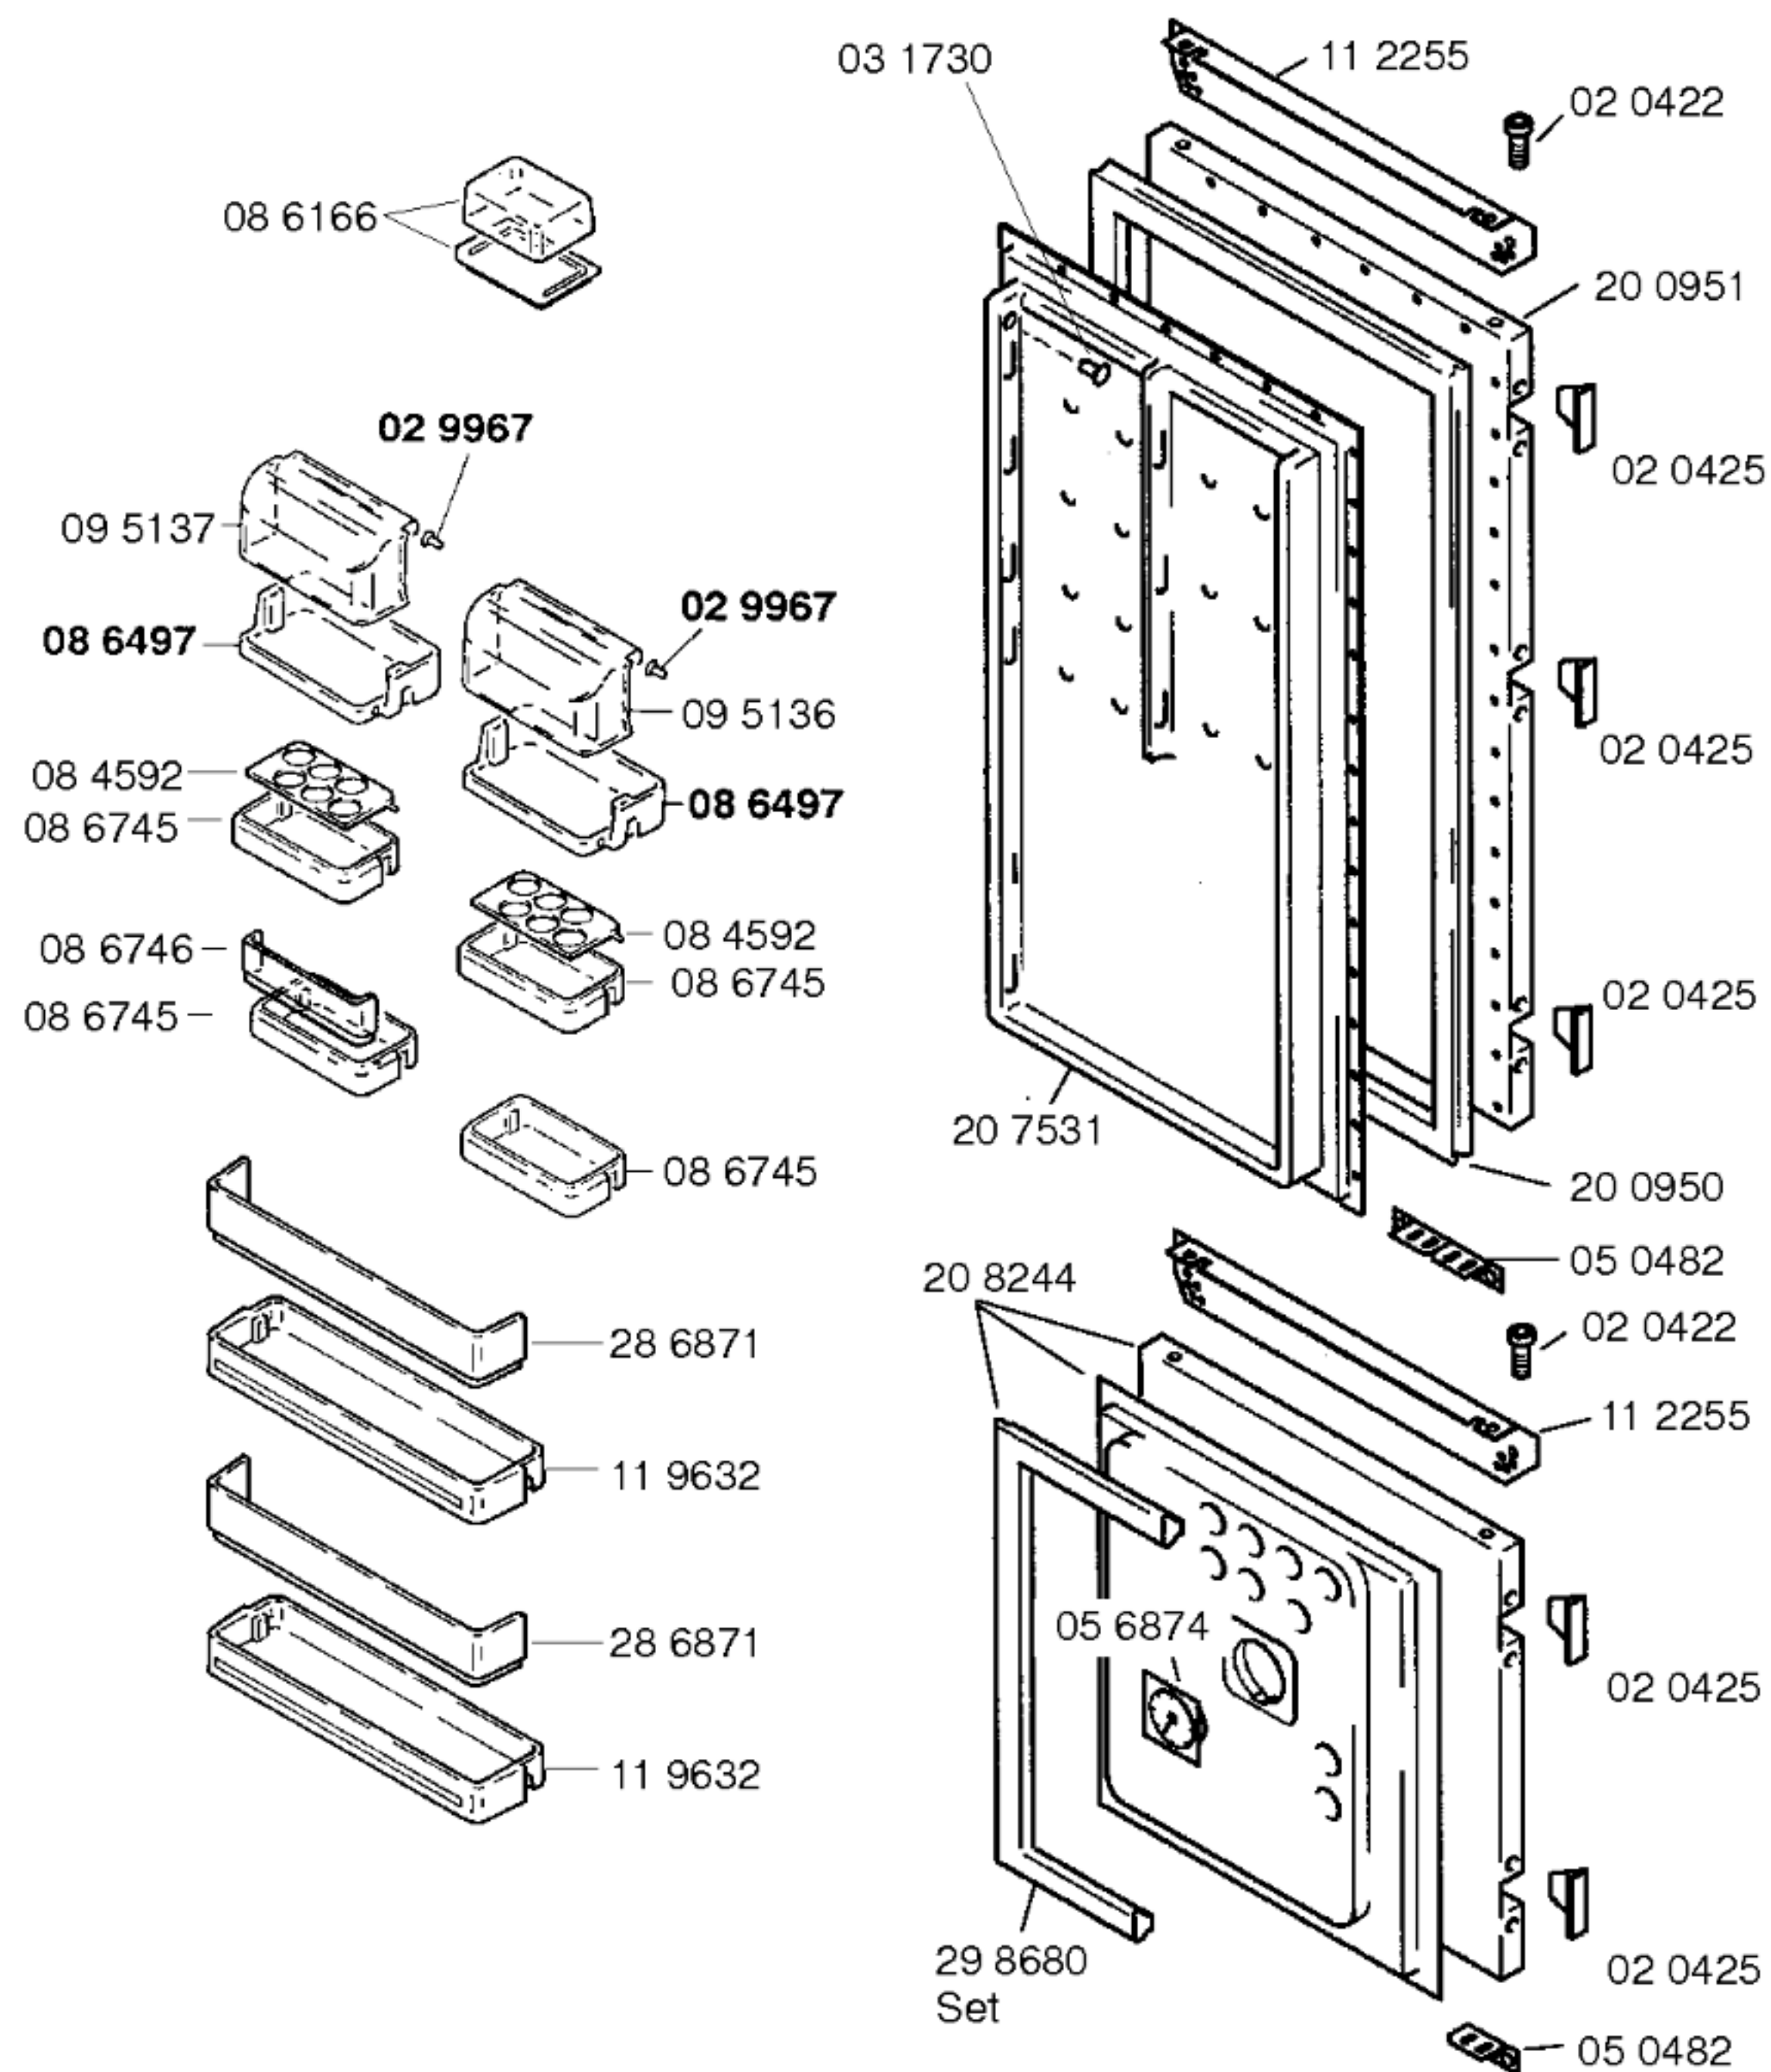


Gebrauchsanweisung
51 5681
(D,GB,F,I,NL,S,E,DK,N,,SF)

Montageanleitung
51 5546
(D,GB,F,I,NL,S,E,DK,N,,SF)

08 4137
Befestigungssatz
08 4136
Schraubensatz

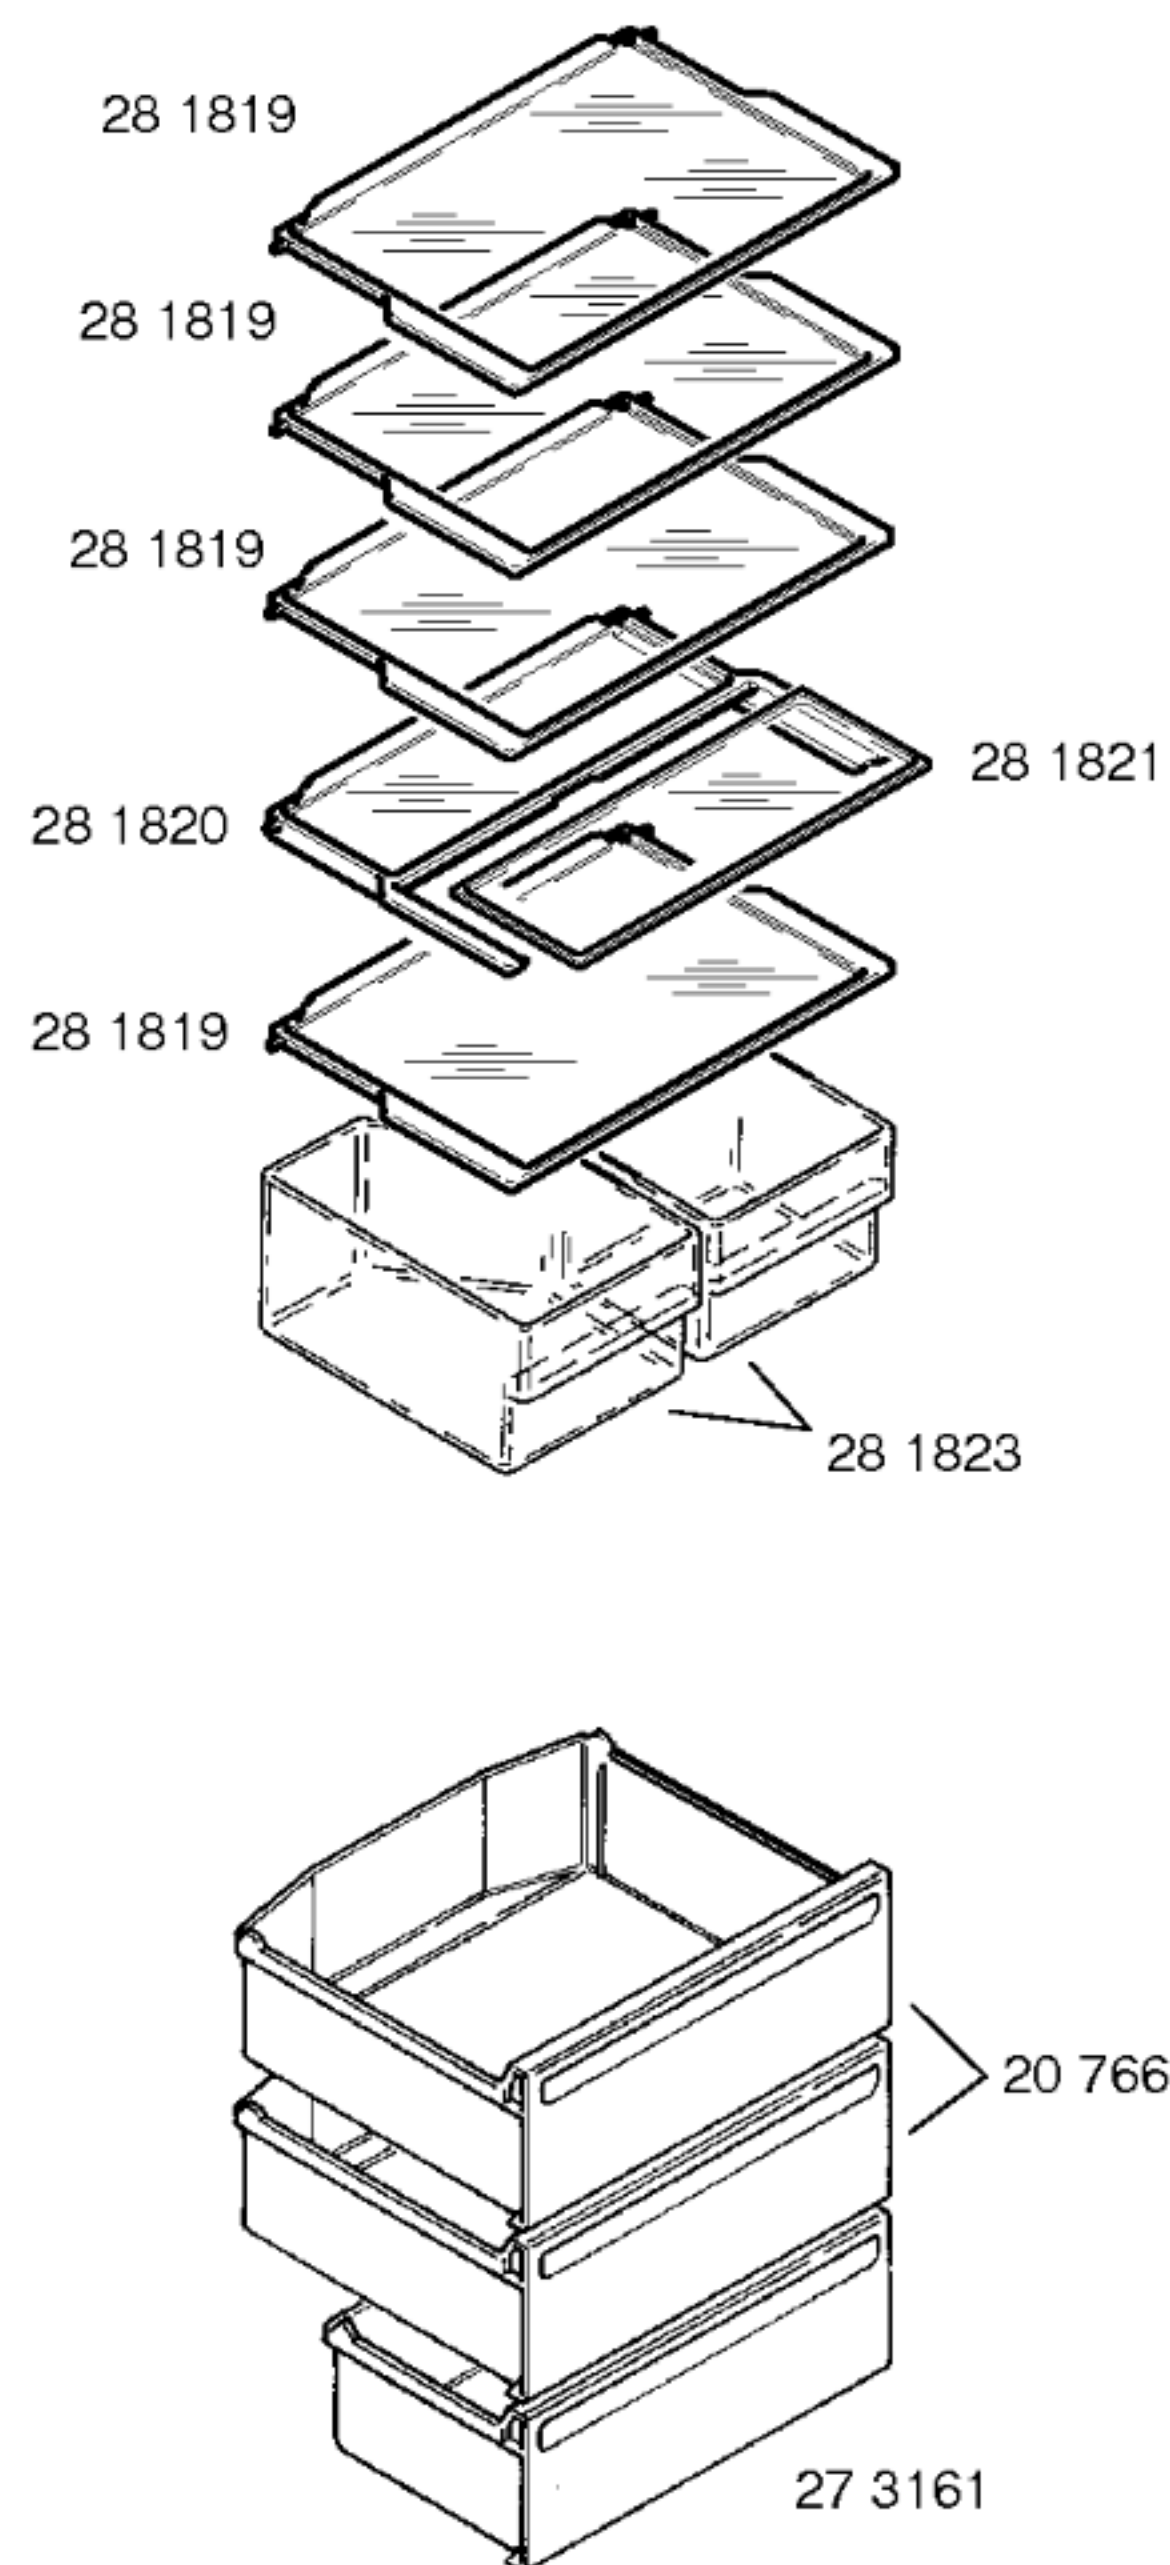

 07 4445-V01
09 6325-V02

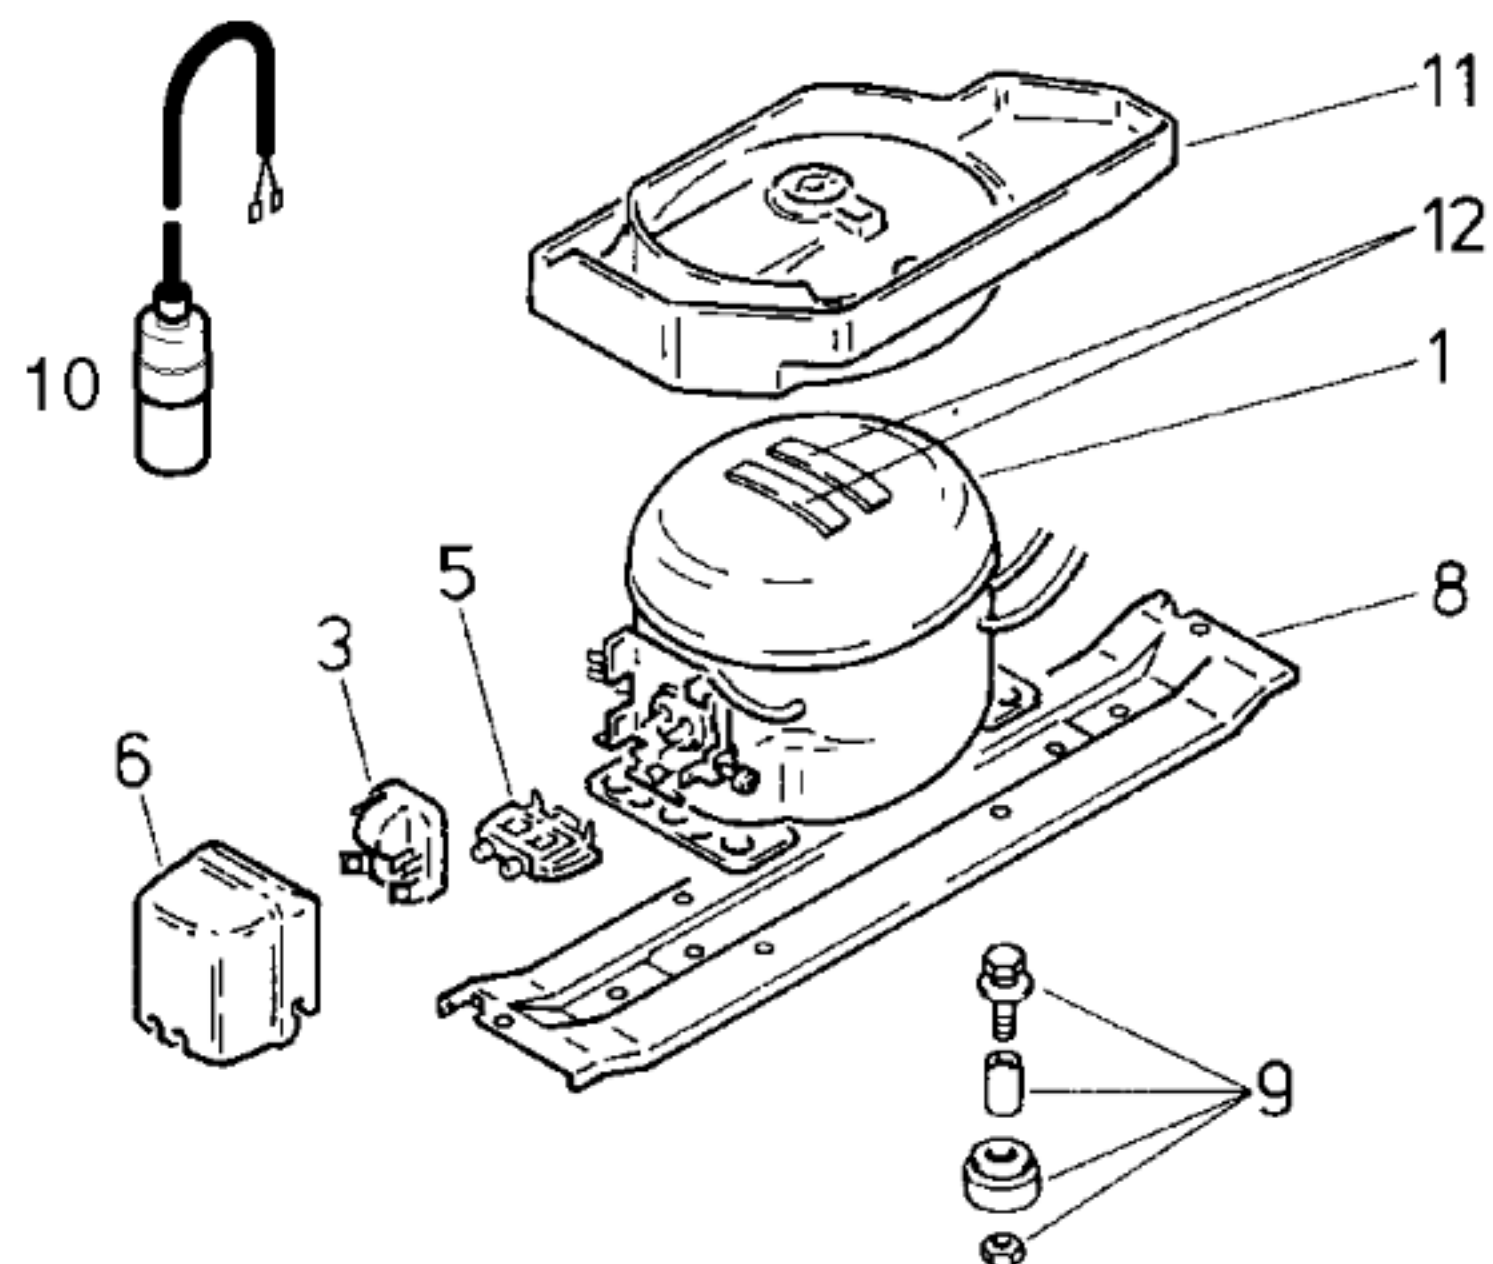

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		NLE 15 K		
Förderleistung/Delivery/Débit	l/h	2637		
Anlaufstrom/Starting current/Cour. de démarrage	A			
Widerstand/Resistance/Résistance	Ha/main/prin. Ω			
	Hi/aux Ω			
Temp.-Regler/Thermostat		RCO K59		
Typ/Type		KER		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“ $^{\circ}\text{C}$	+4,5	+4,5	
Valeurs de commutation	„aus“	-32,0	-21	
	(„abtauen“ od.) „alarm“			
Füllmenge/Fill.quantity/Charge	R600a	g	*	
Anschlußwert/Conn.load/Puiss. connectée		W	150	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Resistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			

* siehe Typenschild

Pos.			
	Danfoss		
	NLE 15 K		
1	14 1752		
2			
3	15 1055		
4			
5	15 1053		
6	15 1072		
7			
8	28 1825		
9	05 0166		
10	05 9467		
11	28 6924		
12	05 6008		