


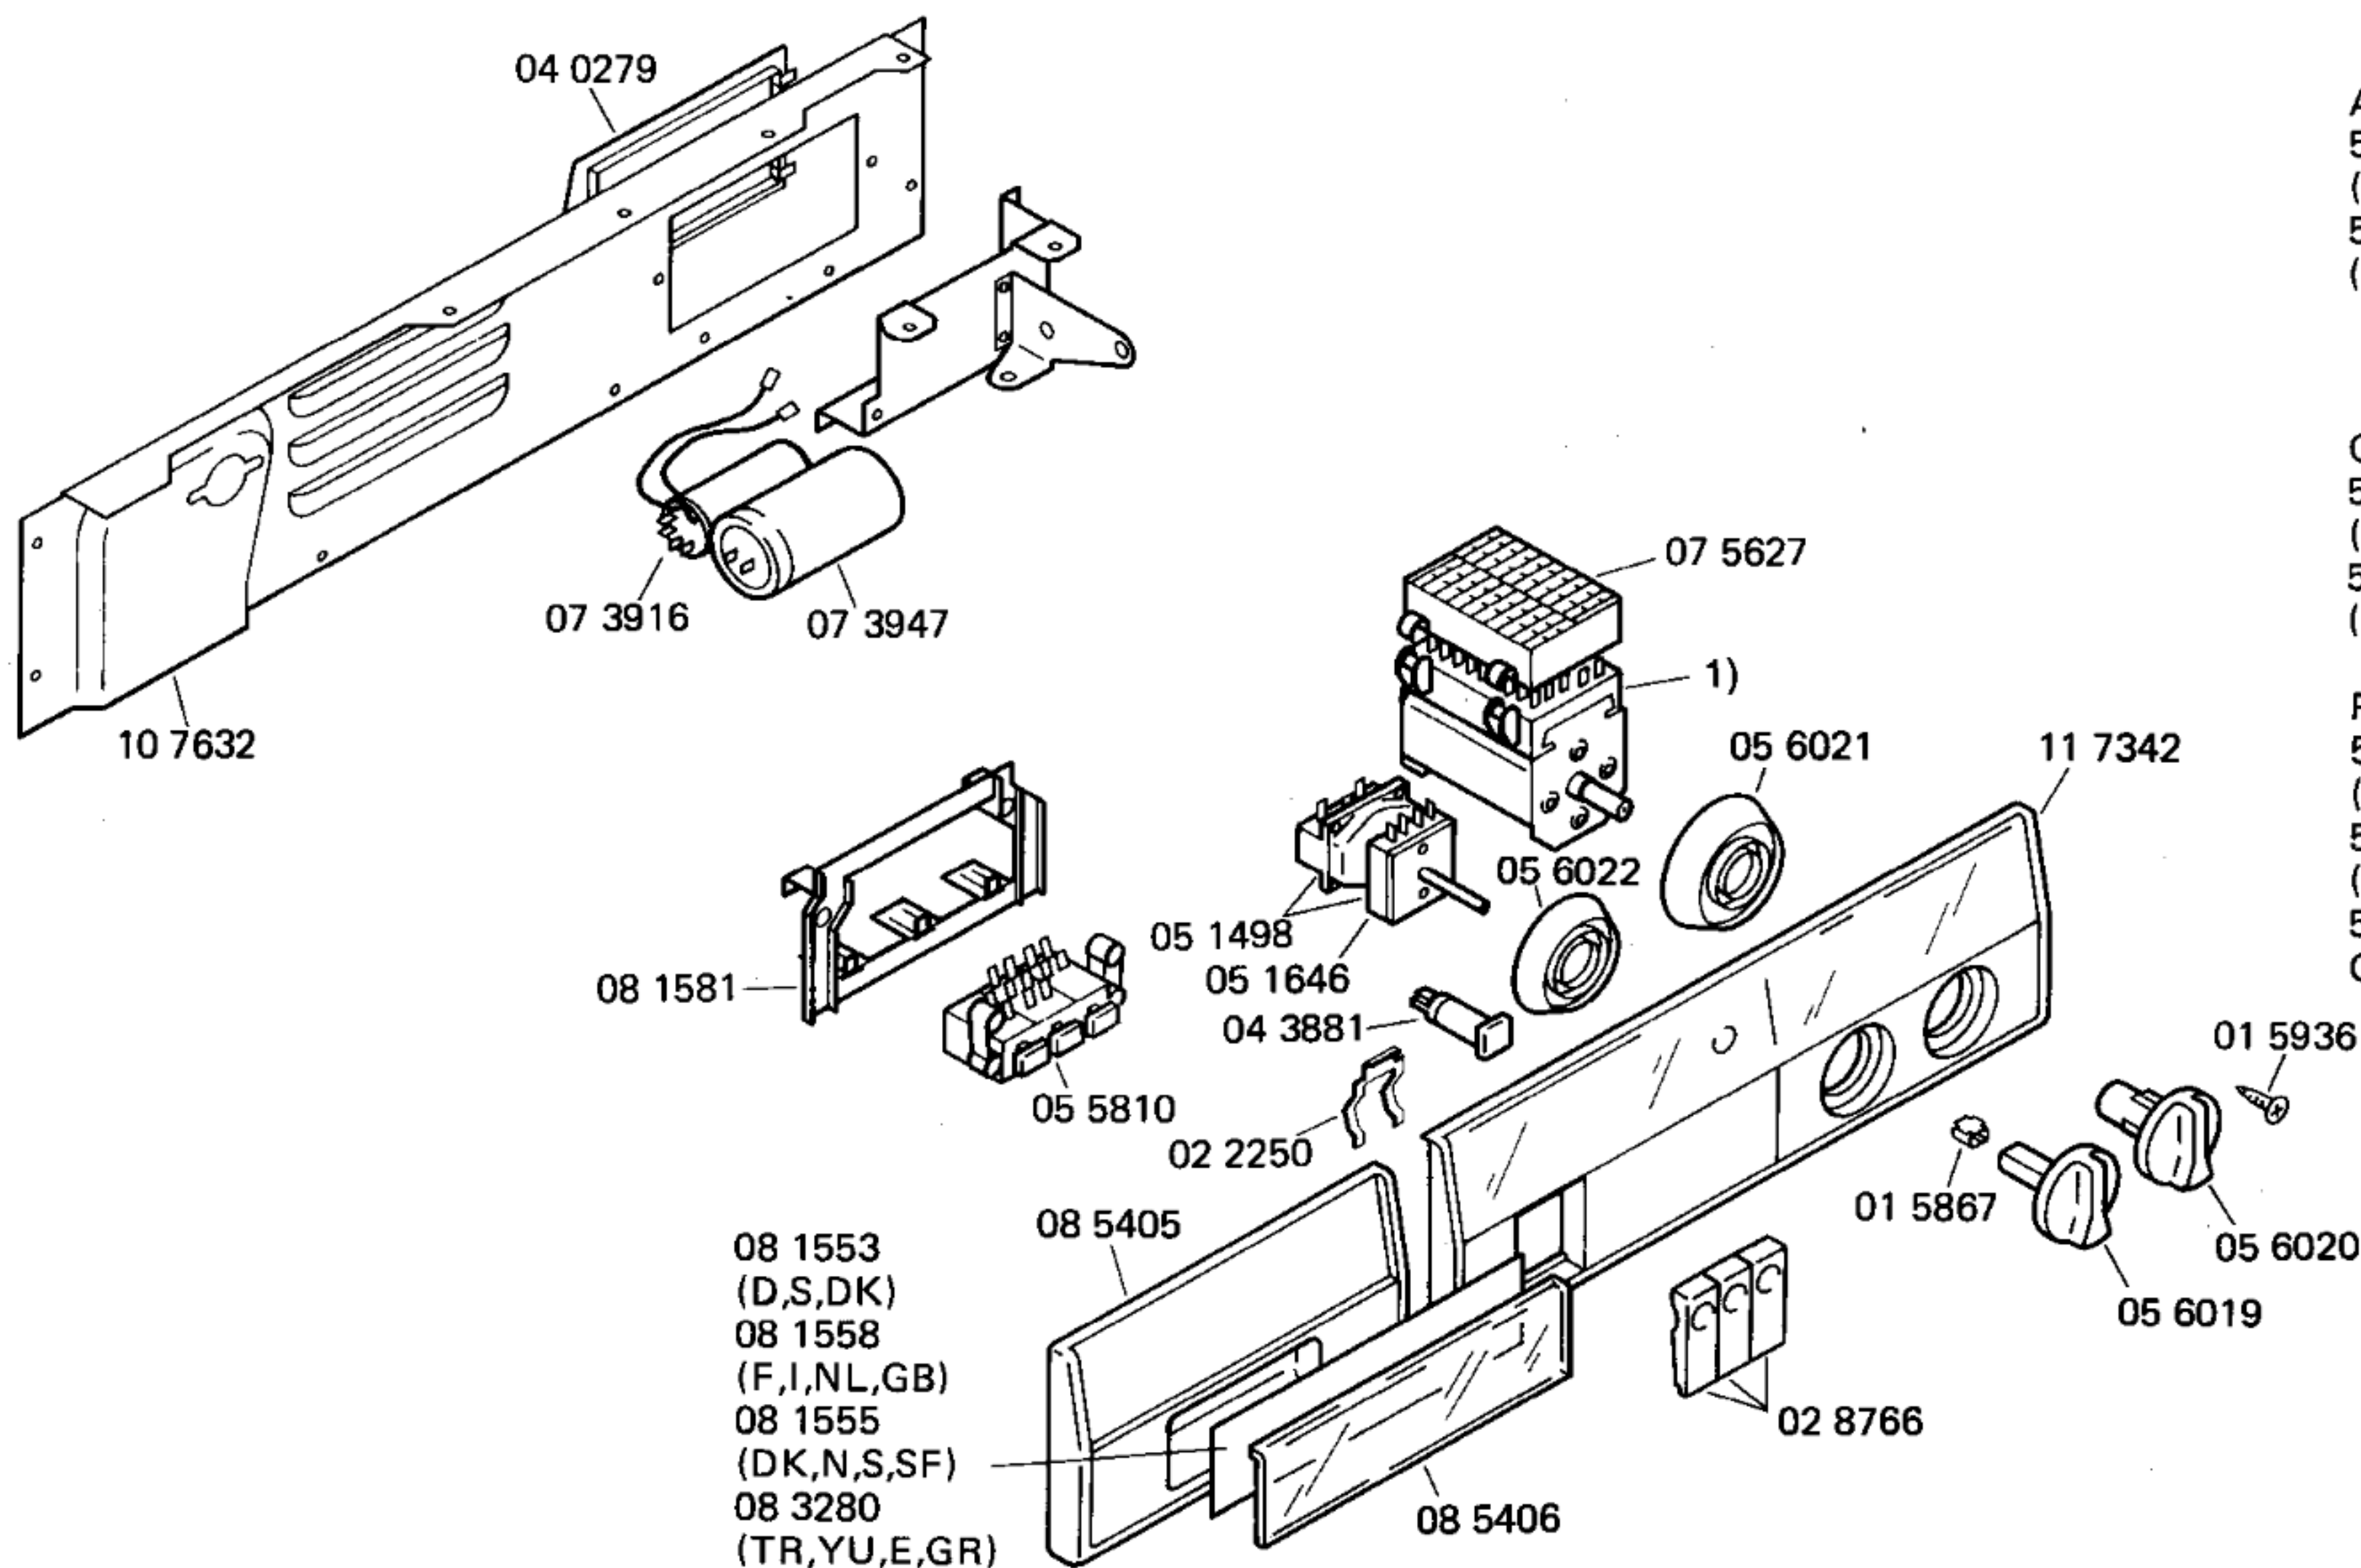

Aufstellanweisungen:
51 1221
(D, F, I, NL, GB, E)
51 1337
(D, F, I, S, DK, N)

Gebrauchsanweisungen:
51 1259
(D,F,I,NL,GB,E)
51 1338
(D,F,I,S,DK,N)

Programmtabellen:
51 1718
(D, F, I, NL, GB, E)
51 1339
(D, F, I, S, DK, N)
51 1719
GB1

1) 08 1582
bis FD 6701
08 5943
ab FD 6702




BOSCH

BOSCH V 637 — 0 722 044 545—Exp.1
— 0 722 044 546—GB1

WASCHGERÄTE
Waschvollautomaten


Ident-Nummern-Konstante
3740

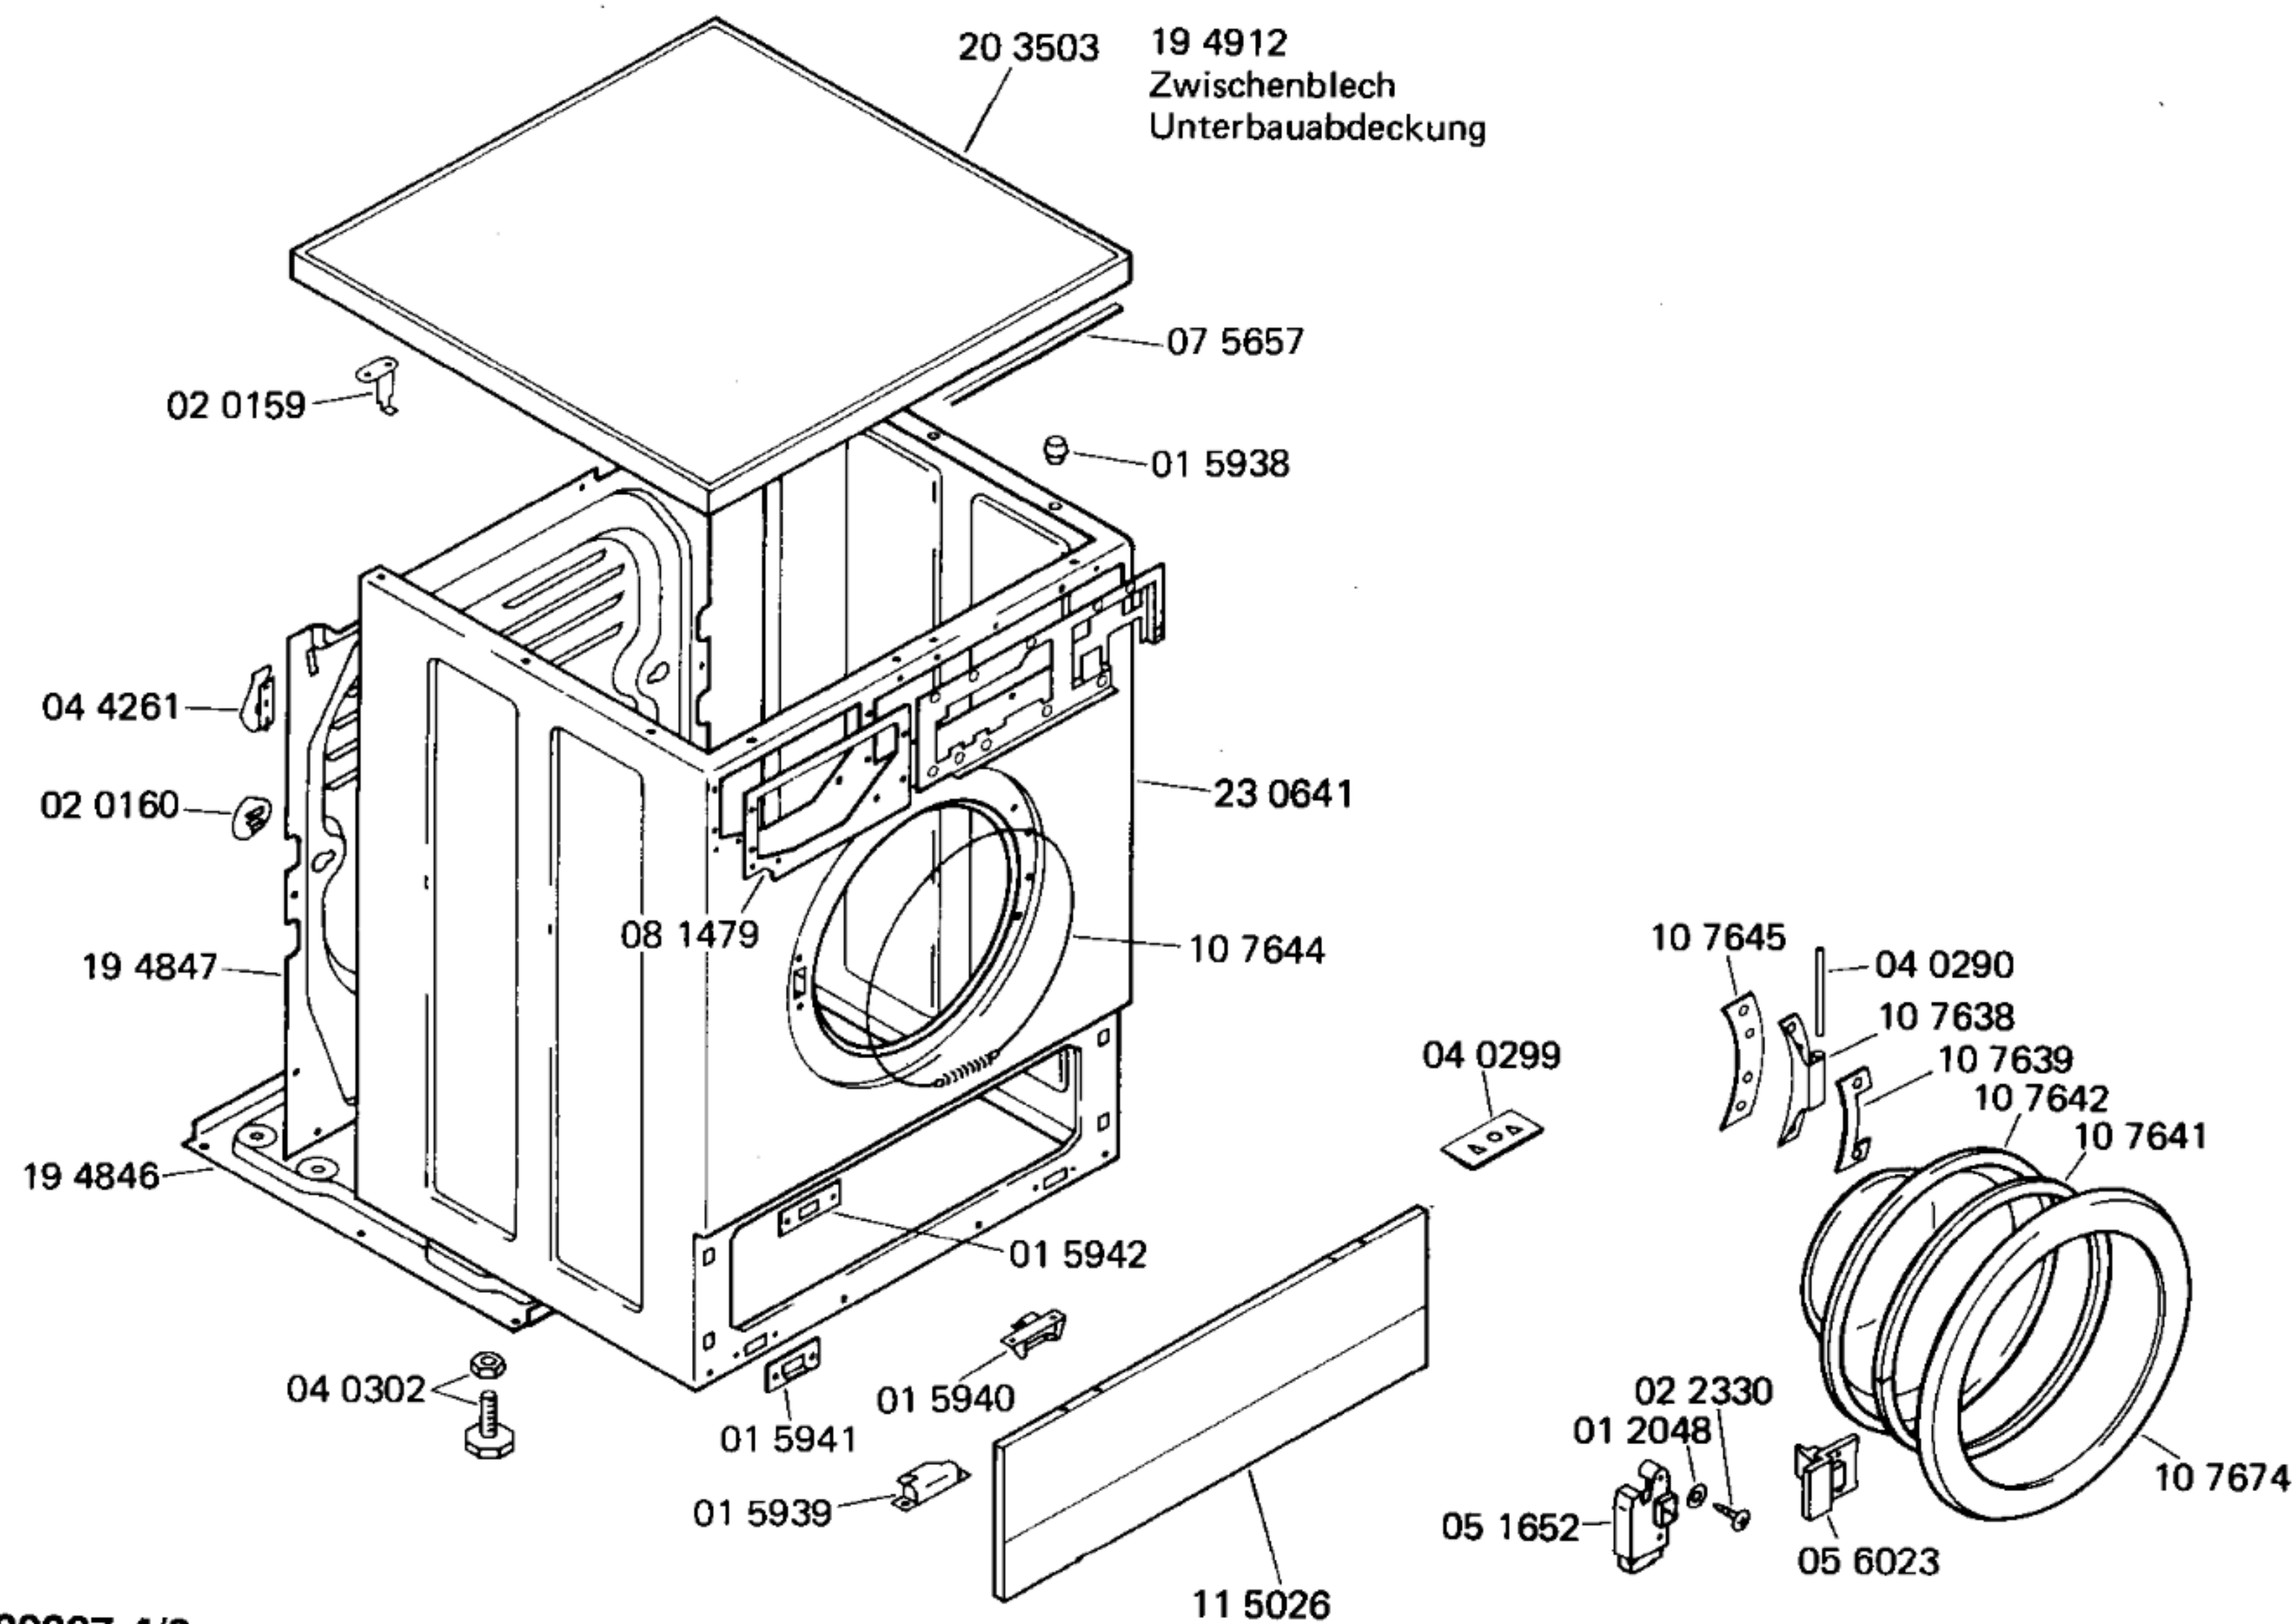

**BOSCH**

BOSCH V 637 — 0 722 044 545—Exp.1
— 0 722 044 546—GB1

WASCHGERÄTE
Waschvollautomaten

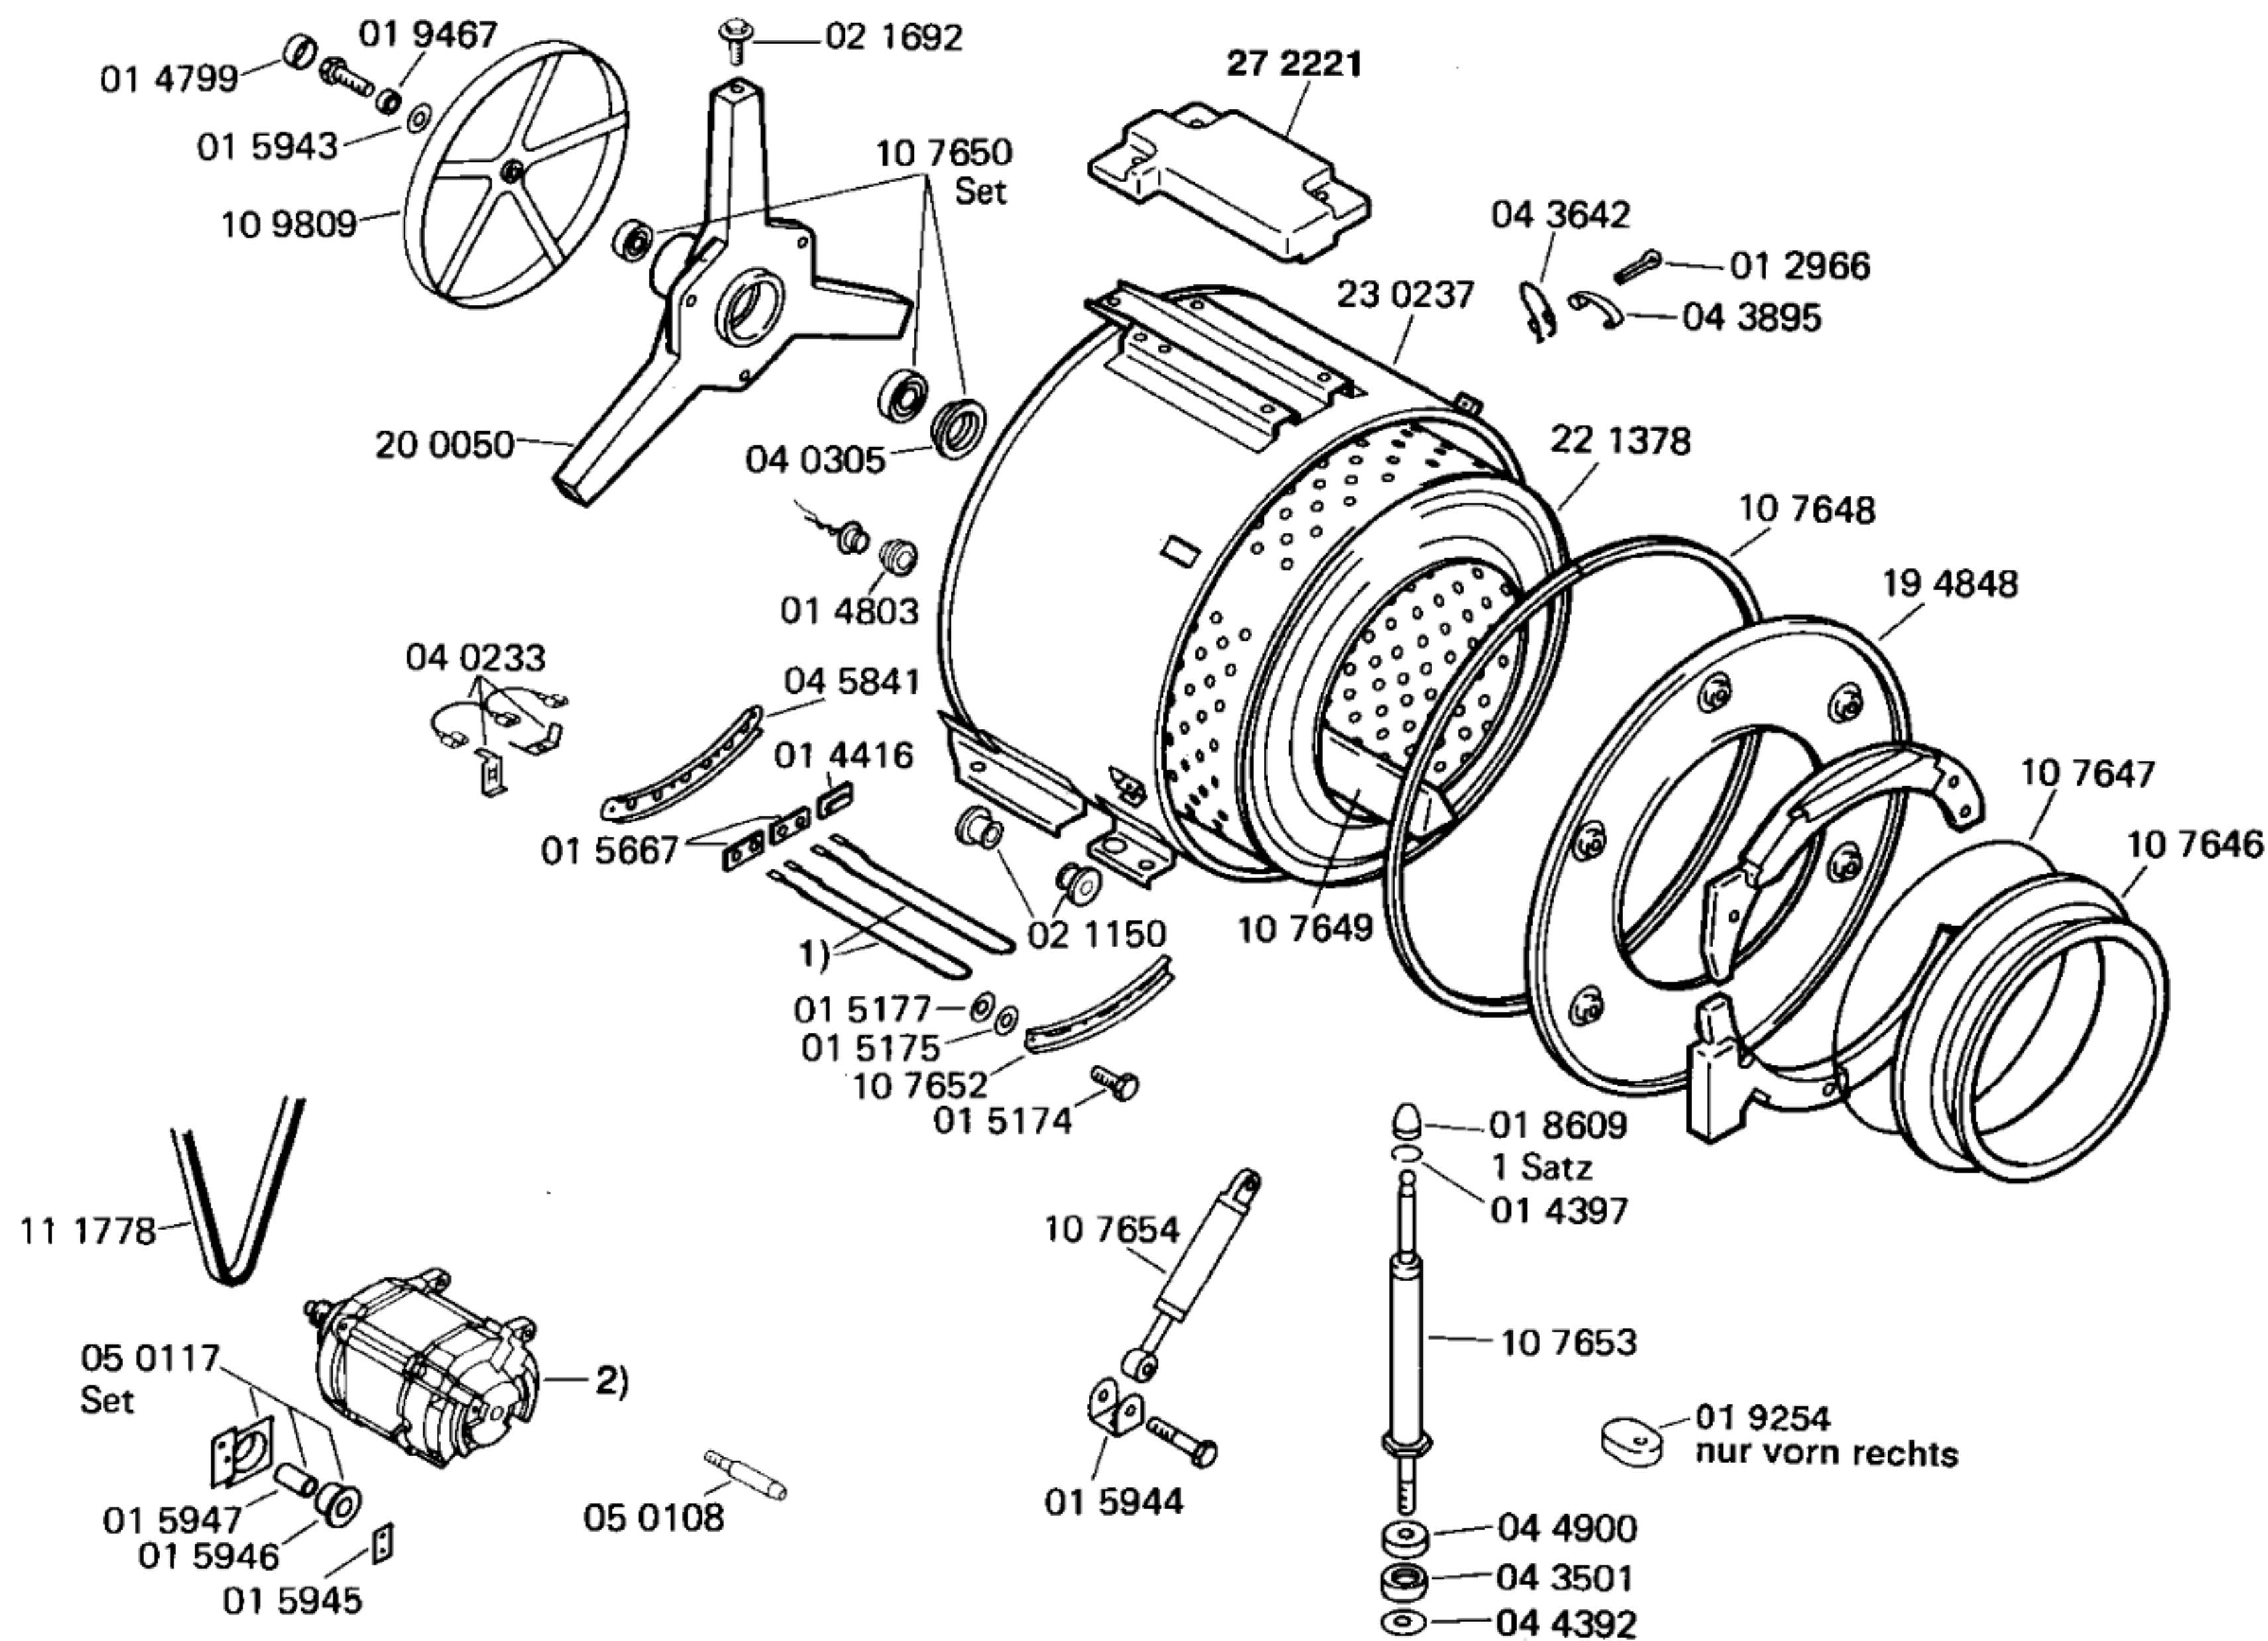

1) 07 3594
Exp.1
07 3981
GB1

2) 14 0373
220 V
14 0375
240 V

