


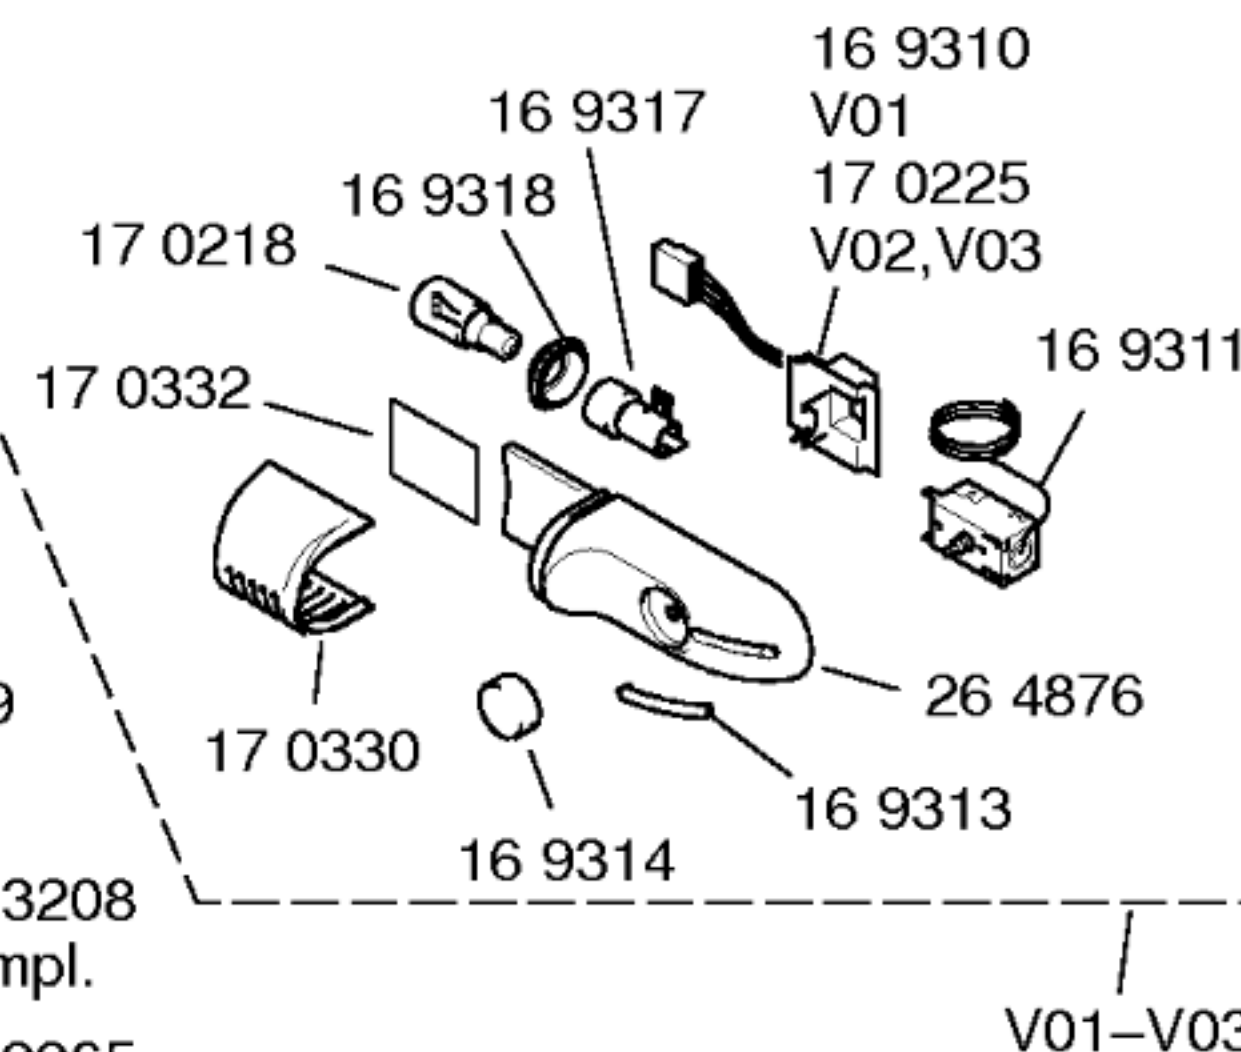


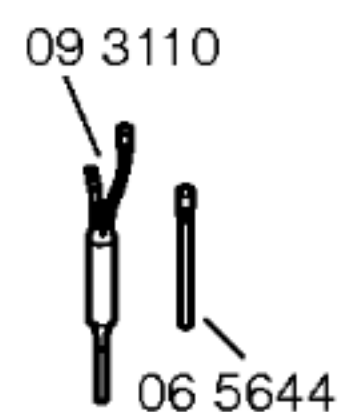

07 4445
V01,V02,V04,V06
09 6325
V03,V05

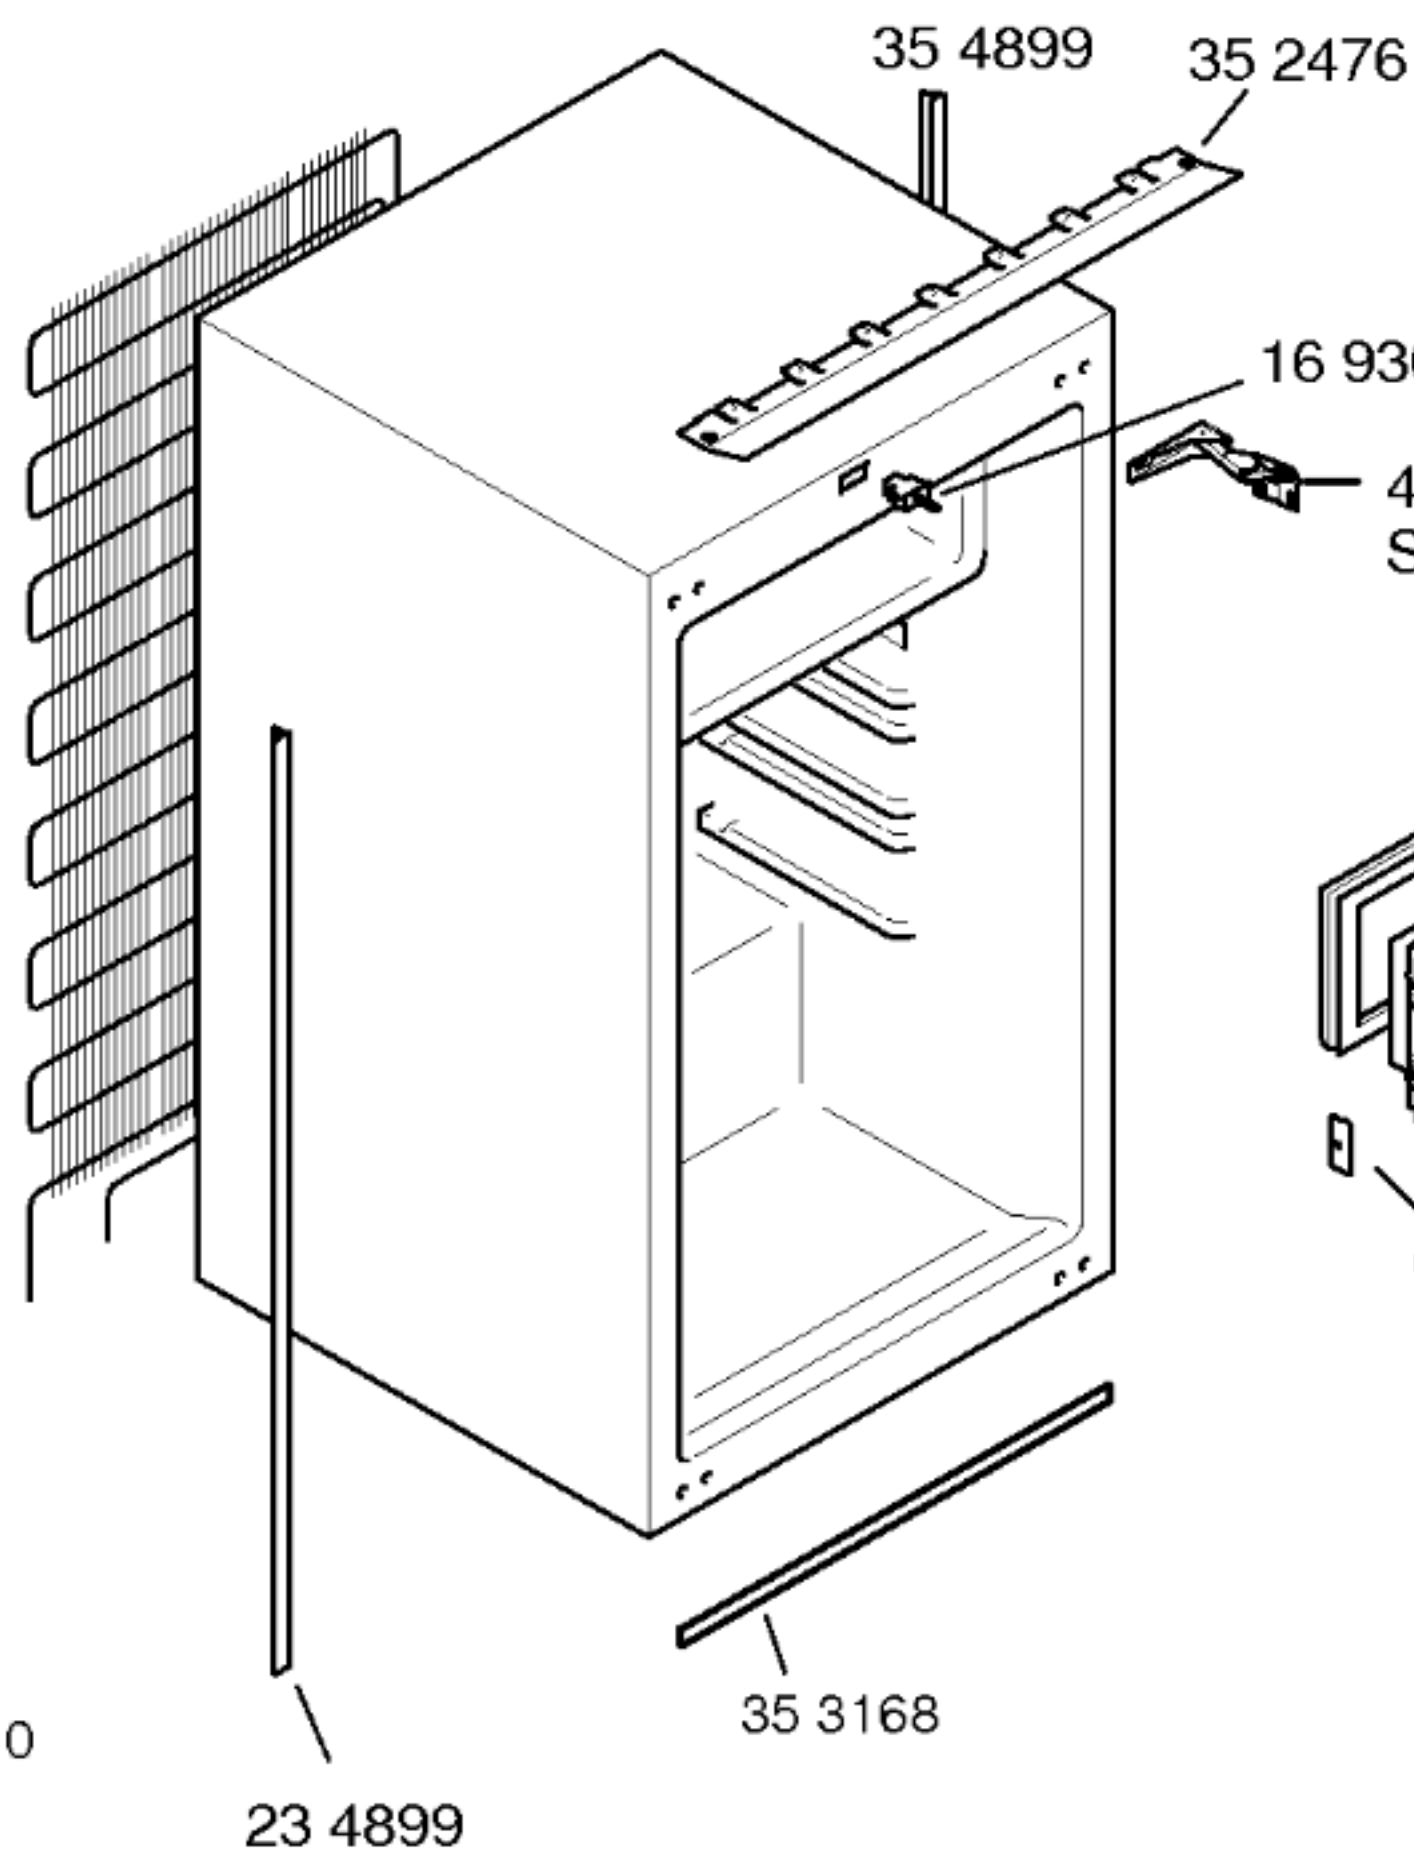

V01-V03

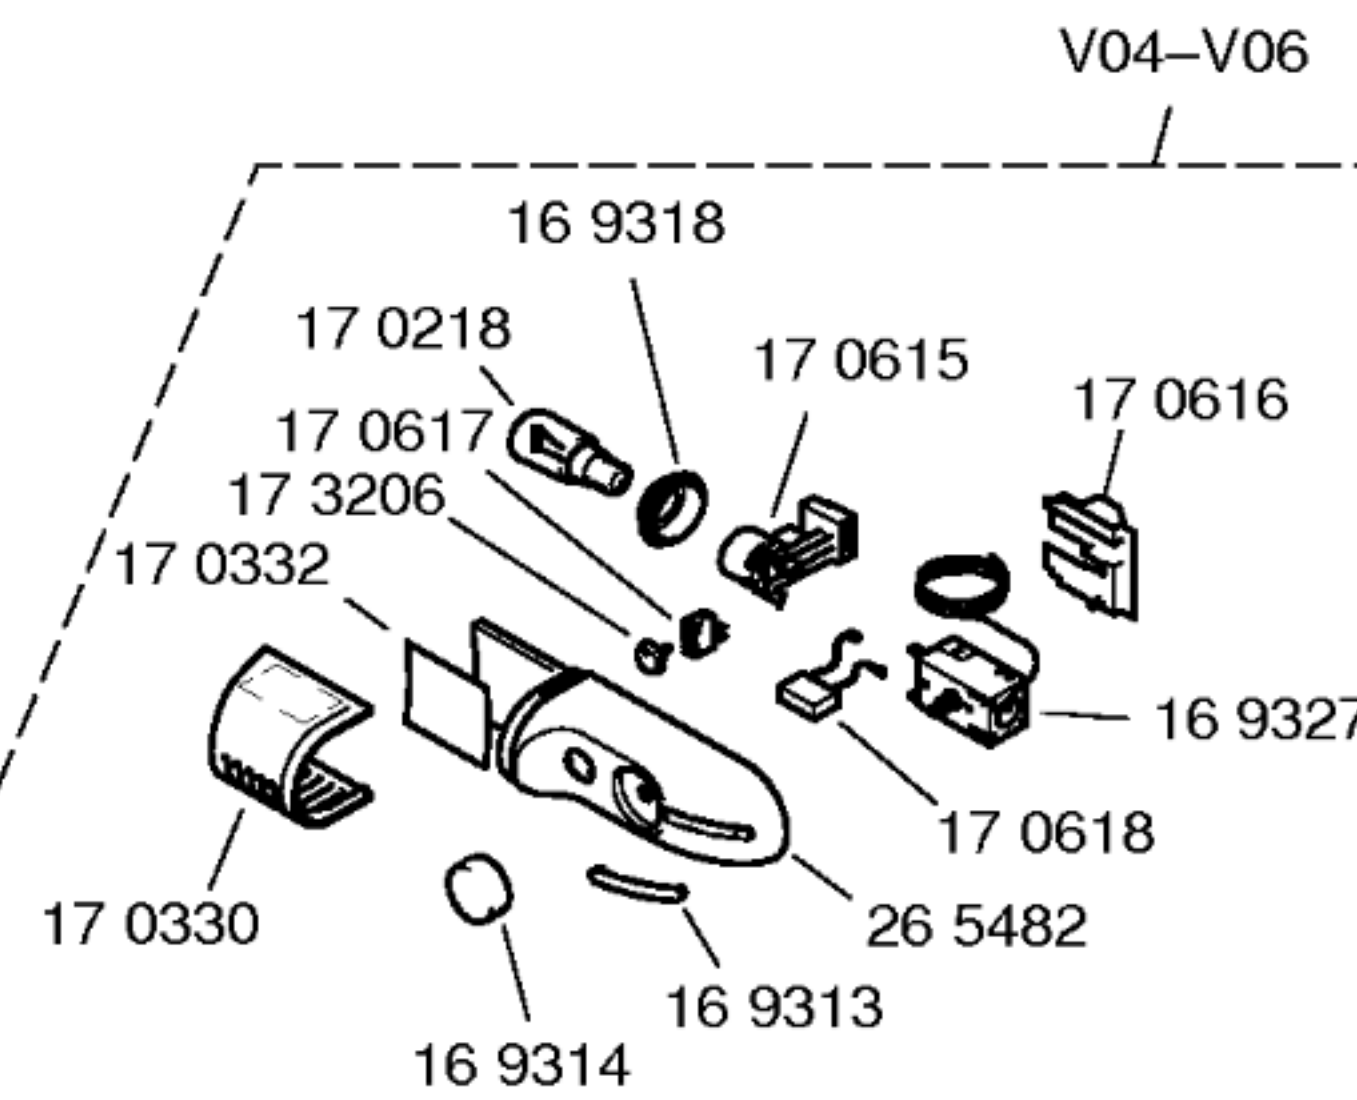



V04-V06

Gebrauchsanweisung
52 2548
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5162

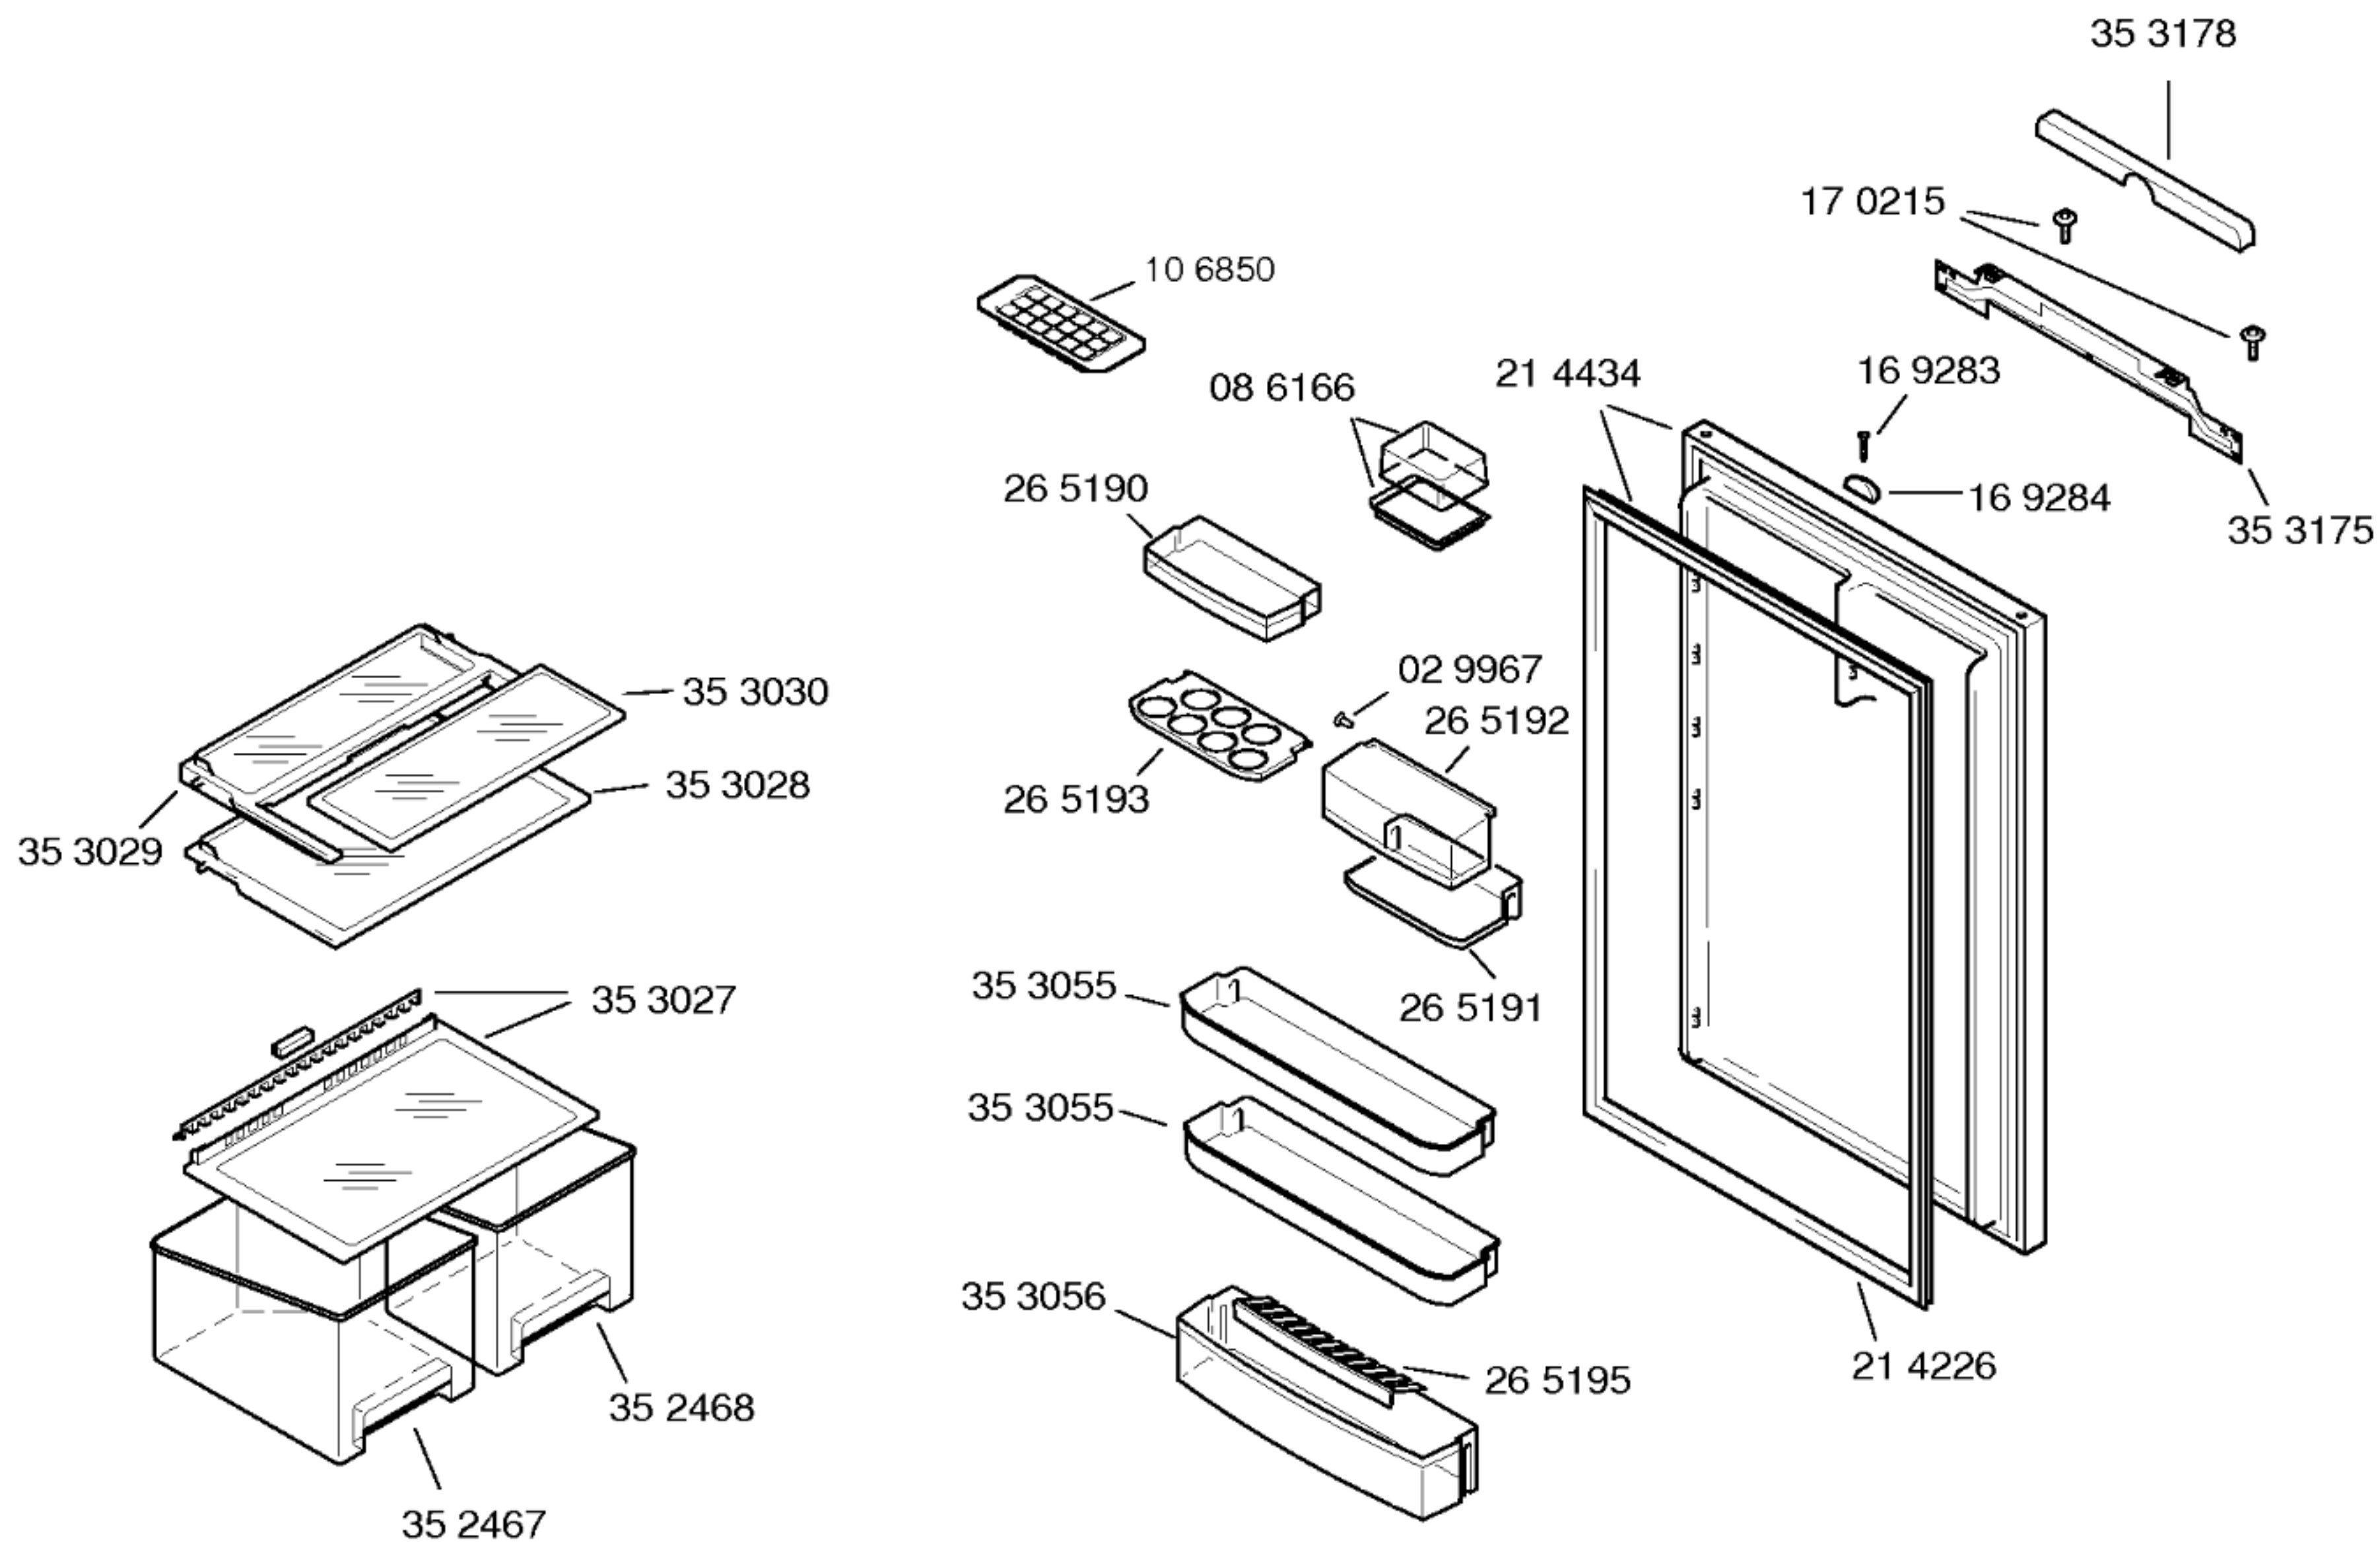

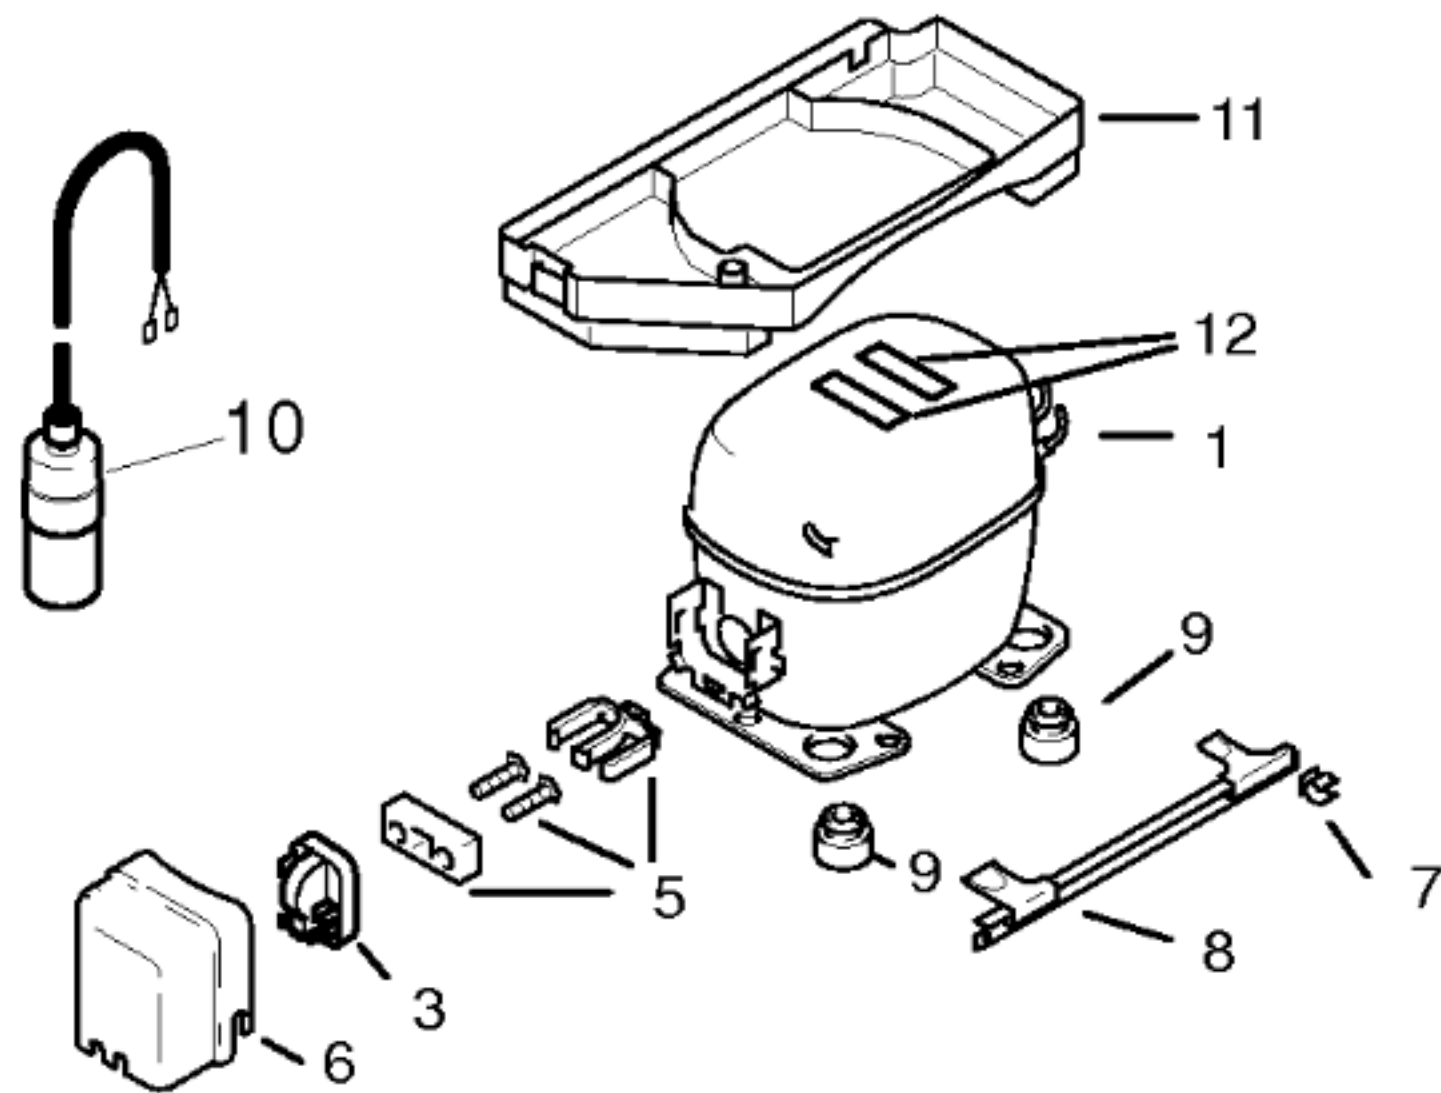

Pos.	Danfoss	Aspera	
	TLY6K	EMT 32 CLP	
1	14 1680	14 1838	
2			
3	15 1055	17 0880	
4			
5	15 0760	17 0882	
6	15 1072	17 0881	
7	16 9319		
8	26 4879	26 4879	
9	05 0166	05 0166	
10	16 5852		
11	26 4878	26 4878	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur		Danfoss	Aspera
Typ/Type		TLY6K	EMT 32 CLP
Förderleistung/Delivery/Débit	l/h	1026	1073
Anlaufstrom/Starting current/Cour de démarrage	A	4,4	3,5
Widerstand/Resistance/Résistance	Ha/main/prin	34,0	28,4
	Hi/aux	41,0	24,7
Temp.-Regler/Thermostat		Ranco	
Typ/Type		kalt	warm
Regelstellung/Position		+4,0	+4,0
Schaltwerte/Switching values	"warm"	-32,0	-12,0
Valeurs de commutation	"kalt"		
	"alarm"		
Füllmenge/Fill.quantity/Charge	R600a	*	
Anschlußwert/Conn.load/Puiss. connectée	W	67	68
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	W		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	W		
Temp.-Regler/Thermostat			
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	W		
Spannung/Voltage/Tension	V		

* siehe Typenschild