

**BOSCH**

BOSCH V 630 - 0 722 044 537-D1
 V 630 - 0 722 044 538-Exp.1
 V 630 - 0 722 044 540-S1

V 6330 - 0 722 044 601-D2
 V 6330 - 0 722 044 602-Exp.2
 V 6330 - 0 722 044 603-S2

WASCHGERÄTE
 Waschvollautomaten

Ident-Nummern-Konstante
 3740

Aufstellanweisungen

51 1221
 (D,F,I,NL,GB,E)
 51 1337
 (D,F,I,S,DK,N)
 51 1430
 CH2
 51 1575
 (SF)

Gebrauchsanweisungen

51 1259
 (D,F,I,NL,GB,E)
 51 1338
 (D,F,I,S,DK,N)
 51 1577
 (SF)

Programmtabellen

51 1718
 (D,F,I,NL,GB,E)
 51 1339
 (D,F,I,S,DK,N)
 51 1578
 (SF)

1) 08 1582
 bis FD 6701
 08 5943
 ab FD 6702







