


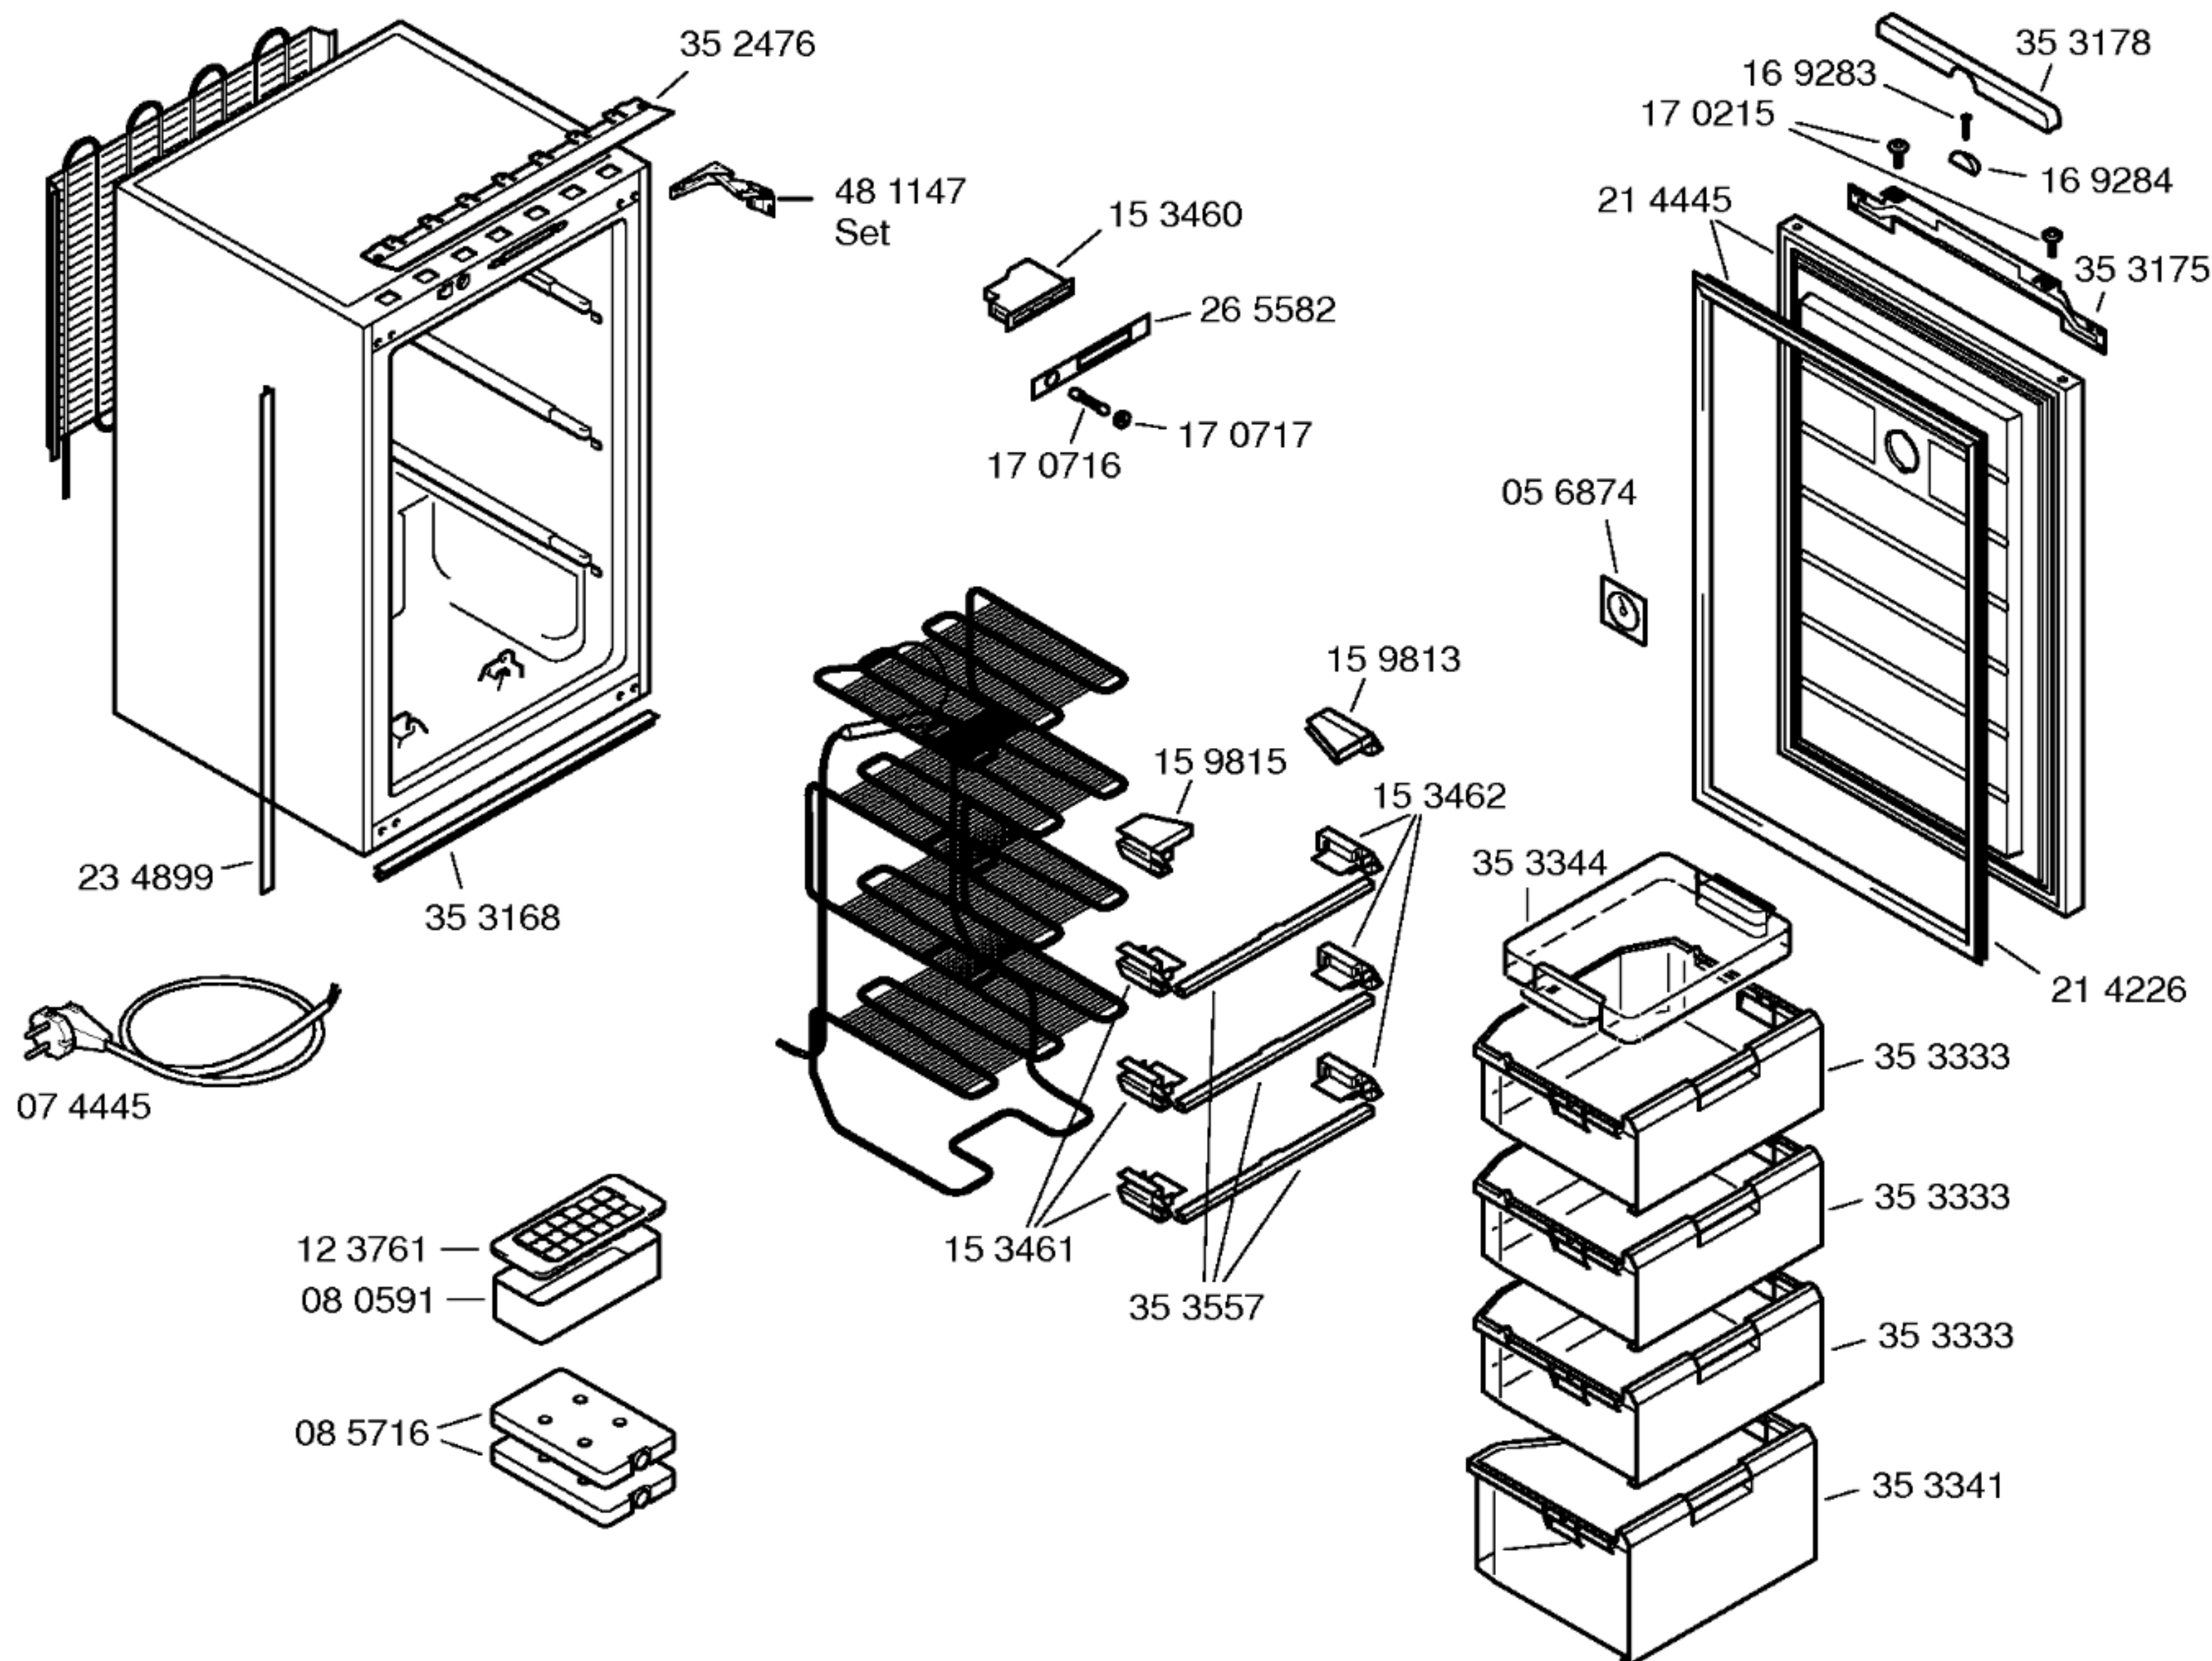


Gebrauchsanweisung
52 2707
(D,GB,F,I,NL)

Montageanleitung
52 2494
(D,GB,F,I,NL,DK,N,SF,
SE,TR)

Beistellsatz
26 5162

Temp.-Regler
Rep.-Satz
26 5271

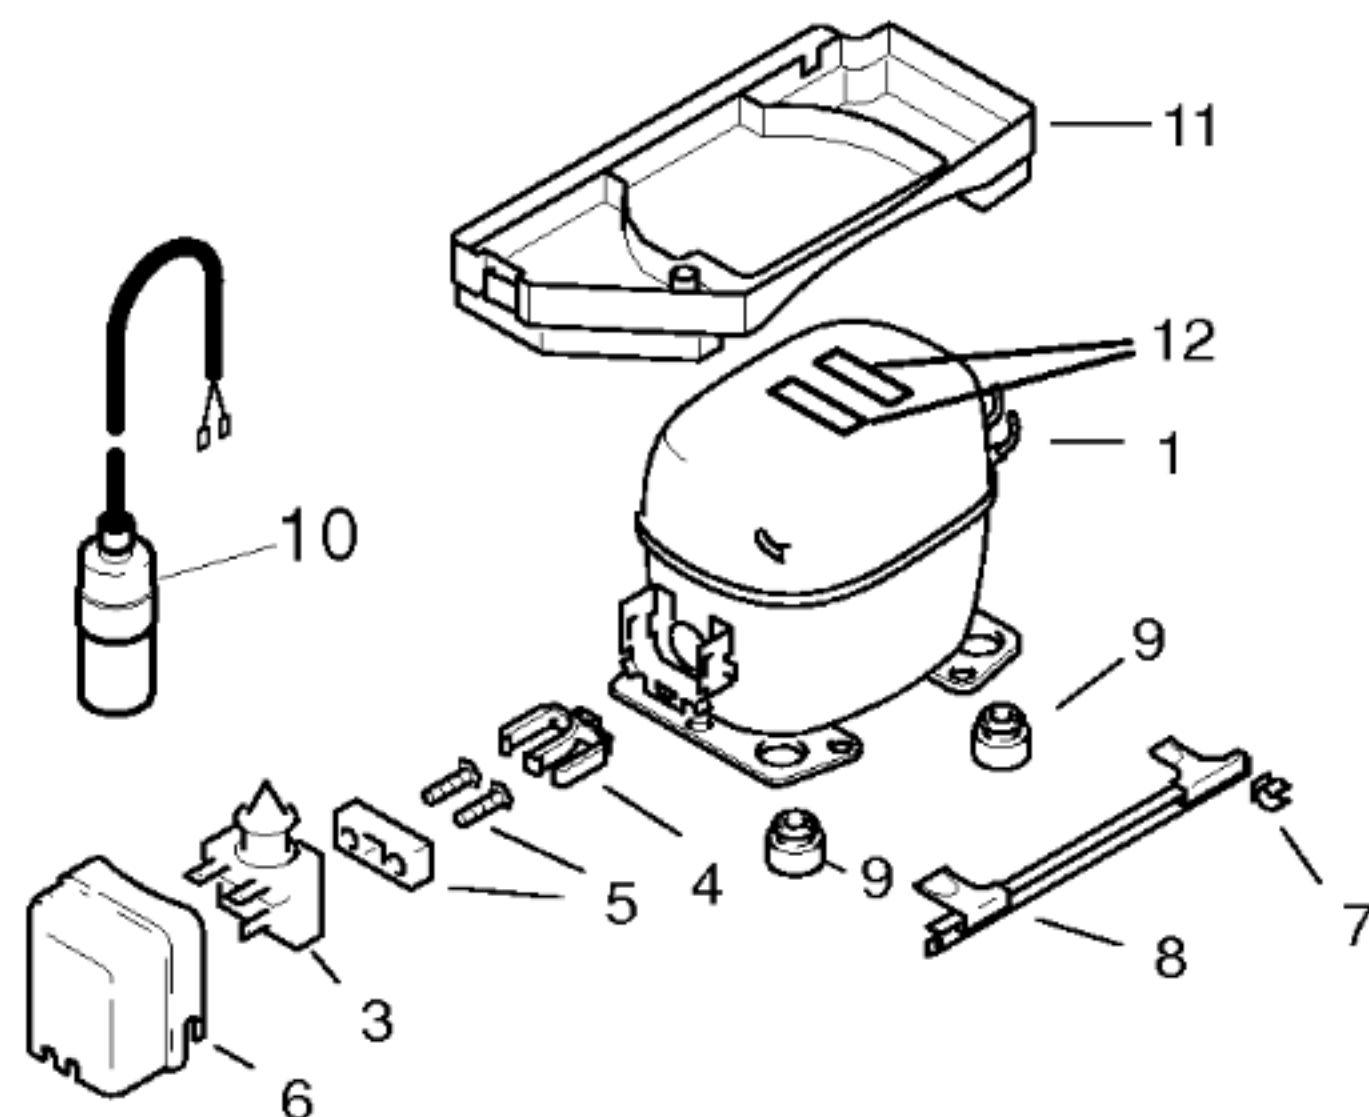

	V01	V02	
Pos.	Danfoss	Aspera	
	TLY8K	EMT 40 CLP	
1	14 1657	14 1839	
2			
3	15 1055	17 0315	
4	15 1053		
5	15 0760	17 0882	
6	15 1072	17 0881	
7	16 9319	16 9319	
8	26 4879	26 4879	
9	05 0166	05 0166	
10	16 5852		
11	26 4878		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss		Aspera		
Typ/Type		TLY8K		EMT 40 CLP		
Förderleistung/Delivery/Débit		l/h	1404	1384		
Anlaufstrom/Starting current/Cour de démarrage		A	6,4	4,4		
Widerstand/Resistance/Résistance		Ha/main/prin	Ω	21,6	23,0	
		Hi/aux	Ω	26,0	23,0	
Temp.–Regler/Thermostat		KER				
Typ/Type		RCO				
Regelstellung/Position		kalt		warm		
Schaltwerte/Switching values		ein"	–23,0	–15,0		
Valeurs de commutation		aus"	–31,0	–21,0		
		"alarm"				
Füllmenge/Fill.quantity/Charge		R600a	*			
Anschlußwert/Conn.load/Puiss. connectée		W	90	88		
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance		Ω				
Leistung/Power/Puissance		W				
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance		Ω				
Temp.–Regler/Thermostat						
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance		Ω				
Spannung/Voltage/Tension		V				

* siehe Typenschild