



Ident-Nummern-Konstante
3740

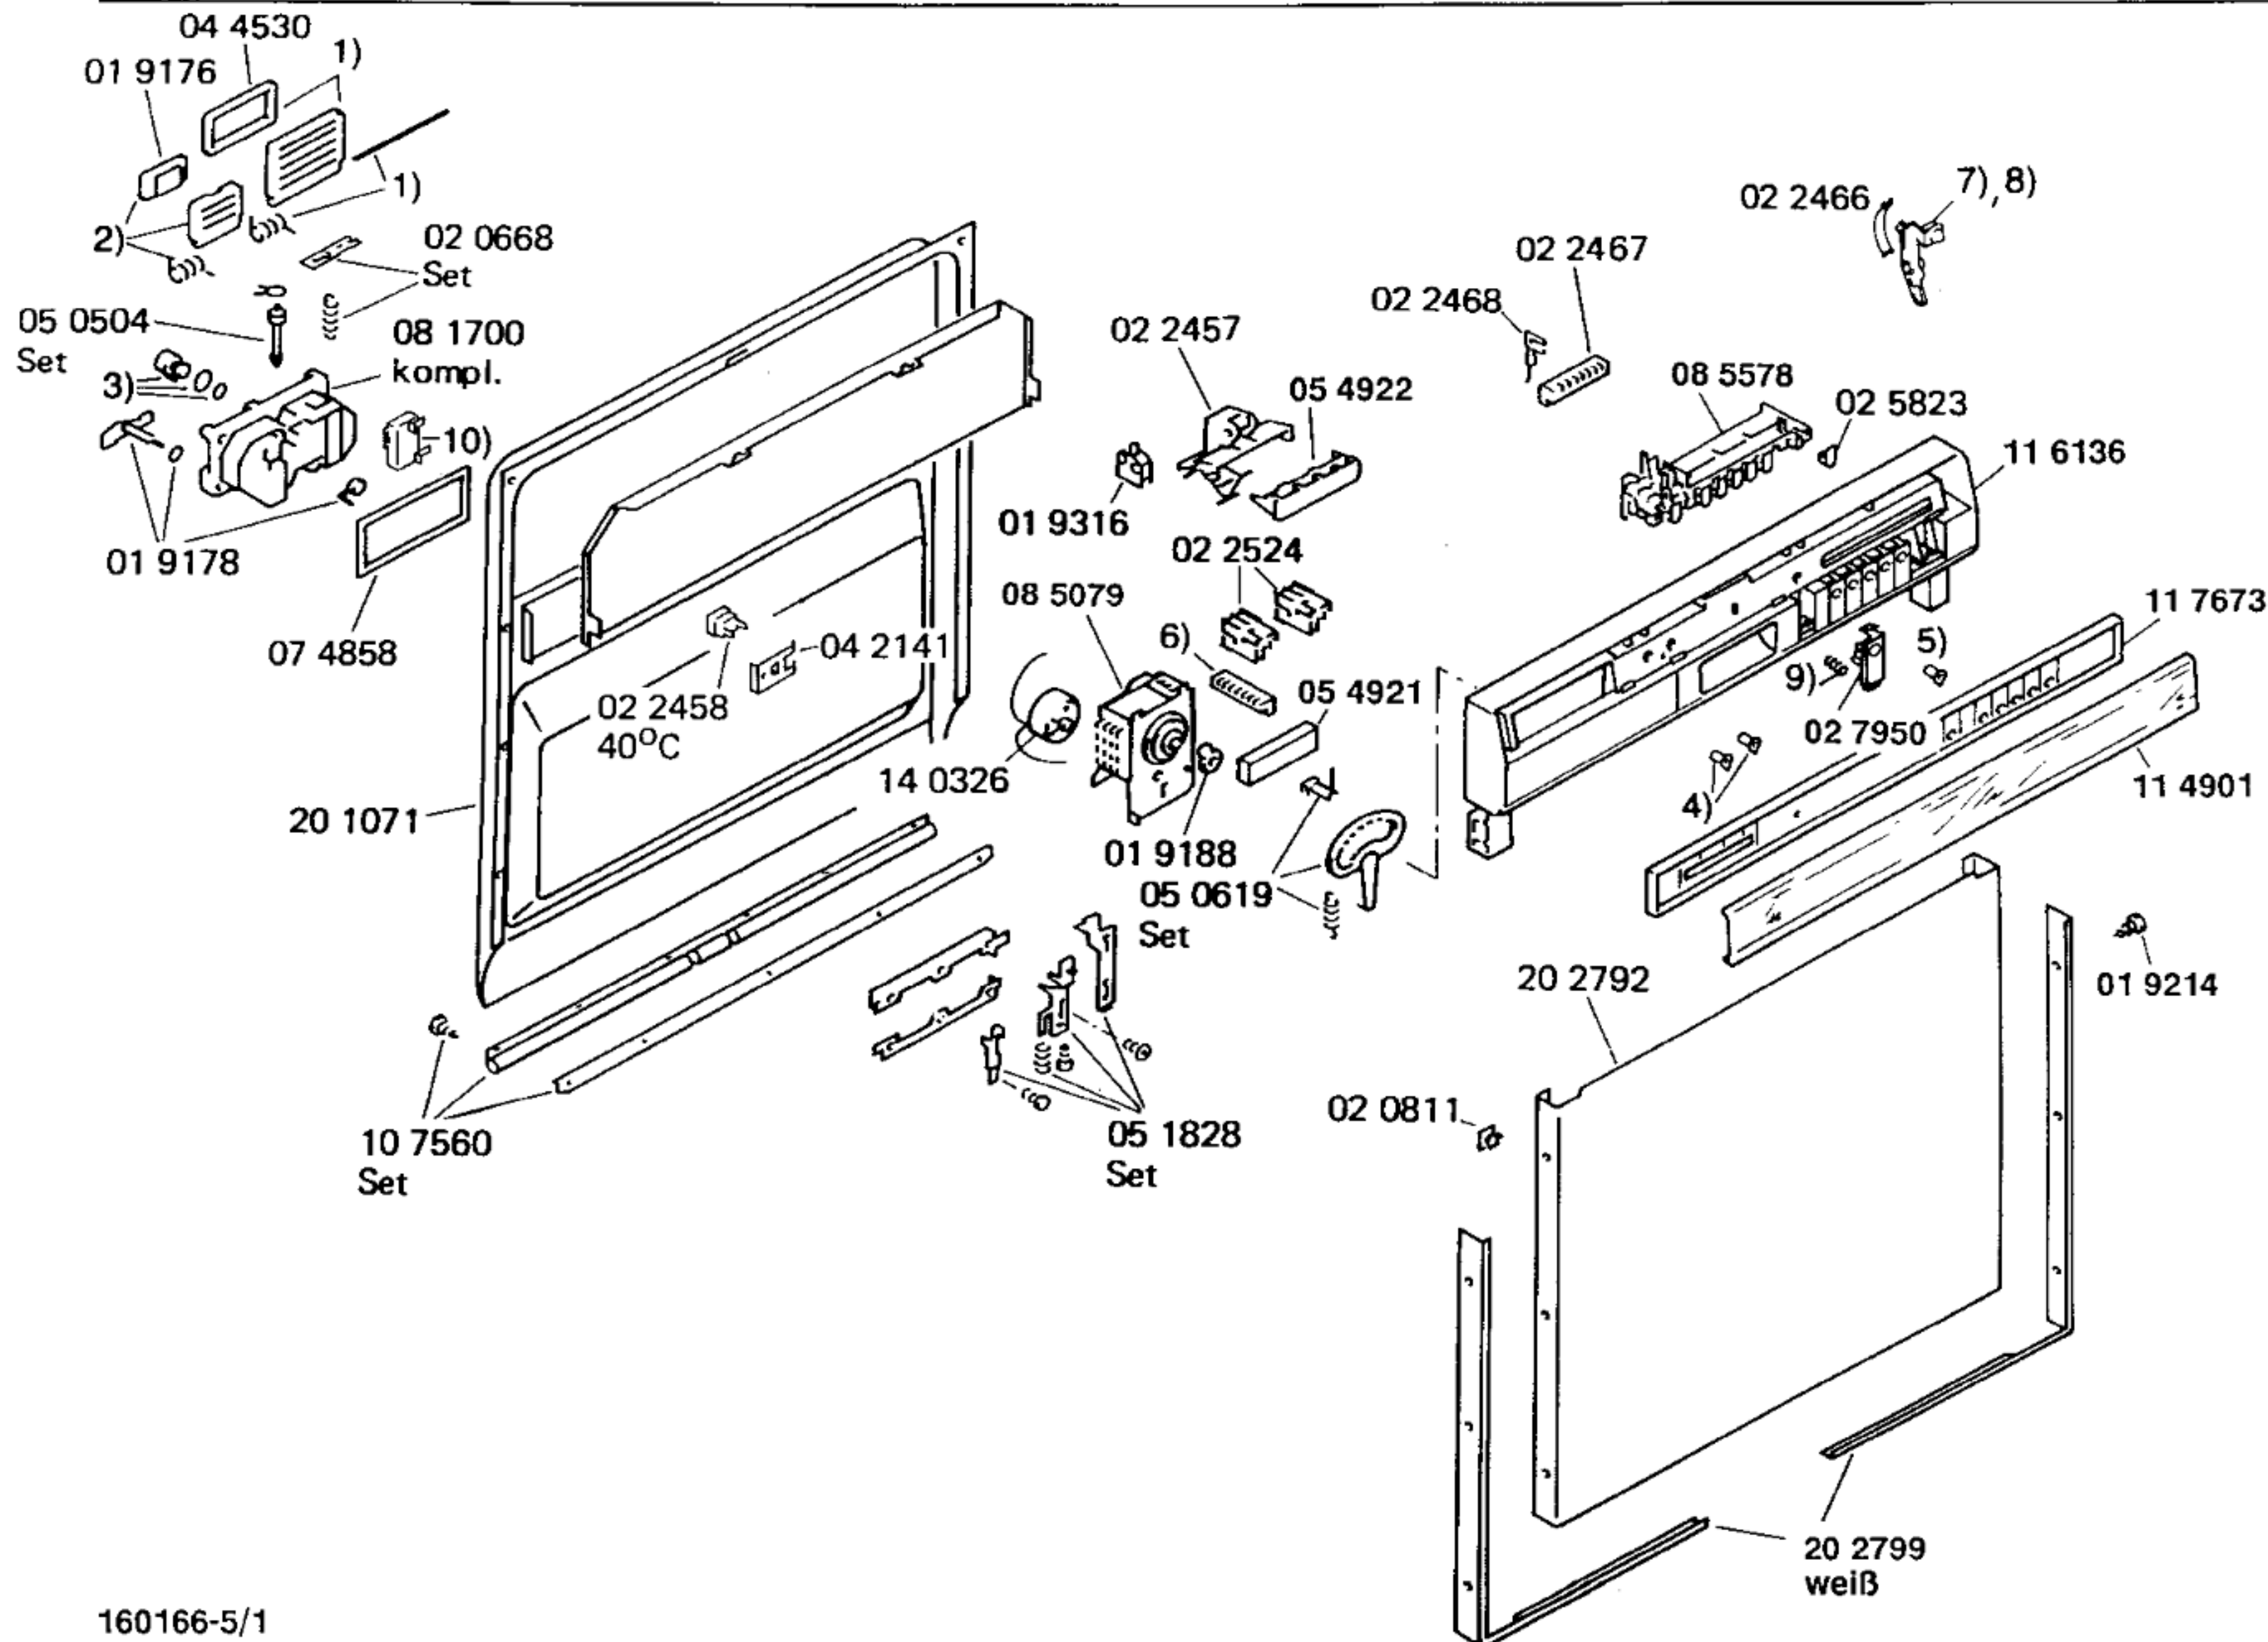

51 3082
Gebrauchsanweisung
(DK)
51 2277
Aufstellanleitung

- 1) 04 2085 Set
- 2) 04 2105 Set
- 3) 01 9177 Set
- 4) 02 5122
- 5) 02 5123
- 6) 02 2459
- 7) 02 5657 rot
- 8) 02 5658 grün
- 9) 02 5824
- 10) 02 1237

Ident Nummern-Konstante
3740

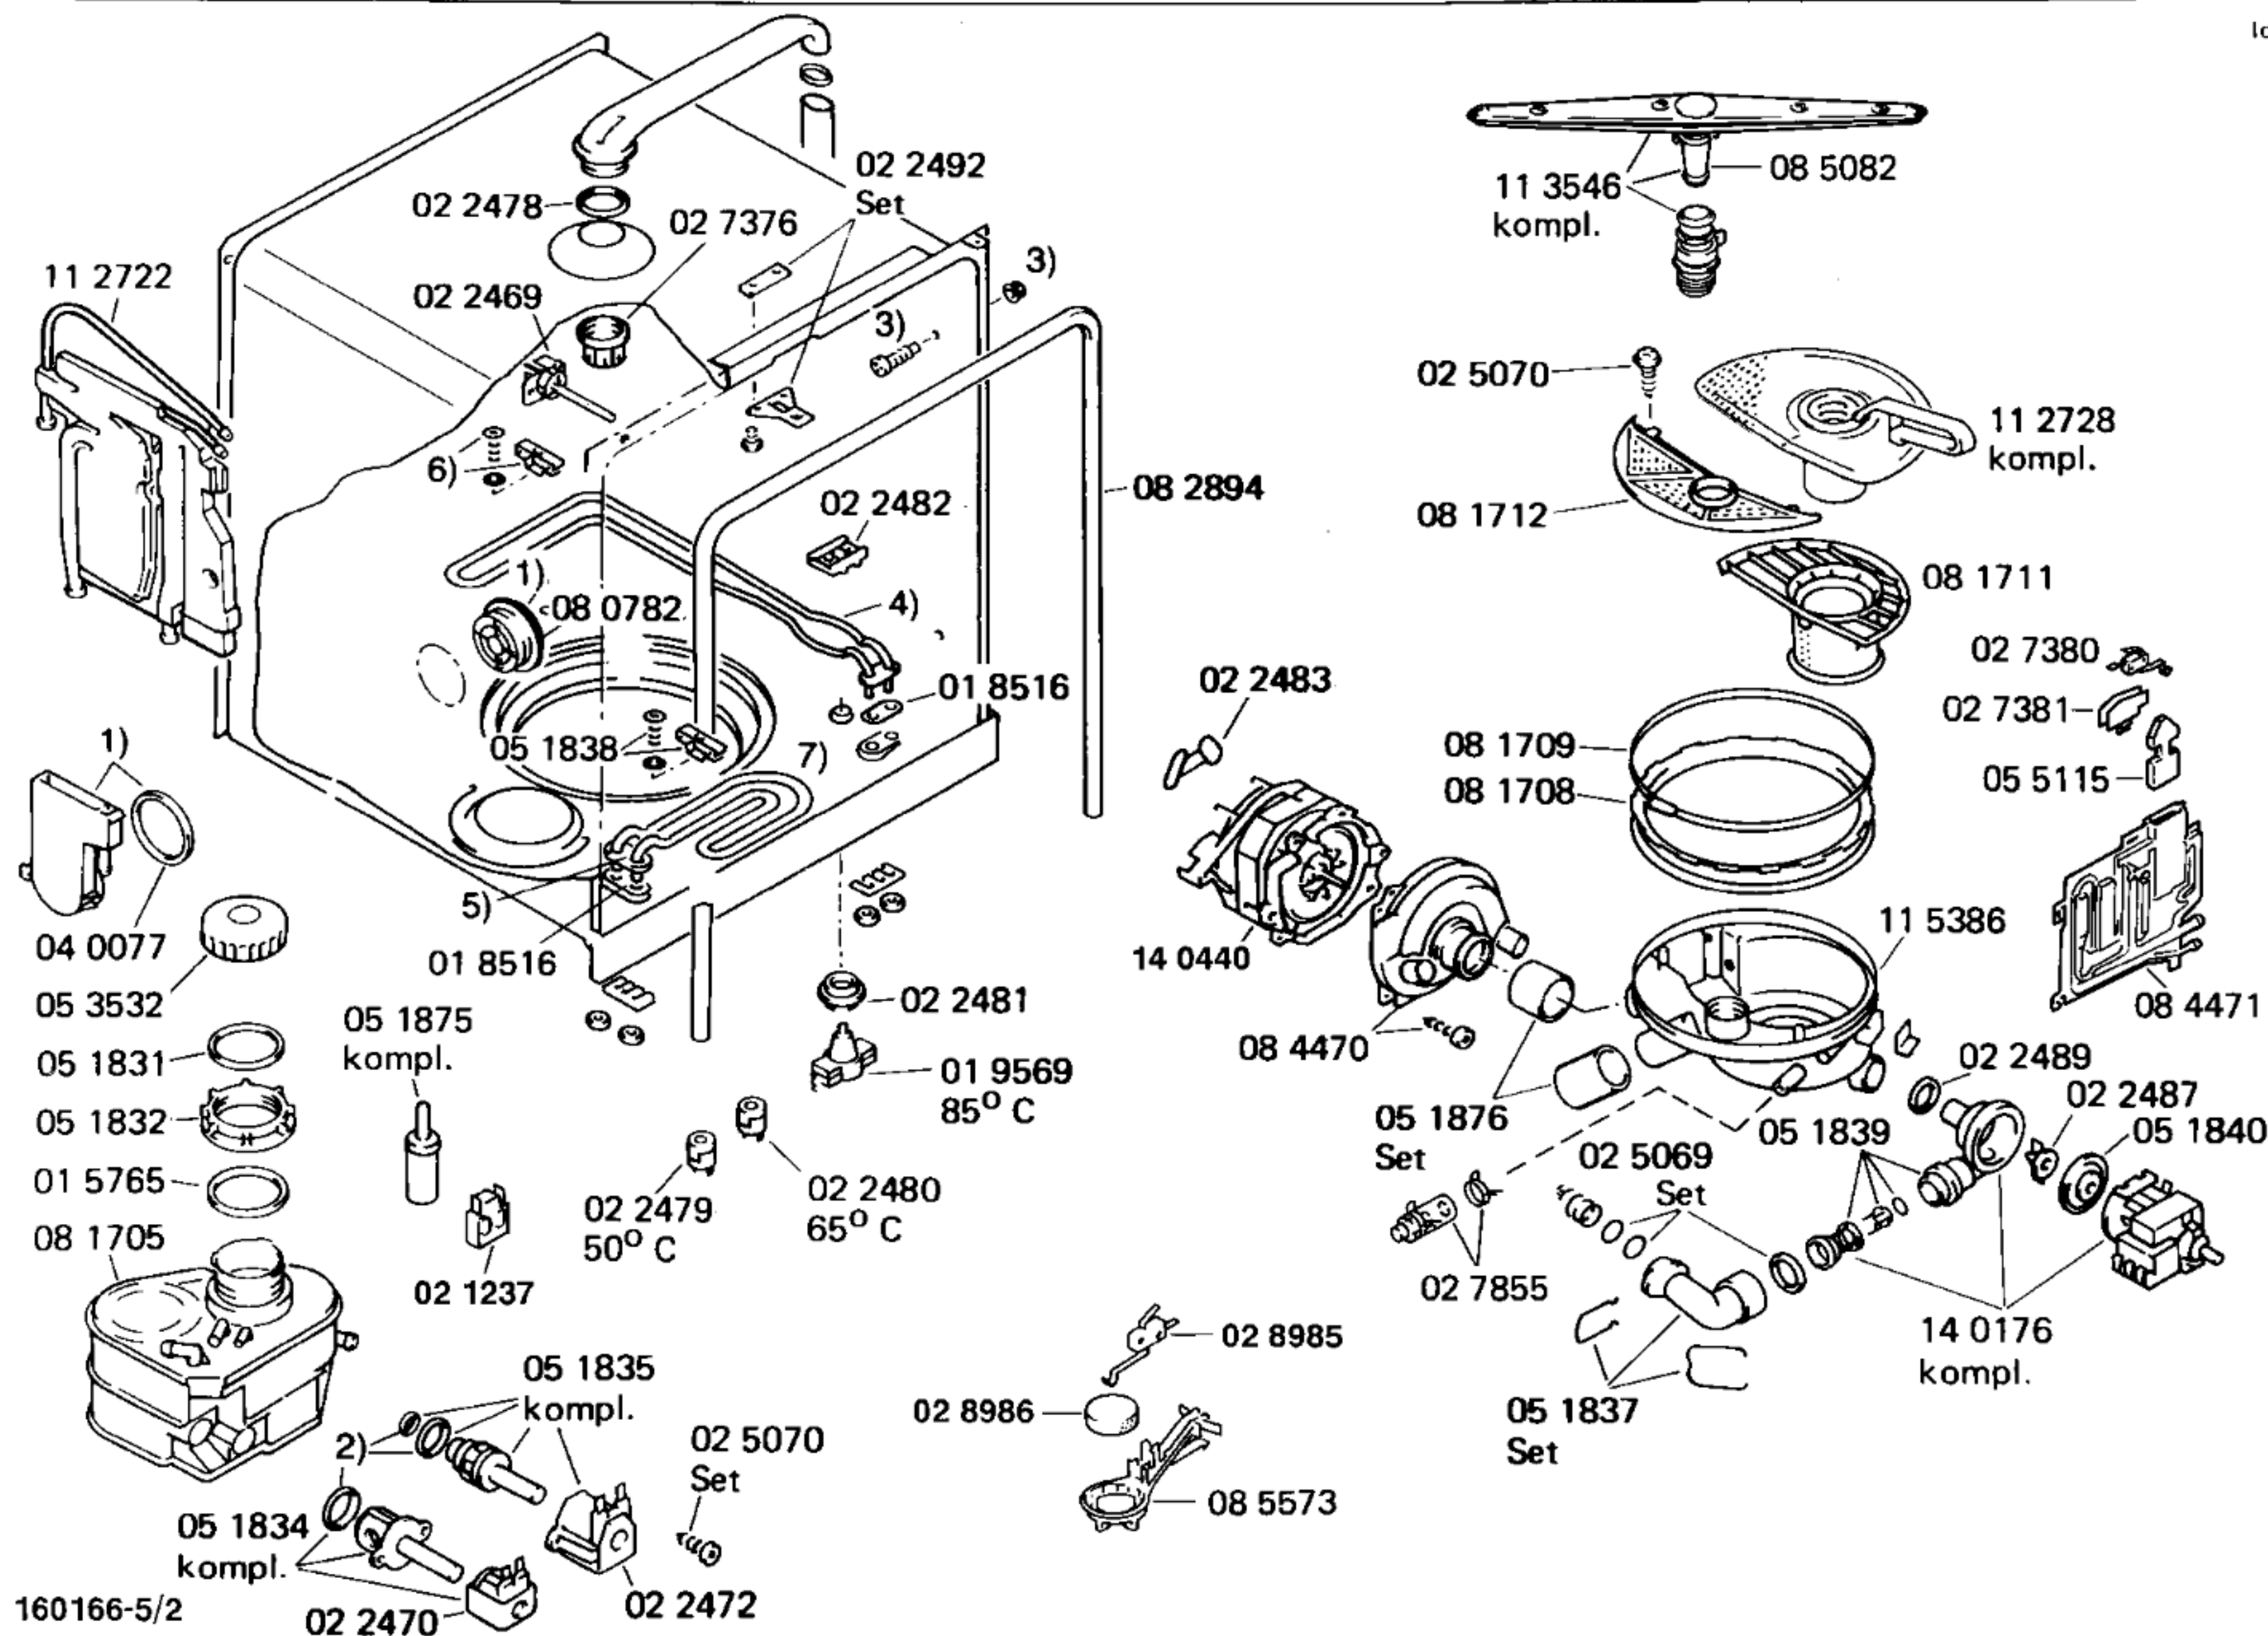

Ident-Nummern-Konstante
3740

08 5572
kompl.

02 8923

02 7475


05 6228

11 7656


- 1) 10 4298
PVC ø 6 mm
- 2) 10 4926
PVC ø 10 mm
- 3) 11 2723
PVC ø 12 mm
- 4) 11 5388
kompl.

08 5078

02 7378

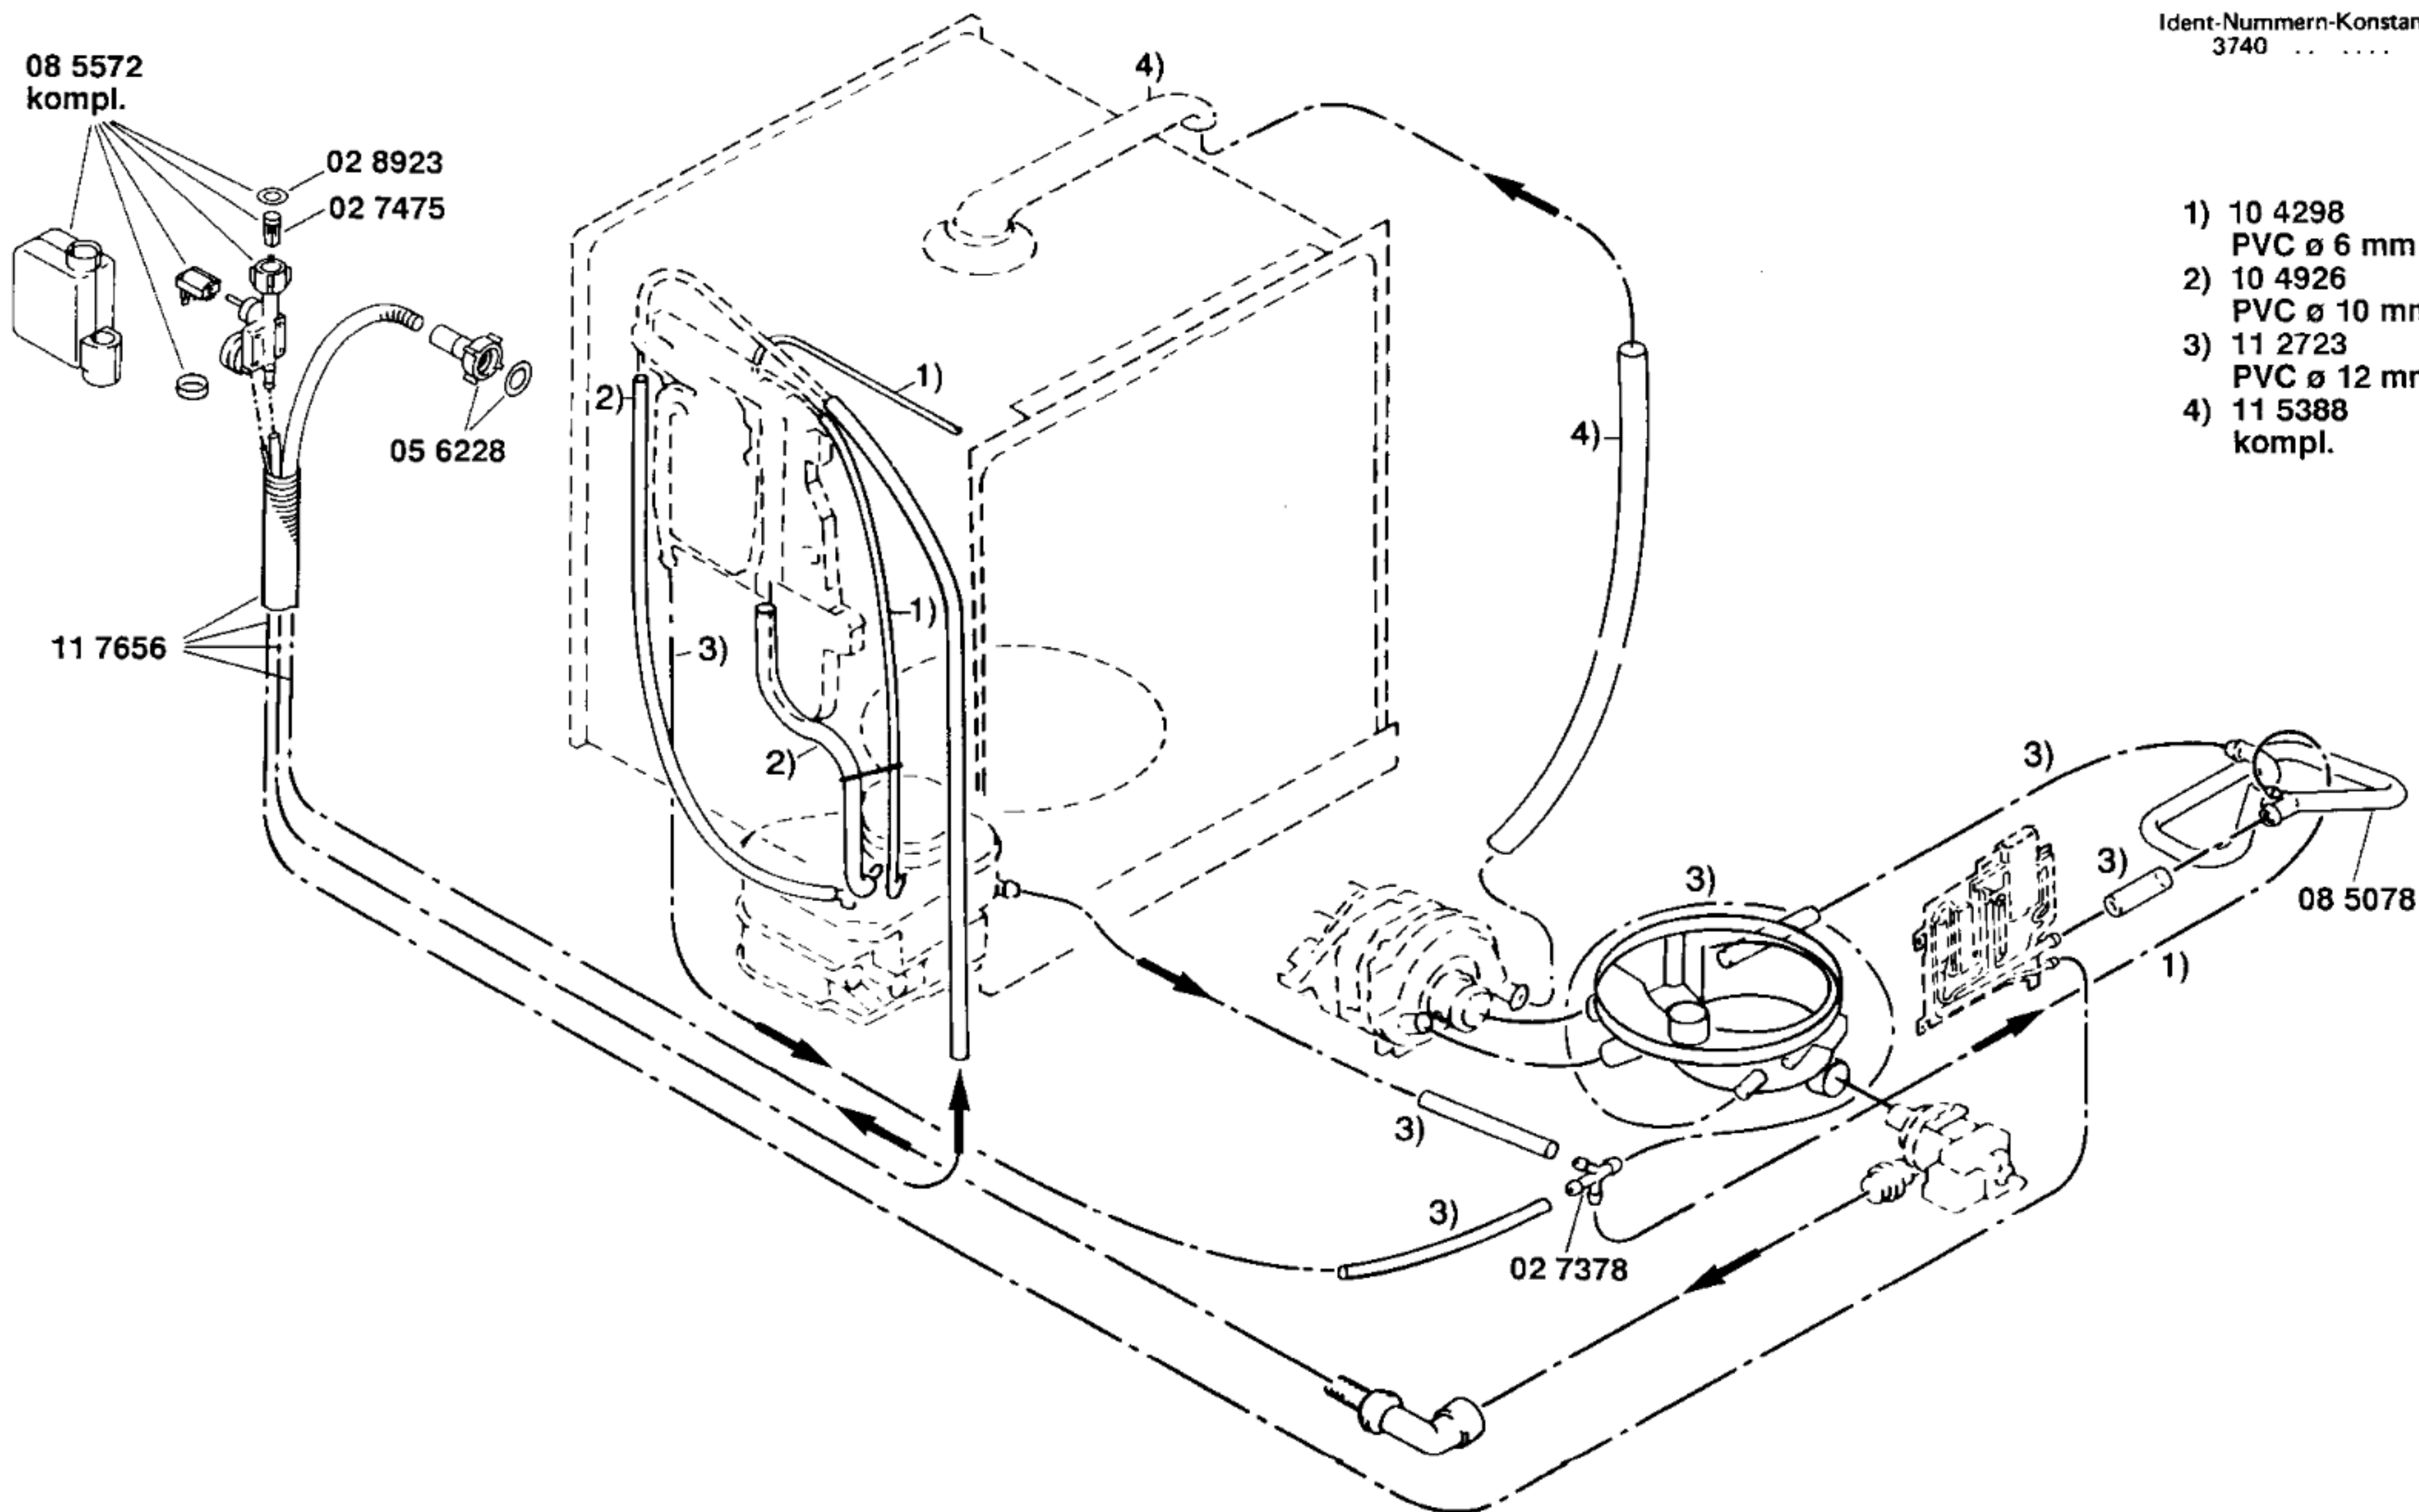


Ident-Nummern-Konstante
3740

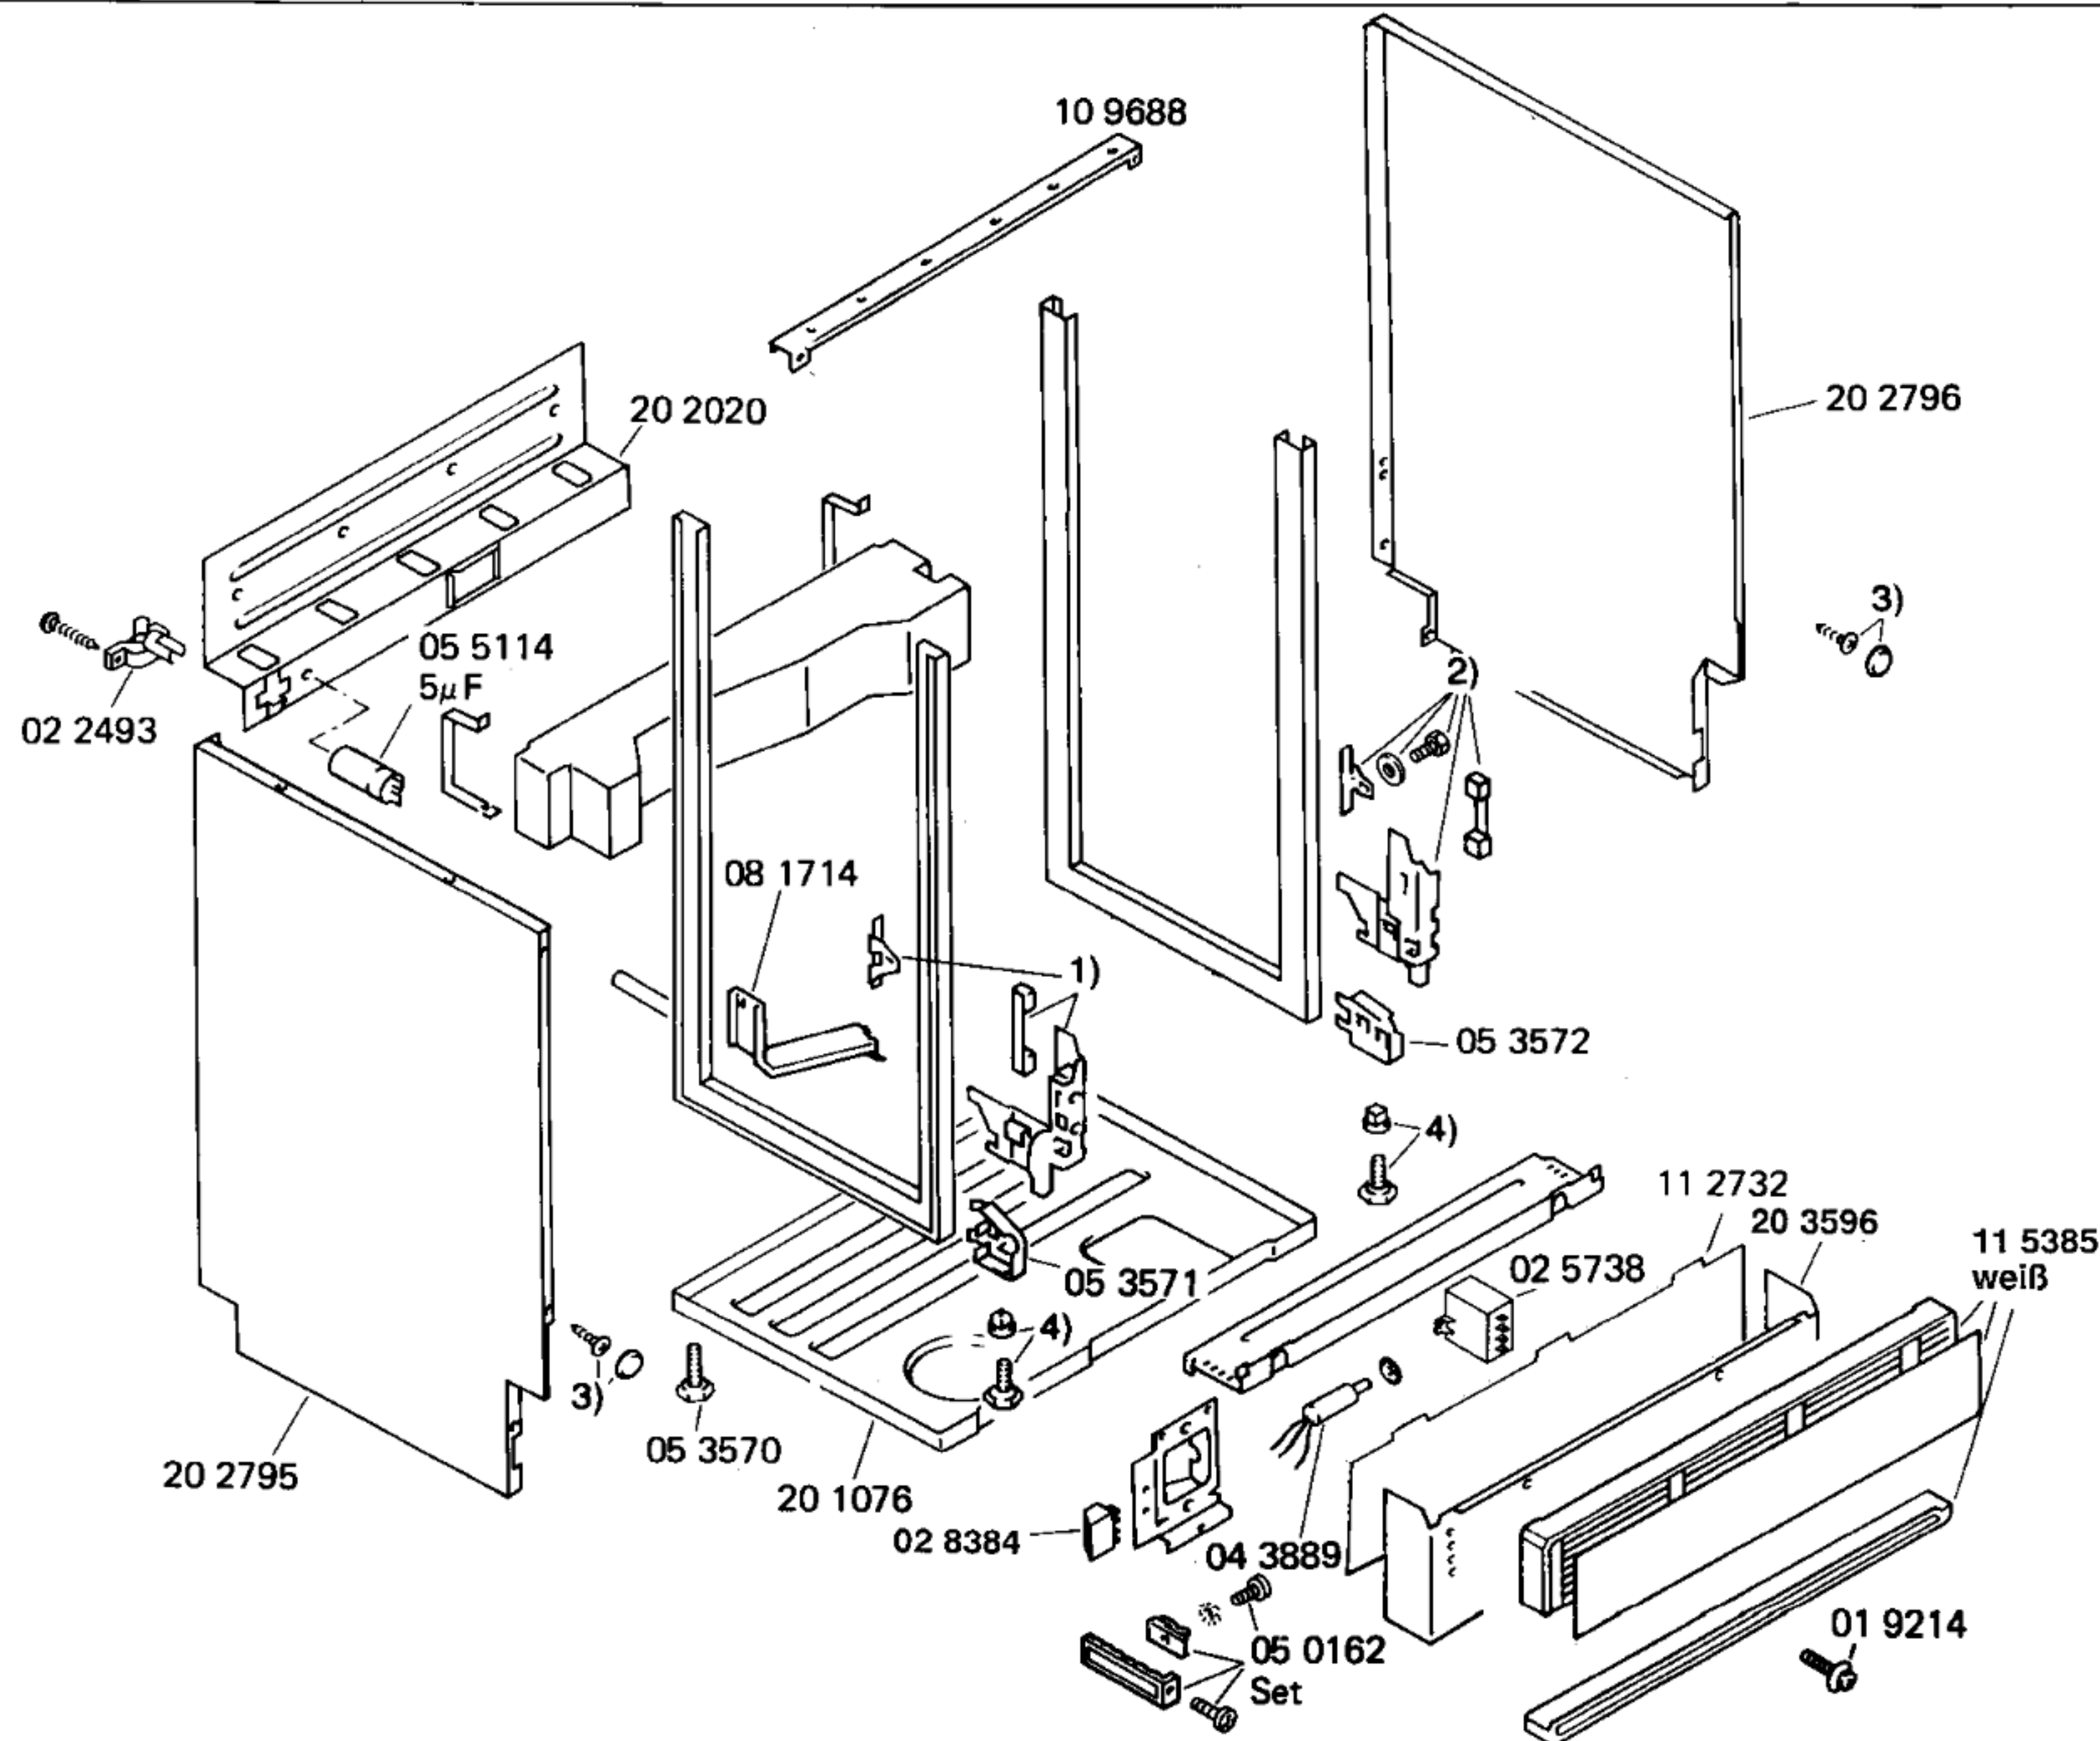

- 1) 08 2970
- 2) 08 2971
- 3) 01 3861
Set
- 4) 02 7386

**BOSCH**

S712 - SMS 7122H - 0 730 100 641-DK1

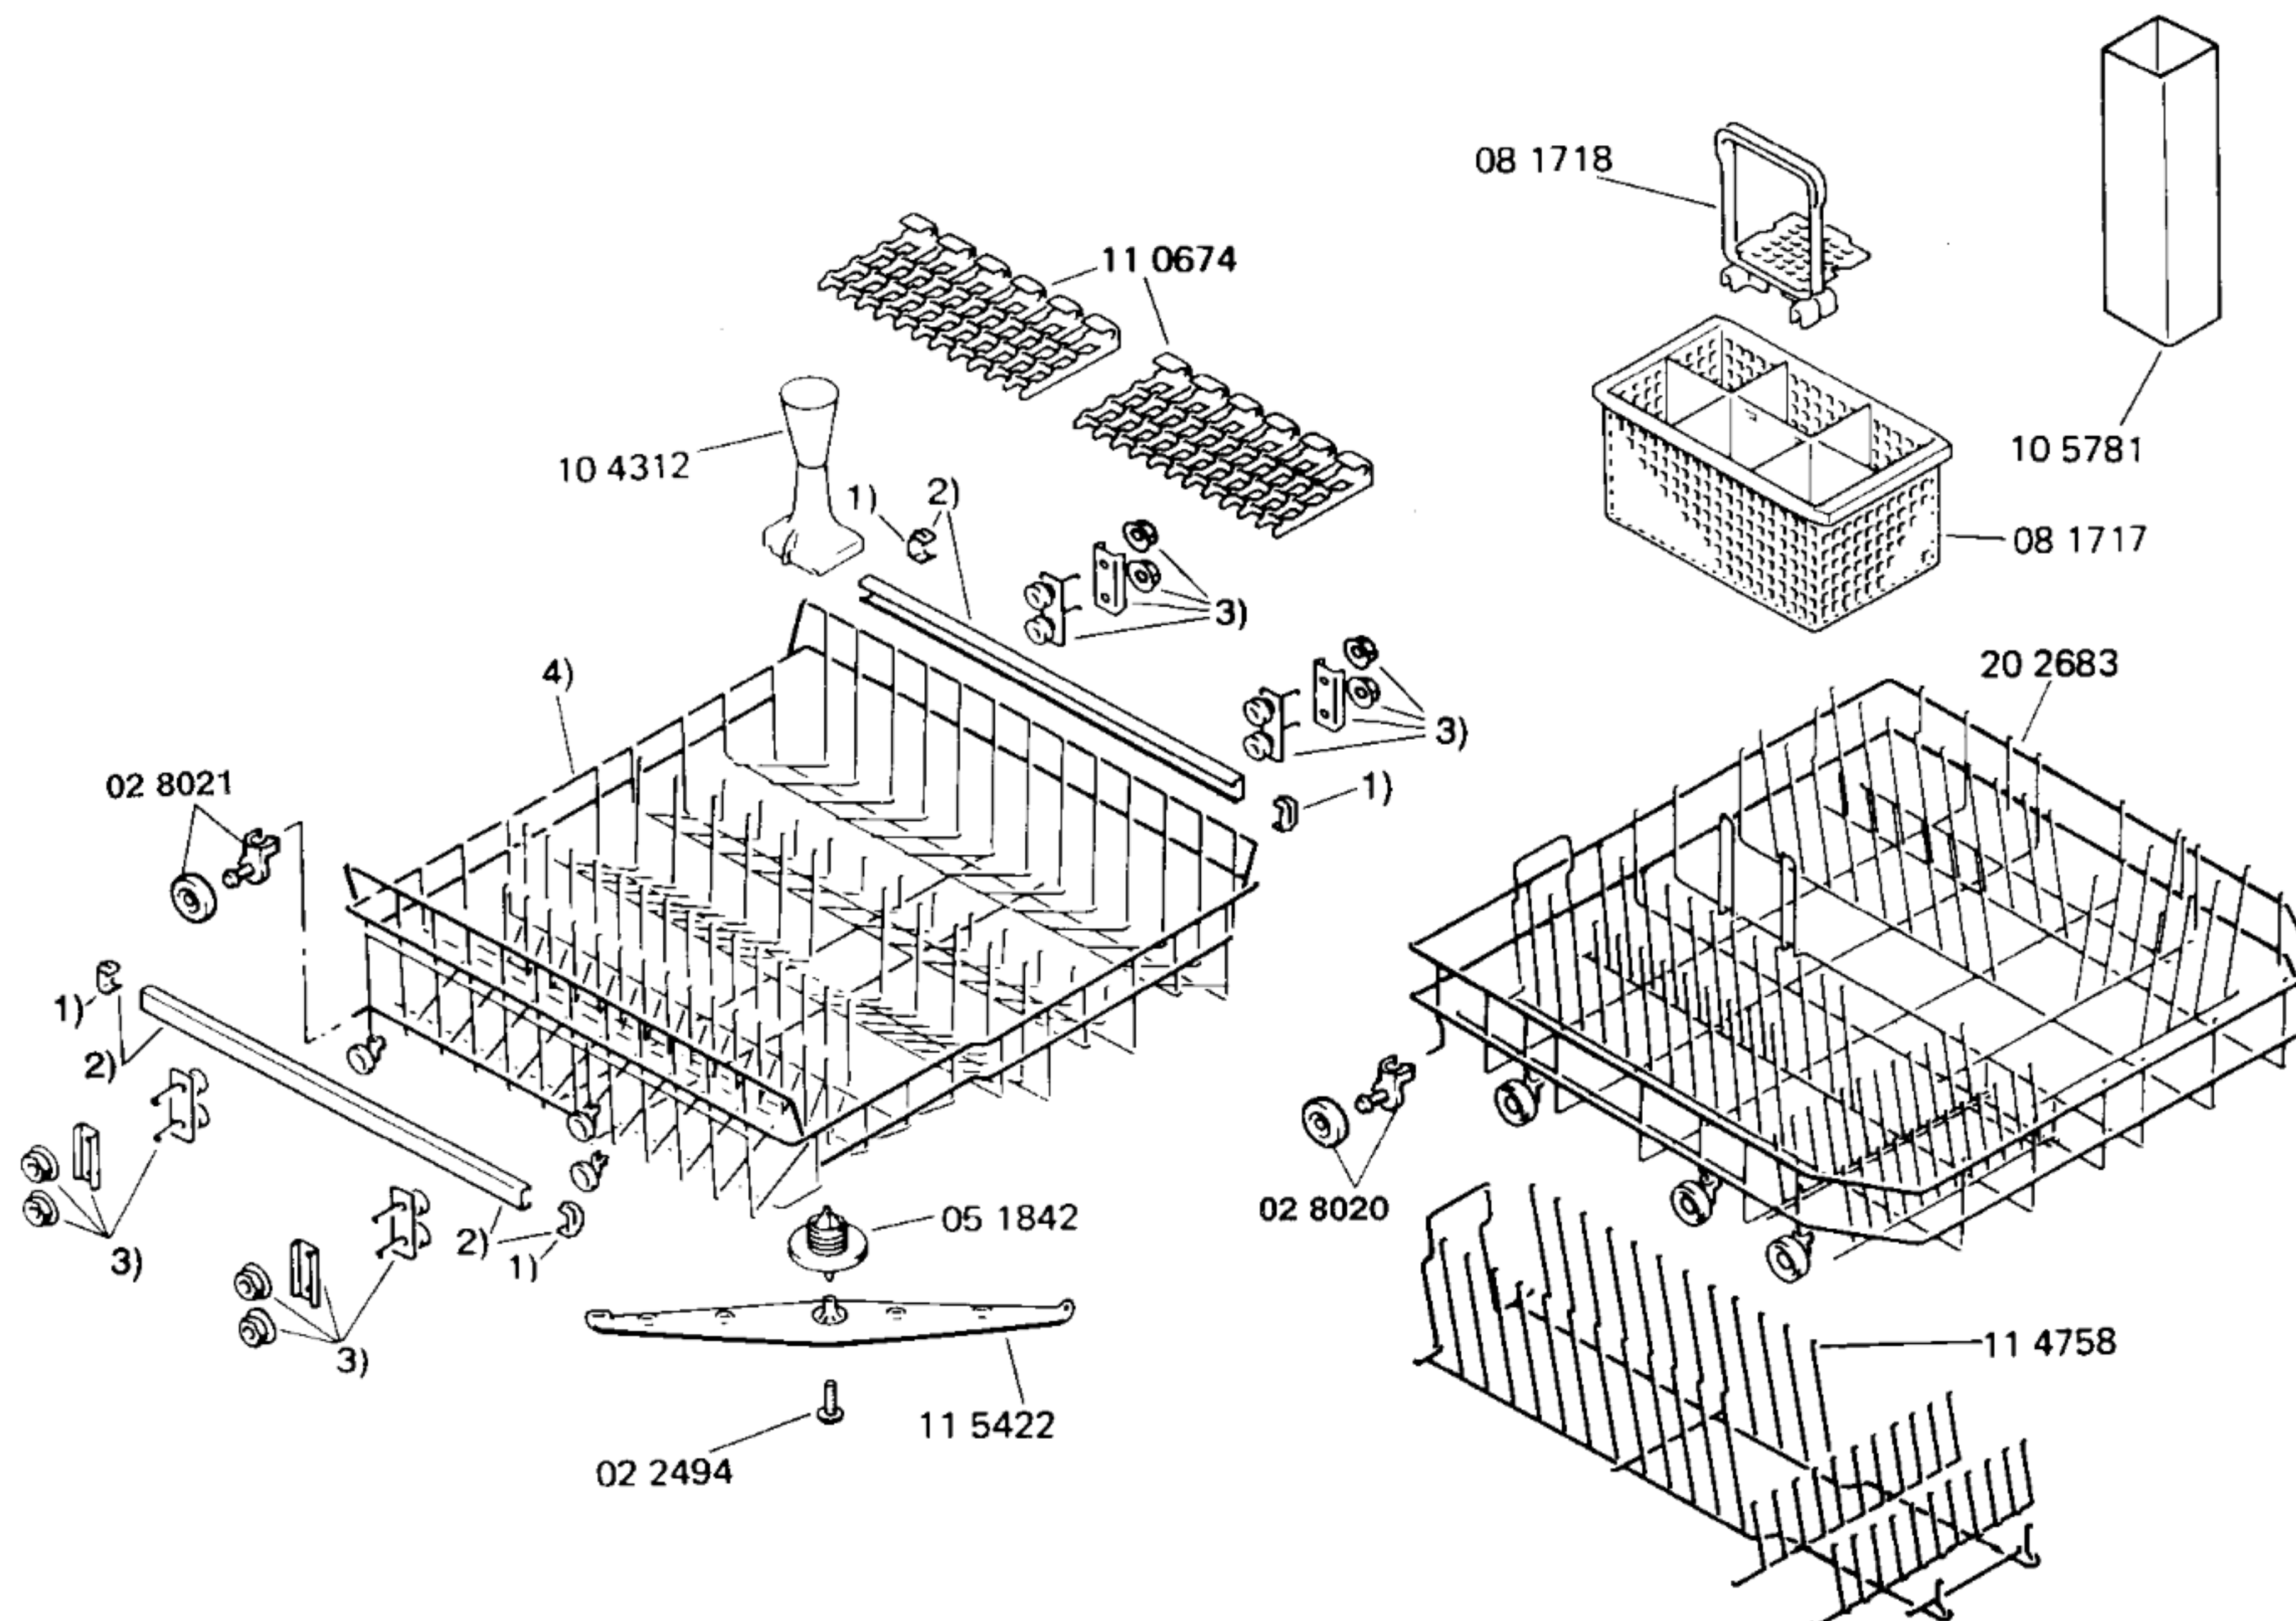GESCHIRRSPÜLGERÄTE
StandgeräteIdent-Nummern-Konstante
3740

- 1) 01 9202
- 2) 11 0668
Set
- 3) 05 1287
Set
- 4) 20 1970