 


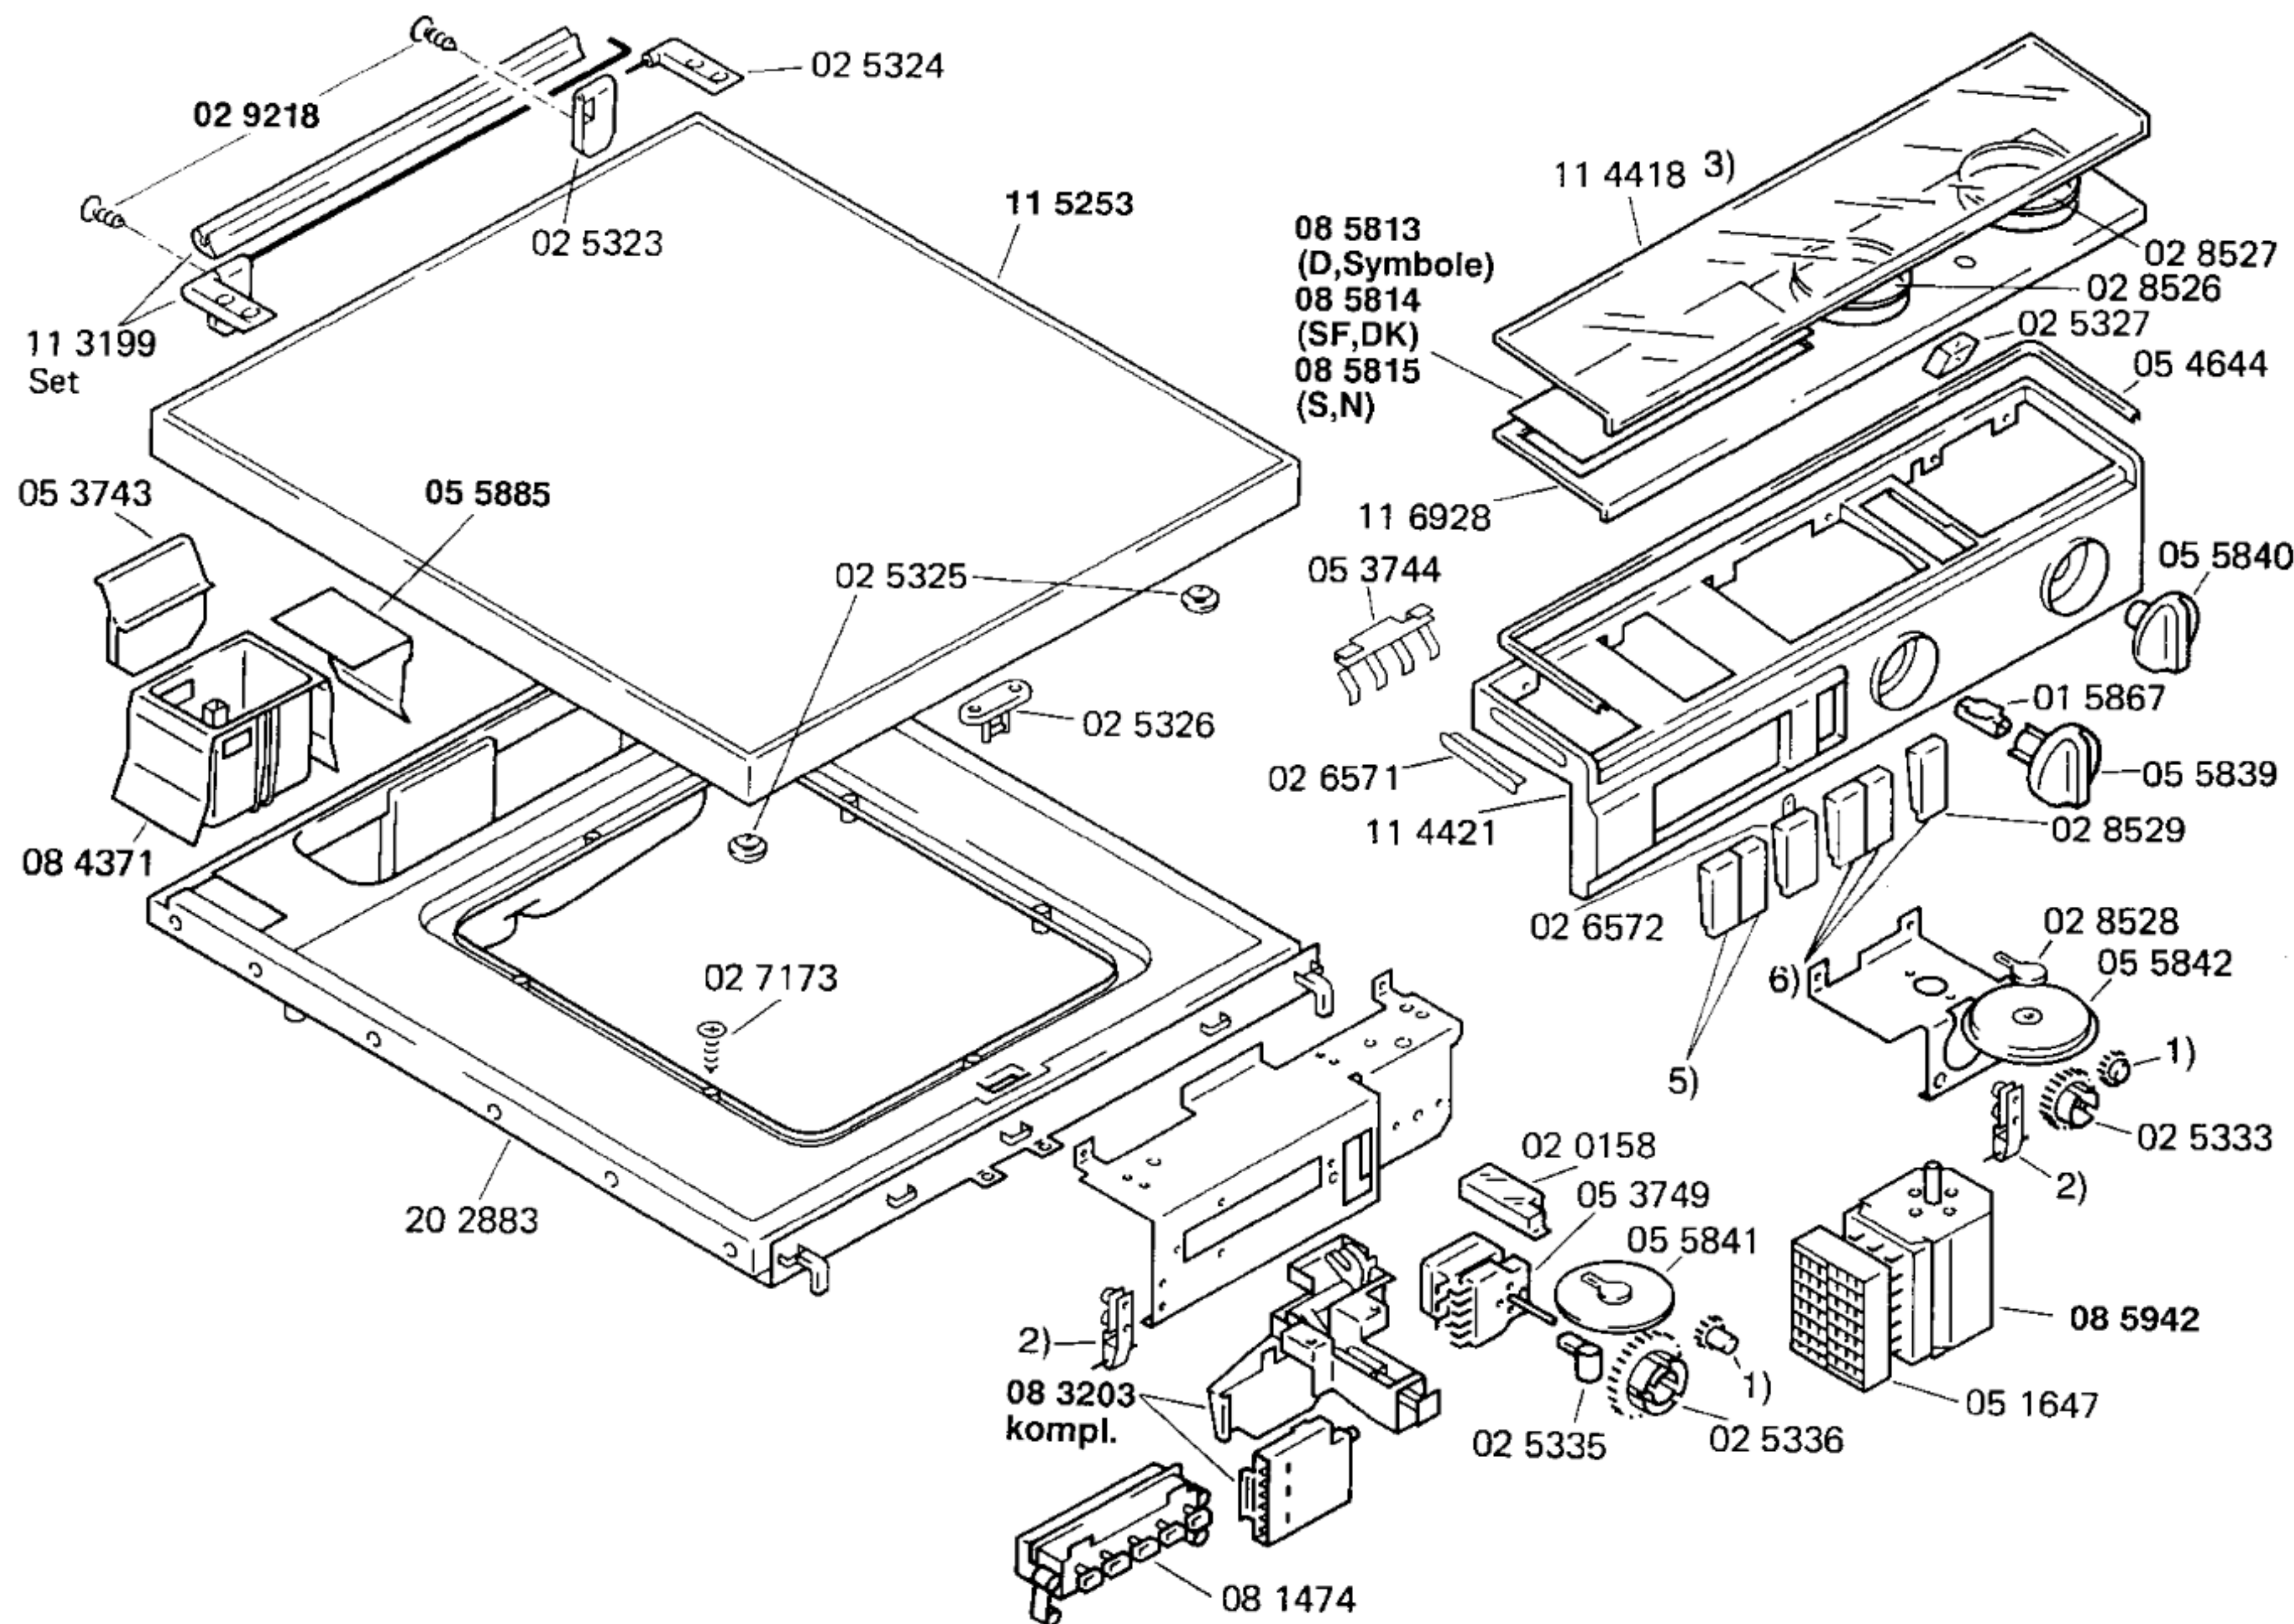

Aufstellanweisungen:

51 1497
(D, GB, F, I, NL)
51 1674
(D, I, S, DK, N, SF)

 
Gebrauchsanweisungen:

 
51 2896
(D)
51 3298
(N, SF)

Programmtabellen:

51 1766
(D)
51 3297
(N, SF)

- 1) 02 5332
- 2) 02 5334
- 3) einschl. 05 4644
- 5) 02 8640 Set
- 6) 02 8639 Set

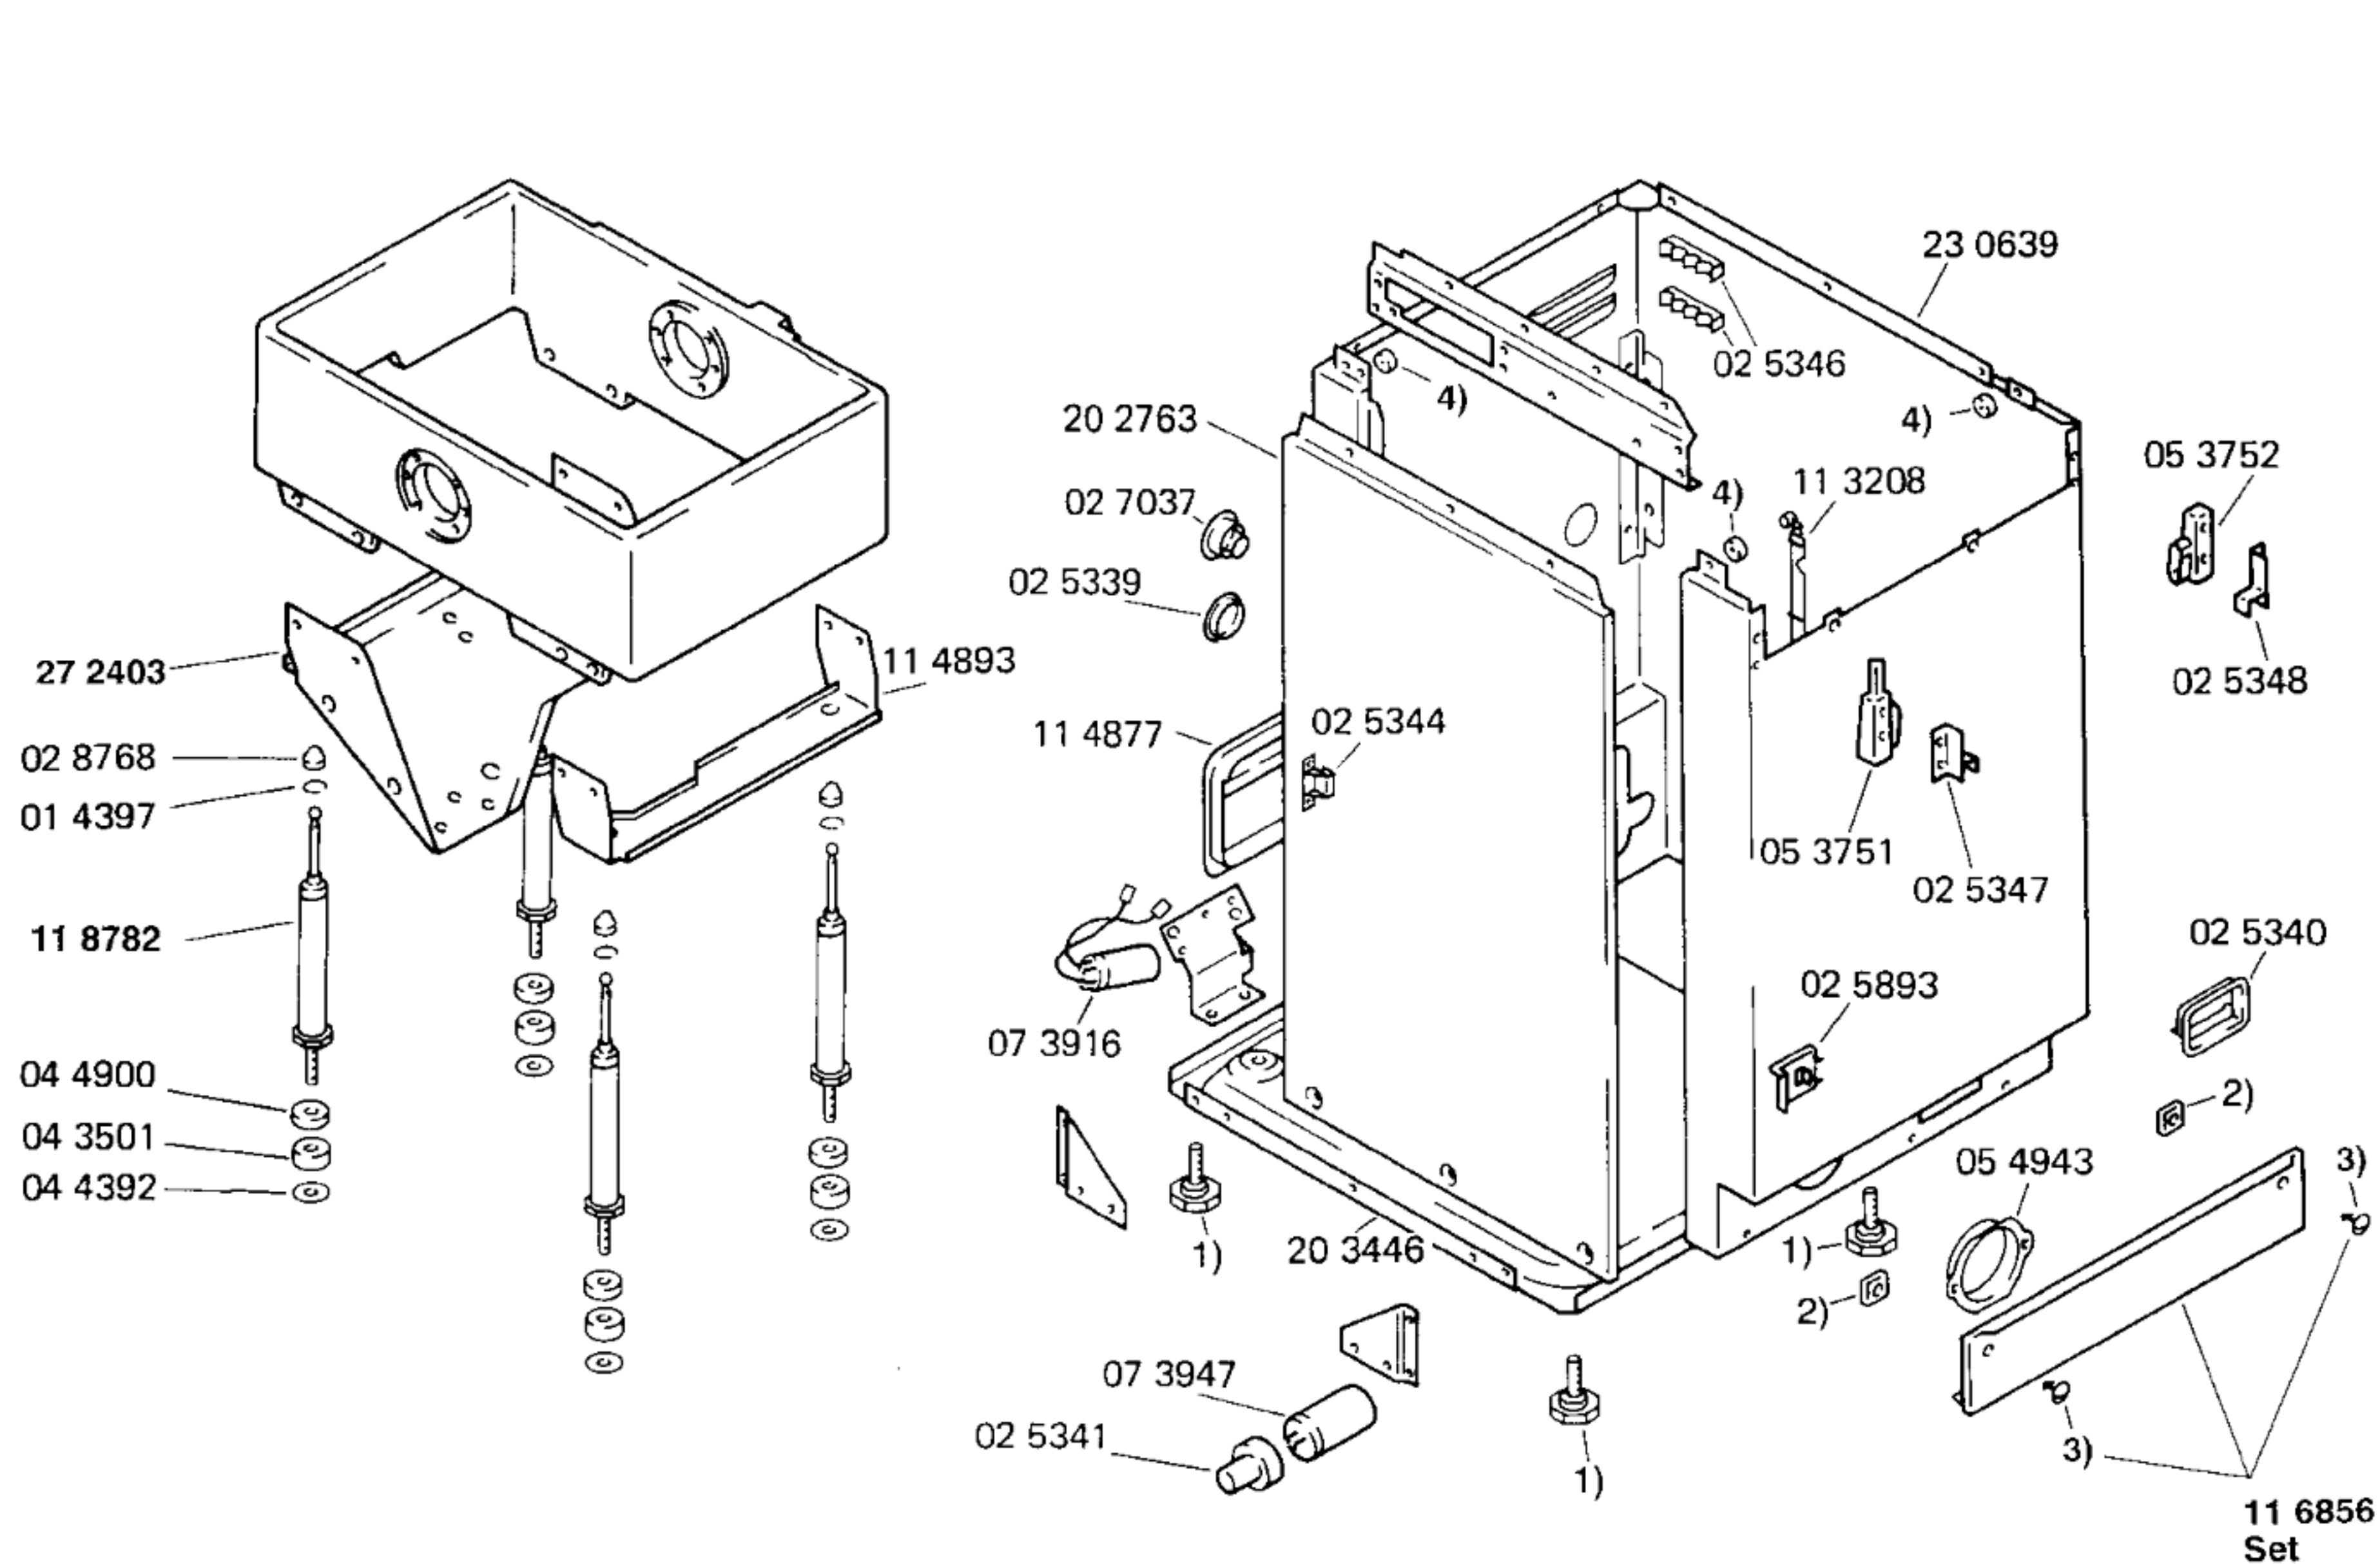

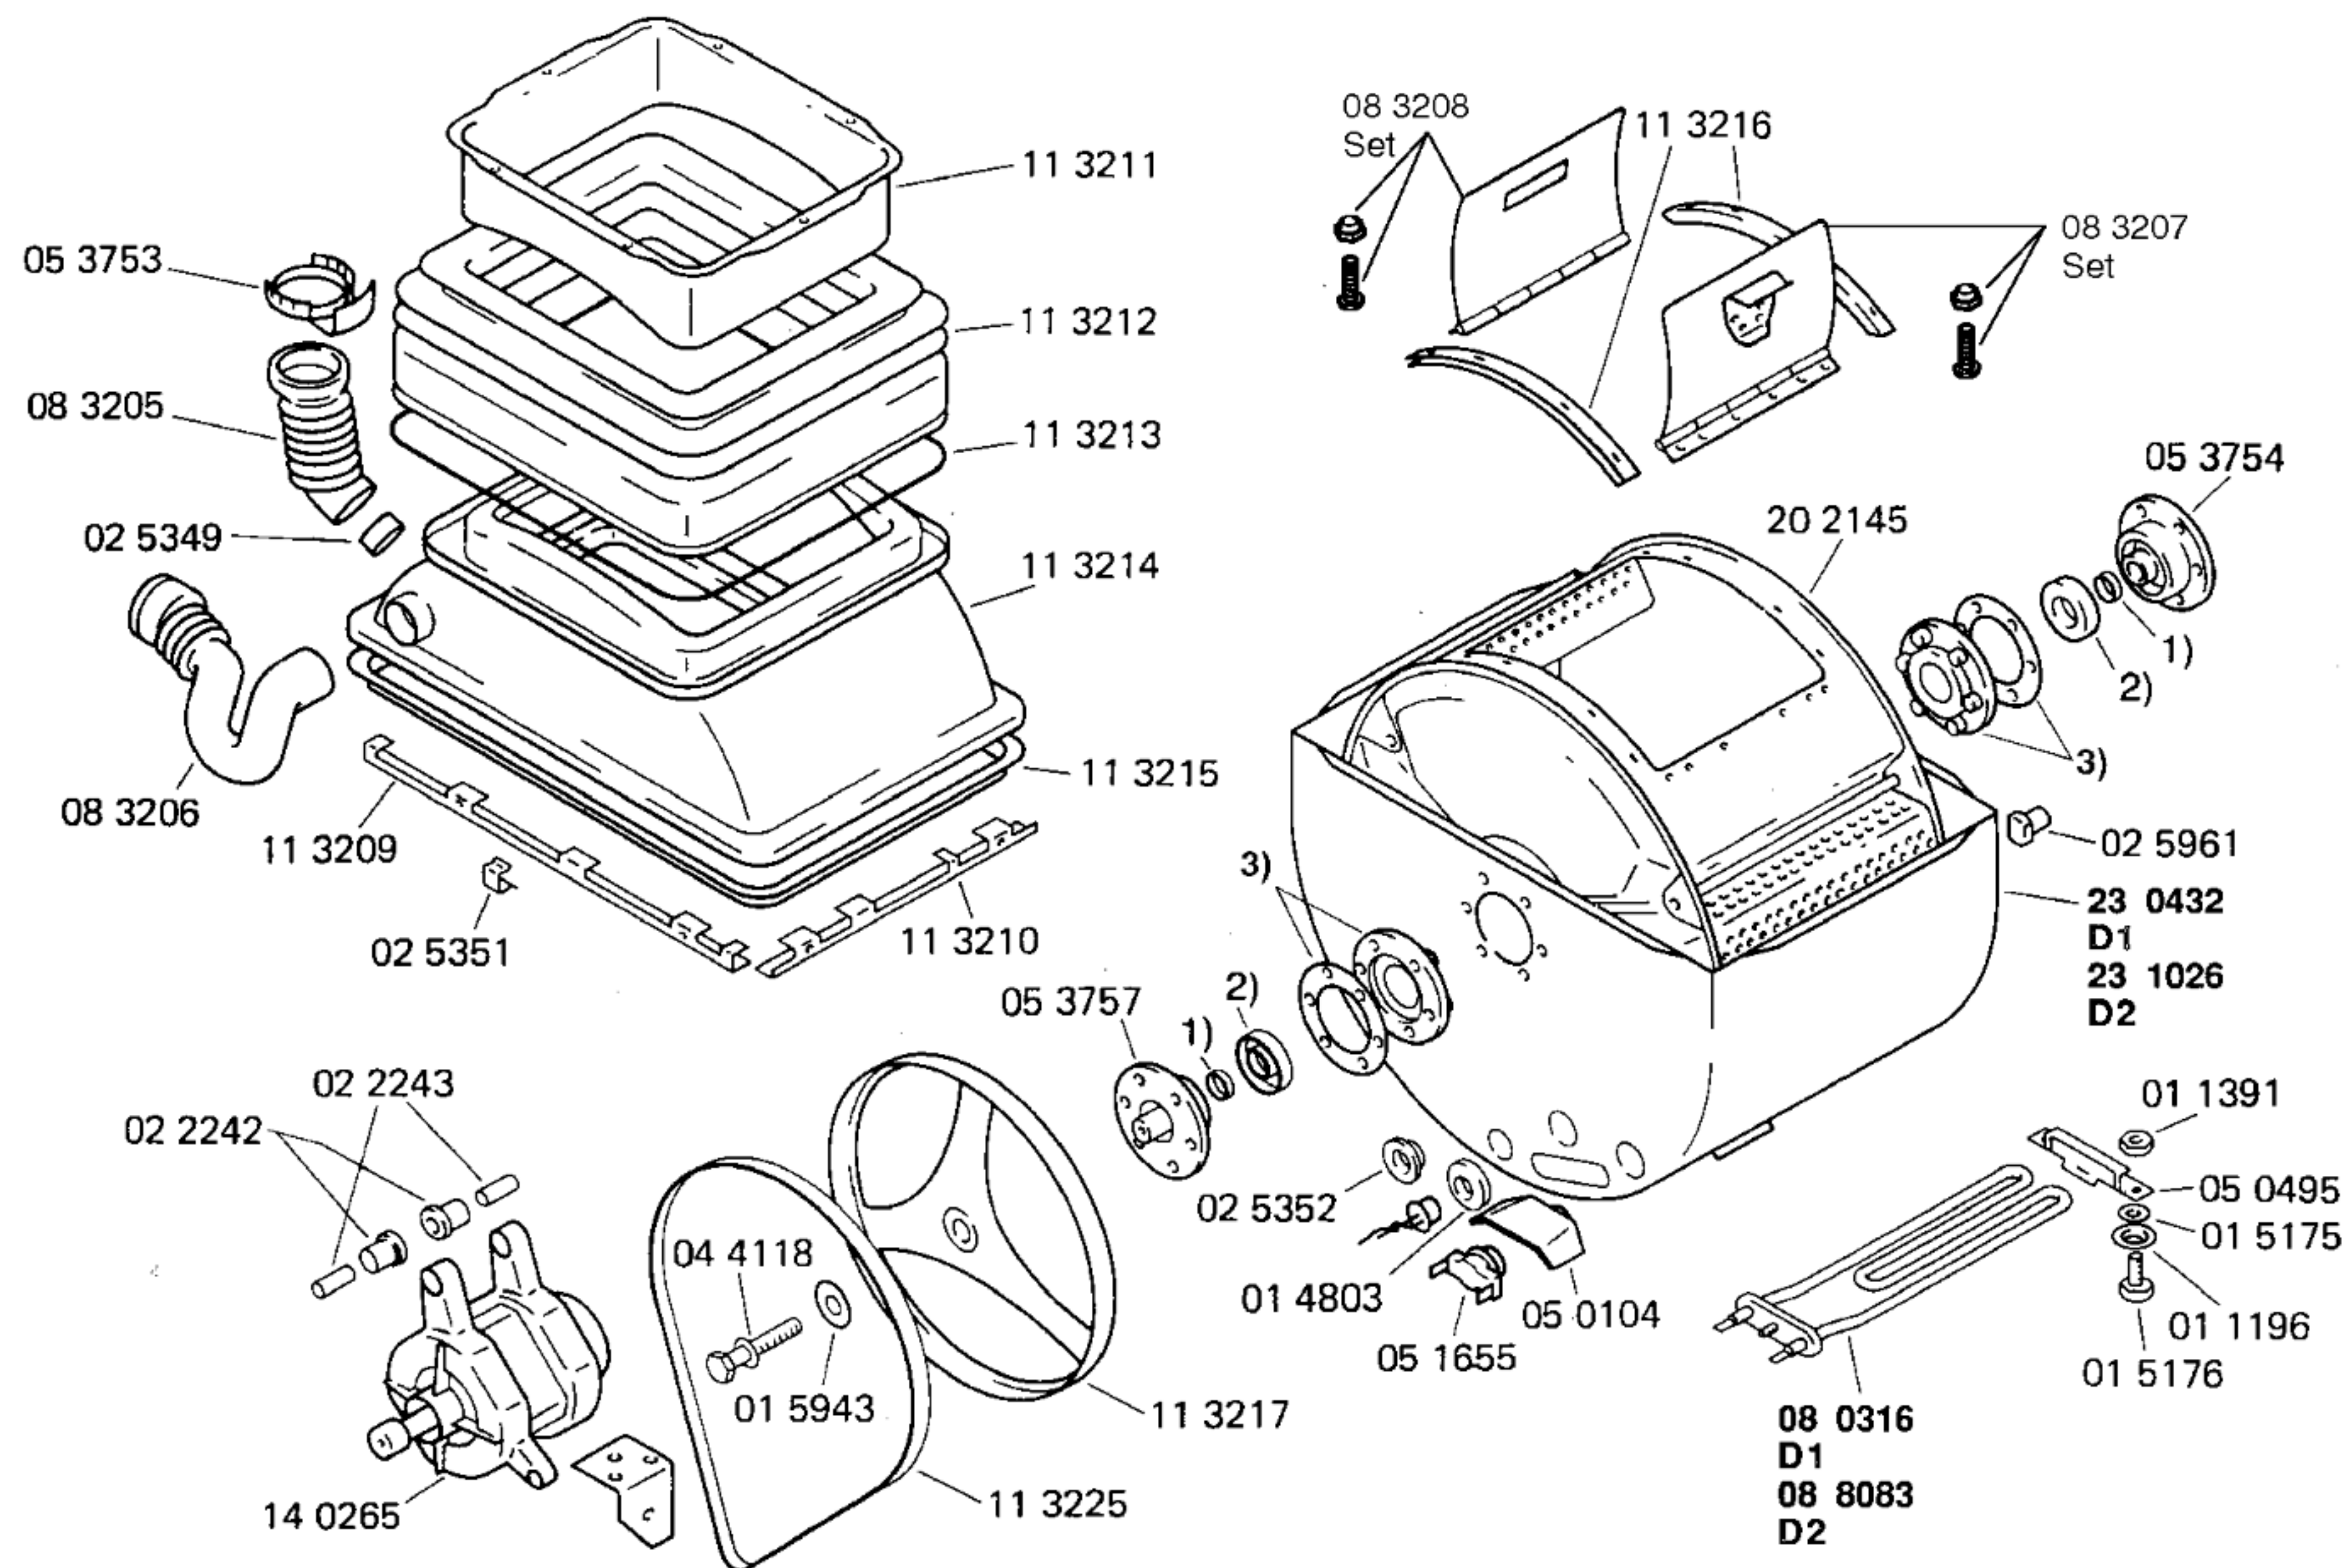

- 1) 04 2309
- 2) 02 5350
- 3) 05 7022

