


**BOSCH**

V340-0722044362-D1,A1
 V340-0722044381-Exp.1
 V340-0722044382-N1,SF1
 V340-0722044383-F1

V340-0722044388-CH1

WASCHGERÄTE
 Waschvollautomaten

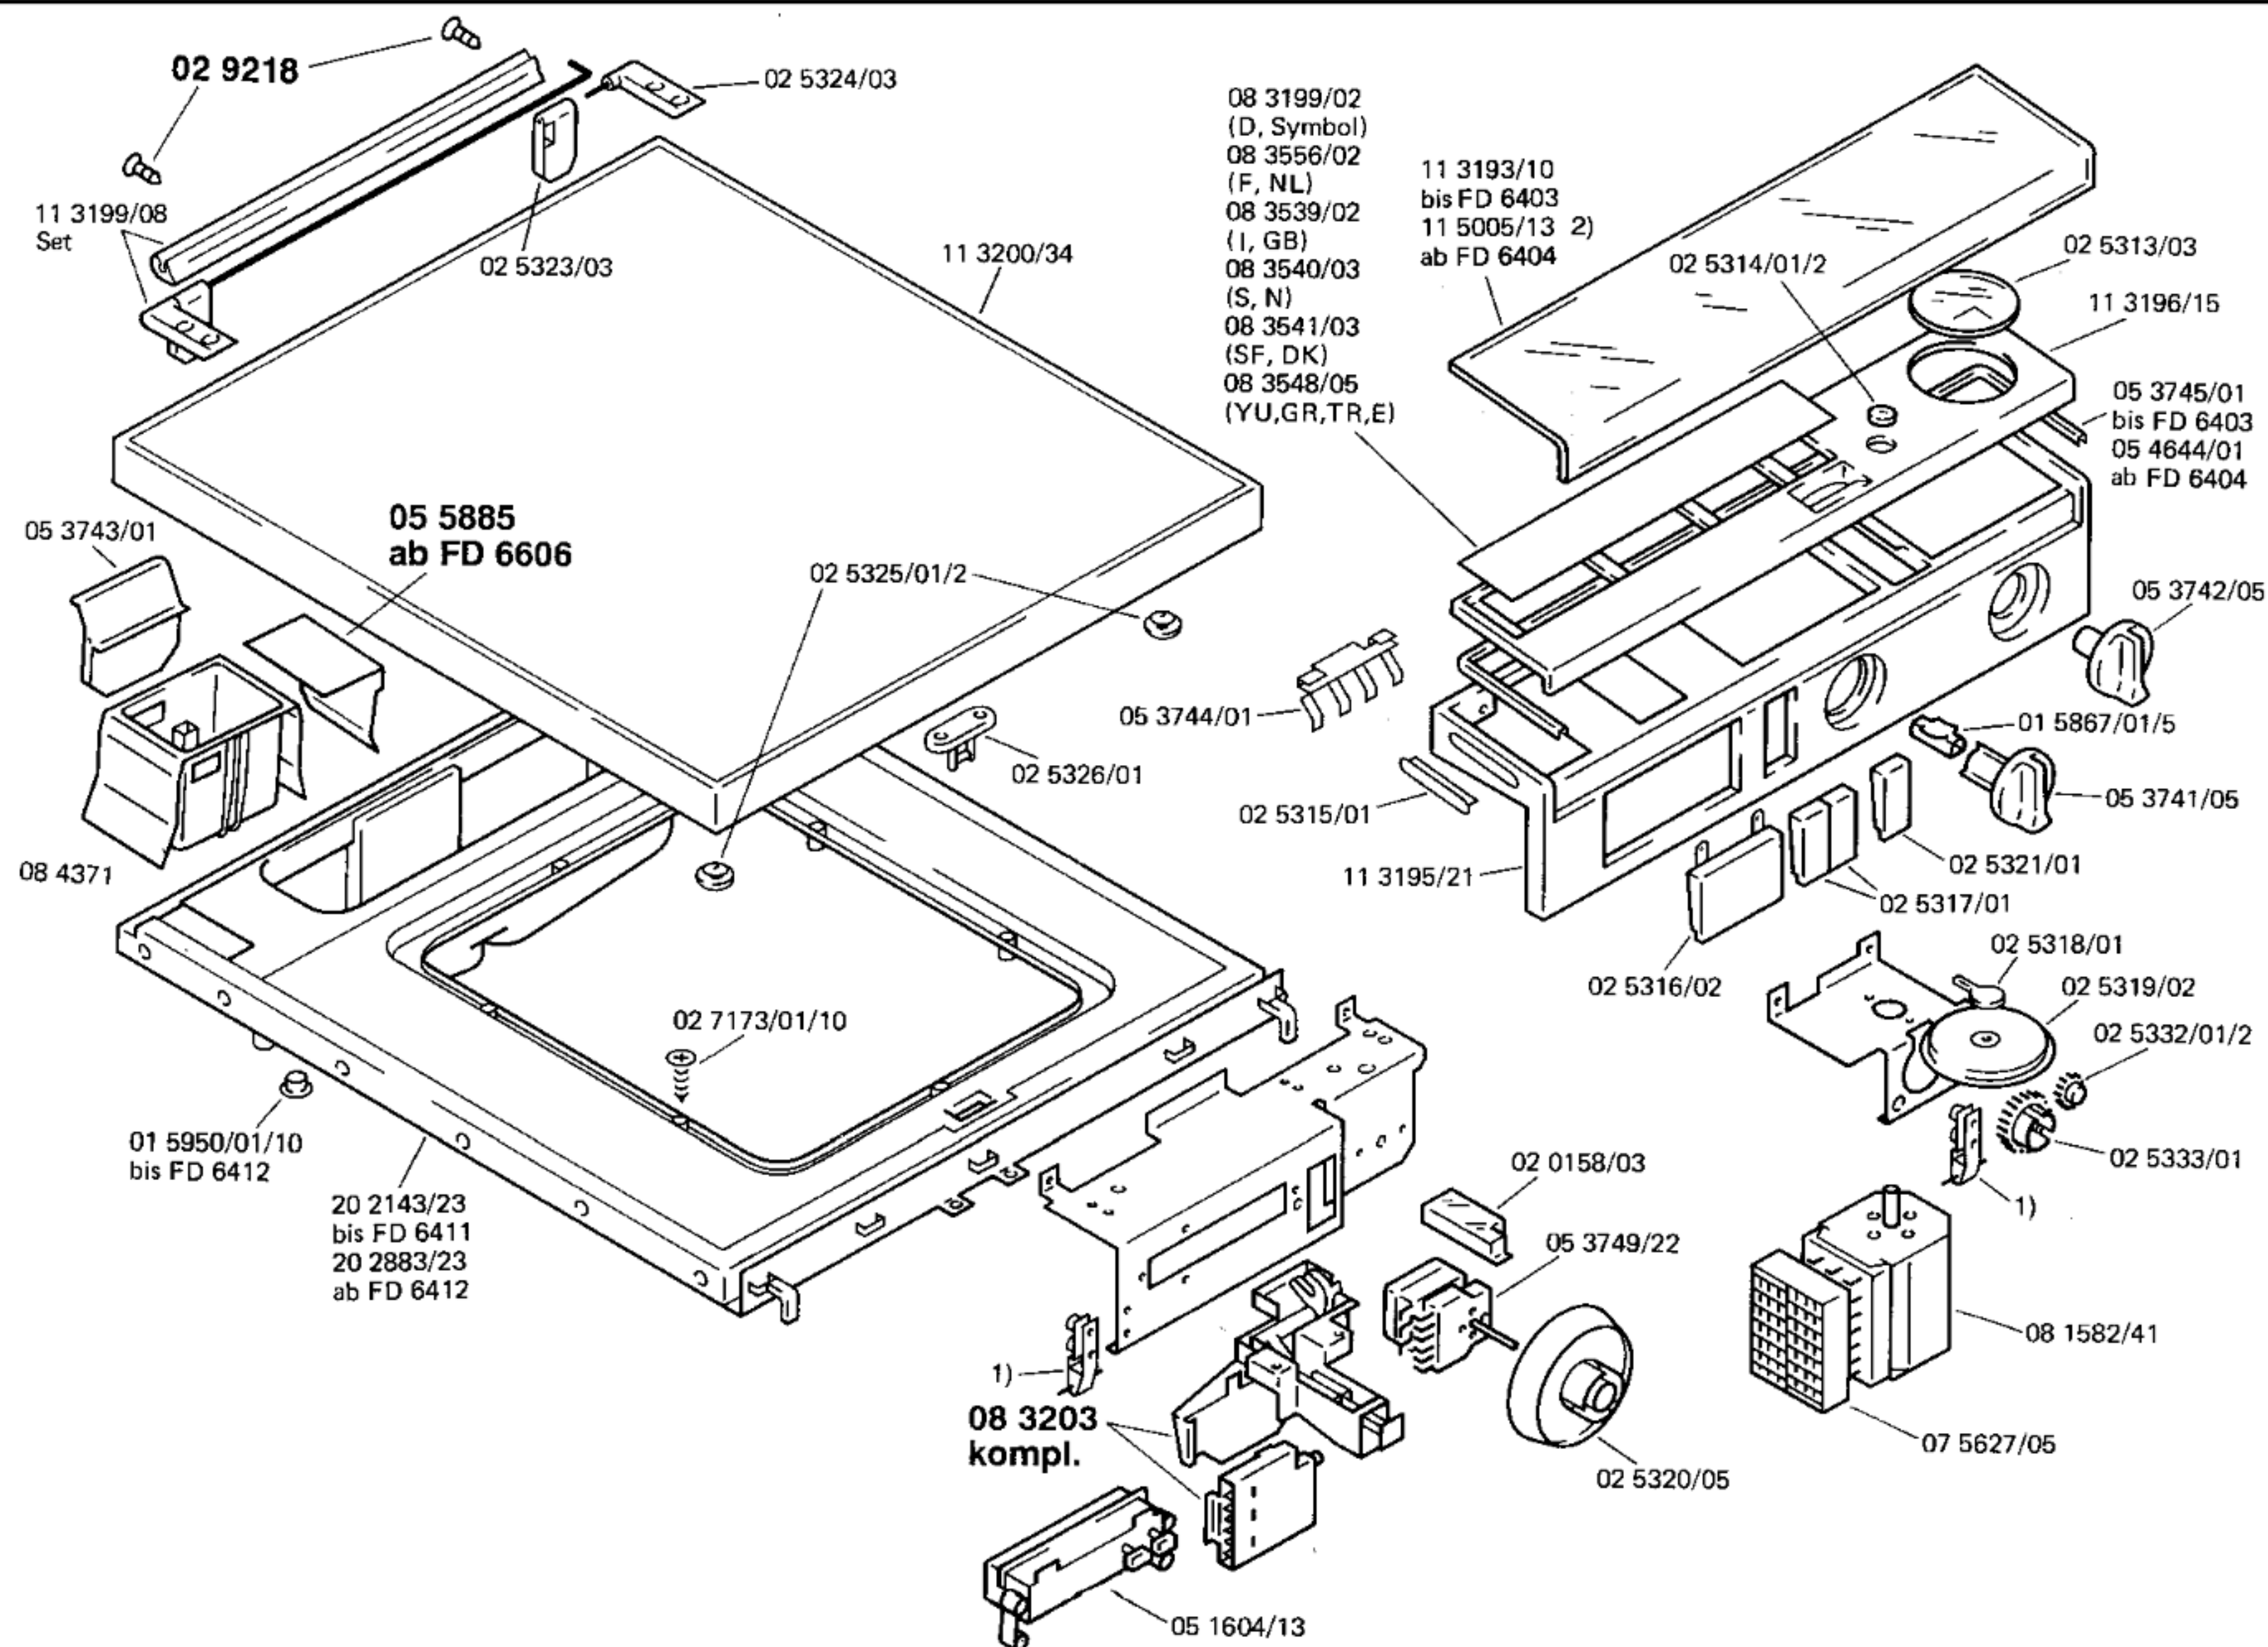

Ident - Nummern - Konstante
 3740

Aufstellanweisungen:

51 1497/00
 (D, GB, F, I, NL)
 51 1674/00
 (D, I, S, DK, N, SF)

Gebrauchsanweisungen:

51 1495/00
 (D, GB, F, I, NL)
 51 1676/00
 (D, I, S, DK, N, SF)
 51 1686/00
 (F)

Programmtabellen:

51 1499/00
 (D, GB, F, I, NL)
 51 1634/00
 (D, I, S, DK, N, SF)

1) 02 5334/01/2

2) einschl. 05 4644


**BOSCH**

V340-0722044362-D1,A1
 V340-0722044381-Exp.1
 V340-0722044382-N1,SF1
 V340-0722044383-F1

V340-0722044388-CH1

WASCHGERÄTE
 Waschvollautomaten

Ident – Nummern – Konstante
 3740

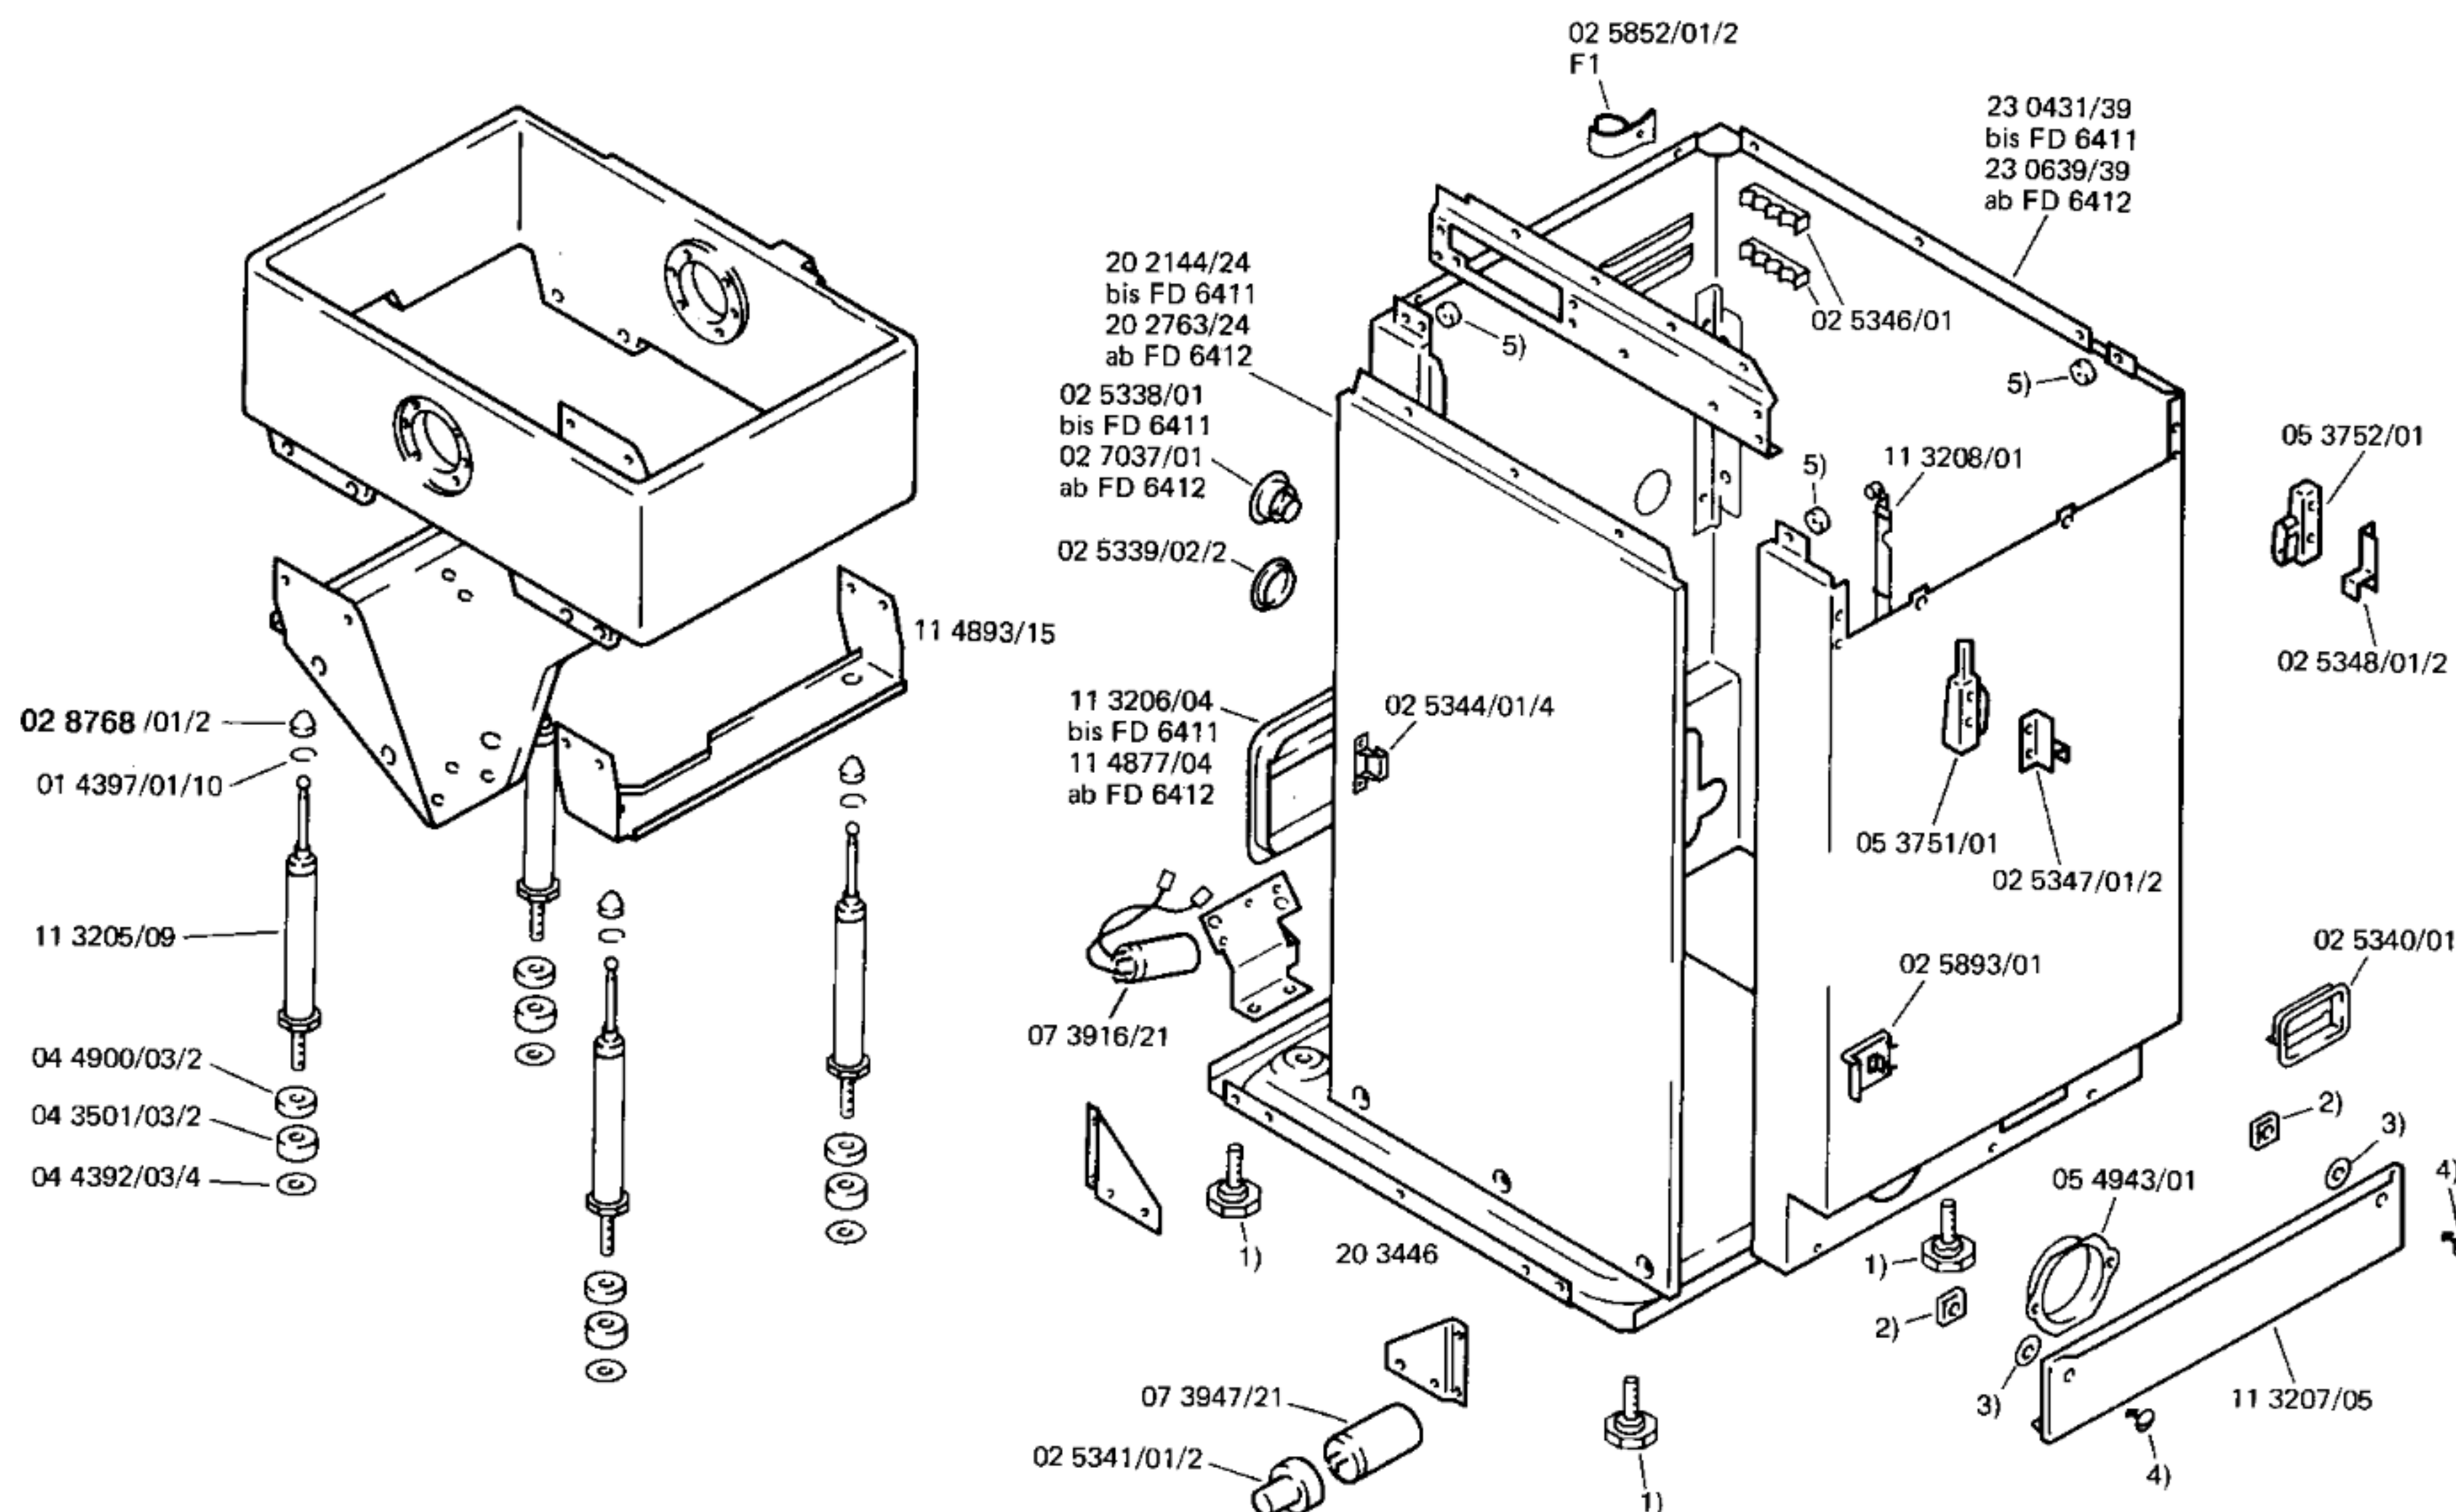




BOSCH

V340-0722044362-D1,A1
V340-0722044381-Exp.1
V340-0722044382-N1,SF1
V340-0722044383-F1

V340-0722044388-CH1

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

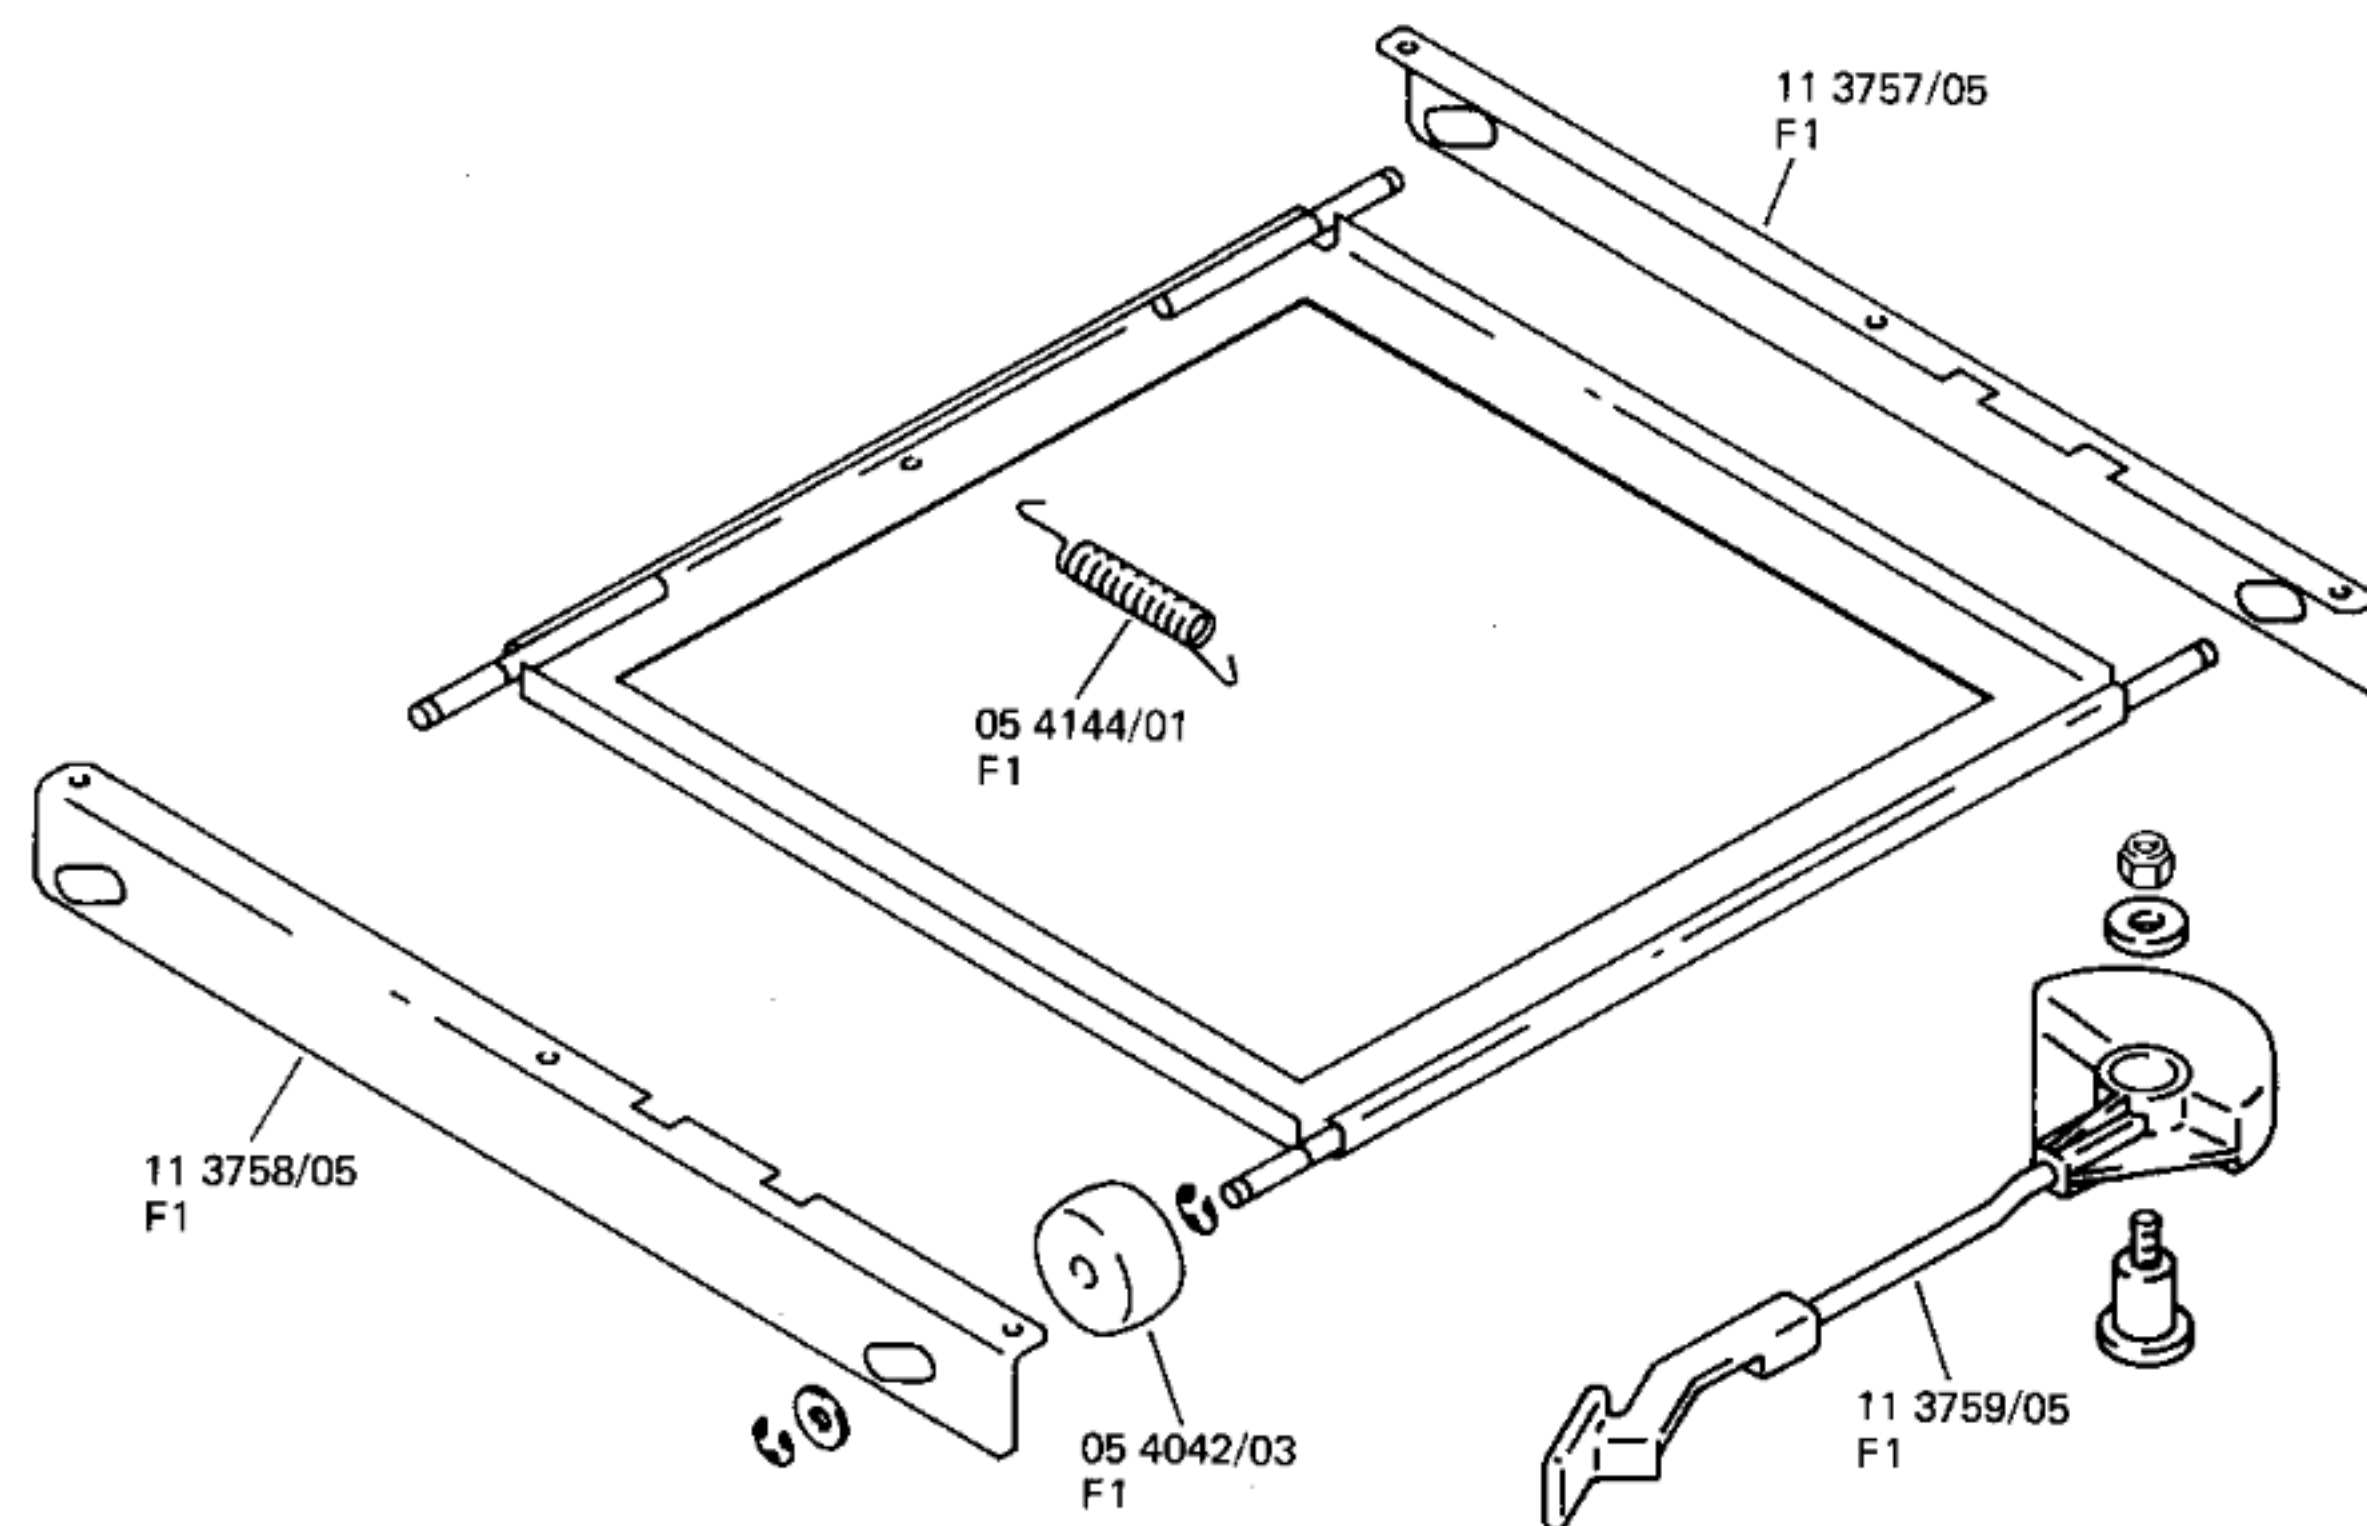


**BOSCH**

V340-0722044362-D1,A1
 V340-0722044381-Exp.1
 V340-0722044382-N1,SF1
 V340-0722044383-F1

V340-0722044388-CH1

WASCHGERÄTE
 Waschvollautomaten

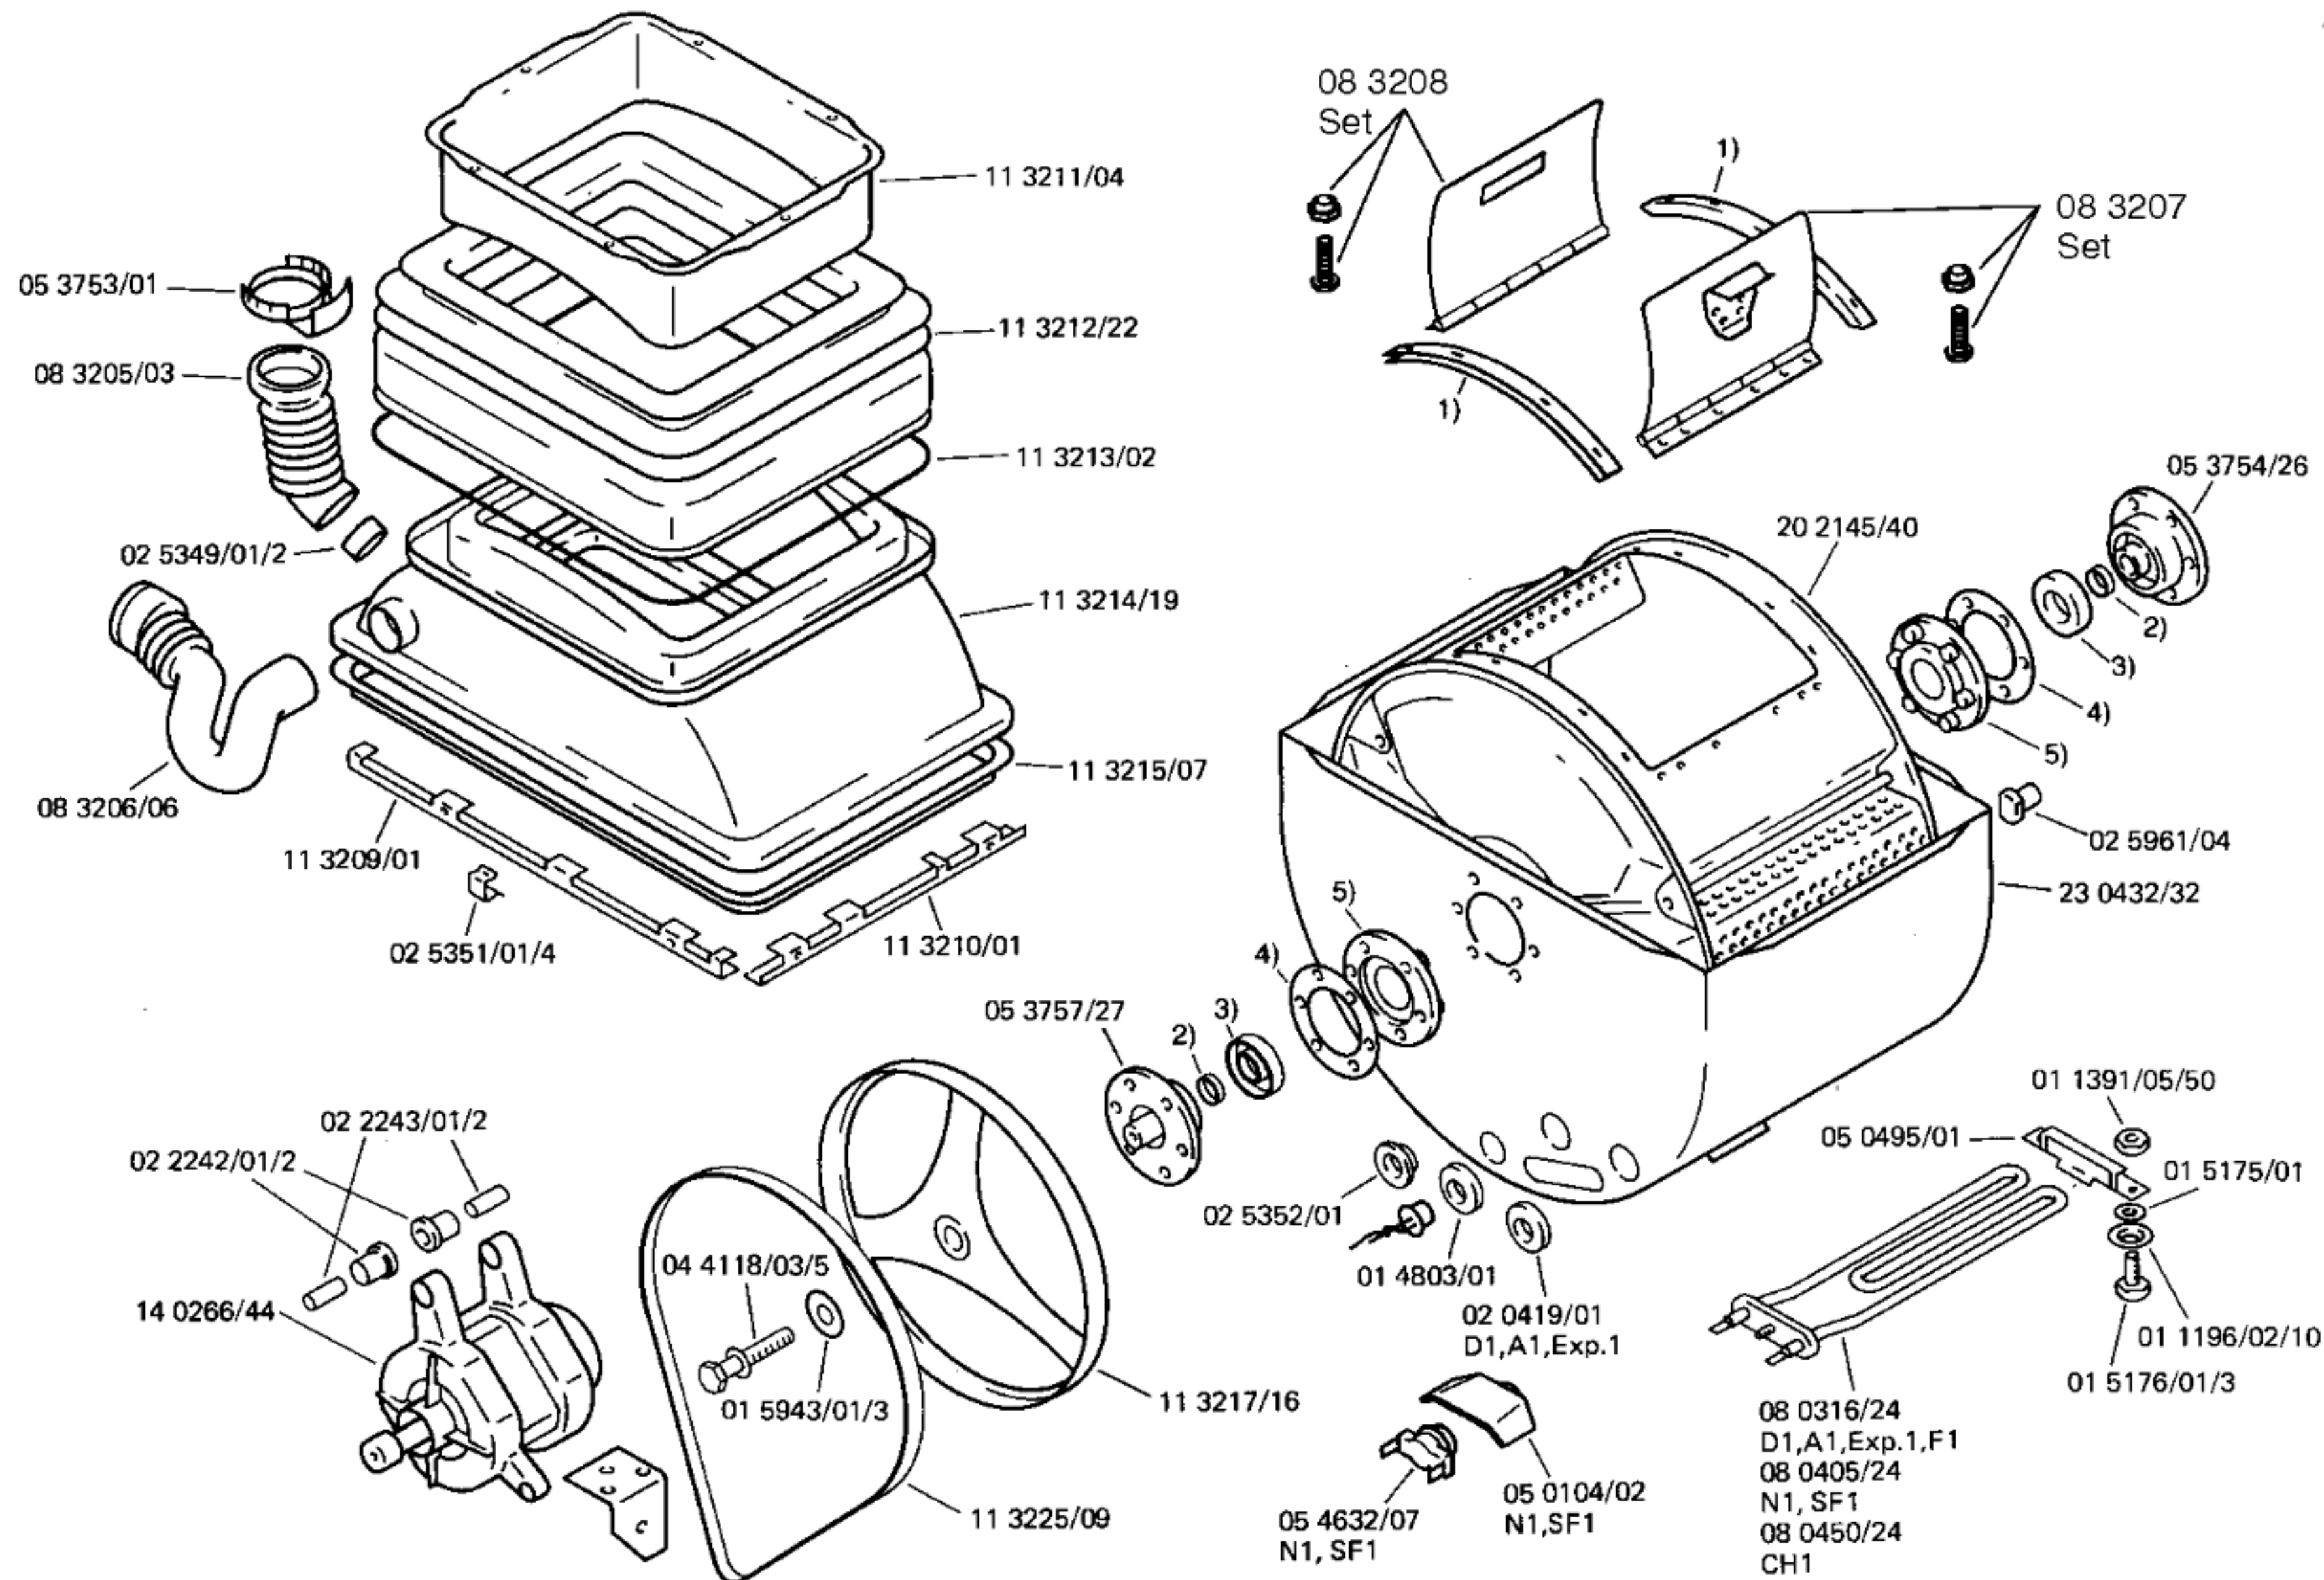

Ident – Nummern – Konstante
 3740

- 1) 11 3216/01
- 2) 04 2309/03/10
- 3) 02 5350/04
- 4) 05 3755/01
- 5) 05 3756/03

**BOSCH**

V340-0722044362-D1,A1
V340-0722044381-Exp.1
V340-0722044382-N1,SF1
V340-0722044383-F1

V340-0722044388-CH1

WASCHGERÄTE
Waschvollautomaten

Ident – Nummern – Konstante
3740

