 
 
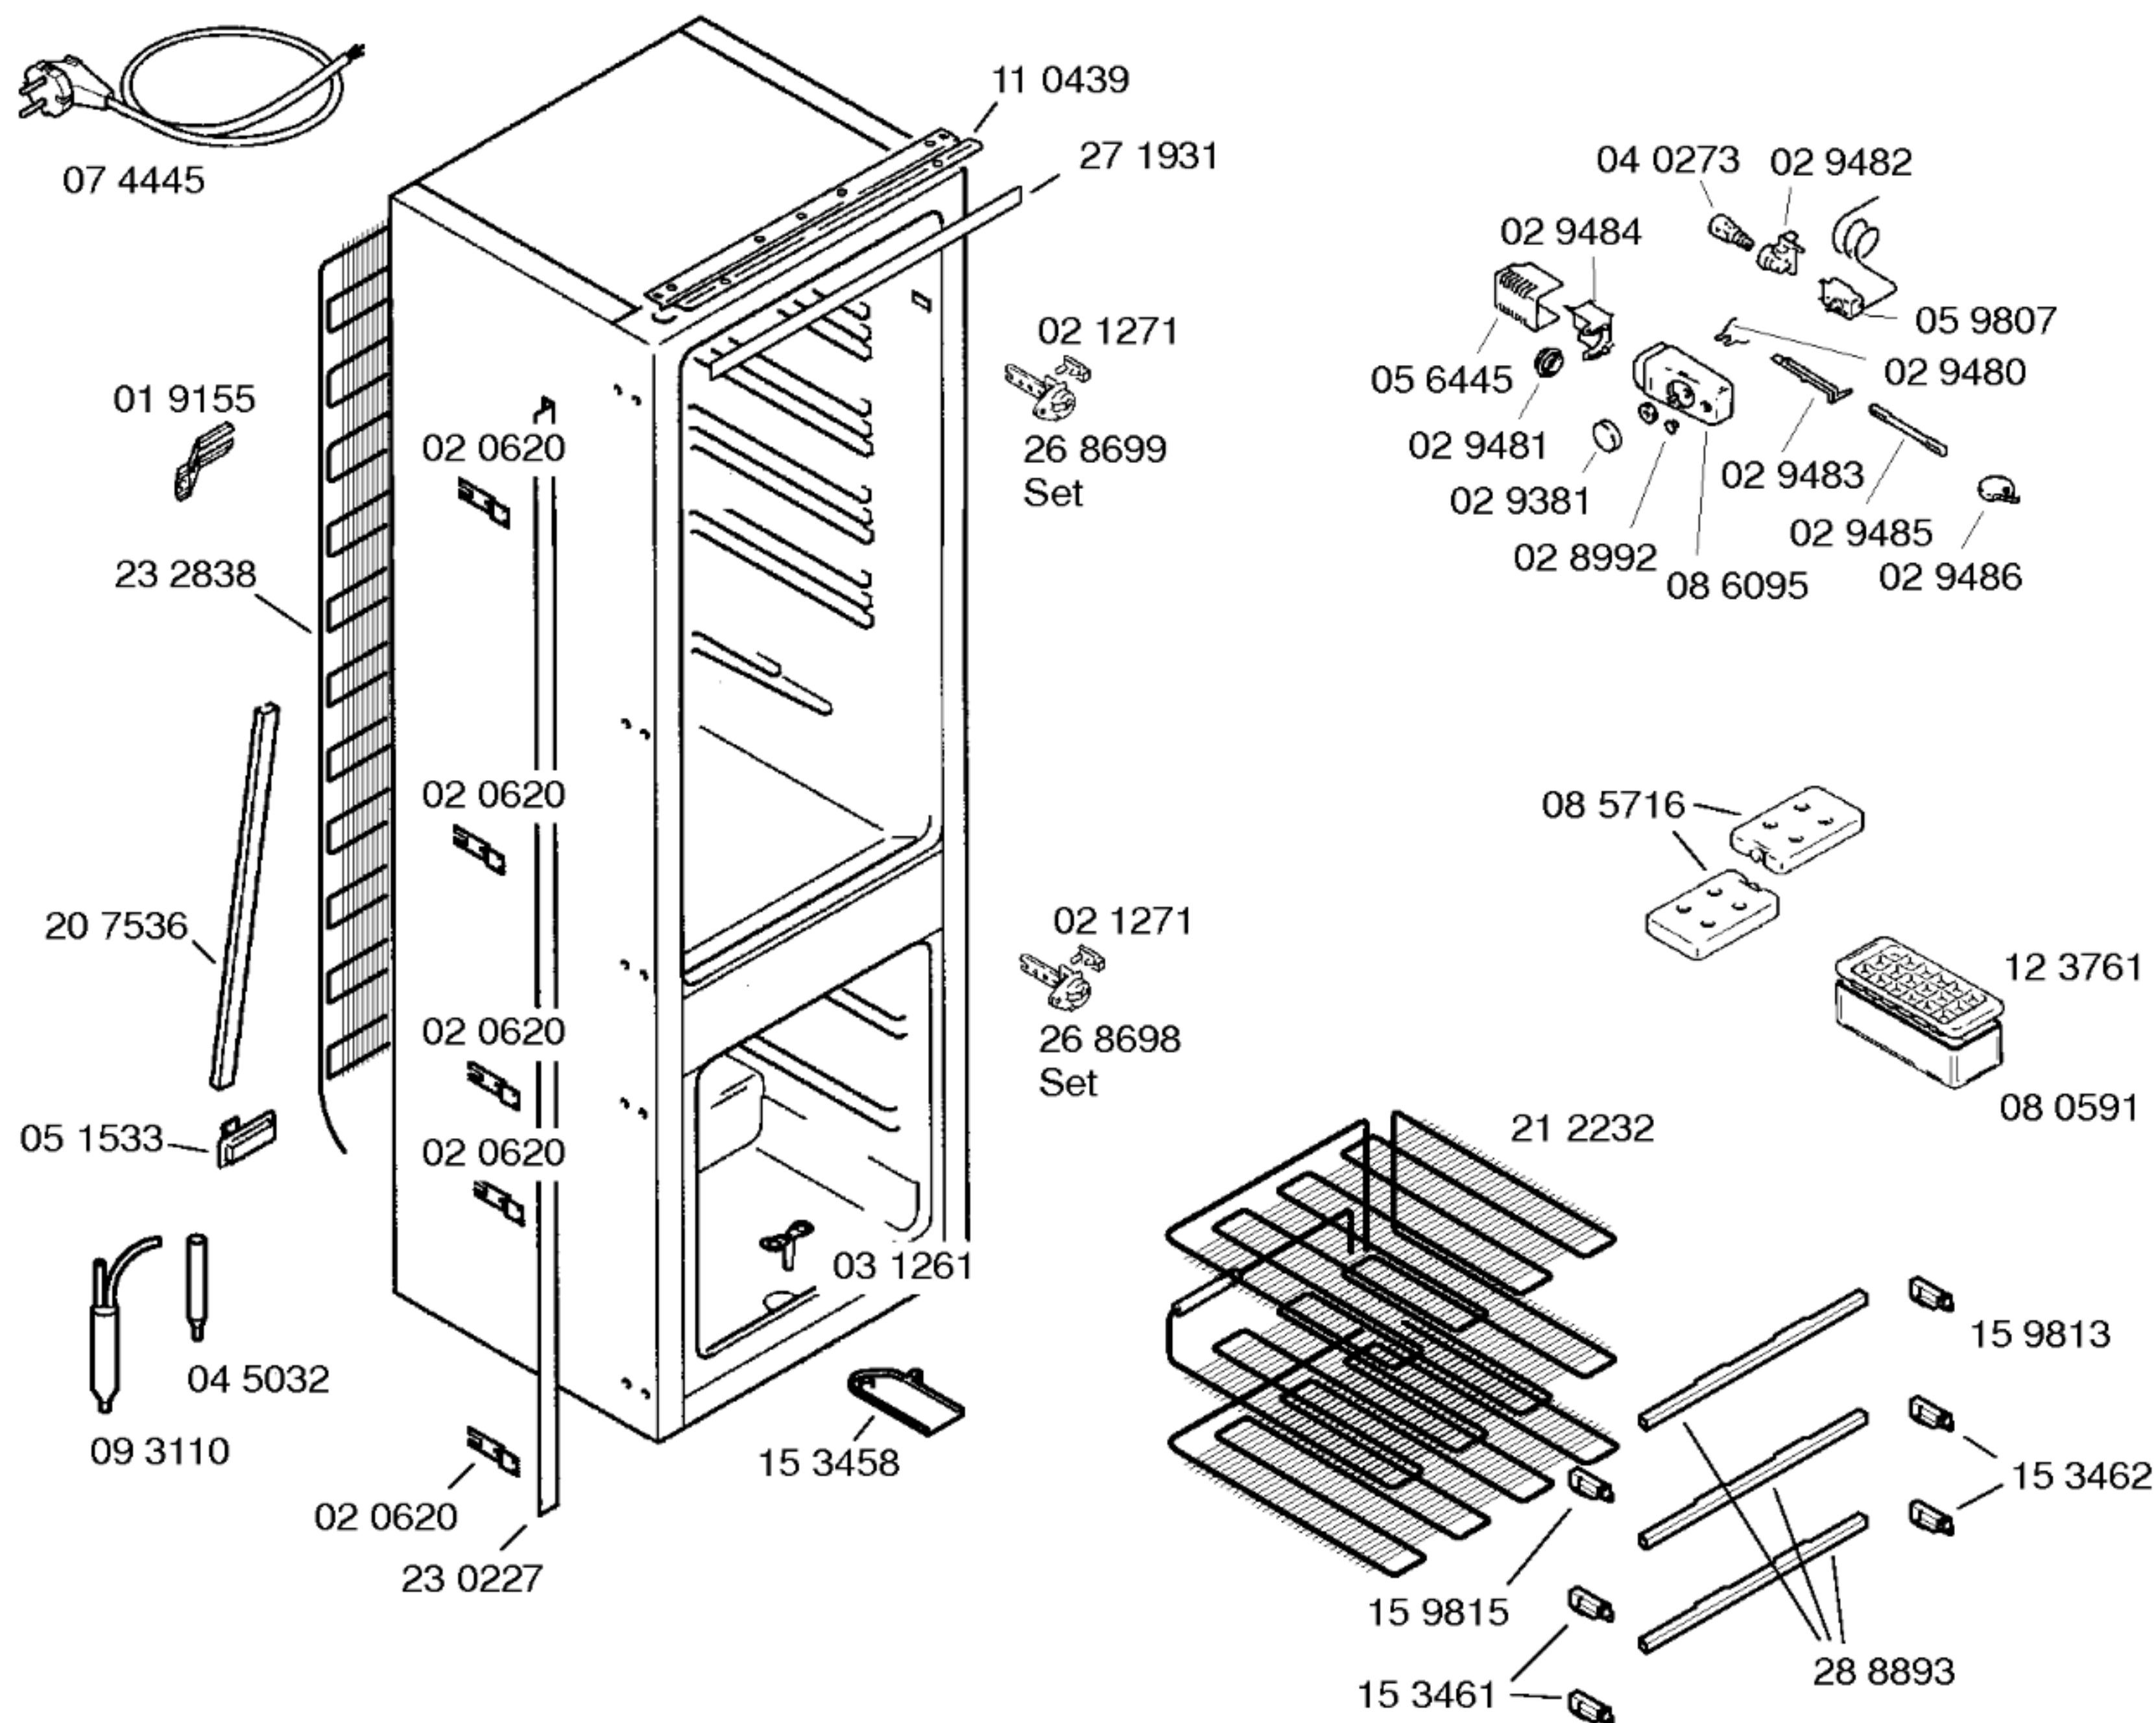 


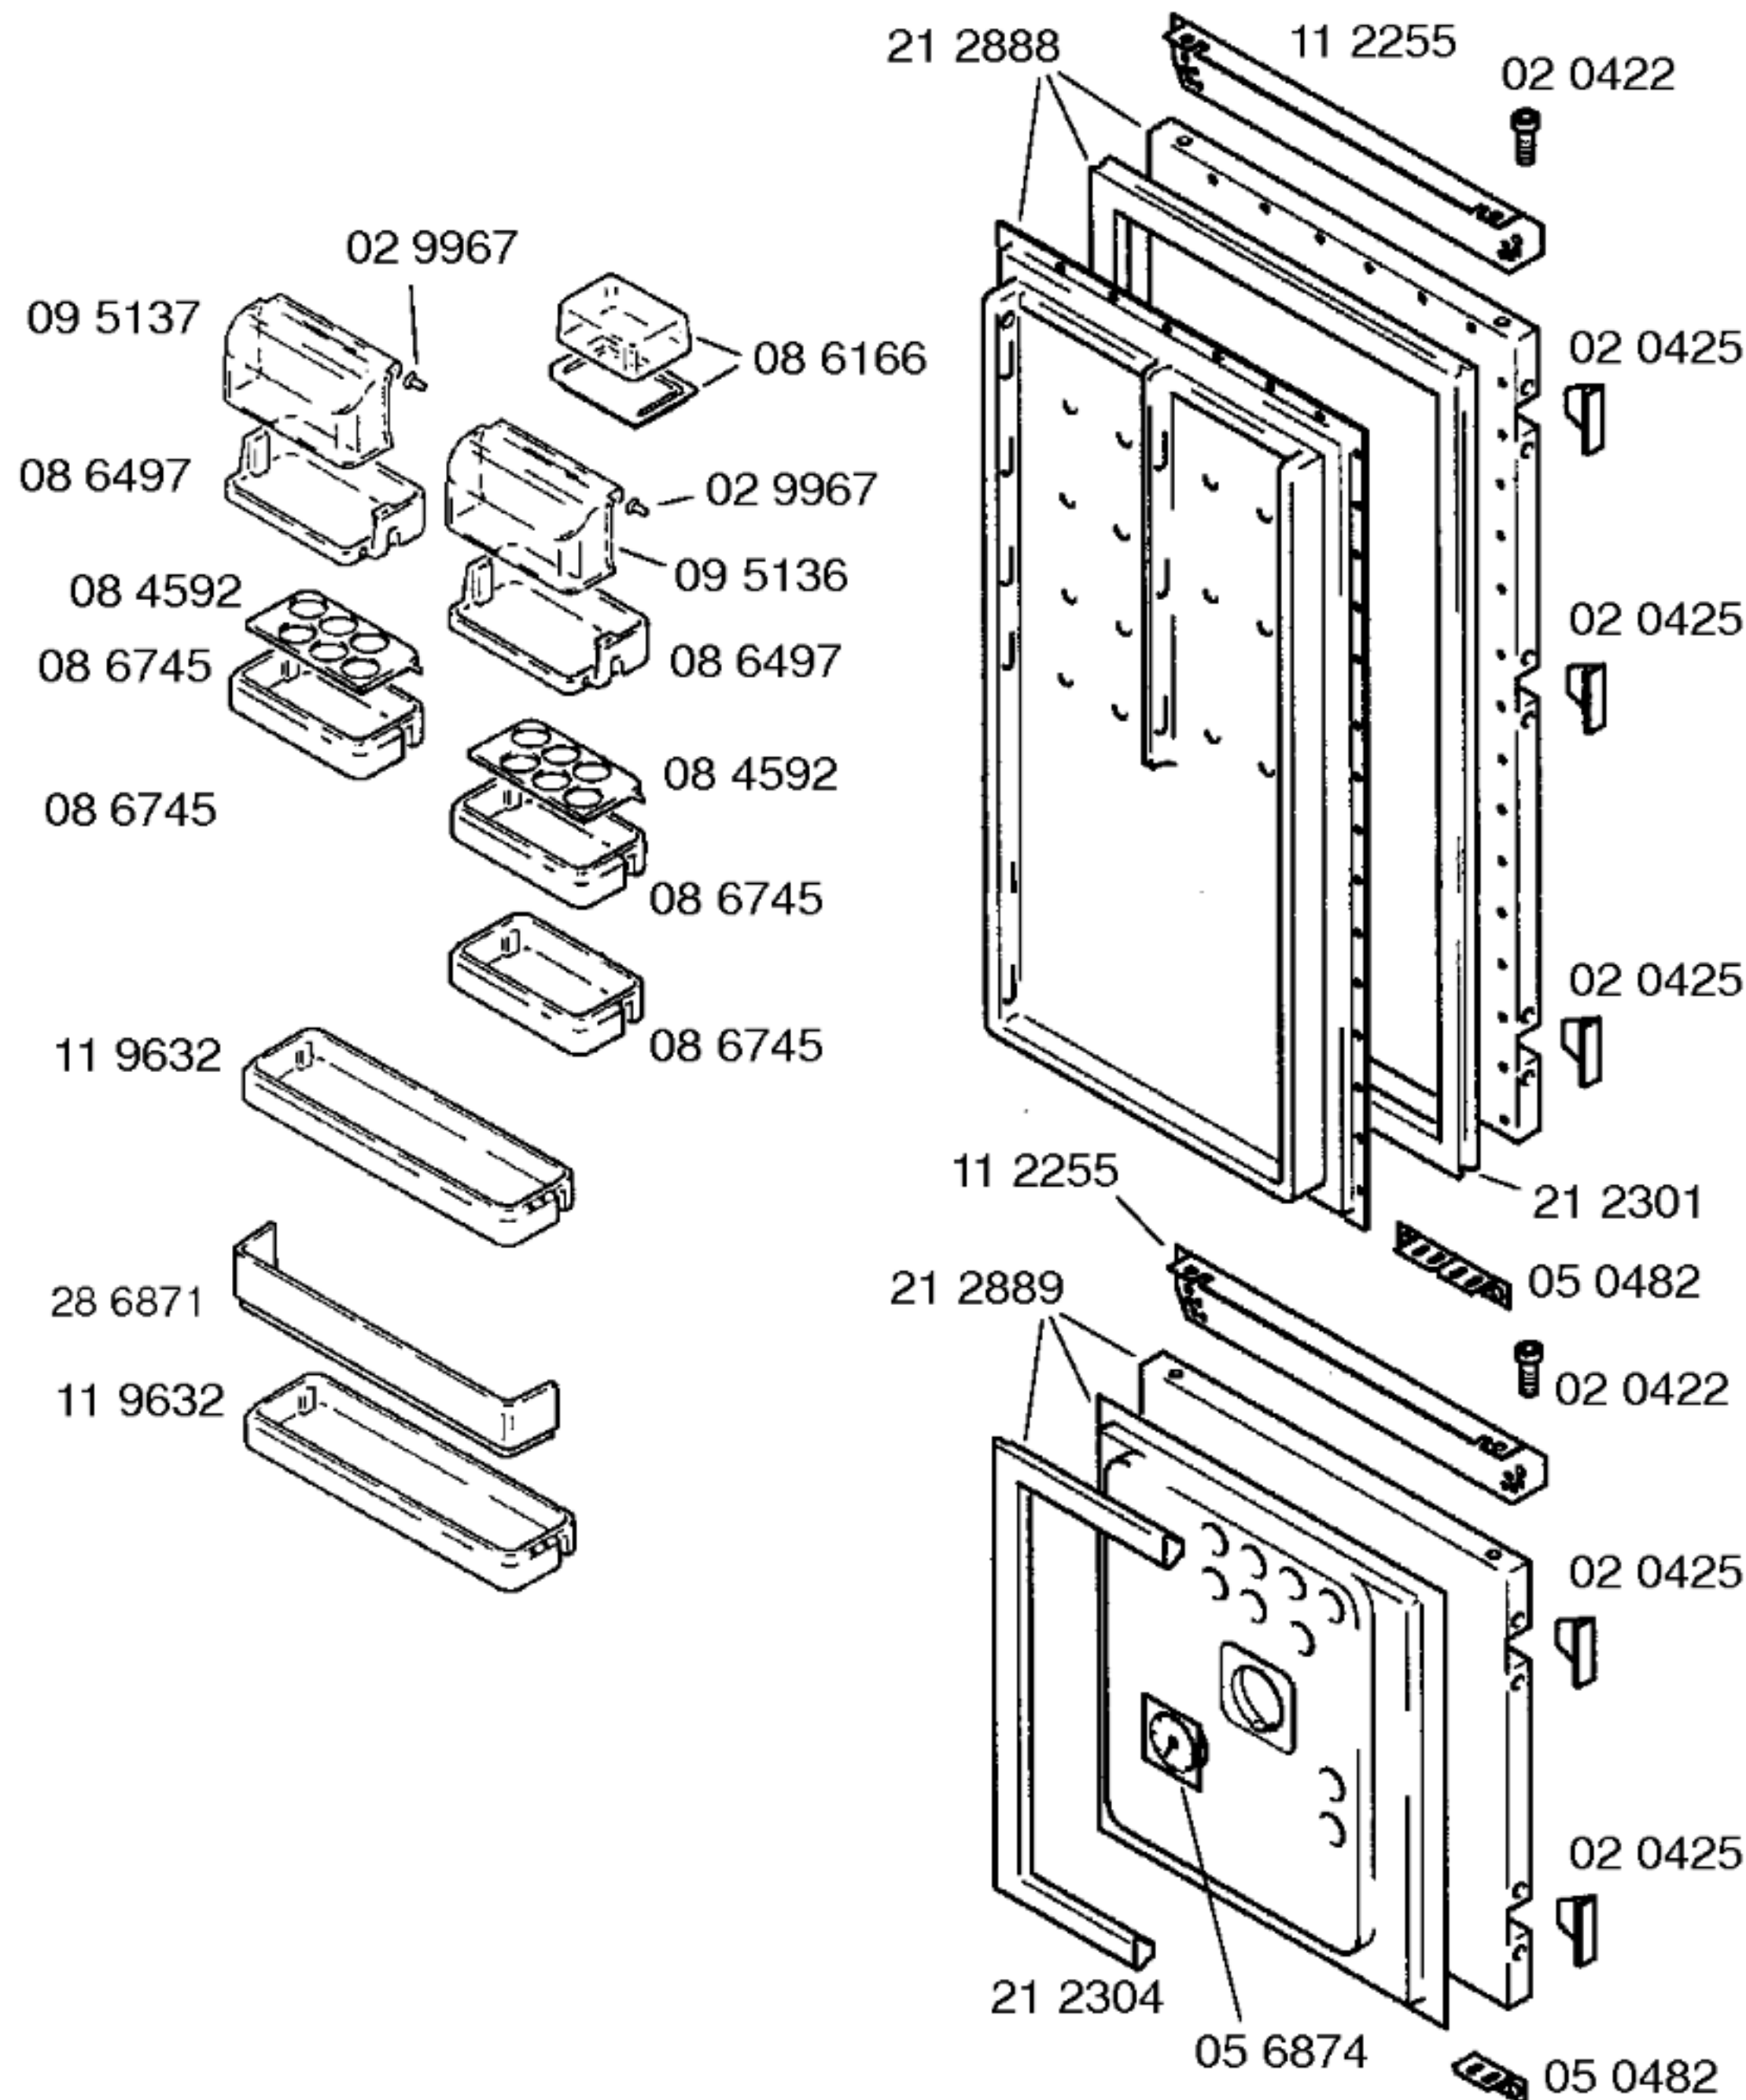 


Gebrauchsanweisung
51 5681
Montageanleitung
51 7899

Schraubensatz
08 4136

Befestigungssatz
09 6063

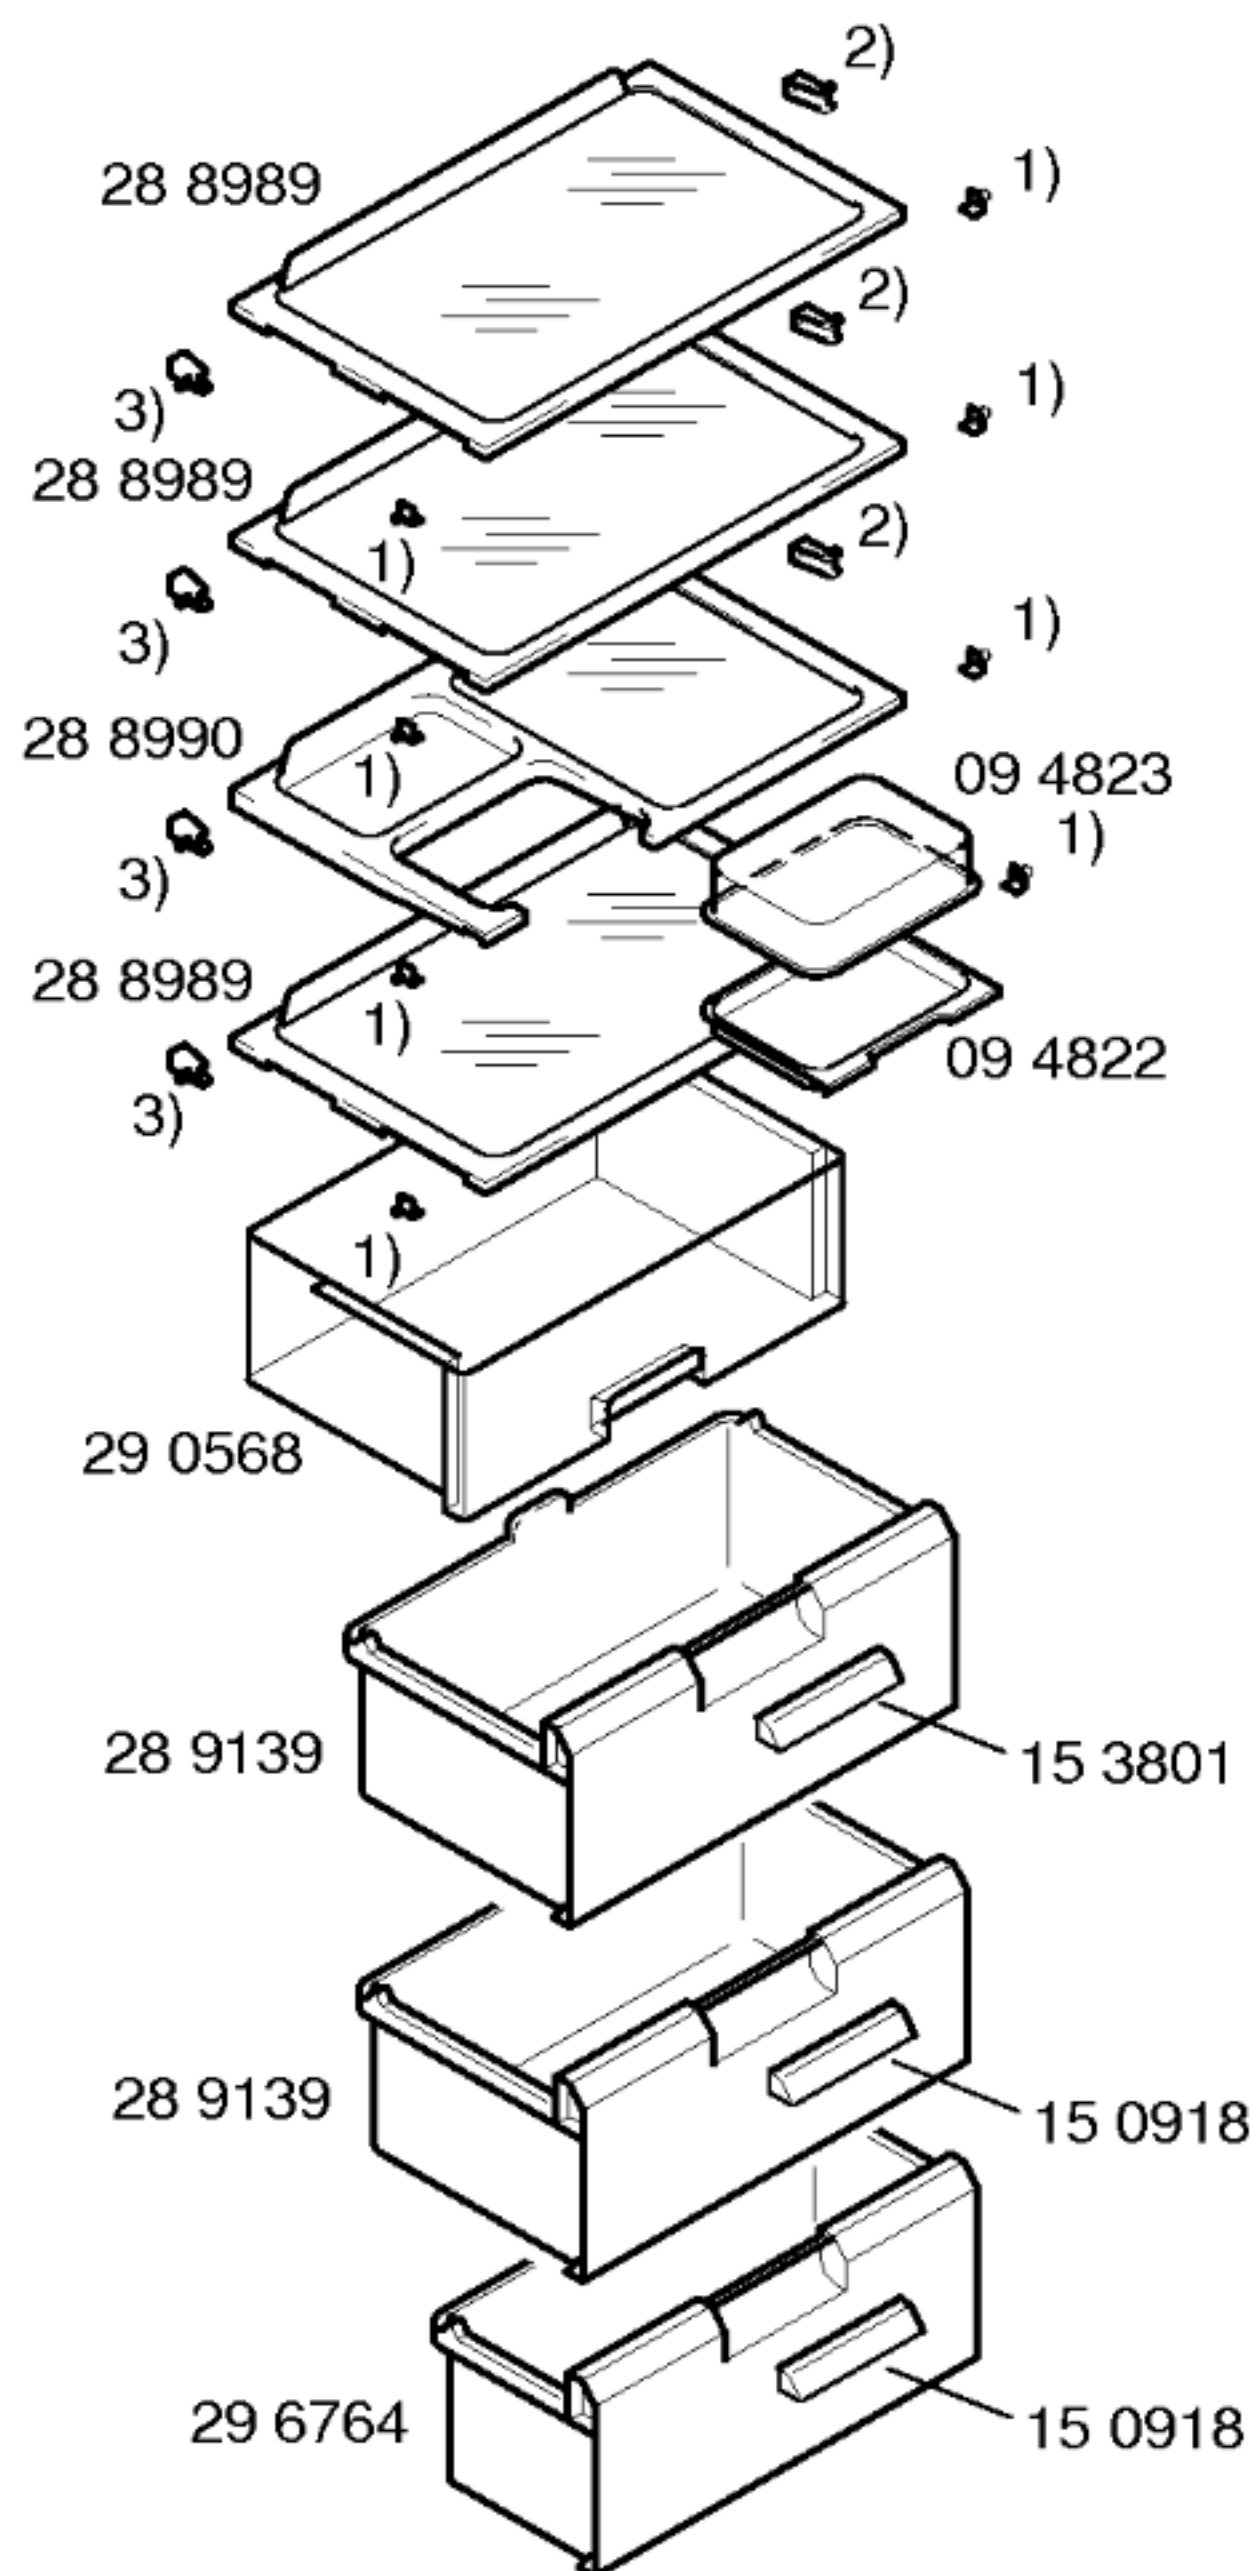

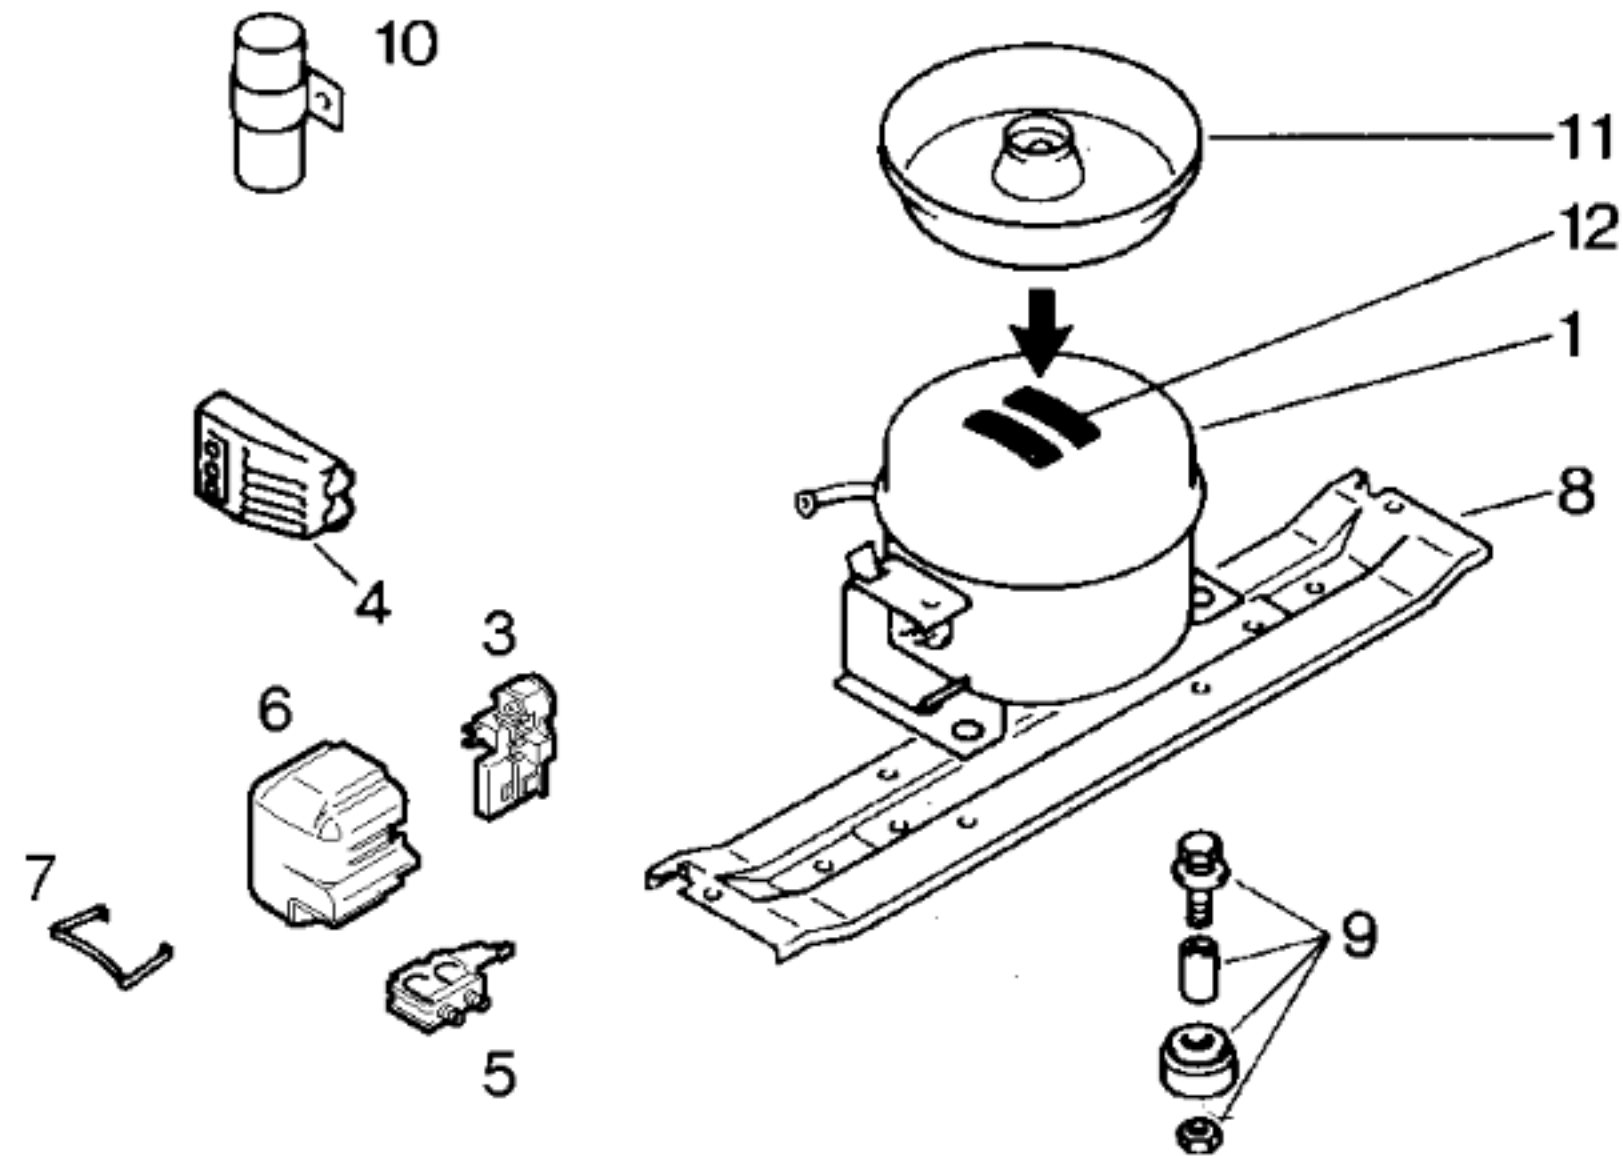

Pos.	Danfoss		
	TLES 9 K		
1	14 1308		
3	15 1055		
4			
5	15 0760		
6	15 1072		
7			
8	28 1825		
9	05 0166		
10	05 9467		
11	28 6924		
12	05 6008		

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES			
Verdichter/Compressor/Compresseur	Danfoss		
Typ/Type	TLES 9 K		
Förderleistung/Delivery/Débit	l/h	1589	
Anlaufstrom/Starting current/Cour de démarrage	A	8,8	
Widerstand/Resistance/Résistance	Ha/main/prin.	Ω	16,5
	Hi/aux	Ω	16,9
Temp.-Regler/Thermostat			
Typ/Type			
Reglerstellung/Position			
Schaltwerte/Switching values/Valeurs de commutation	„ein“ „aus“ („abtauen“ od.) „alarm“	°C	
Füllmenge/Fill.quantity/Charge	R600a	g	siehe Typenschild
Anschlußwert/Conn.load/Puiss. connectée	W		
Heizung/Heater/Chauffage			
Widerstand/Resistance/Résistance	Ω		
Leistung/Power/Puissance	W		
Ventilator/Blower/Ventilateur			
Widerstand/Resistance/Résistance	Ω		
Schaltuhr/Timer/Minuterie de contact			
Widerstand/Resistance/Résistance	Ω		
Magnetventil/Magnetic valve/Electrovanne			
Widerstand/Resistance/Résistance	Ω		
Spannung/Voltage/Tension	V		