
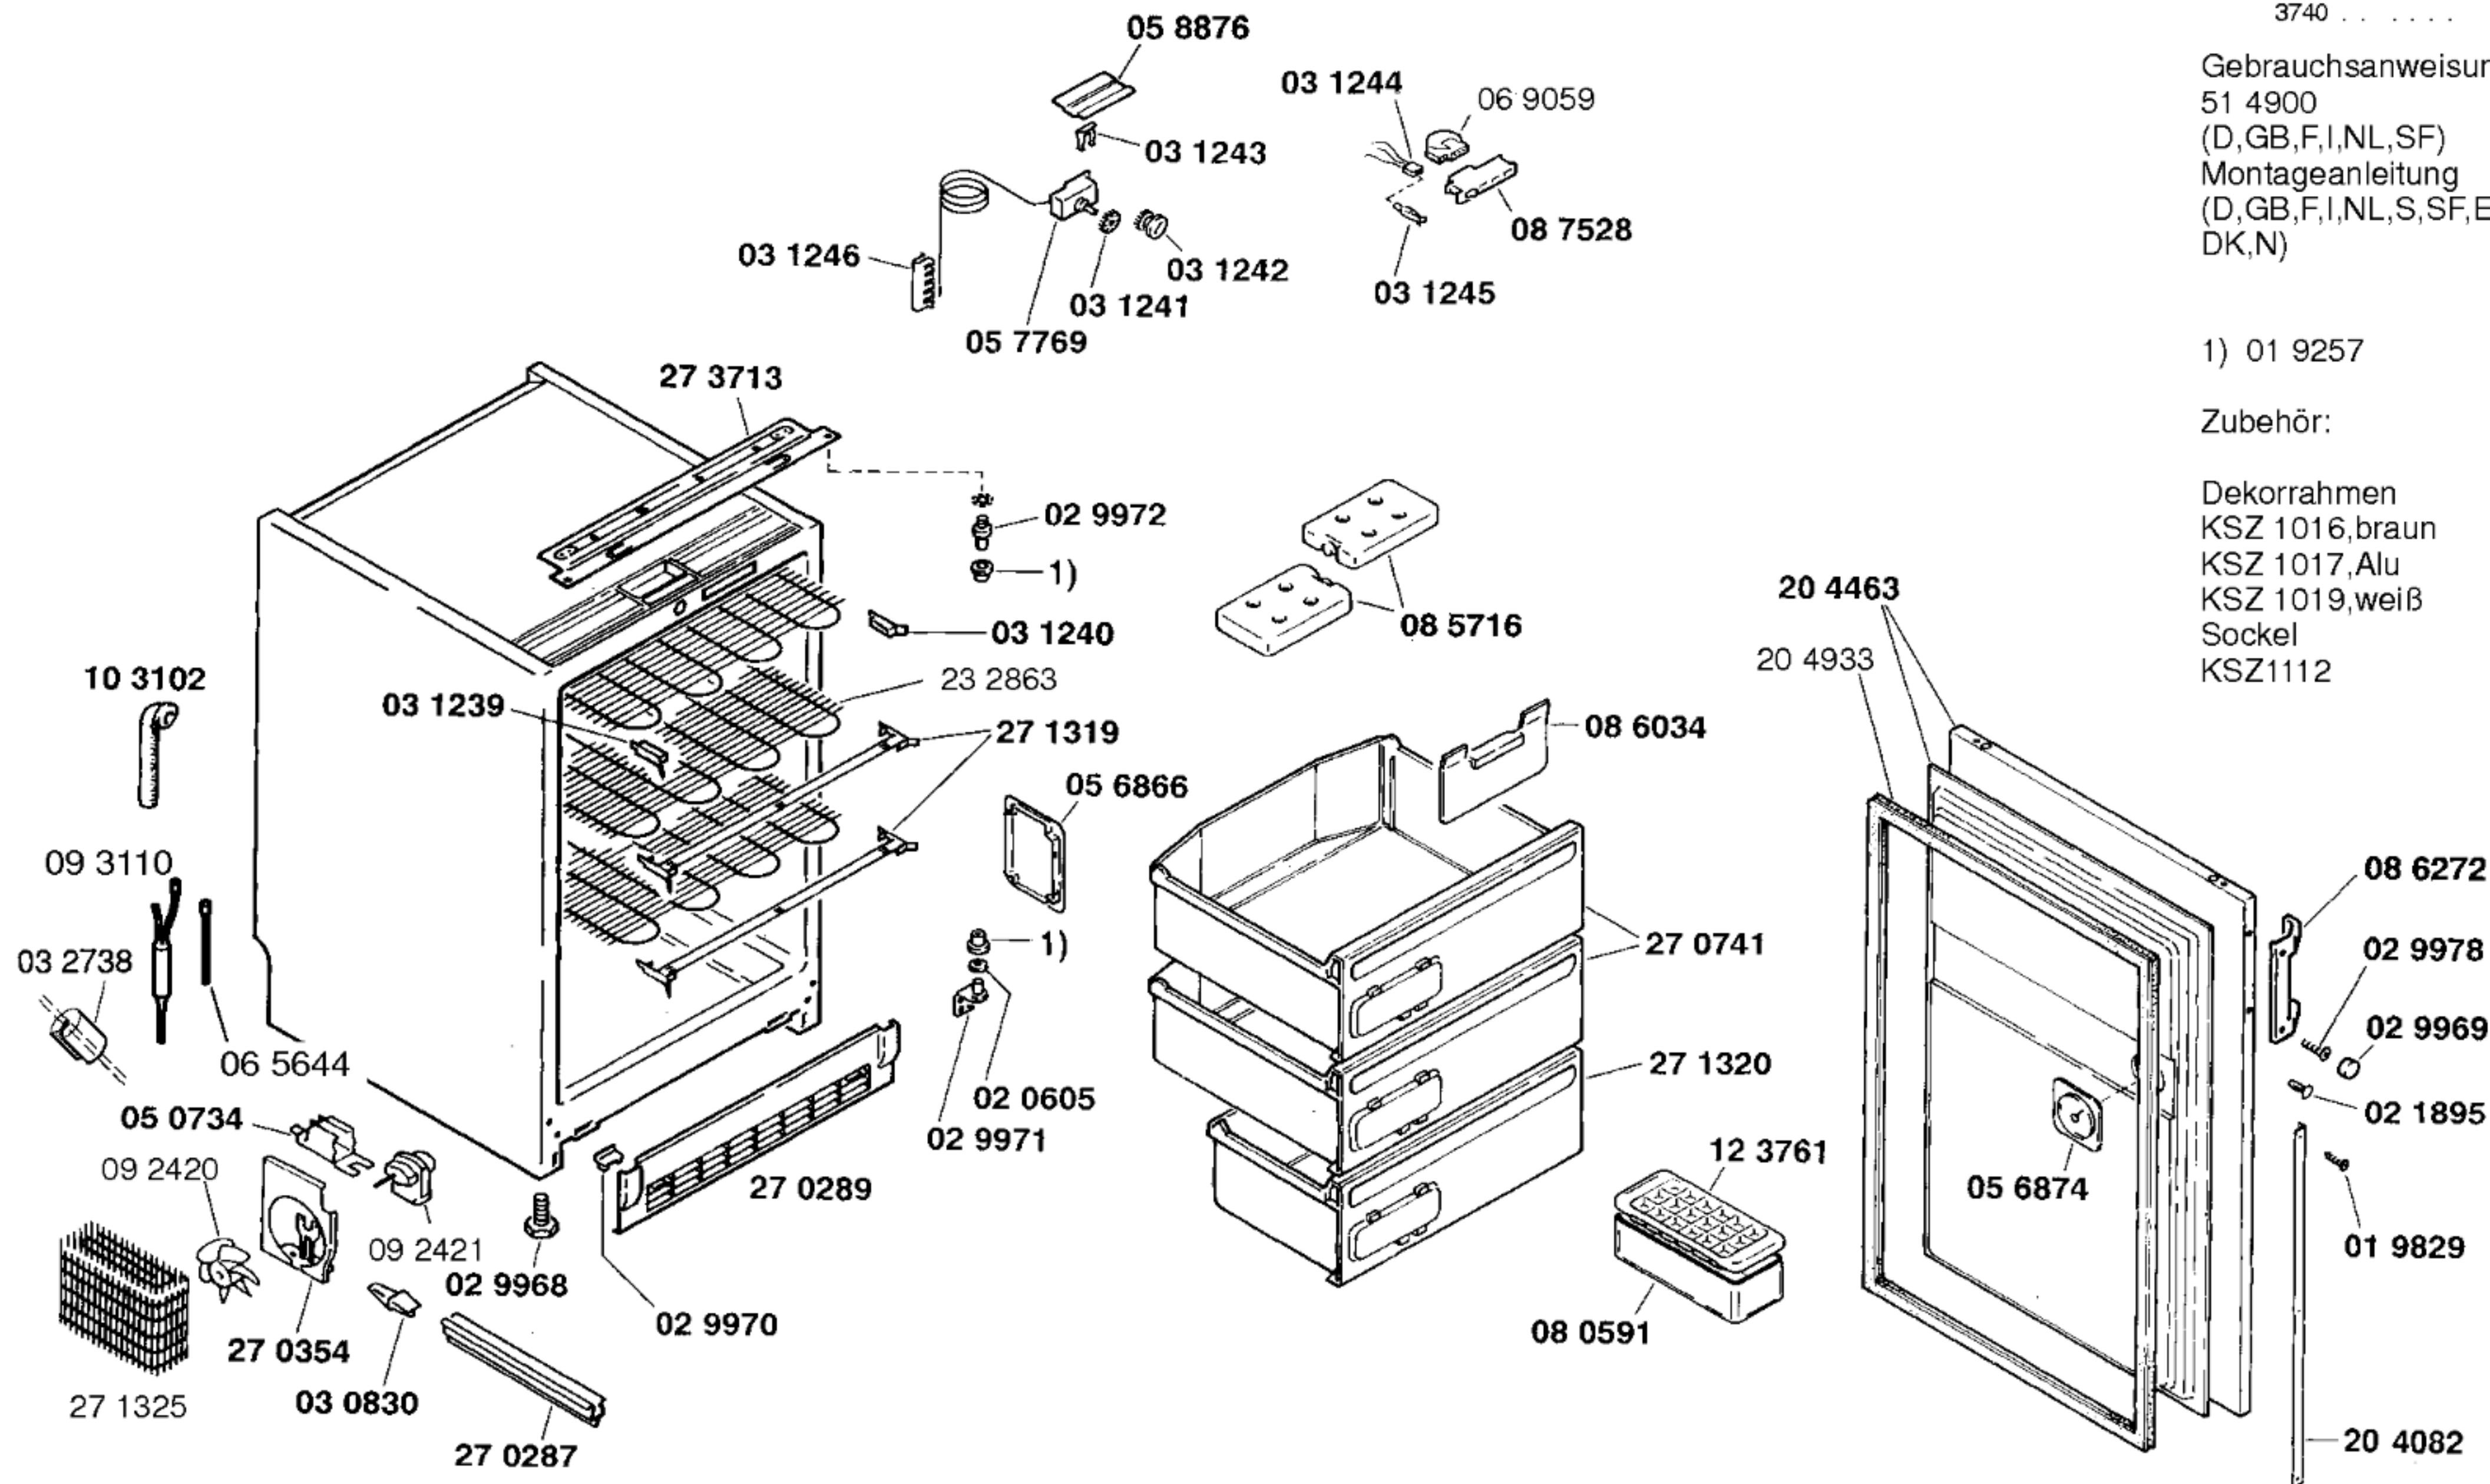


**BOSCH**GUD 1443/01-V01
GUD 1443/02-V02KÜHL-,GEFRIERGERÄTE
Gefrierschränke, UnterbauIdent – Nummern – Konstante
3740Gebrauchsanweisung
51 4900
(D,GB,F,I,NL,SF)
Montageanleitung
(D,GB,F,I,NL,S,SF,E,P,
DK,N)

1) 01 9257

Zubehör:

Dekorrahmen
KSZ 1016, braun
KSZ 1017, Alu
KSZ 1019, weiß
Sockel
KSZ1112

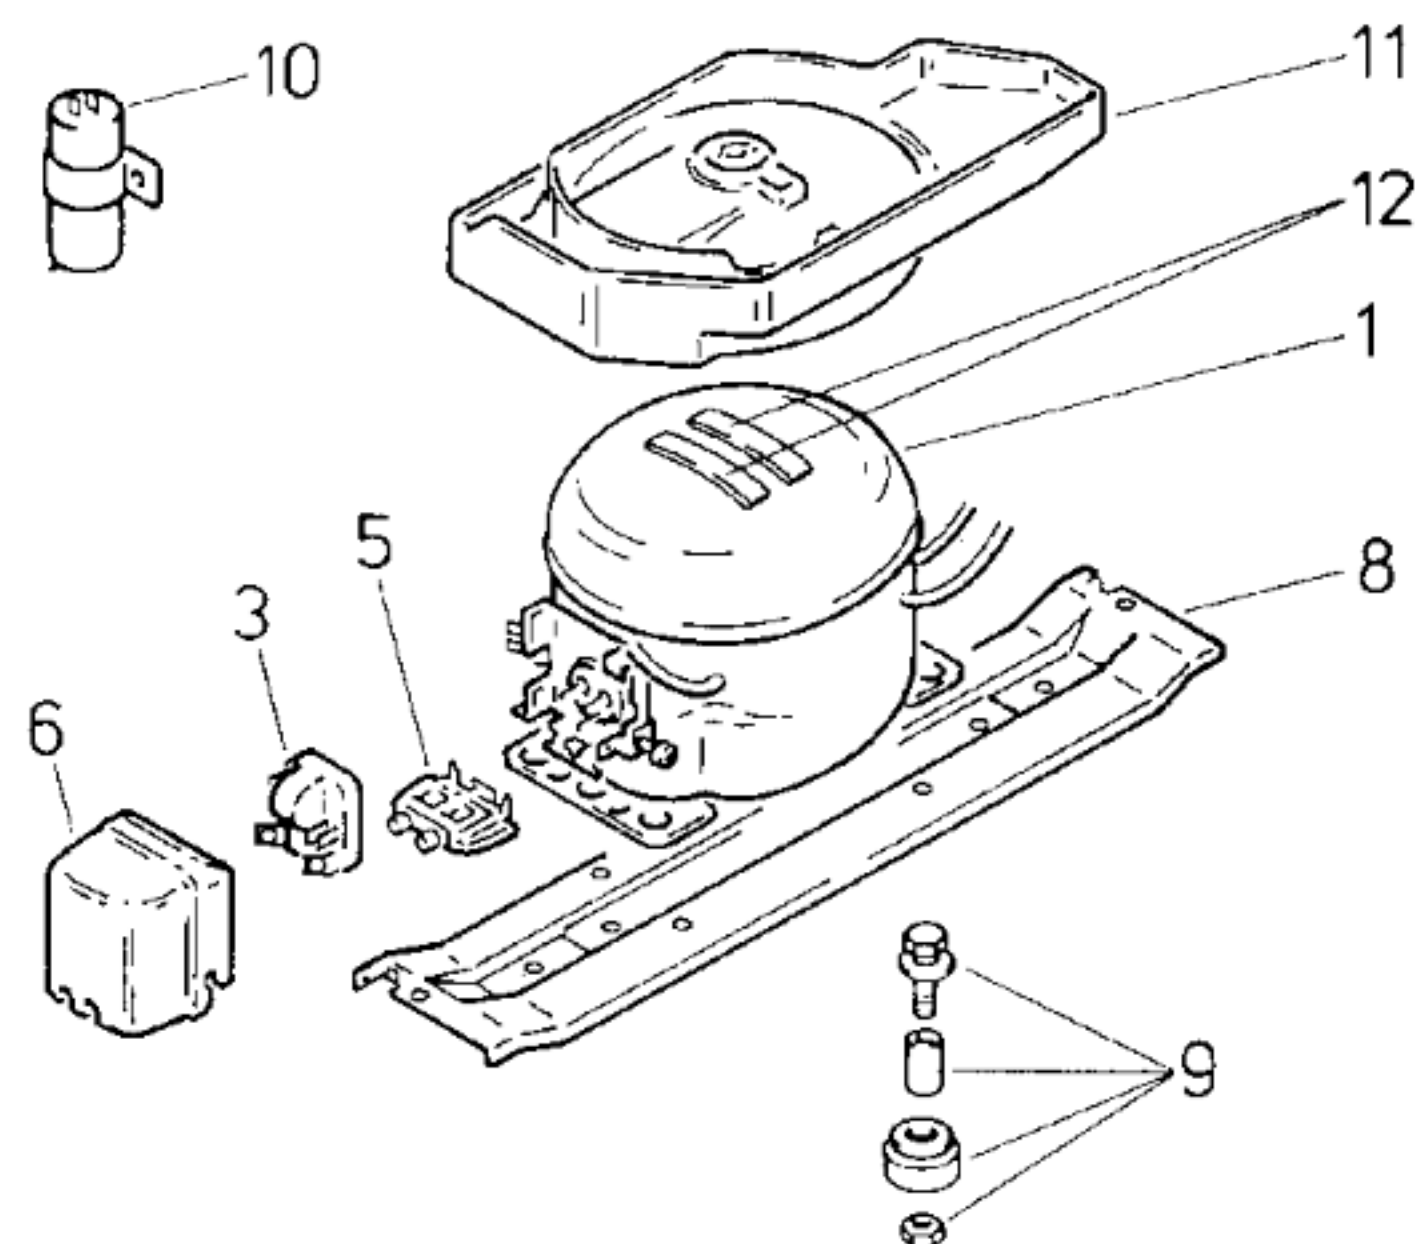

Ident – Nummern – Konstante
3740

	V01	V02	
Pos.	Danfoss	Danfoss	
	TLS 5 F	TLES5F	
1	14 1250	14 1242	
2			
3	05 9191	15 1055	
4			
5	02 7310	15 1053	
6	15 1072	15 1072	
7			
8	27 0291	27 0291	
9	05 0166	05 0166	
10			
11			
12			

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Danfoss		
Typ/Type		TLS 5 F		
Förderleistung/Delivery/Débit	l/h	914		
Anlaufstrom/Starting current/Cour de démarrage	A	9,0		
Widerstand/Resistance/Résistance	Ha/main/prin.	16,0		
	Hi/aux	17,0		
		Danfoss		
		TLES5F		
		914		
		4,0		
		18,9		
		14,7		
Temp.-Regler/Thermostat		WHF		
Typ/Type		TF 57 SF2		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“	-25	-17	
Valeurs de commutation	„aus“	-33	-23	
(„abtauen“ od.)	„alarm“	-19,5	-13	
Füllmenge/Fill.quantity/Charge	R134a	g	120	
Anschlußwert/Conn.load/Puiss. connectée		W	120	
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance		Ω		
Leistung/Power/Puissance		W		
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance		Ω		
Schaltuhr/Timer/Minuterie de contact				
Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance		Ω		
Spannung/Voltage/Tension		V		