


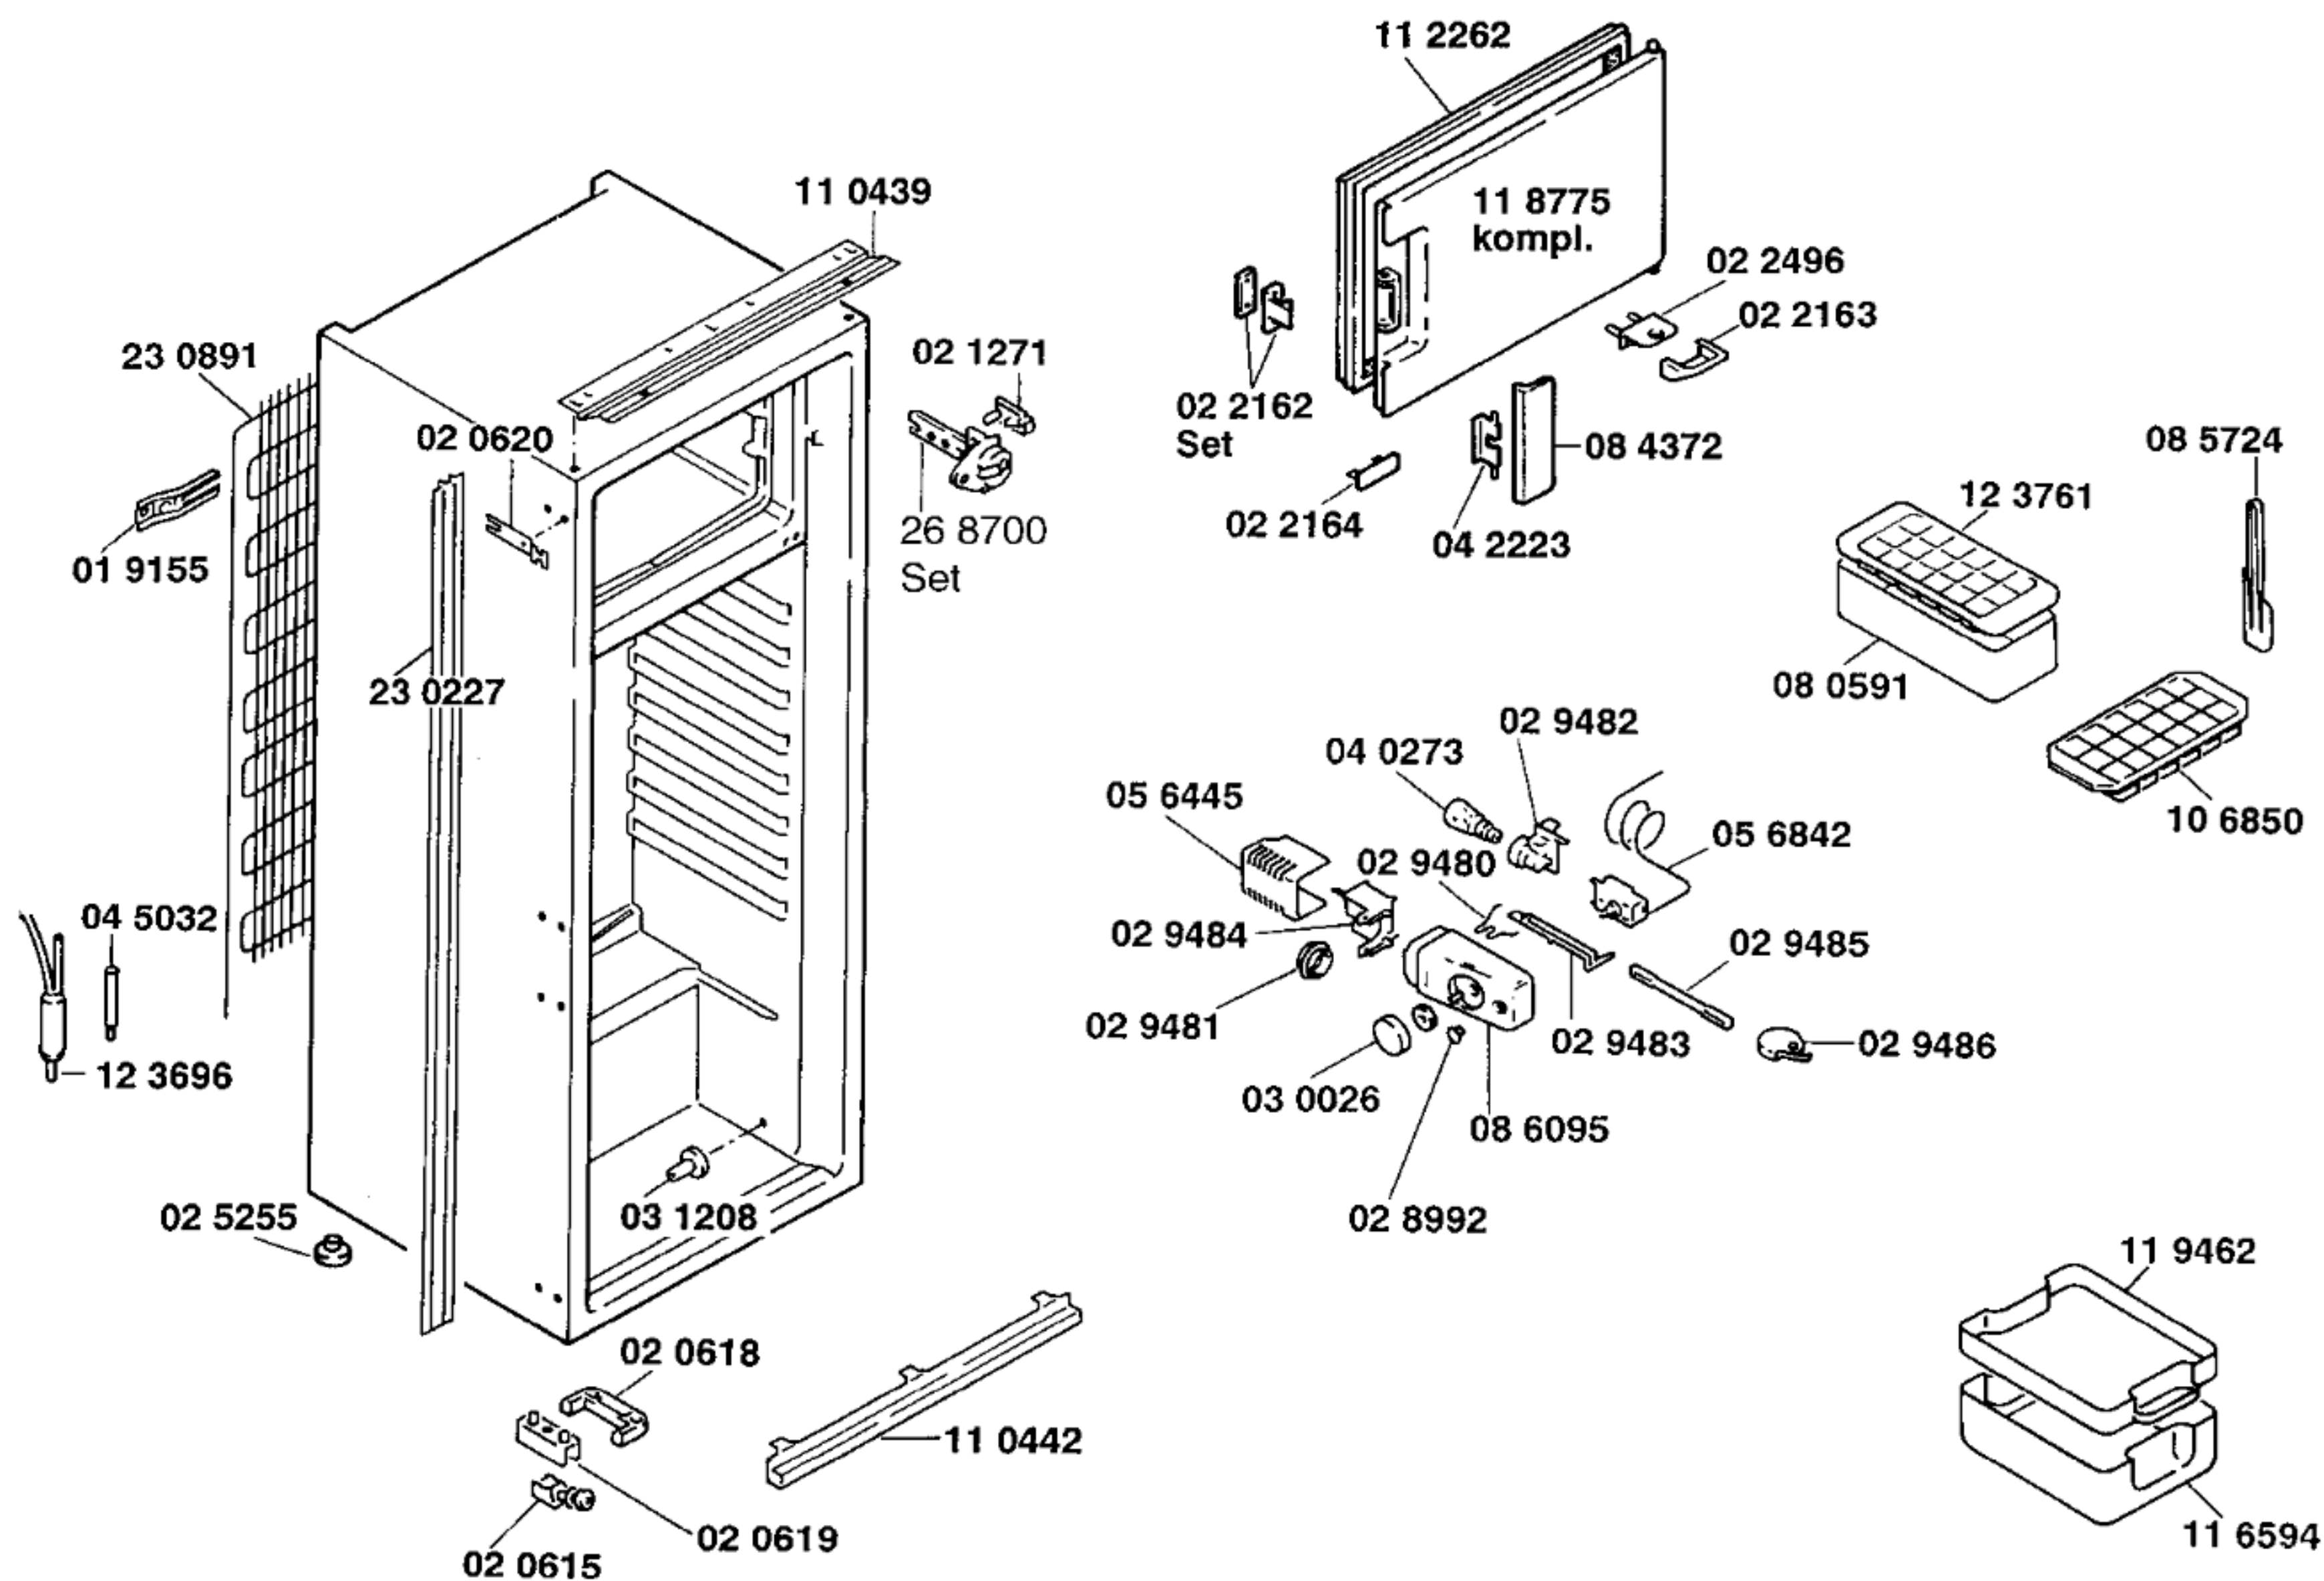


51 2705
Gebrauchsanweisung
(D,GB,F,I,NL,E)


51 2329
Montageanleitung
(D,GB,F,I,NL,N,S,E)

08 4136
Schraubensatz

08 5059
Befestigungssatz

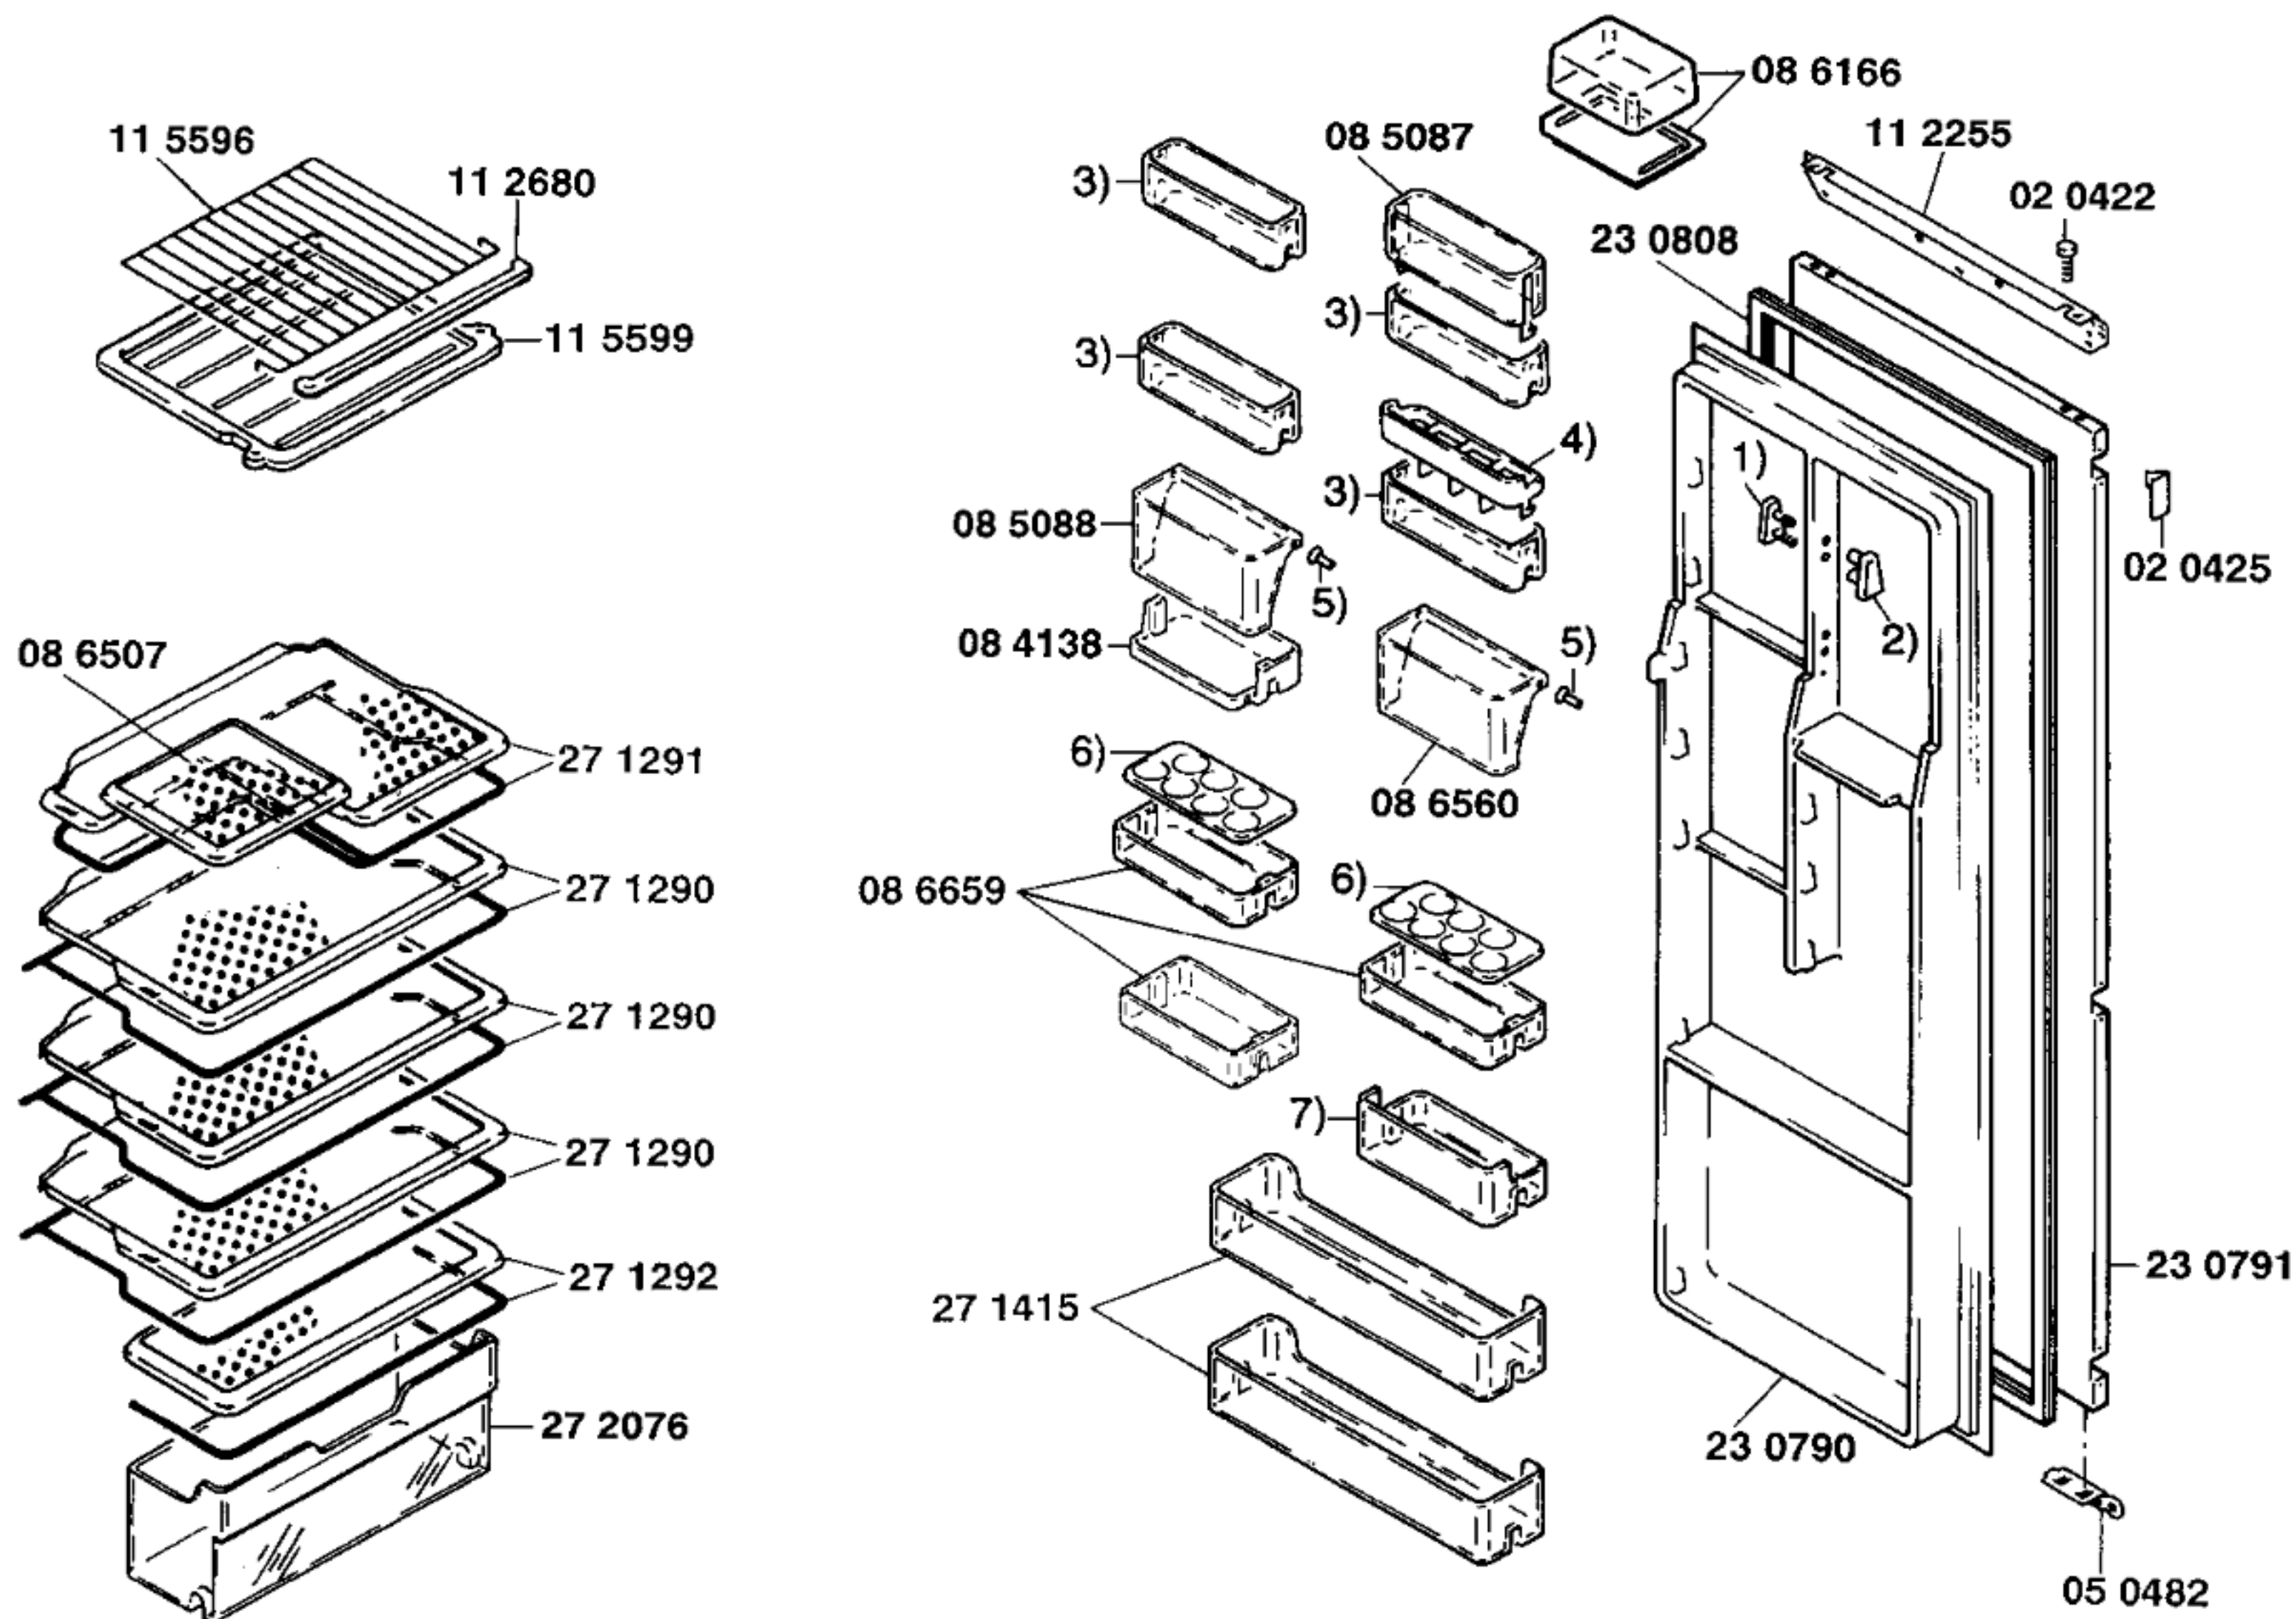

- 1) 02 2437
- 2) 02 6566
- 3) 08 5089
- 4) 08 6169
- 5) 02 9967
- 6) 08 7561
EU1, CH1, I1
08 4592
F1
- 7) 08 7562

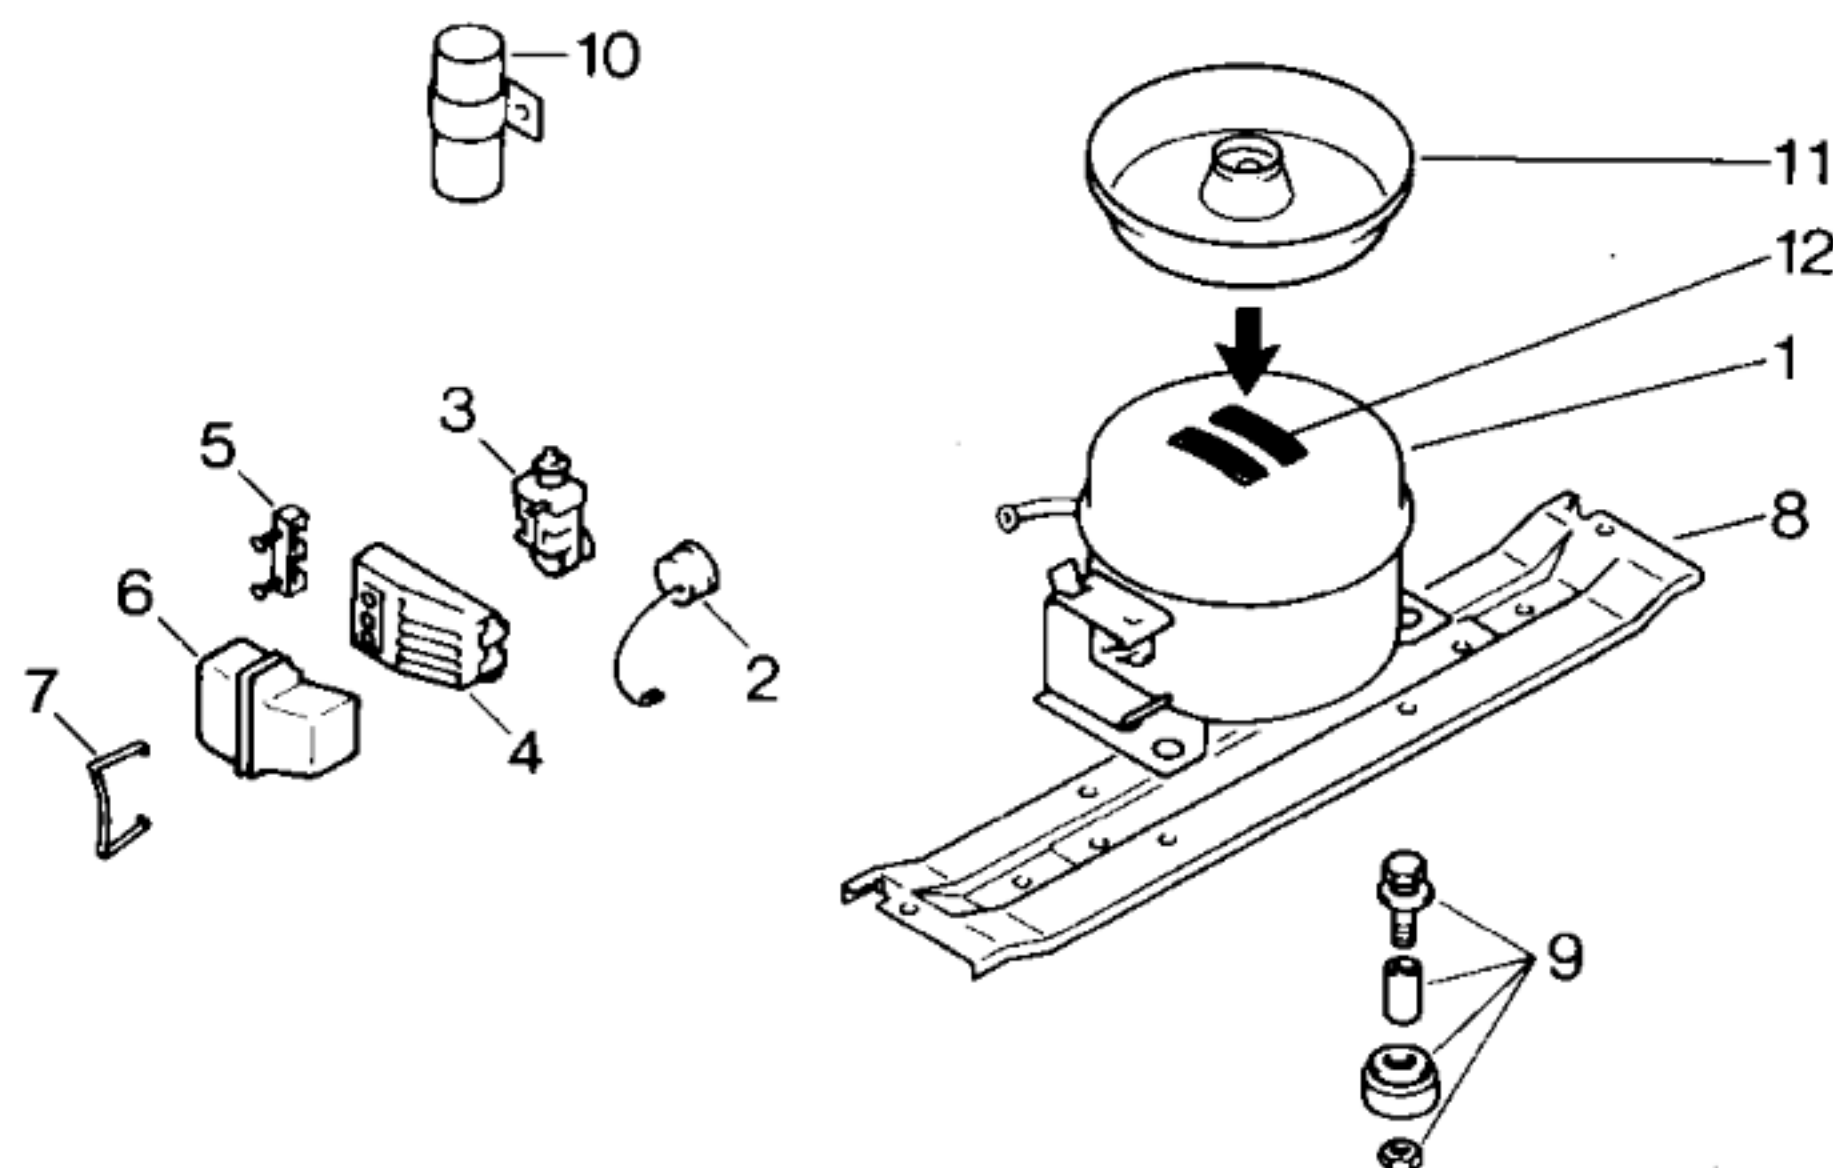

Pos.	EU1,CH1,F1,I1,E1	EU2,CH2,F2	
	Aspera BY 1116 A	Matsushita D116LRRA	
1	14 0405	14 0563	
2	02 6559	05 8506	
3	02 2342		
4	05 1748		
5			
6	05 1746	05 8458	
7	02 2339	02 6731	
8	11 1838	11 1838	
9	05 0166	05 0166	
10			
11	08 5091	08 5182	
12	05 6008	05 6008	

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur Typ/Type Förderleistung/Delivery/Débit Anlaufstrom/Starting current/Cour. de démarrage Widerstand/Resistance/Résistance	I/h A Ha/main/prin. Hi/aux	Aspera BY 1116 A 1450 9,9 11,7 37,7	Matsushita D116LRRA 1184 8,75 12,0 28,7	
Temp.-Regler/Thermostat Typ/Type Reglerstellung/Position Schaltwerte/Switching values/ Valeurs de commutation („abtauen“ od.)	°C „ein“ „aus“ „alarm“	Ranco K 59 kalt + 4,5 - 31,0	warm + 4,5 - 13,5	
Fullmenge/Fill.quantity/Charge	R12	g	180	
Anschlußwert/Conn.load/Puiss. connectée		W	150	
Heizung/Heater/Chauffage Widerstand/Resistance/Résistance Leistung/Power/Puissance		Ω W		
Ventilator/Blower/Ventilateur Widerstand/Resistance/Résistance		Ω		
Magnetventil/Magnetic valve/Electrovanne Widerstand/Resistance/Résistance Spannung/Voltage/Tension		Ω V		