


**BOSCH**

HSV232NTR/01-V01
 HSV232NTR/02-V02
 HSV232NTR/03-V03
 HSV232NTR/04-V04


HSV232NTR/05-V05
 HSV232NTR/06-V06
 HSV232NTR/07-V07
 HSV232NTR/08-V08

HERDE
 Gas-Standherde

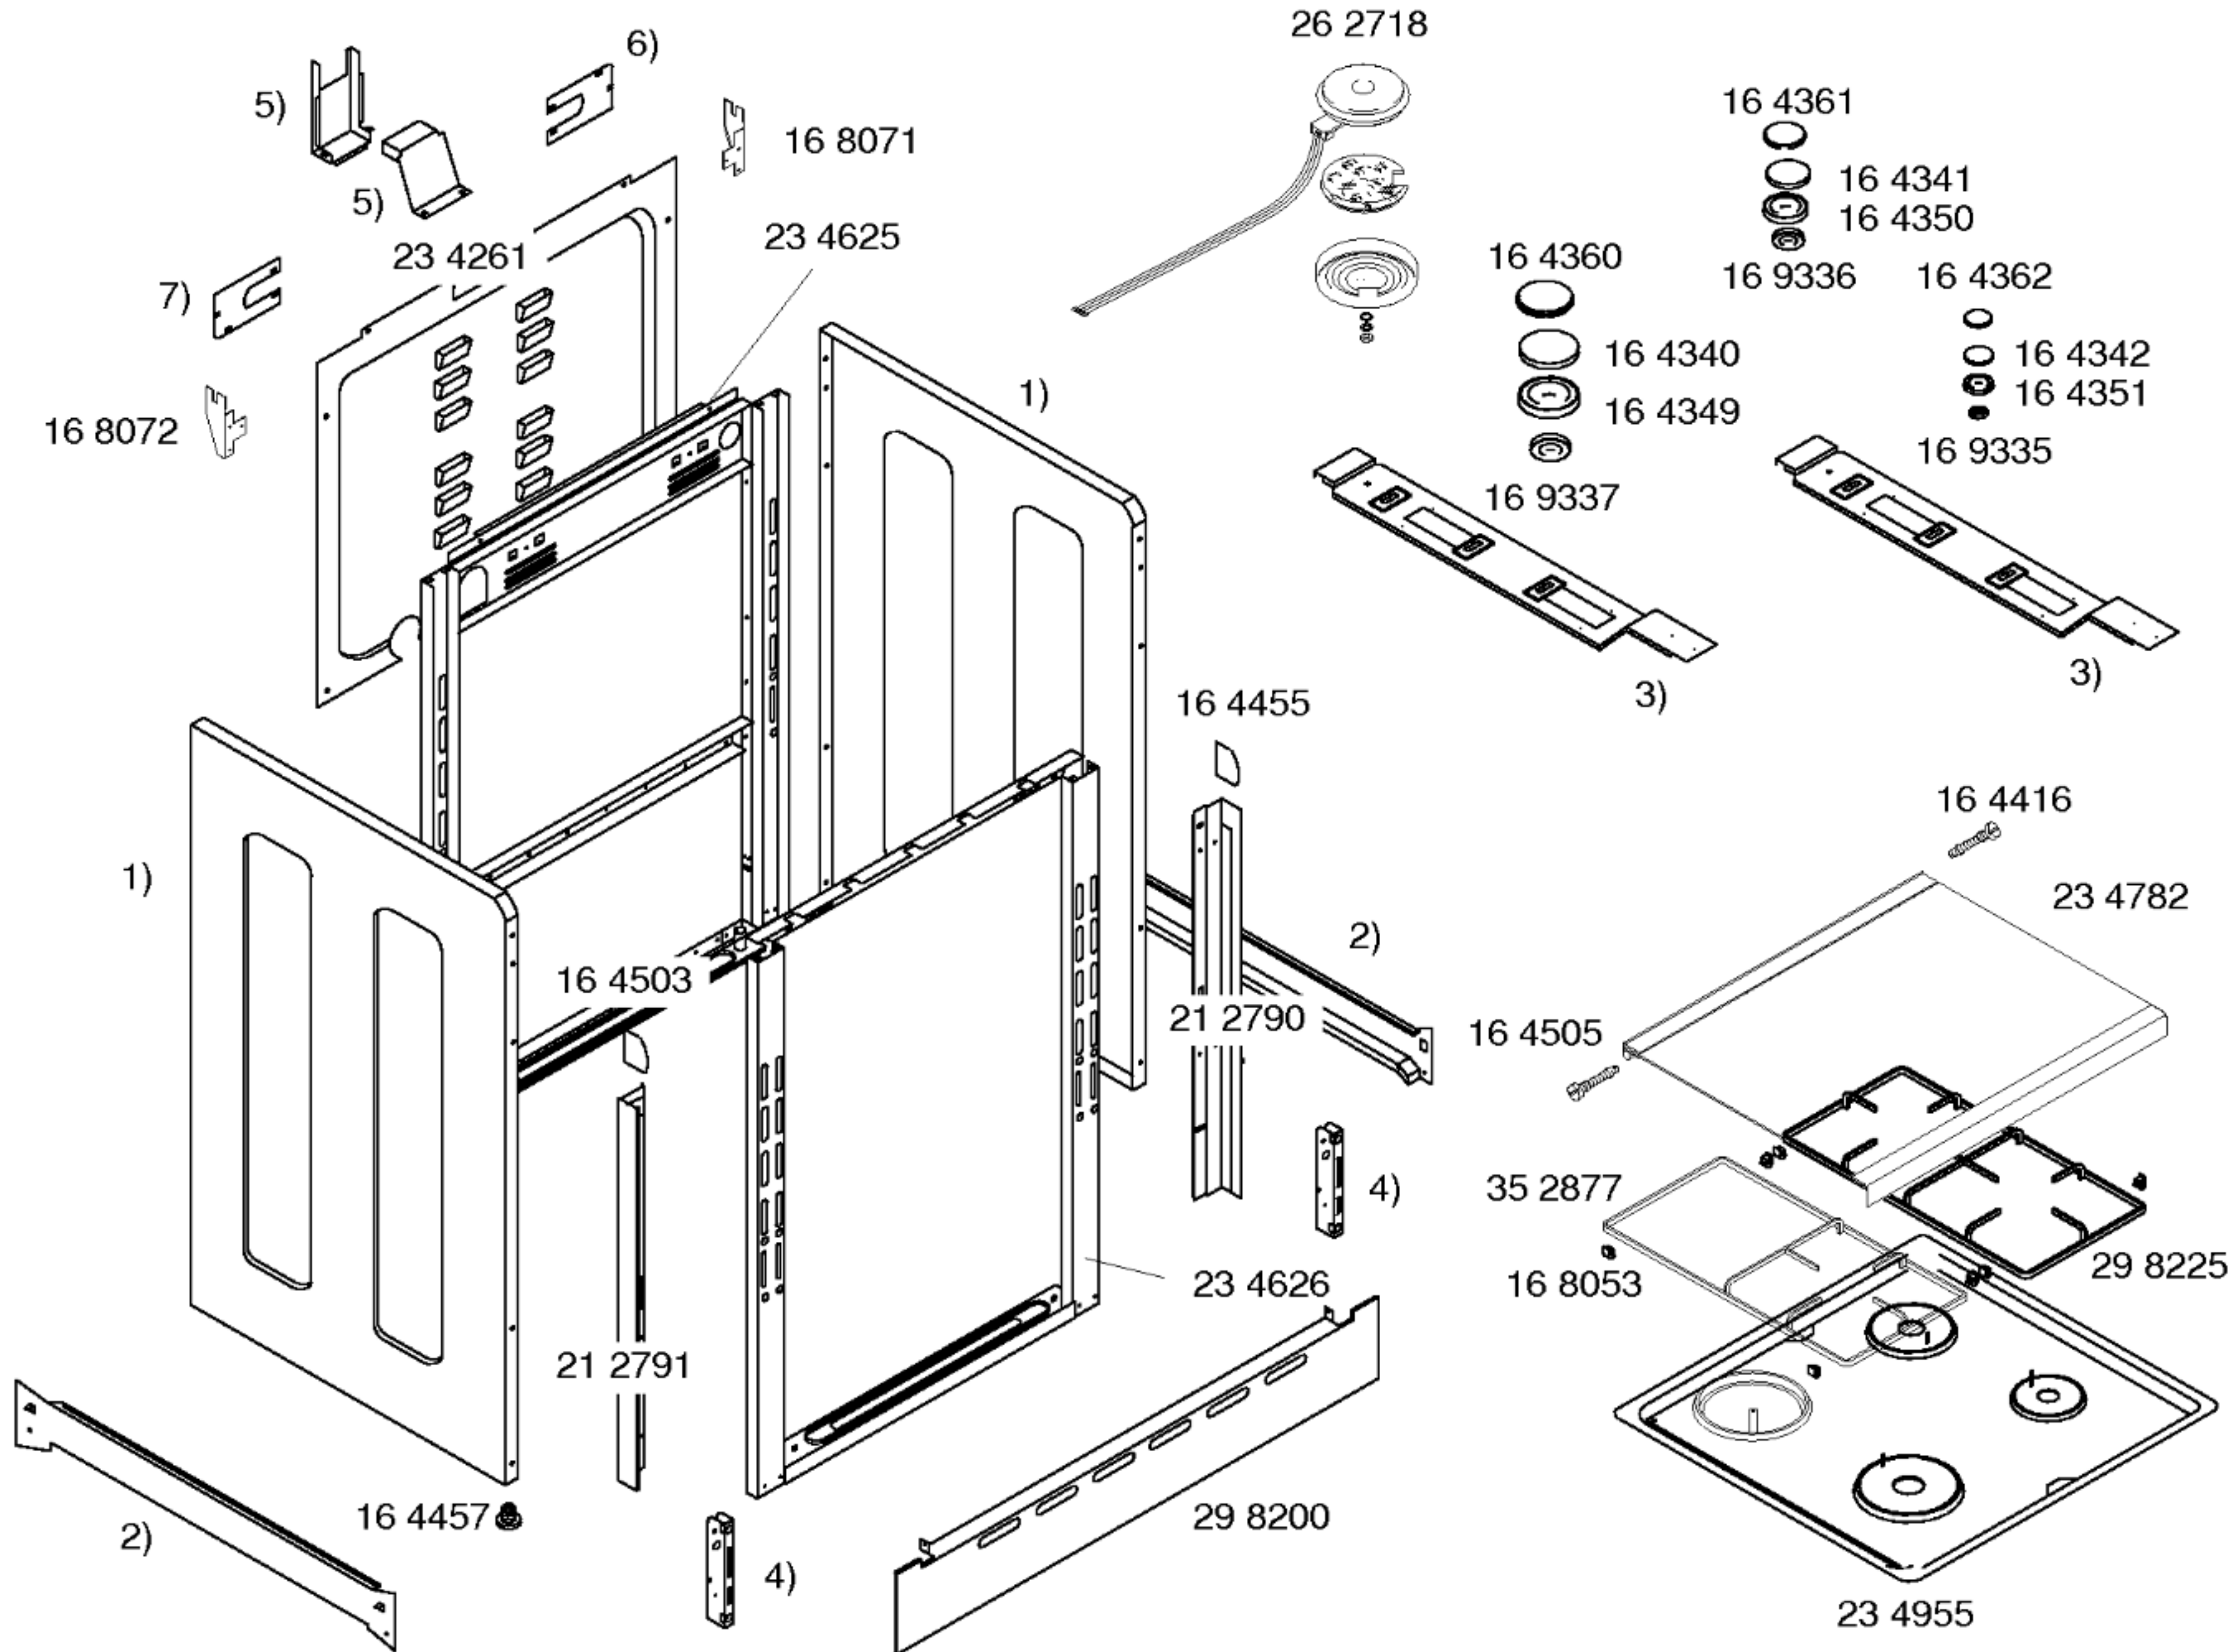

Mat. - Nr. - Konstante
 3740

Gebrauchsanweisung
 52 3621
 (TR)
 1) 23 4251
 2) 35 2493
 3) 29 8254
 4) 16 4414
 5) 26 5024
 6) 16 9332-V01,V02,
 V03,V04,V05
 26 5969-V06,V07
 V08
 7) 16 9333-V01,V02
 V03,V04,V05
 26 5970-V06,V07
 V08

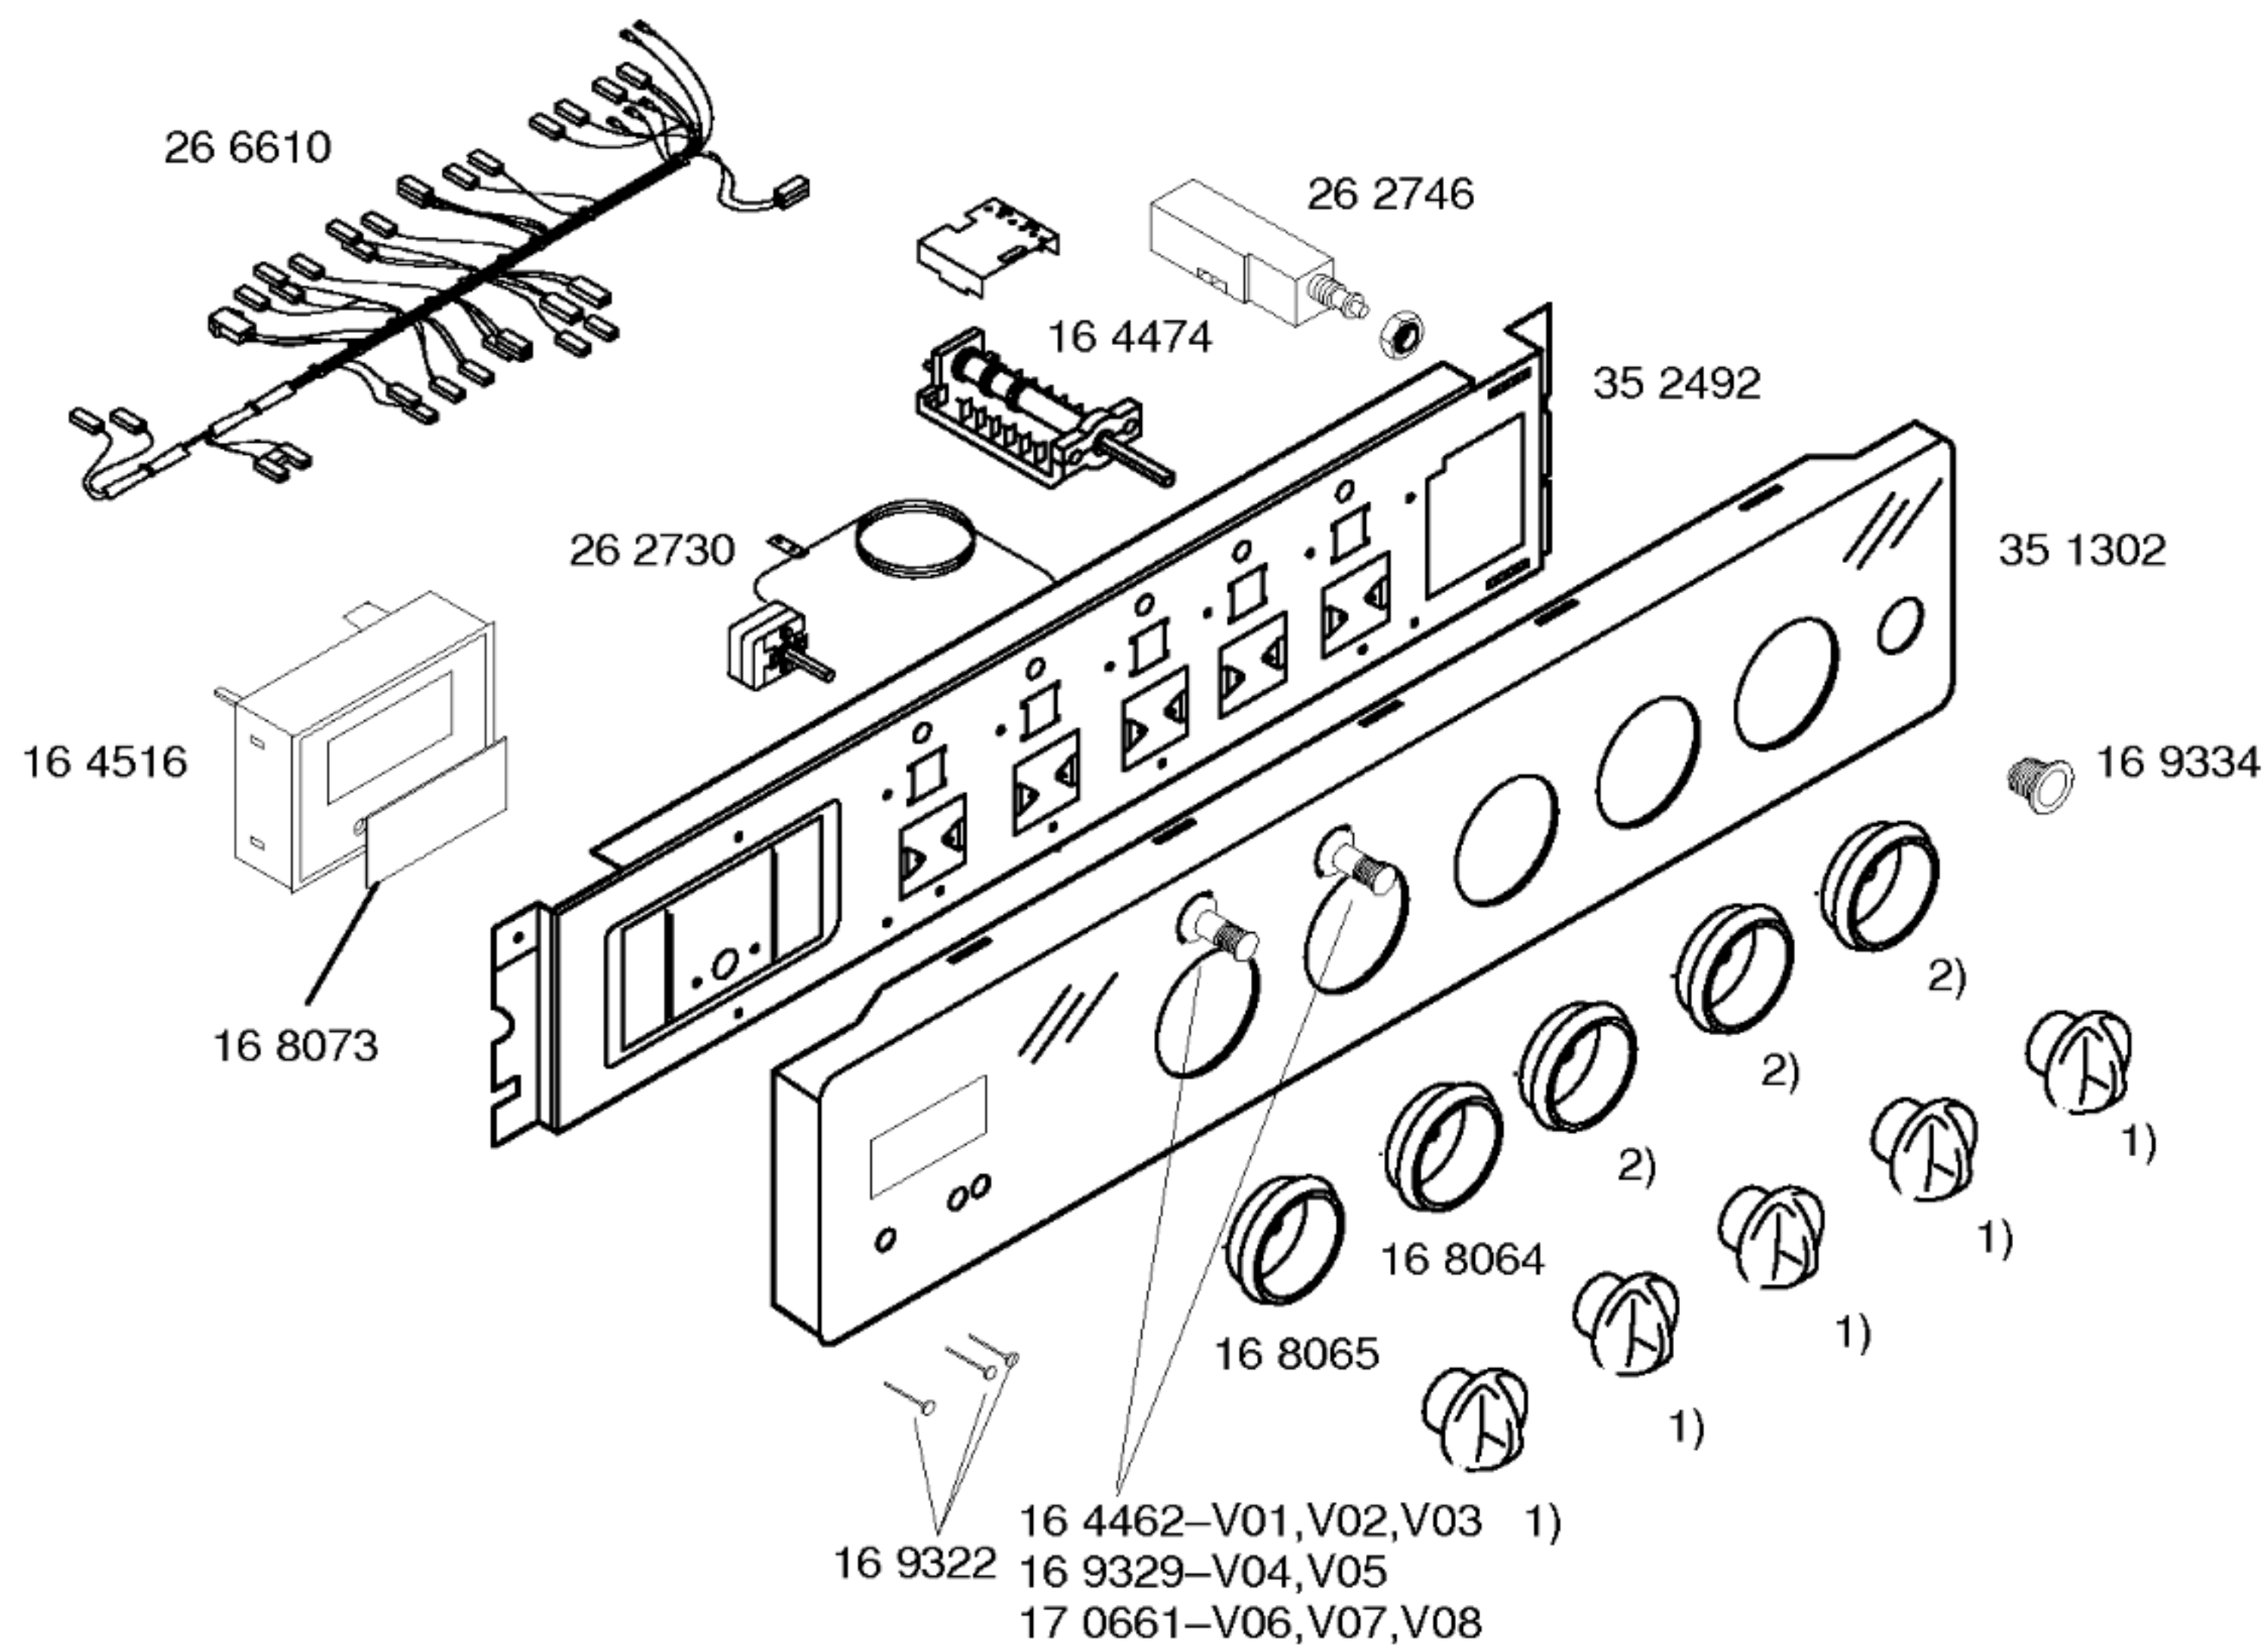

Mat. – Nr. – Konstante
3740

- 1) 16 8061-V01,V02,
V03,V04,V05
16 9727-V06,V07,
V08
- 2) 16 8060-V01
16 9331-V02,V03,
V04,V05
17 1288-V06,V07,
V08



BOSCH


HSV232NTR/01-V01
HSV232NTR/02-V02
HSV232NTR/03-V03
HSV232NTR/04-V04


HSV232NTR/05-V05
HSV232NTR/06-V06
HSV232NTR/07-V07
HSV232NTR/08-V08

HERDE
Gas-Standherde

Mat. - Nr. - Konstante
3740

1) 35 3489

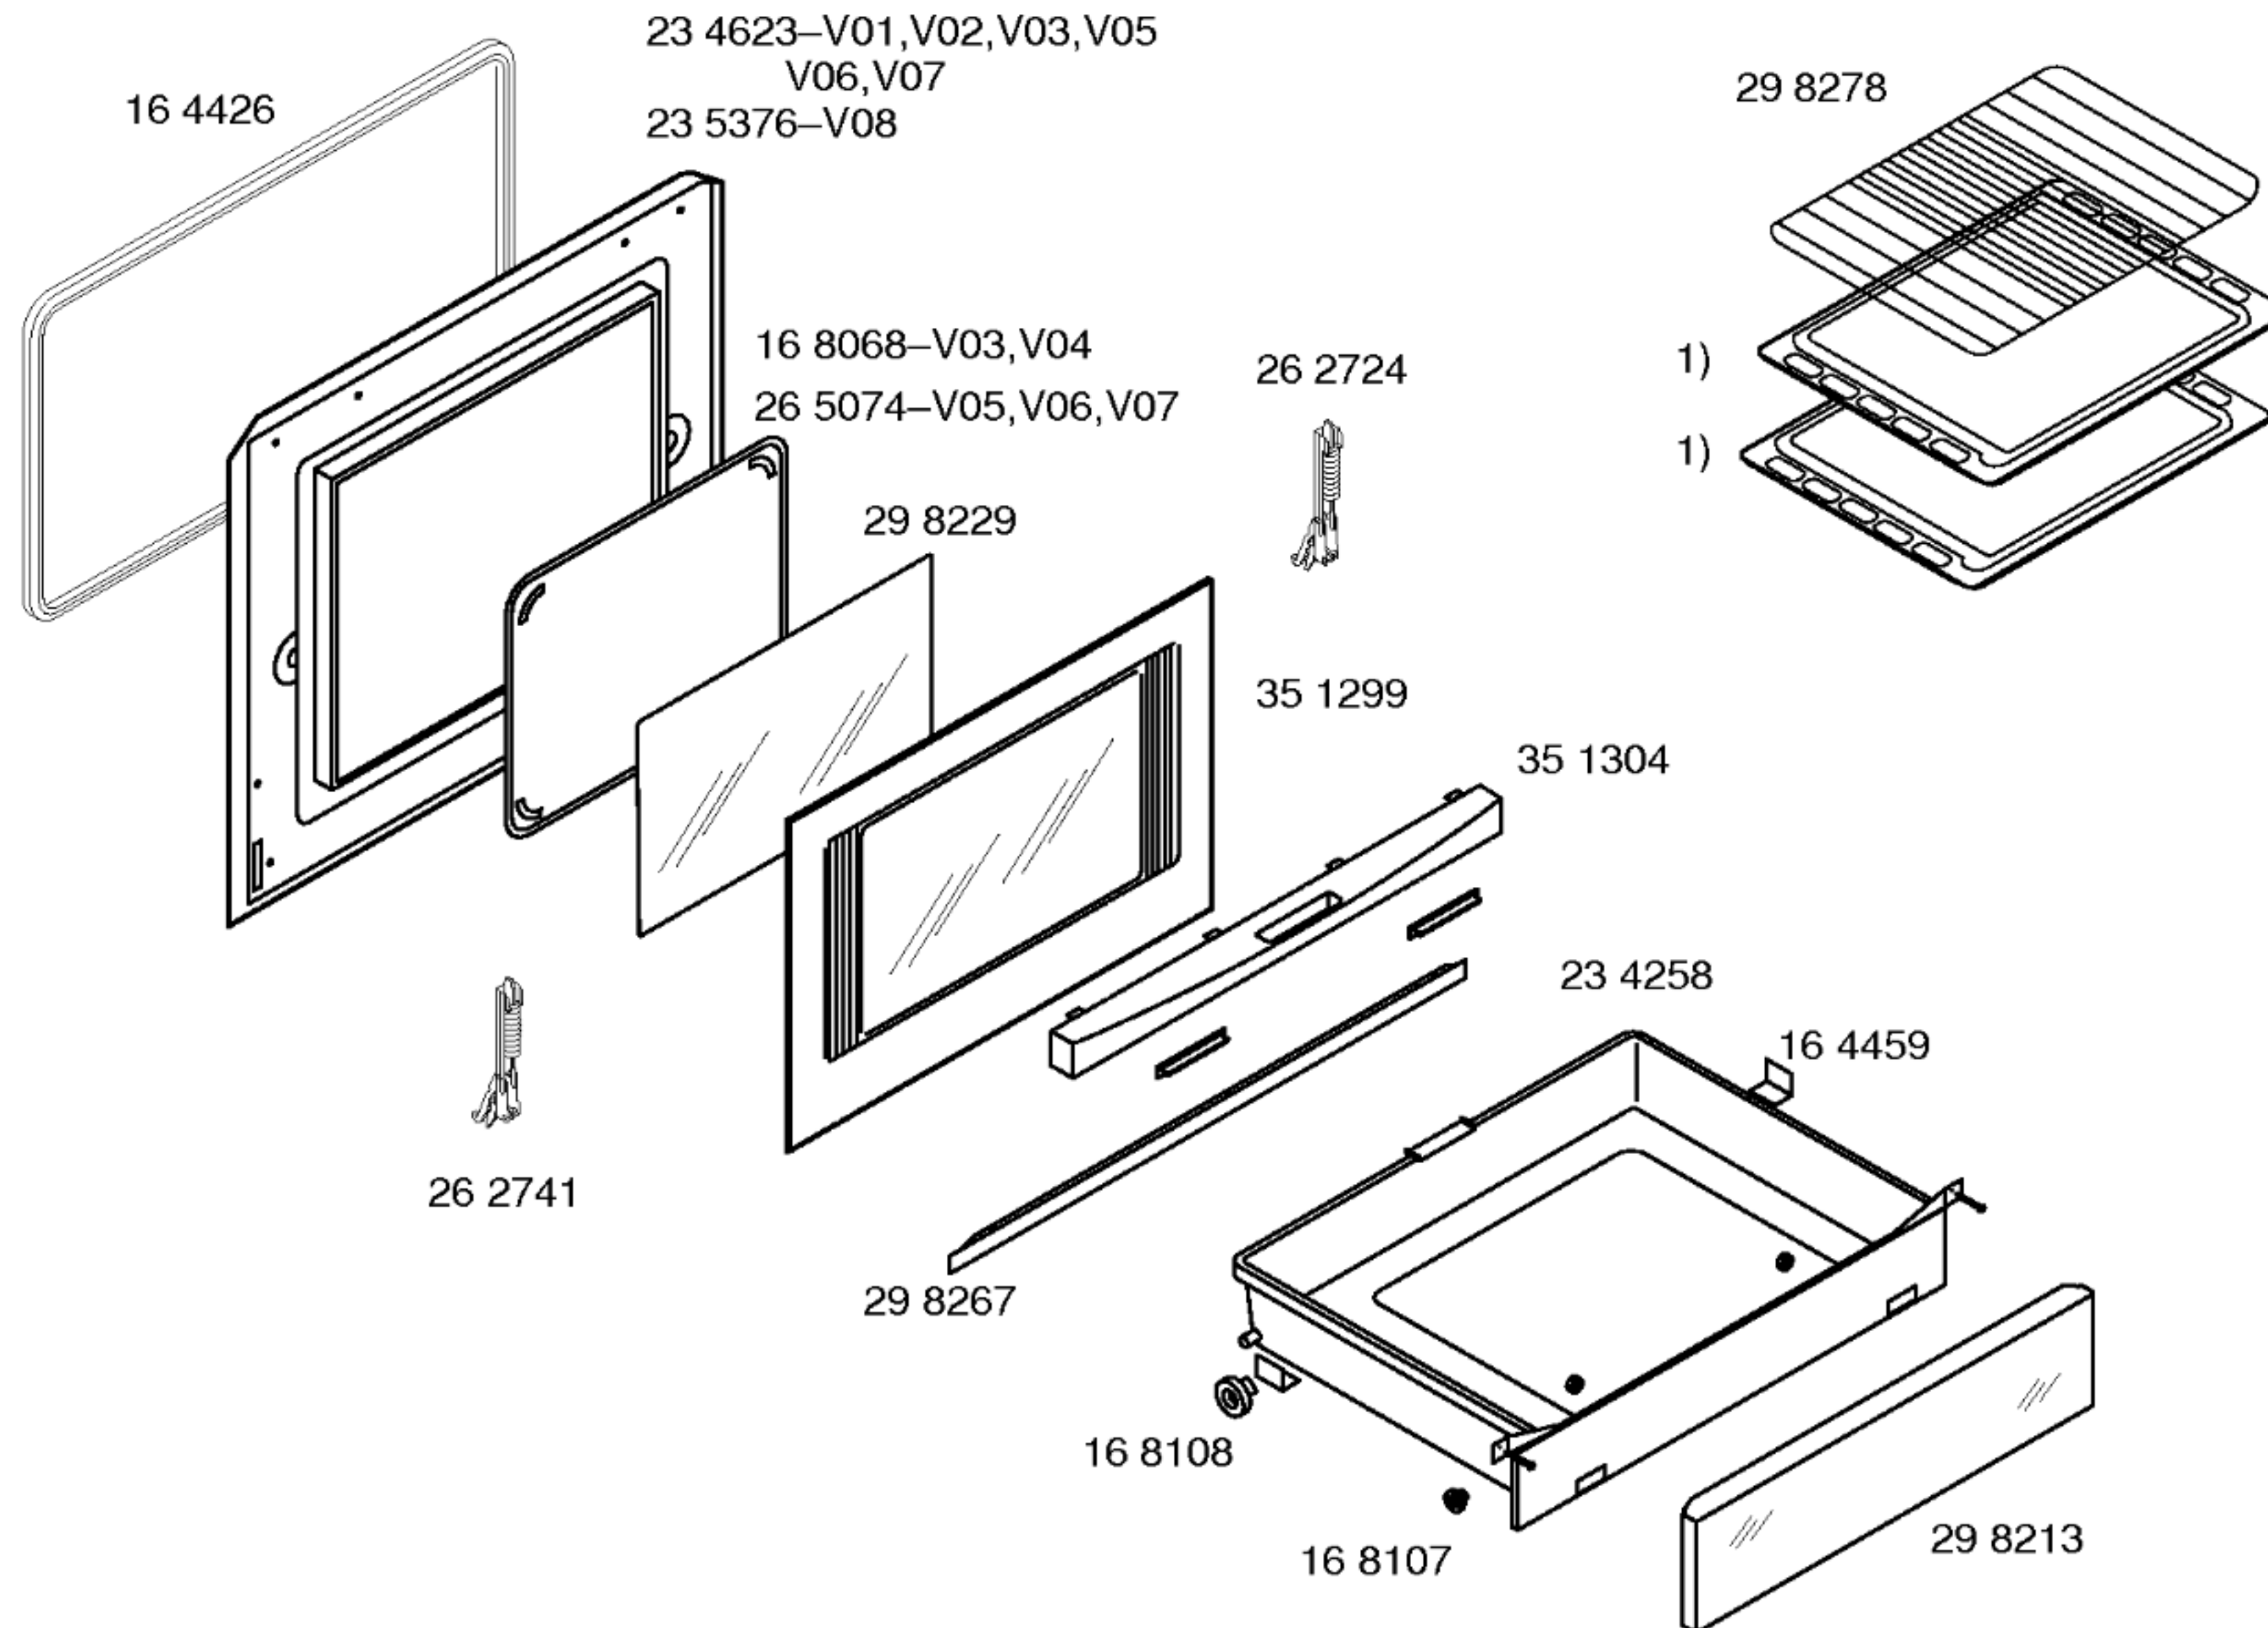

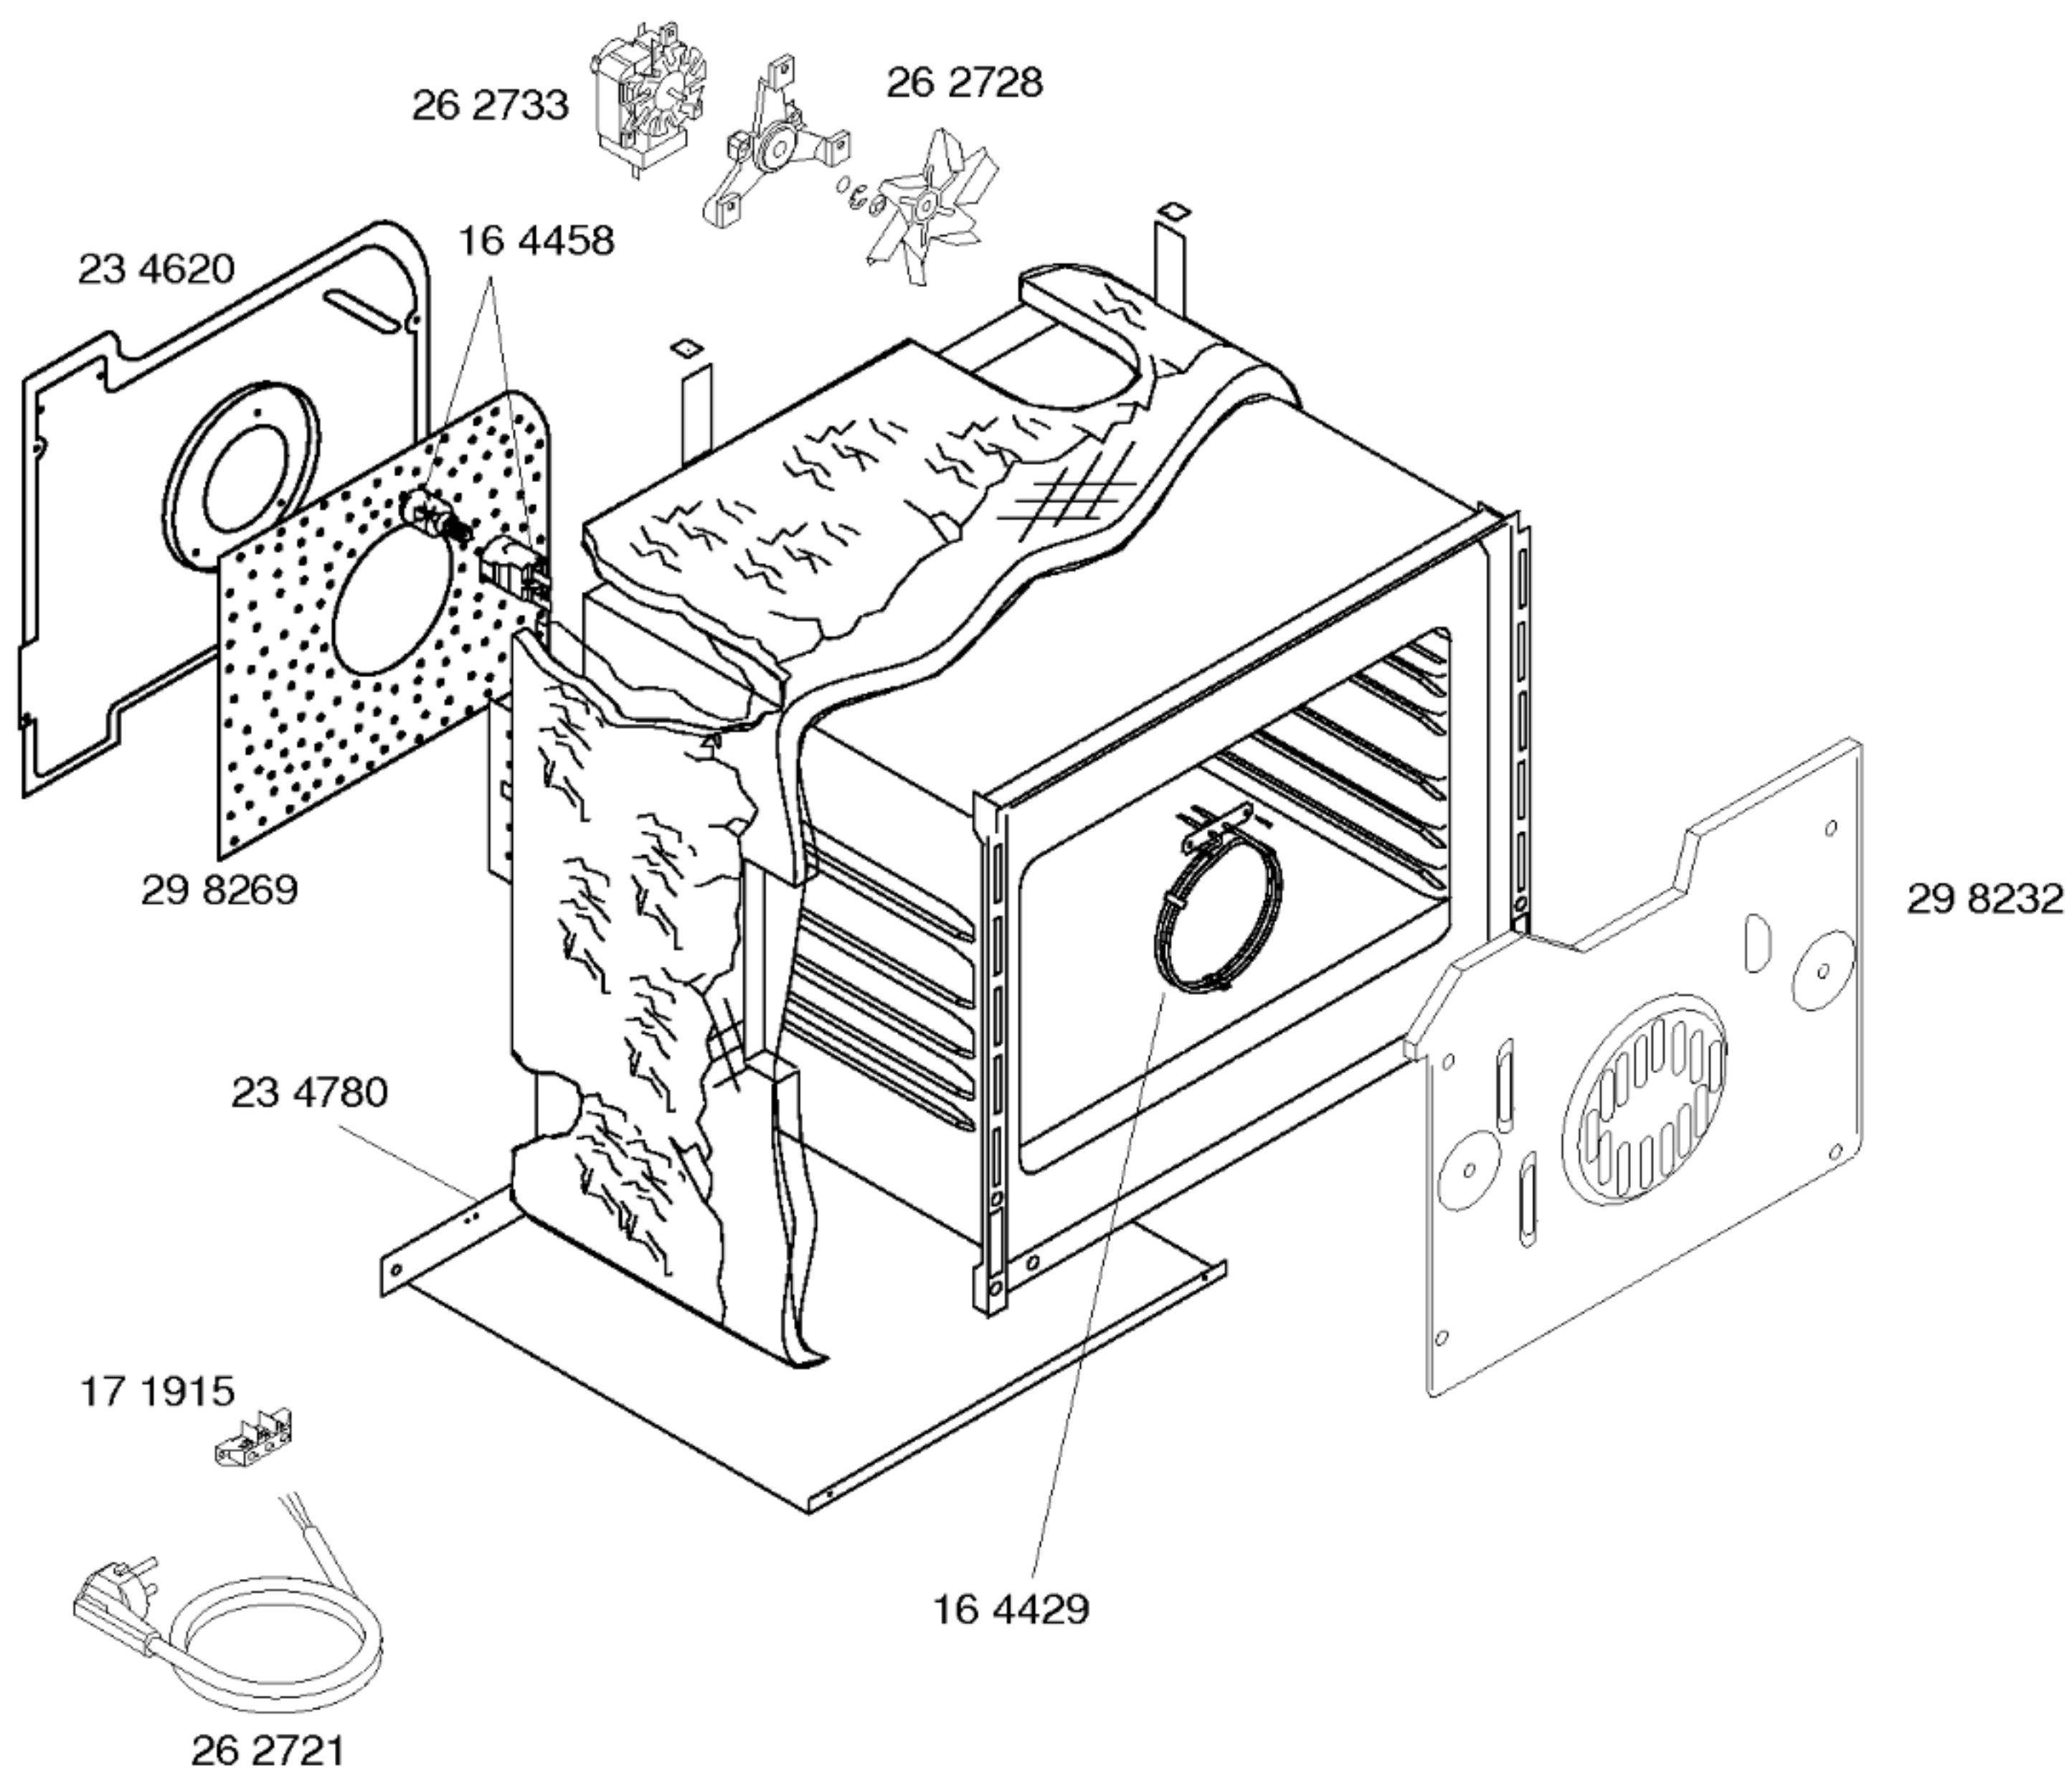


**BOSCH**

HSV232NTR/01-V01
 HSV232NTR/02-V02
 HSV232NTR/03-V03
 HSV232NTR/04-V04

HSV232NTR/05-V05
 HSV232NTR/06-V06
 HSV232NTR/07-V07
 HSV232NTR/08-V08

HERDE
 Gas-Standherde

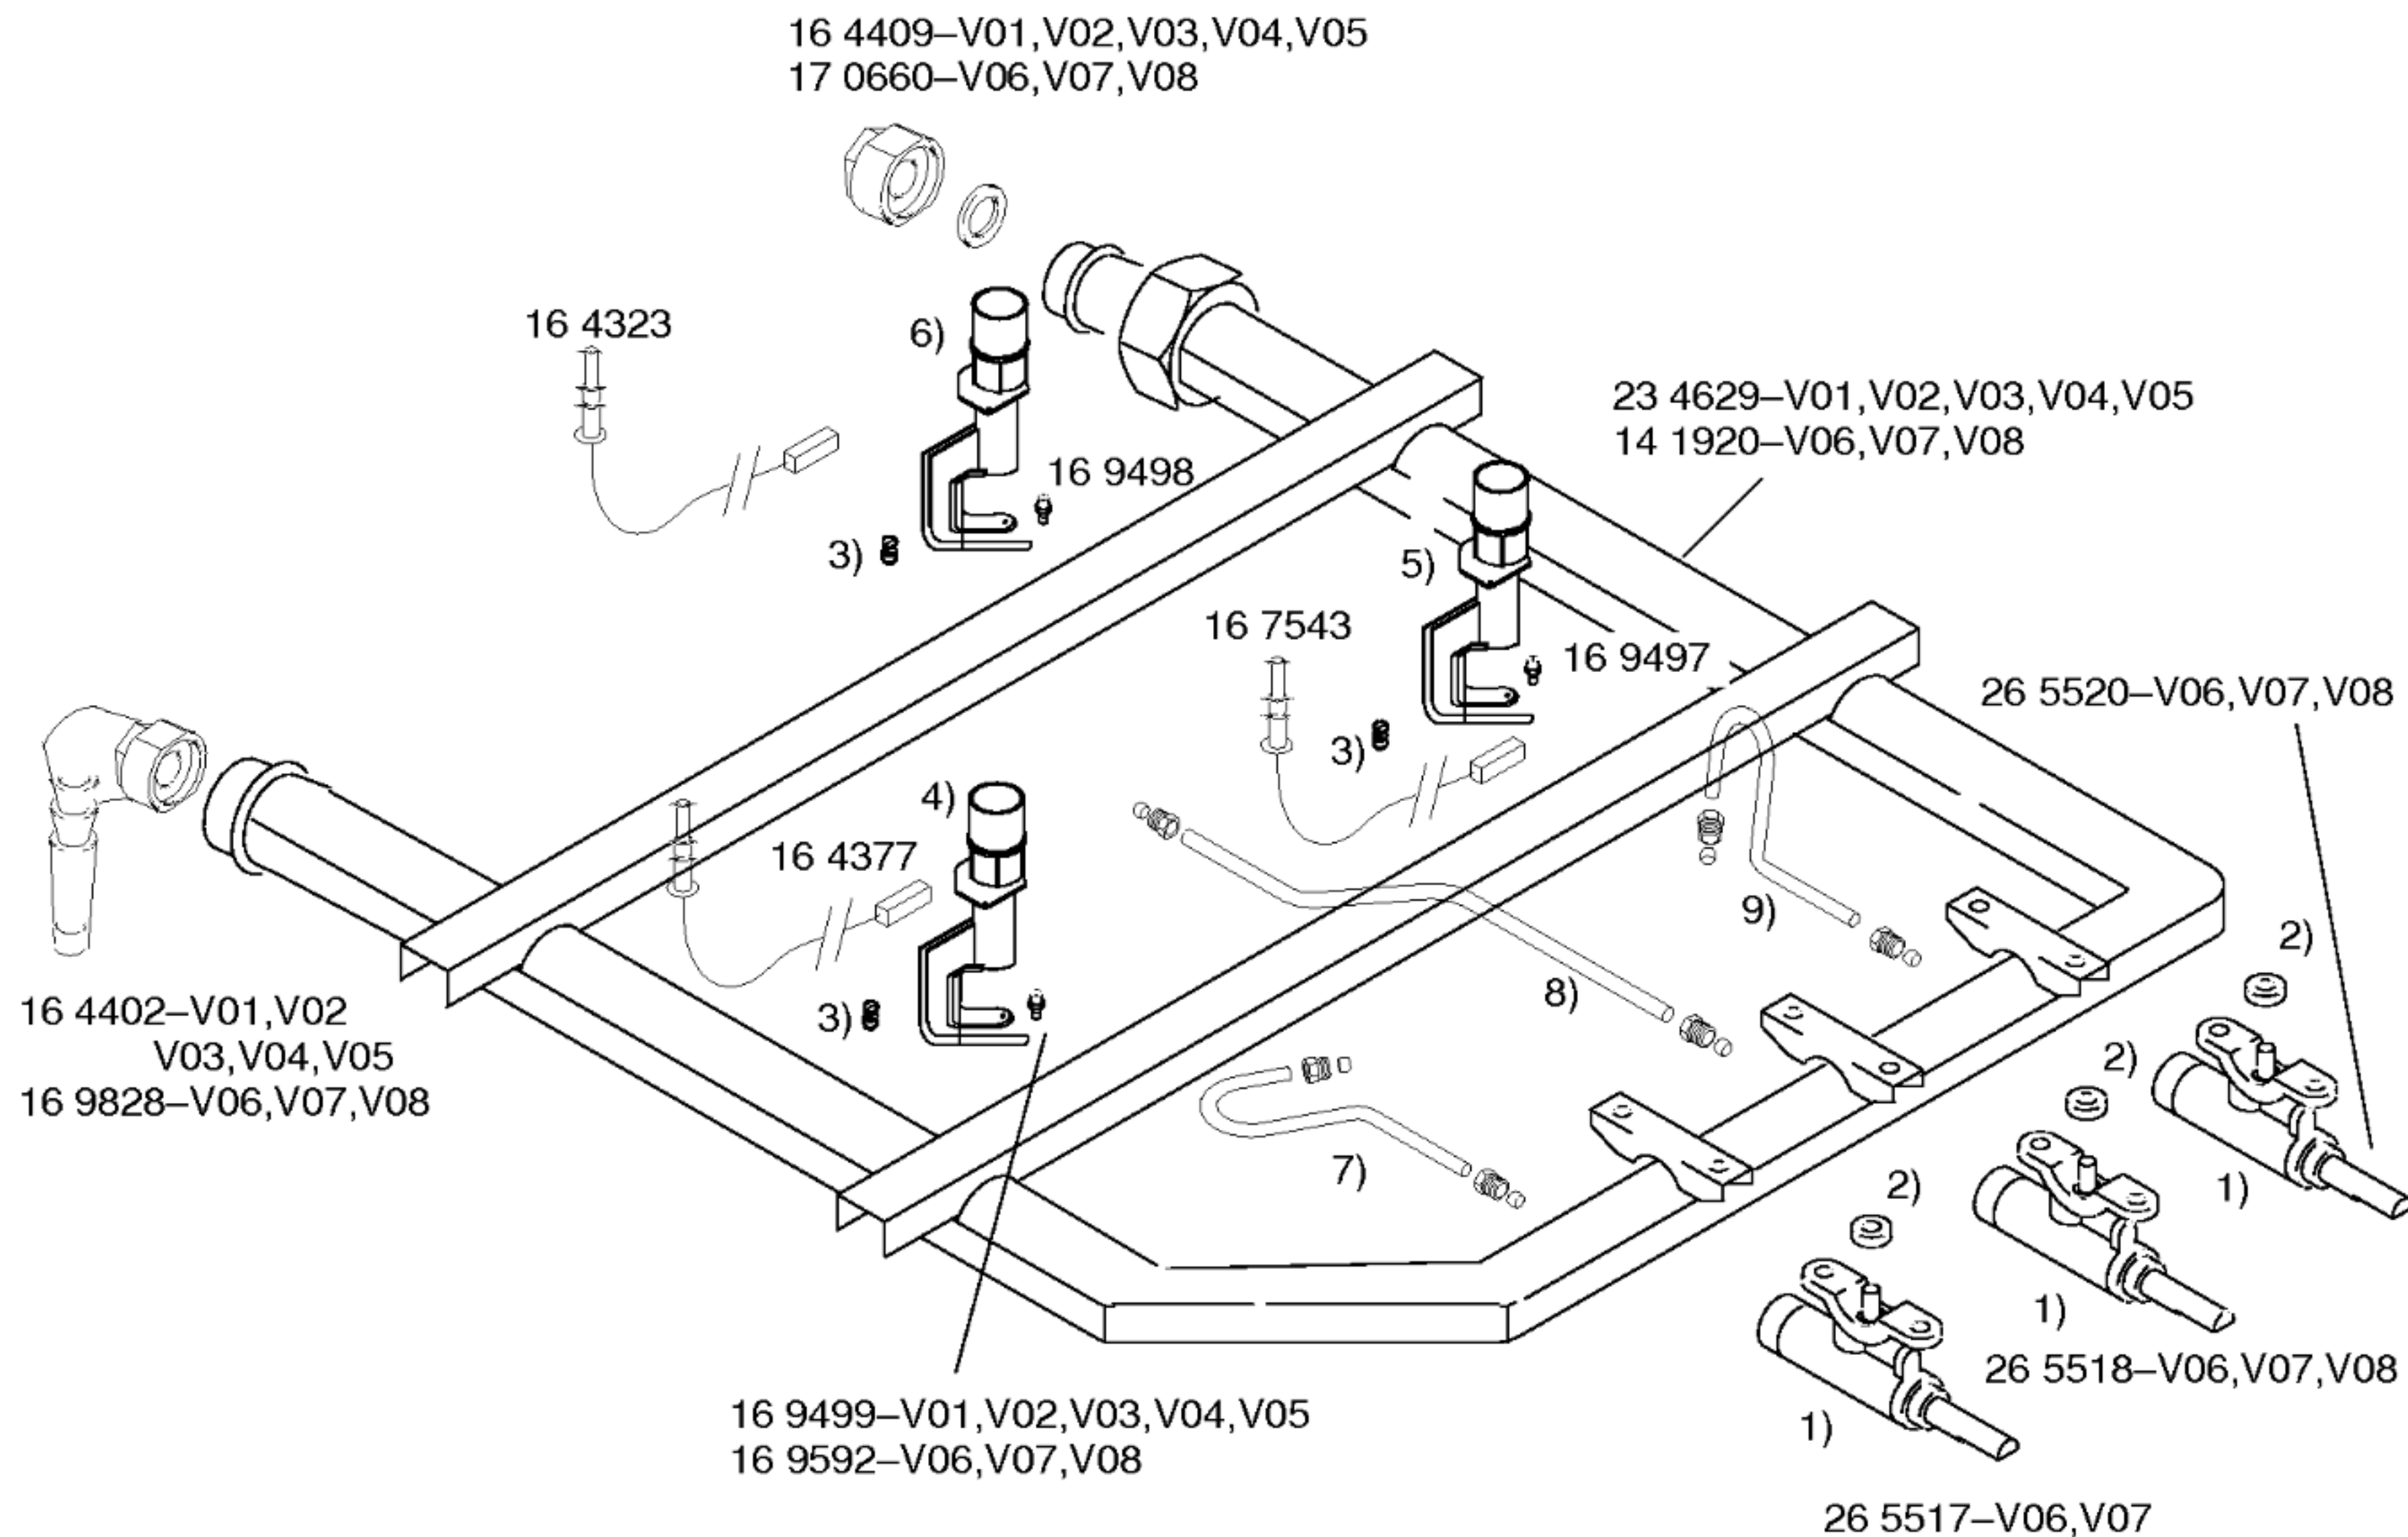

Mat. - Nr. - Konstante
 3740

- 1) 16 4466-V01,V02
 V03,V04,V05
- 2) 16 9339
- 3) 16 8058-V01,V02,
 V03
 16 4528-V04,V05,
 V06,V07
- 4) 16 4369-V01,V02,
 V03,V04,V05
 26 5407-V06
 26 6607-V07,V08
- 5) 16 4371-V01,V02,
 V03,V04,V05
 26 5409-V06
 26 6609-V07,V08
- 6) 16 4370-V01,V02,
 V03,V04,V05
 26 5408-V06
 26 6608-V07,V08
- 7) 35 1309-V01,V02,
 V03,V04,V05
 26 6695-V06
 35 5119-V07,V08
- 8) 35 1310-V01,V02,
 V03,V04,V05
 26 5413-V06
 35 5118-V07,V08
- 9) 35 1311-V01,V02,
 V03,V04,V05
 26 5412-V06
 35 5117-V07,V08