

Item	PNC	ELC	Brand	Model	Market
A	900275748	00	Electrolux	ERC3505	MYH
A	900275774	00	Electrolux	ERC3505	VNE
A	900275740	00	Electrolux	ERC3505	IDE
A	900275764	00	Electrolux	ERC3505	THA

SAFETY WARNING

Always turn off and unplug the machine before detaching any parts.

When servicing machines, do not remove
ANY detachable parts while the machine is powered.
The reason is internal faults may cause shorts to components
that are normally at low voltage presenting a shock hazard.

		Rice Cooker	
Electrolux SEA Pte.,Ltd. APAC	Publication-No. 160714		

Model

ERC3205

ERC3205

ERC3205

ERC3205

PNC

ERC3505

ERC3505

ERC3505

ERC3505

Ex. View Drawing

Parts

1




2



3



4

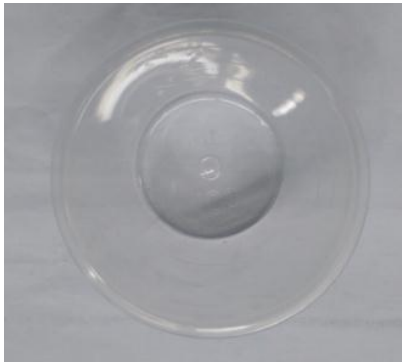

5



6



PNC	ELC	Brand	Model	Market
900275748	00	Electrolux	ERC3505	MYH
900275774	00	Electrolux	ERC3505	VNE
900275740	00	Electrolux	ERC3505	IDE
900275764	00	Electrolux	ERC3505	THA

Important Note: Please list the PNC and Model code for part purchase order (PO)

Pos.	Part Code	Description
1	12161000007279	Lid Button
2	12161000007281	lever button
3	12161000007230	pot lift a hand
4	12161000000320	Measuring Cup
5	12161000003147	Rice scoop and soup scoop assembly
6	12161000003802	Steaming tray
7	12261000003768	Inner pot