

Item	PNC	ELC	Brand	Model	Market
A	900275766	00	Electrolux	ERC3105	VNE
A	900275756	00	Electrolux	ERC3105	THA
A	900275742	00	Electrolux	ERC3105	MYH

SAFETY WARNING

Always turn off and unplug the machine before detaching any parts.

When servicing machines, do not remove
ANY detachable parts while the machine is powered.
The reason is internal faults may cause shorts to components
that are normally at low voltage presenting a shock hazard.

		Rice Cooker	
Electrolux SEA Pte.,Ltd. APAC	Publication-No. 160714		

Model

PNC

Ex. View Drawing
Parts

ERC3105	900275766
ERC3105	900275756
ERC3105	900275742


1



2



3

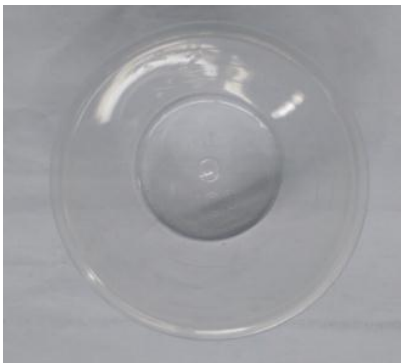

4



5



PNC	ELC	Brand	Model	Market
900275766	00	Electrolux	ERC3105	VNE
900275756	00	Electrolux	ERC3105	THA
900275742	00	Electrolux	ERC3105	MYH

Important Note: Please list the PNC and Model code for part purchase order (PO)

Pos.	Part Code	Description
1	12161000007279	Lid Button
2	12161000007281	lever button
3	12161000000320	Measuring Cup
4	12161000003147	Rice scoop and soup scoop assembly
5	12161000003802	steaming tray
6	12261000004369	inner pot