

Item	PNC	ELC	Brand	Model	Market
A	900275738	00	Electrolux	ERC3405	IDE
A	900275762	00	Electrolux	ERC3405	THA
A	900275772	00	Electrolux	ERC3405	VNE
A	900275746	00	Electrolux	ERC3405	MYH
A	900275754	00	Electrolux	ERC3405	PHH

SAFETY WARNING

Always turn off and unplug the machine before detaching any parts.

When servicing machines, do not remove
ANY detachable parts while the machine is powered.
The reason is internal faults may cause shorts to components
that are normally at low voltage presenting a shock hazard.

		Rice Cooker	
Electrolux SEA Pte.,Ltd. APAC	Publication-No. 160714		

Model

ERC3405

PNC

900275738

Ex. View Drawing

Parts

ERC3405	900275738
ERC3405	900275762
ERC3405	900275772
ERC3405	900275746
ERC3405	900275754

1




2



3



4

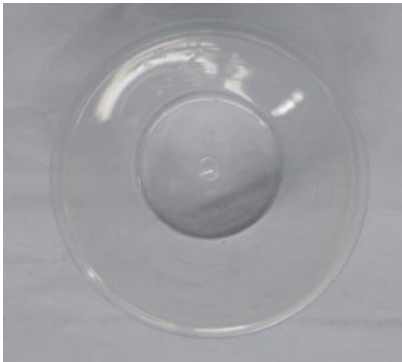

5



6



PNC	ELC	Brand	Model	Market
900275738	00	Electrolux	ERC3405	IDE
900275762	00	Electrolux	ERC3405	THA
900275772	00	Electrolux	ERC3405	VNE
900275746	00	Electrolux	ERC3405	MYH
900275754	00	Electrolux	ERC3405	PHH

Important Note: Please list the PNC and Model code for part purchase order (PO)

Pos.	Part Code	Description
1	12161000007285	Lid Button
2	12161000007287	lever button
3	12161000007237	pot lift a hand
4	12161000000320	Measuring Cup
5	12161000003147	Rice scoop and soup scoop assembly
6	12161000003802	Steaming tray
7	12261000003771	Inner pot