 


When ordering spare parts, always state:
MODEL-QUANTITY-PART NUMBER-DESCRIPTION

For electric details, also state:
VOLTAGE-WATTAGE

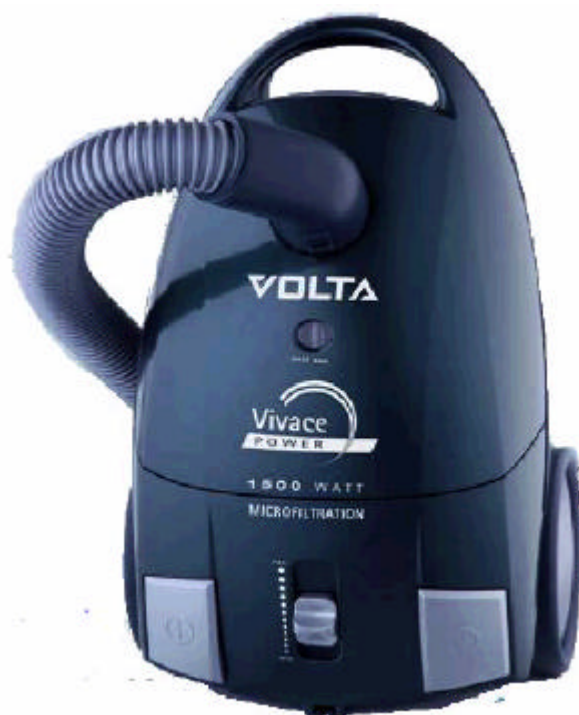

 
SPARE PARTS LIST

U4206F


EDITION No. 1

DECEMBER
2008

SUCTION CLEANER

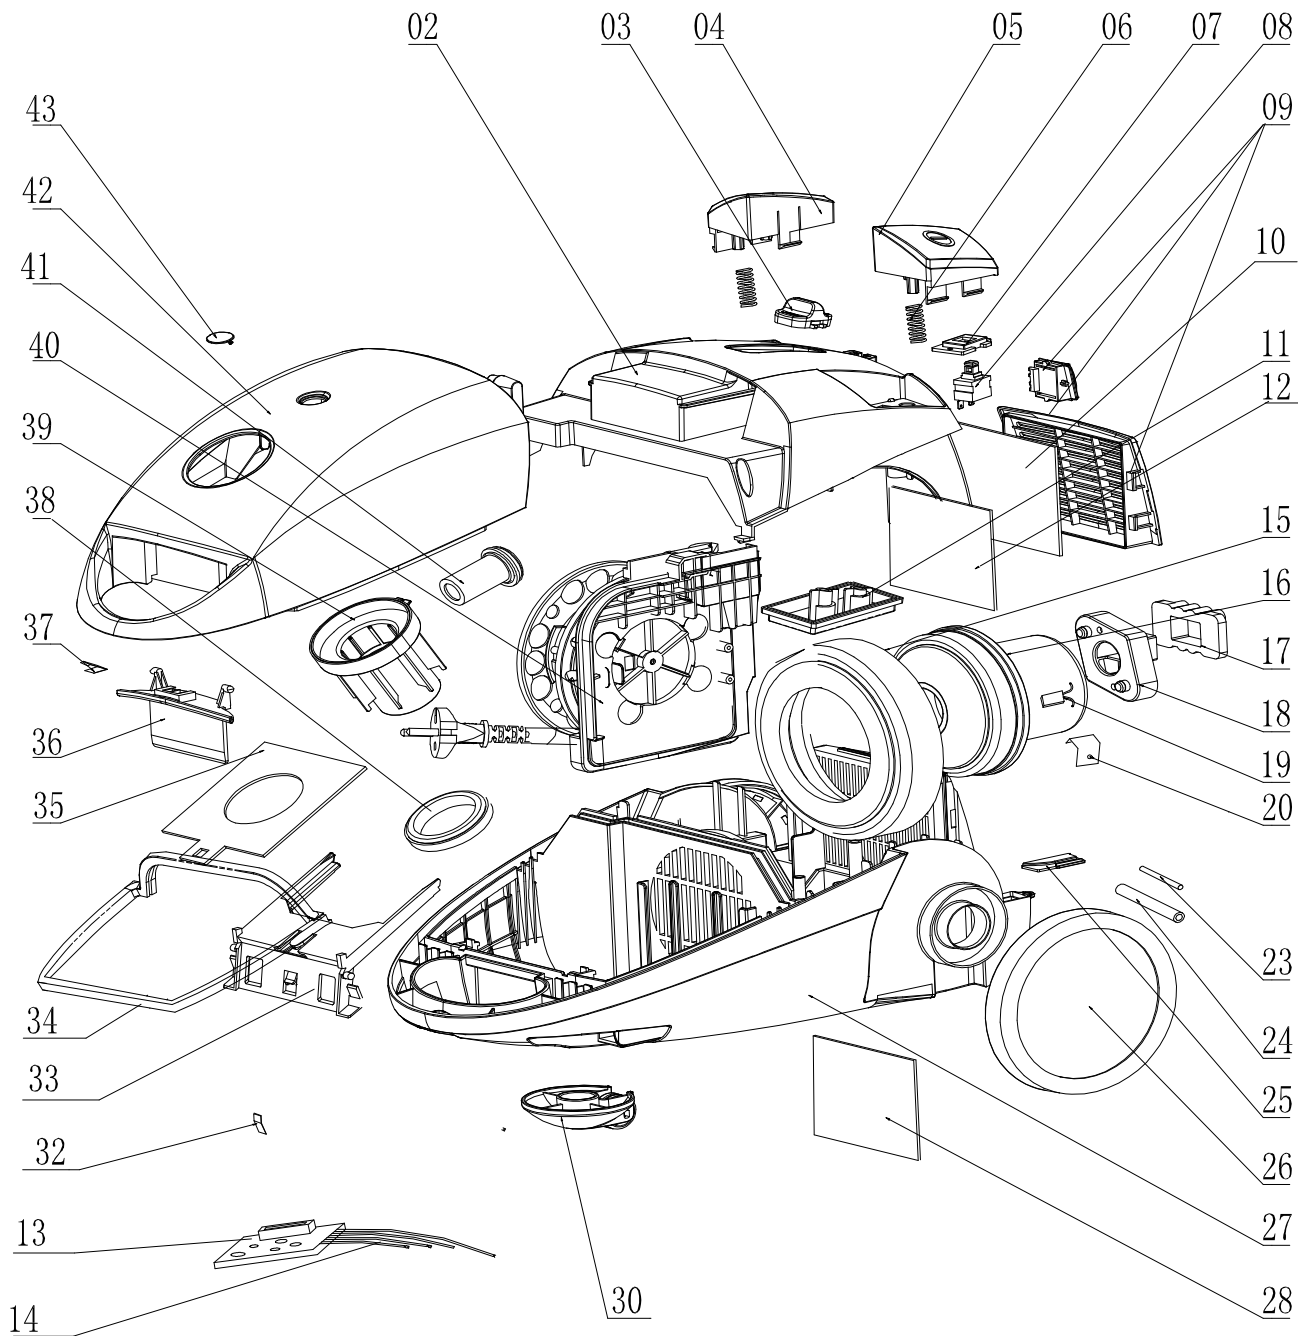

ITEM No.	PART No.	DESCRIPTION
2	Q0454190048	Rear Cover
3	Q0453130233	Speed regulator knob
4	Q045521A233	Cord wind button
5	Q0455130233	Switch button
6	J0000350002R	Spring for button
7	Q0405240H01	Switch plate
8	D3017000010R	Switch
9	B0450430609R	Exhaust grille assembly
10	G0450060003	Outlet filter
11	Q0452980H01	Plate for Potentiometer
12	G0450060001	Motor filter
13	D2045007009R	PCB board
14		Part of item 13
15	X0290340002R	Seal for motor
16	B1391050606R	Motor
17	X0450390002R	Suspension block
18	Q0402690B25R	Distance adjustment
19	D4021001006R	Thermostat
20	J2150000002R	Thermostat cover
23	J0090000049R	Cord Axle
24	Q0451400H08R	Cord Axle Bushing
25	Q0404420233	Decorated plate of base
26	A0400040017	Rear wheel assembly
27	Q0404380233	Base
28	G0450040001	Inlet filter
30	A0201670004R	Small wheel assembly
32	J0000360025R	Spring for dust bag support
33	Q0061570233	Dustbag holder
34	X0450080002R	Sealing of dust container
35	G0400090003	Paper bag
	G0400100004	Cloth bag
36	Q0455710048	Lock of front cover
37	J0100400001R	Spring for front cover lock
38		Sealing for connection ring, part of item 42
39		Connection ring, part of item 42
40	A0450050003R	Cord rewind assembly (VDE plug)
41	A0000640013R	Dust indicator assembly
42	B0450260604R	Front cover assembly
43	Q0273491B05	Dust indicator window

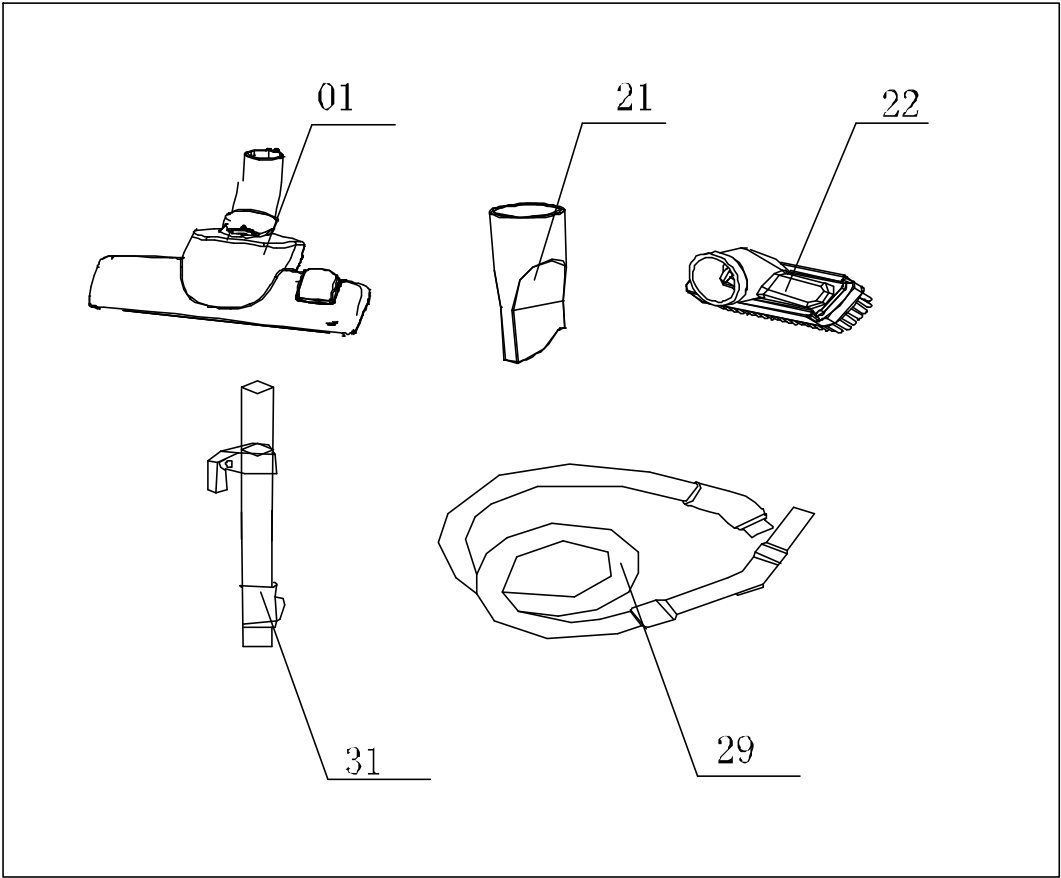 

ITEM No.	PART No.	DESCRIPTION
1	F1112800001R	Combination nozzle assembly
21	S8640250233	Crevice nozzle
22	F0980700001	Upholstery Nozzle with plush plate
29	A000202H018R	Hose assembly
31	B0450160606R	Telescopic tube assembly