

Item	PNC	ELC	Brand	Model	Market
A	900273474	00	Electrolux	ETS7804S	AUS
A	900276147	00	Electrolux	ETS7804AB	AUS
A	900276145	00	Electrolux	ETS7804C	AUS
A	900276149	00	Electrolux	ETS7804CH	AUS
A	900276141	00	Electrolux	ETS7804G	AUS
A	900276143	00	Electrolux	ETS7804L	AUS
A	900276151	00	Electrolux	ETS7814W	AUS

SAFETY WARNING

Always turn off and unplug the machine before detaching any parts.

When servicing machines, do not remove
 ANY detachable parts while the machine is powered.
 The reason is internal faults may cause shorts to components
 that are normally at low voltage presenting a shock hazard.



Electrolux SEA Pte.,Ltd.

 Publication-No.
 151218

 Small Appliance
 Electrical Cooking
 Toaster

Model	PNC
ETS7804S	900273474
ETS7804AB	900276147
ETS7804C	900276145
ETS7804CH	900276149
ETS7804G	900276141
ETS7804L	900276143
ETS7814W	900276151

Ex. View Drawing Internal Parts

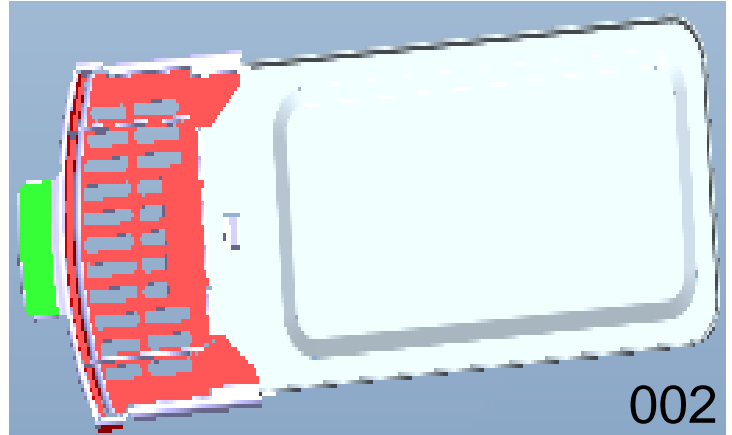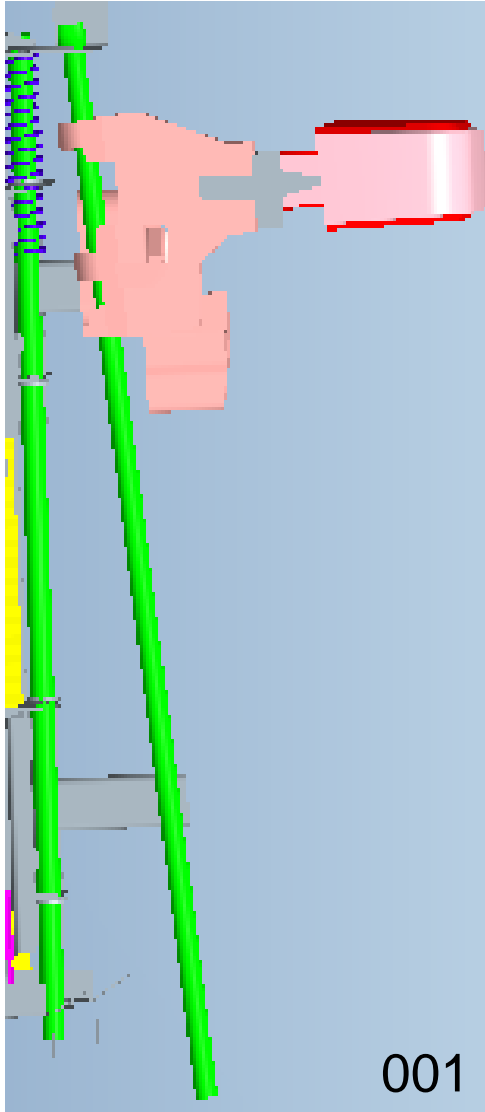

PNC	ELC	Brand	Model	Market
900273474	00	Electrolux	ETS7804S	AUS
900276147	00	Electrolux	ETS7804AB	AUS
900276145	00	Electrolux	ETS7804C	AUS
900276149	00	Electrolux	ETS7804CH	AUS
900276141	00	Electrolux	ETS7804G	AUS
900276143	00	Electrolux	ETS7804L	AUS
900276151	00	Electrolux	ETS7814W	AUS

Pos.	Part Code	Description
001	913901705	Life Tray Assembly
002	913901706	Crumb Tray Assembly