

Item	PNC	ELC	Brand	Model	Market
A	900275862	00	Electrolux	EBR3416	KRH
A	900275684	00	Electrolux	EBR3416	IDH
A	900275910	00	Electrolux	EBR3416A	IDH
A	900275688	00	Electrolux	EBR3526	IDH
A	900275686	00	Electrolux	EBR3646	IDH
A	900275690	00	Electrolux	EBR3416	SGE/MYH
A	900275694	00	Electrolux	EBR3526	SGE/MYH
A	900275692	00	Electrolux	EBR3646	SGE/MYH
A	900275696	00	Electrolux	EBR3416	PHH
A	900275698	00	Electrolux	EBR3646	PHH
A	900275706	00	Electrolux	EBR3416	THE
A	900275710	00	Electrolux	EBR3526	THE
A	900275708	00	Electrolux	EBR3646	THE
A	900275716	00	Electrolux	EBR3416	VNE
A	900275908	00	Electrolux	EBR3416A	VNE
A	900275720	00	Electrolux	EBR3526	VNE
A	900275718	00	Electrolux	EBR3646	VNE
A	900275712	00	Electrolux	EBR3216	TWH
A	900275714	00	Electrolux	EBR3546	TWH

SAFETY WARNING


Always turn off and unplug the machine before detaching any parts.

When servicing machines, do not remove
ANY detachable parts while the machine is powered.
The reason is internal faults may cause shorts to components
that are normally at low voltage presenting a shock hazard.

		Food Preparation Blender	
Electrolux SEA Pte.,Ltd. APAC	Publication-No. 151103		

Ex. View Drawing Support Accessories Only

Model	PNC	Model	PNC
EBR3416	900275862	EBR3416	900275706
EBR3416	900275684	EBR3526	900275710
EBR3416A	900275910	EBR3646	900275708
EBR3526	900275688	EBR3416	900275716
EBR3646	900275686	EBR3416A	900275908
EBR3416	900275690	EBR3526	900275720
EBR3526	900275694	EBR3646	900275718
EBR3646	900275692	EBR3216	900275712
EBR3416	900275696	EBR3546	900275714
EBR3646	900275698		

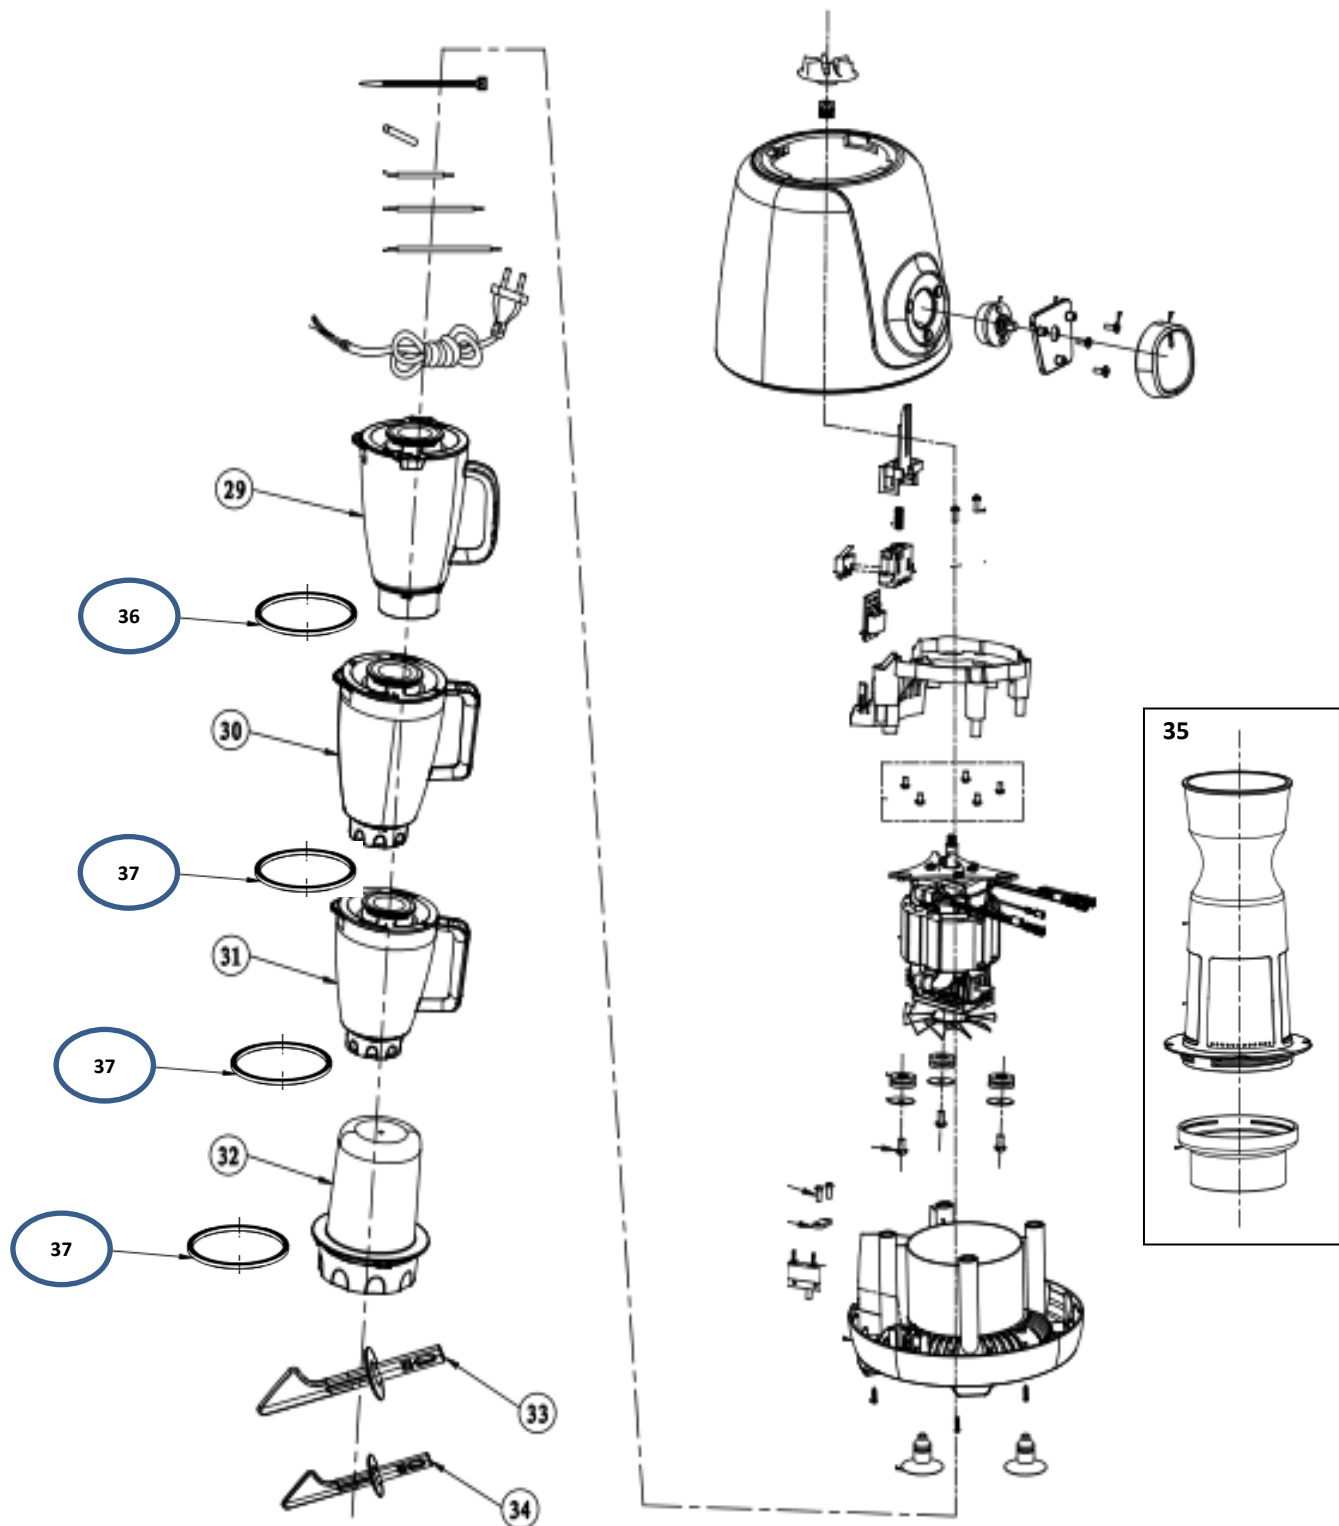

PNC	ELC	Brand	Model	Market
900275862	00	Electrolux	EBR3416	KRH
900275684	00	Electrolux	EBR3416	SEA/IDH
900275910	00	Electrolux	EBR3416A	SEA/IDH
900275688	00	Electrolux	EBR3526	SEA/IDH
900275686	00	Electrolux	EBR3646	SEA/IDH
900275690	00	Electrolux	EBR3416	SEA/MYH
900275694	00	Electrolux	EBR3526	SEA/MYH
900275692	00	Electrolux	EBR3646	SEA/MYH
900275696	00	Electrolux	EBR3416	SEA/PHH
900275698	00	Electrolux	EBR3646	SEA/PHH
900275706	00	Electrolux	EBR3416	SEA/THE
900275710	00	Electrolux	EBR3526	SEA/THE
900275708	00	Electrolux	EBR3646	SEA/THE
900275716	00	Electrolux	EBR3416	SEA/VNE
900275908	00	Electrolux	EBR3416A	SEA/VNE
900275720	00	Electrolux	EBR3526	SEA/VNE
900275718	00	Electrolux	EBR3646	SEA/VNE
900275712	00	Electrolux	EBR3216	TWH
900275714	00	Electrolux	EBR3546	TWH

Model	PNC	Pos.	29	30	31	32	33	34	35	36	37
		Part Code	TB501A-1102	TB501A-1103	TB501A-1104	TB501A-1105	TB501A-3021	TB501A-3022	TB501A-1106	TB501A-6102	TB501A-6103
		Desc.	Glass Jar Assy	Plastic Jar Assy (1.5L)	Plastic Jar Assy (1.25L)	Grinder Assy	Spatula (1.5L)	Spatula (1.25L)	Filter Net Assy	Seal Ring	Seal Ring
EBR3416	900275862	KRH			.	.		.			.
EBR3416	900275684	SEA/IDH			.	.		.			.
EBR3416A	900275910	SEA/IDH			.	.		.			.
EBR3526	900275688	SEA/IDH		.		.	.				.
EBR3646	900275686	SEA/IDH	.			.	.		.	.	
EBR3416	900275690	SEA/MYH			.	.		.			.
EBR3526	900275694	SEA/MYH		.		.	.				.
EBR3646	900275692	SEA/MYH	.			.	.		.	.	
EBR3416	900275696	SEA/PHH			.	.		.			.
EBR3646	900275698	SEA/PHH	.			.	.		.	.	
EBR3416	900275706	SEA/THE			.	.		.			.
EBR3526	900275710	SEA/THE		.		.	.				.
EBR3646	900275708	SEA/THE	.			.	.		.	.	
EBR3416	900275716	SEA/VNE			.	.		.			.
EBR3416A	900275908	SEA/VNE			.	.		.			.
EBR3526	900275720	SEA/VNE		.		.	.				.
EBR3646	900275718	SEA/VNE	.			.	.		.	.	
EBR3216	900275712	TWH			.	.		.			.
EBR3546	900275714	TWH	.			.	.		.	.	