



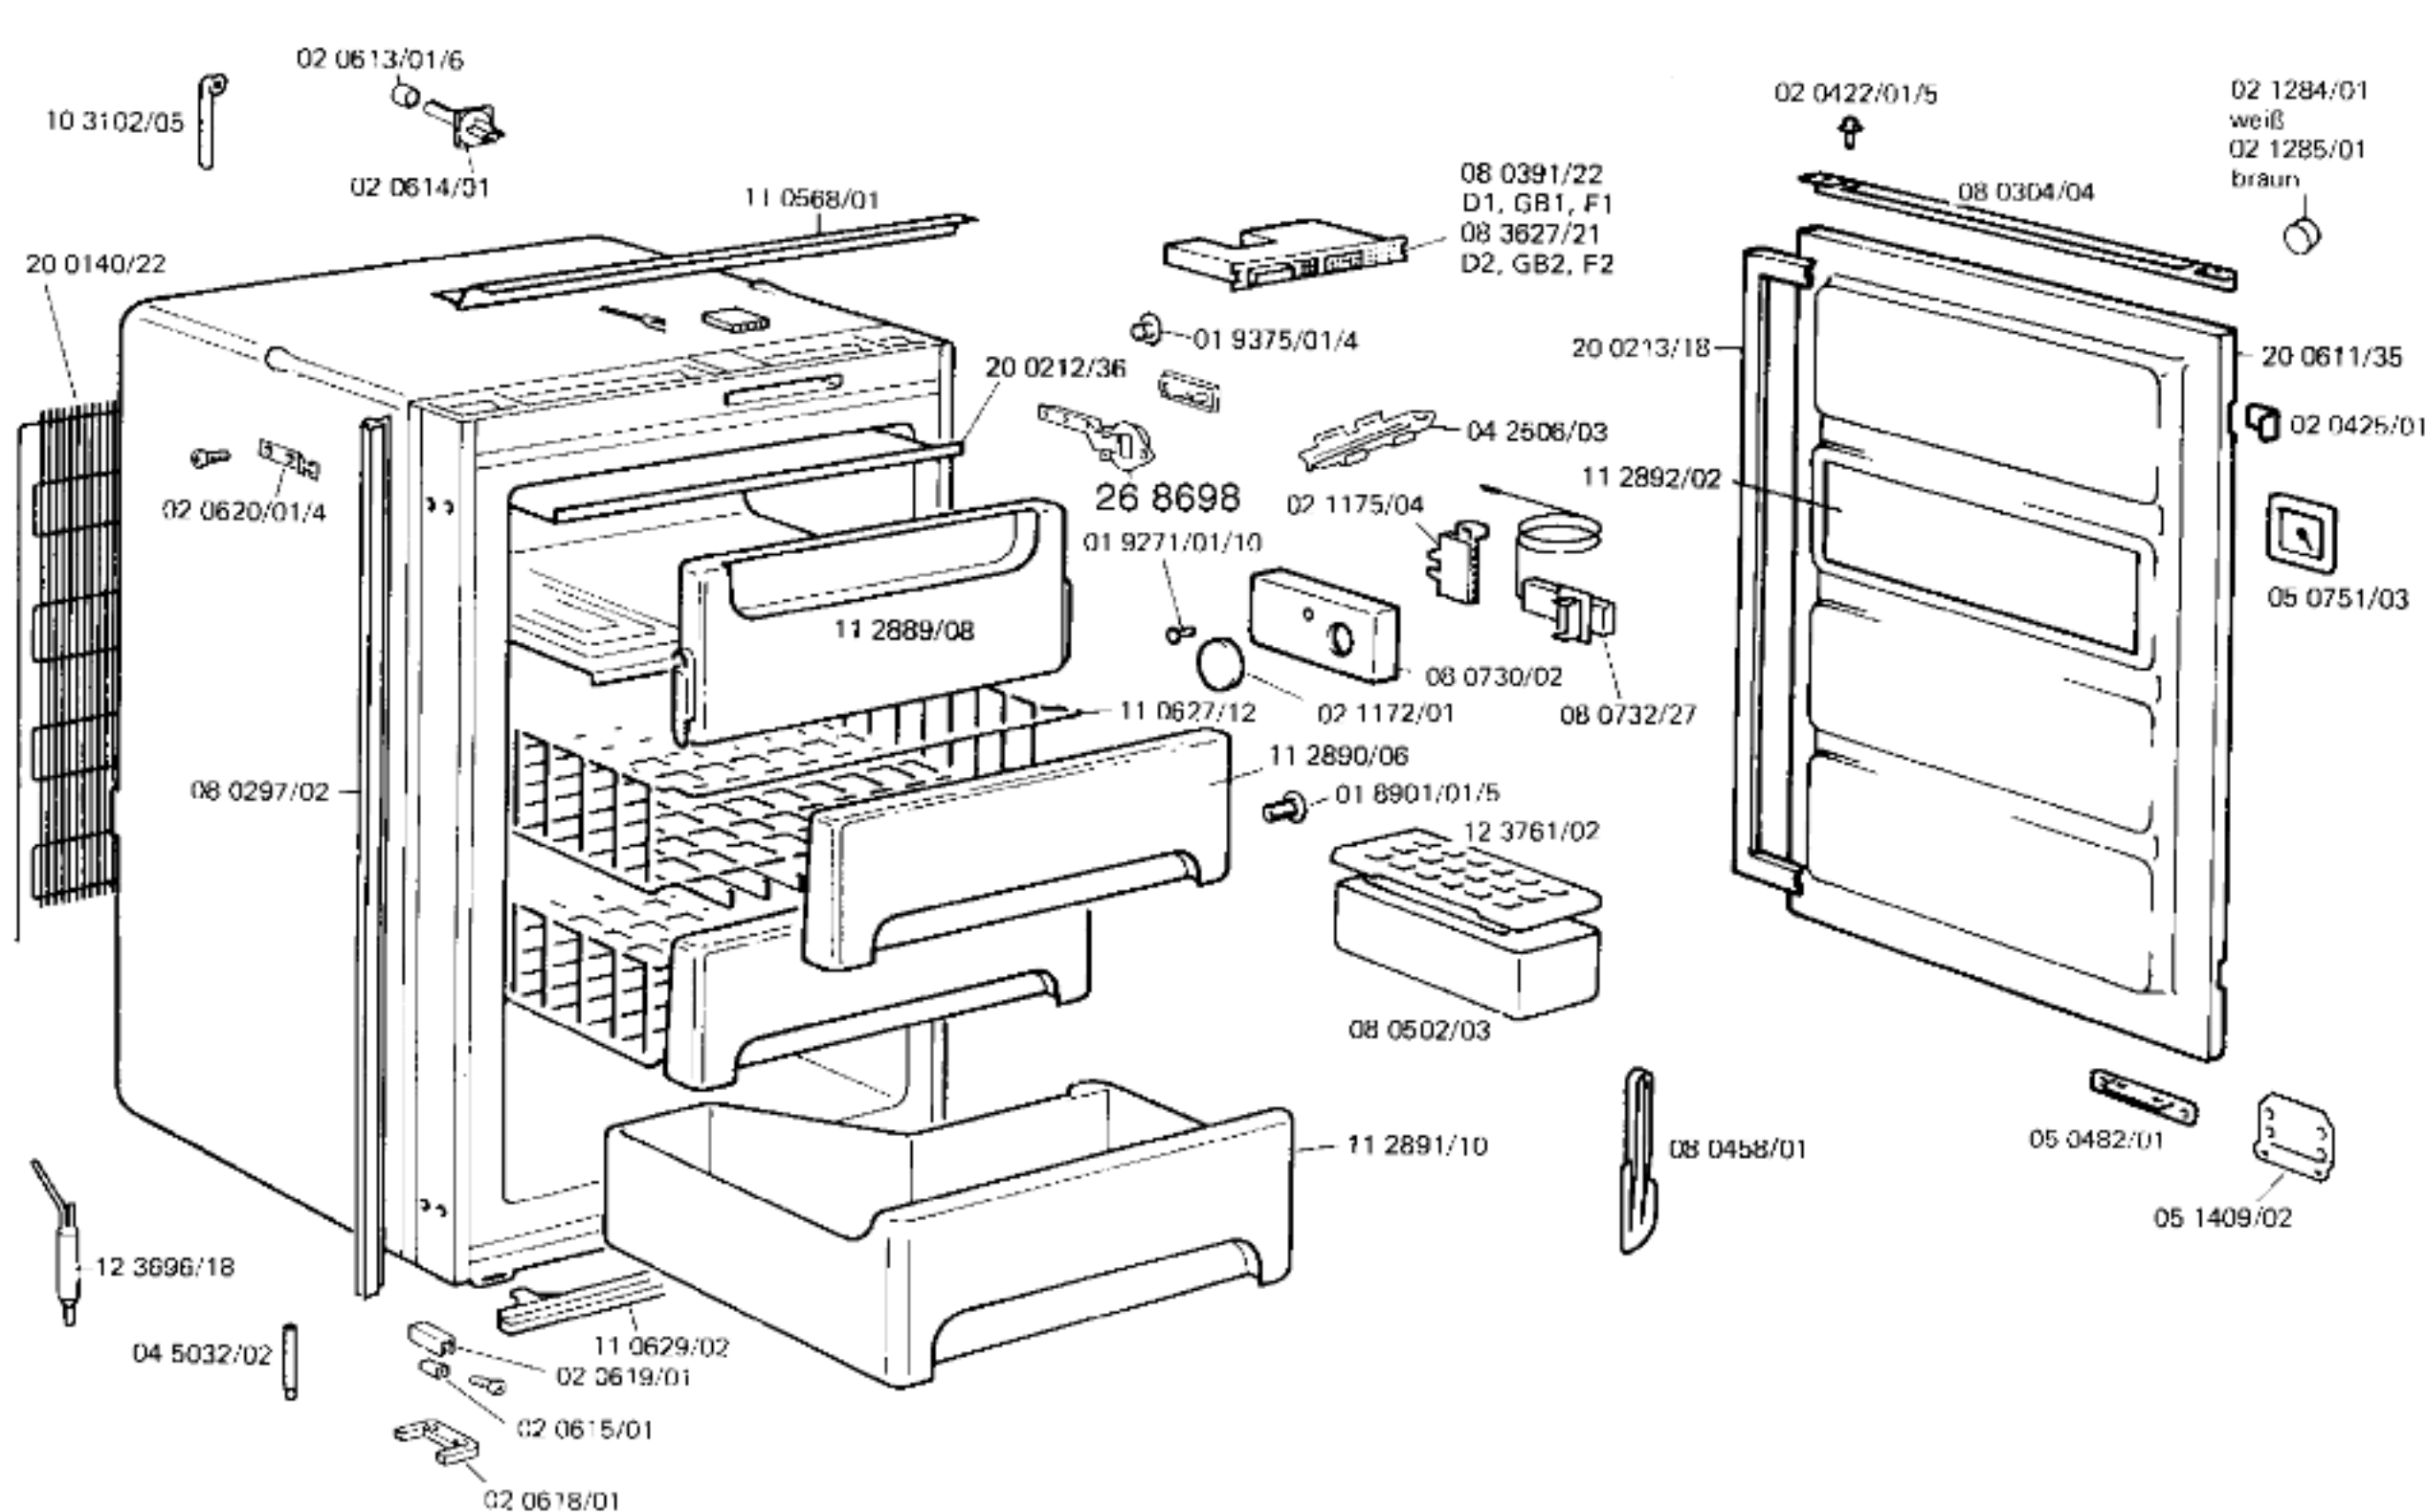

51 0384/00  
D1, D2, GB1, GB2, F1, F2  
Montageanleitung  
(D, GB, F, I, NL, DK,  
N, S, SF, E)

51 1409/00  
D1, D2, GB1, GB2, F1, F2  
Gebrauchsanweisung  
(D, GB, F, I, NL, DK,  
N, S, SF, E)

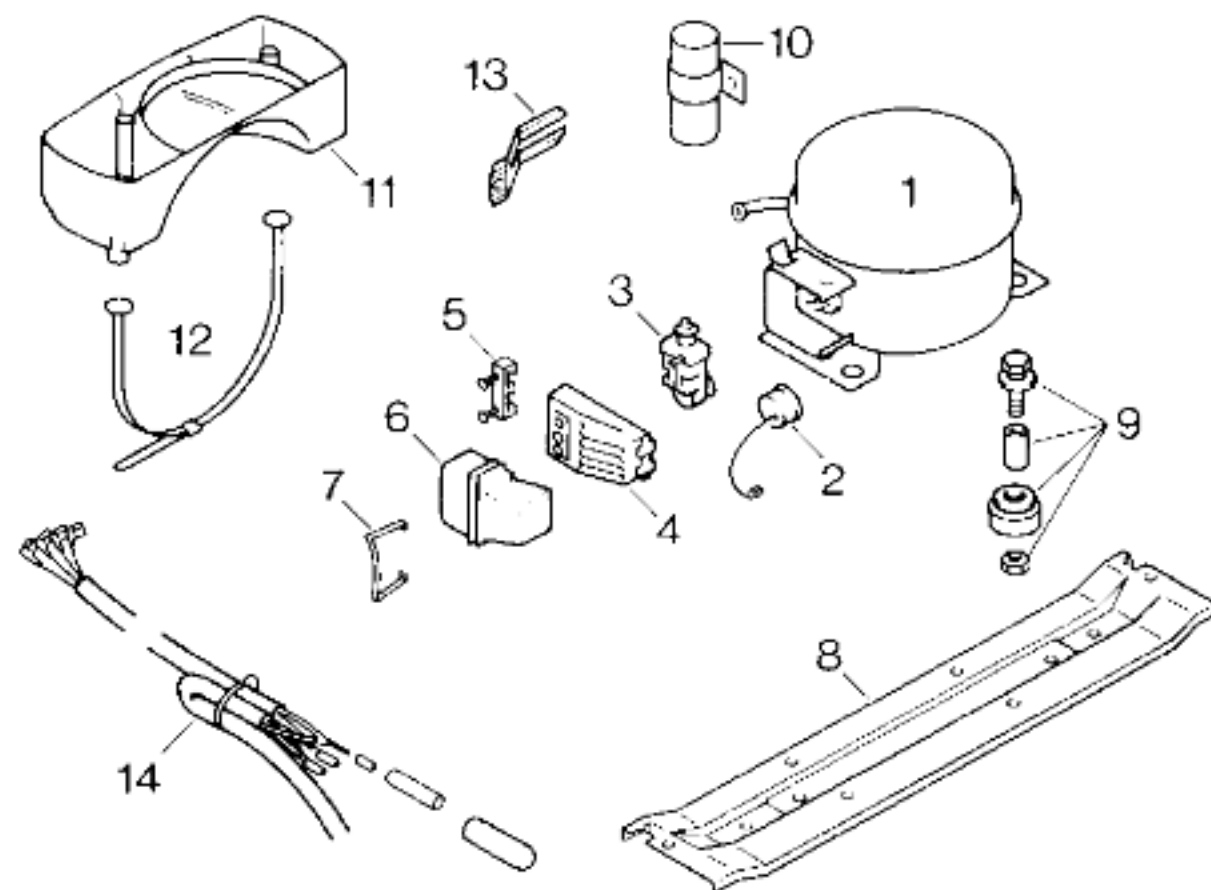

# TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

|                                                         |                 |           |       |     |  |
|---------------------------------------------------------|-----------------|-----------|-------|-----|--|
| Verdichter/Compressor/Compresseur                       |                 | Danfoss   |       |     |  |
| Typ/Type                                                |                 | TL 5 A    |       |     |  |
| Förderleistung/Delivery/Débit                           |                 | l/h       | V 920 |     |  |
| Anlaufstrom/Starting current/Cour. de démarrage         |                 | A         | 9,2   |     |  |
| Widerstand/Resistance/Résistance                        | Ha/main/prin.   | Ω         | 15,7  |     |  |
|                                                         | Hi/aux          | Ω         | 18,8  |     |  |
| Temp.-Regler/Thermostat                                 |                 | M + J     |       |     |  |
| Typ/Type                                                |                 | TF 57 SF  |       |     |  |
| Reglerstellung/Position                                 |                 | kalt warm |       |     |  |
| Schaltwerte/Switching values/<br>Valeurs de commutation | „ein“           | °C        | -28   | -19 |  |
|                                                         | „aus“           |           | -34   | -26 |  |
|                                                         | („abtauen“ od.) |           | -20   | -15 |  |
| Füllmenge/Fill quantity/Charge                          | R12             | g         | 90    |     |  |
| Anschlußwert/Conn.load/Puiss. connectée                 | W               | 120       |       |     |  |
| Heizung/Heater/Chauffage                                |                 |           |       |     |  |
| Widerstand/Resistance/Résistance                        |                 | Ω         |       |     |  |
| Leistung/Power/Puissance                                |                 | W         |       |     |  |
| Ventilator/Blower/Ventilateur                           |                 |           |       |     |  |
| Widerstand/Resistance/Résistance                        |                 | Ω         |       |     |  |
| Magnetventil/Magnetic valve/Electrovanne                |                 |           |       |     |  |
| Widerstand/Resistance/Résistance                        |                 | Ω         |       |     |  |
| Spannung/Voltage/Tension                                |                 | V         |       |     |  |

| Pos. |            |  |  |  |
|------|------------|--|--|--|
|      | Danfoss    |  |  |  |
| 1    | 14 0065/45 |  |  |  |
| 2    |            |  |  |  |
| 3    | 02 0108/27 |  |  |  |
| 4    |            |  |  |  |
| 5    |            |  |  |  |
| 6    | 05 1413/05 |  |  |  |
| 7    |            |  |  |  |
| 8    | 11 0437/04 |  |  |  |
| 9    | 05 0166/05 |  |  |  |
| 10   |            |  |  |  |
| 11   |            |  |  |  |
| 12   |            |  |  |  |
| 13   |            |  |  |  |
| 14   |            |  |  |  |