



51 1941
EU1
Gebrauchsanweisung
(D,GB,F,I,NL,P,SF,DK,
E,S)

- 1) 02 6816
- 2) 02 6819
- 3) 02 7786
- 4) 02 6824
- 5) 02 6815
- 6) 01 8901
- 7) 05 4795
- 8) 01 9829

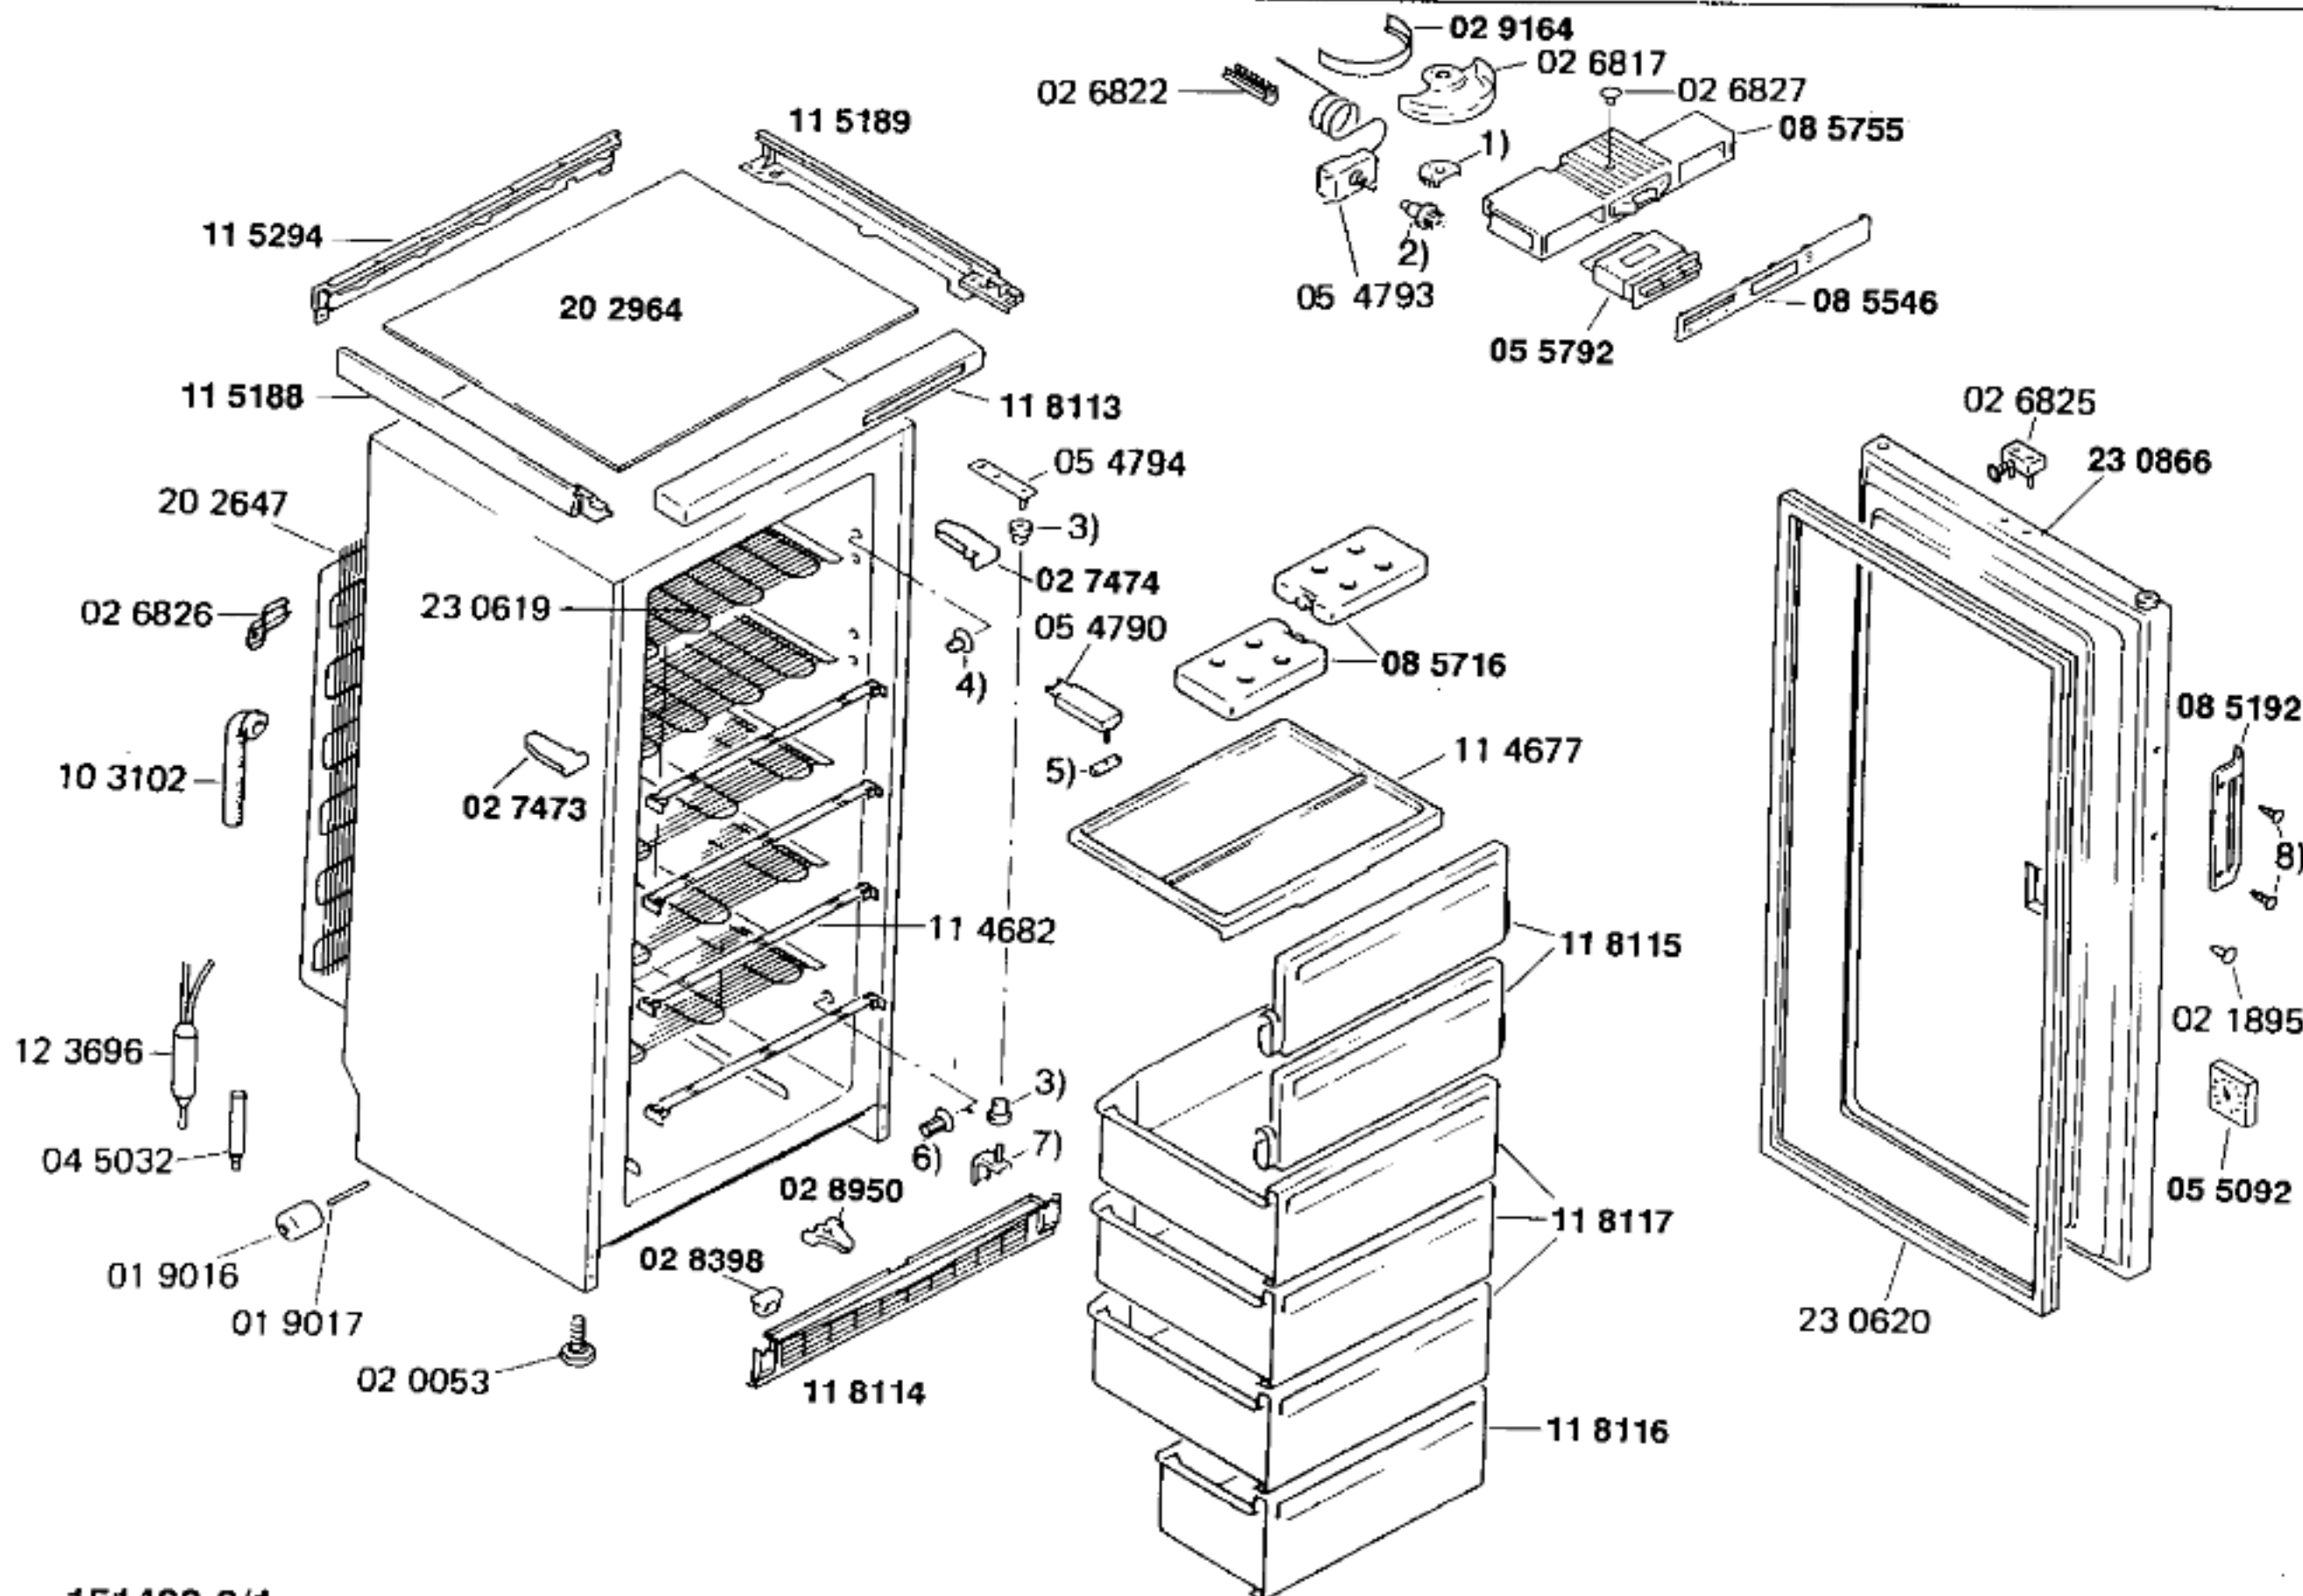

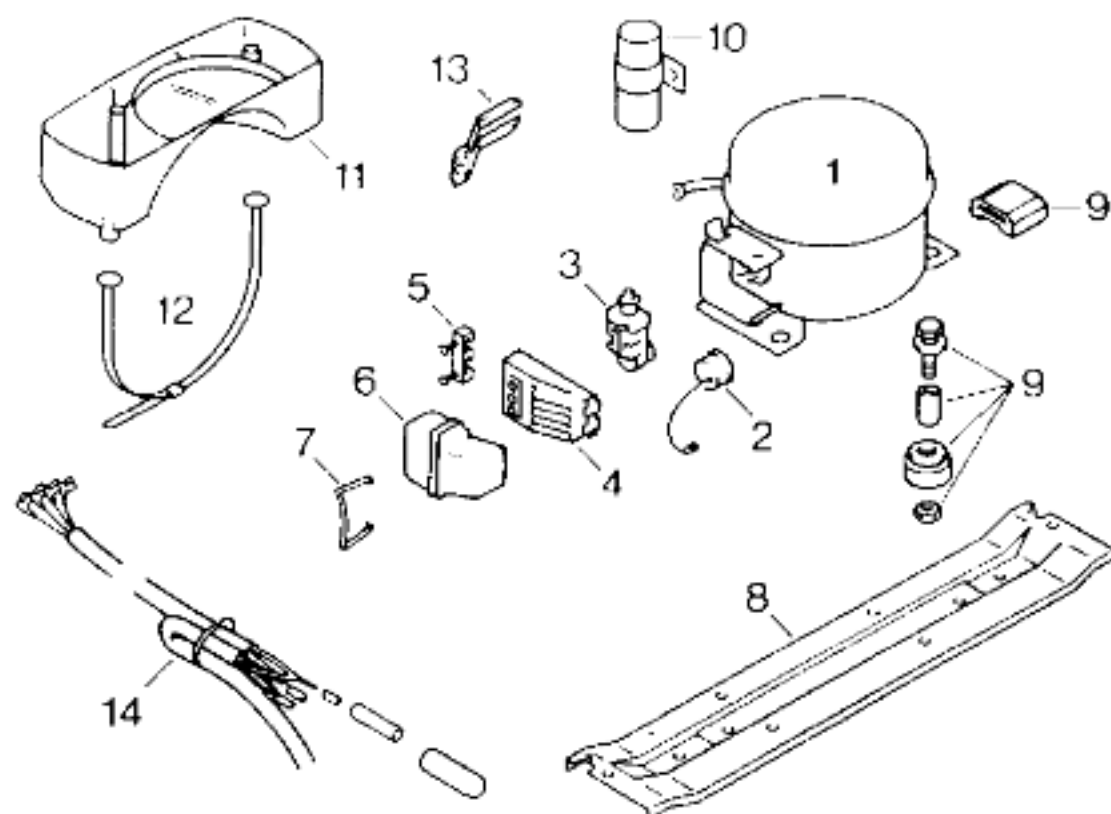

Pos.	Danfoss			
	FR 8,5 A			
1	14 0157			
2				
3	02 0108			
4				
5	02 1361			
6	05 1413			
7				
8				
9				
10				
11				
12				
13				
14				

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES

Verdichter/Compressor/Compresseur		Danfoss				
Typ/Type		FR 8,5 A				
Förderleistung/Delivery/Débit		l/h	1430			
Anlaufstrom/Starting current/Cour. de démarrage		A	10,3			
Widerstand/Resistance/Résistance		Ha/main/prin.	Ω	12,2		
		Hi/aux	Ω	13,7		
Temp.-Regler/Thermostat		Danfoss				
Typ/Type		077 B 2054				
Reglerstellung/Position			kalt	warm		
Schaltwerte/Switching values/ Valeurs de commutation		„ein“	°C	- 24	- 16	
		„aus“		- 34	- 24	
		(„abtauen“ od.)	„alarm“	- 19	- 12	
Füllmenge/Fill quantity/Charge		R12	g	185		
Anschlußwert/Conn.load/Puiss. connectée			W	150		
Heizung/Heater/Chauffage						
Widerstand/Resistance/Résistance			Ω			
Leistung/Power/Puissance			W			
Ventilator/Blower/Ventilateur						
Widerstand/Resistance/Résistance			Ω			
Magnetventil/Magnetic valve/Electrovanne						
Widerstand/Resistance/Résistance			Ω			
Spannung/Voltage/Tension			V			