



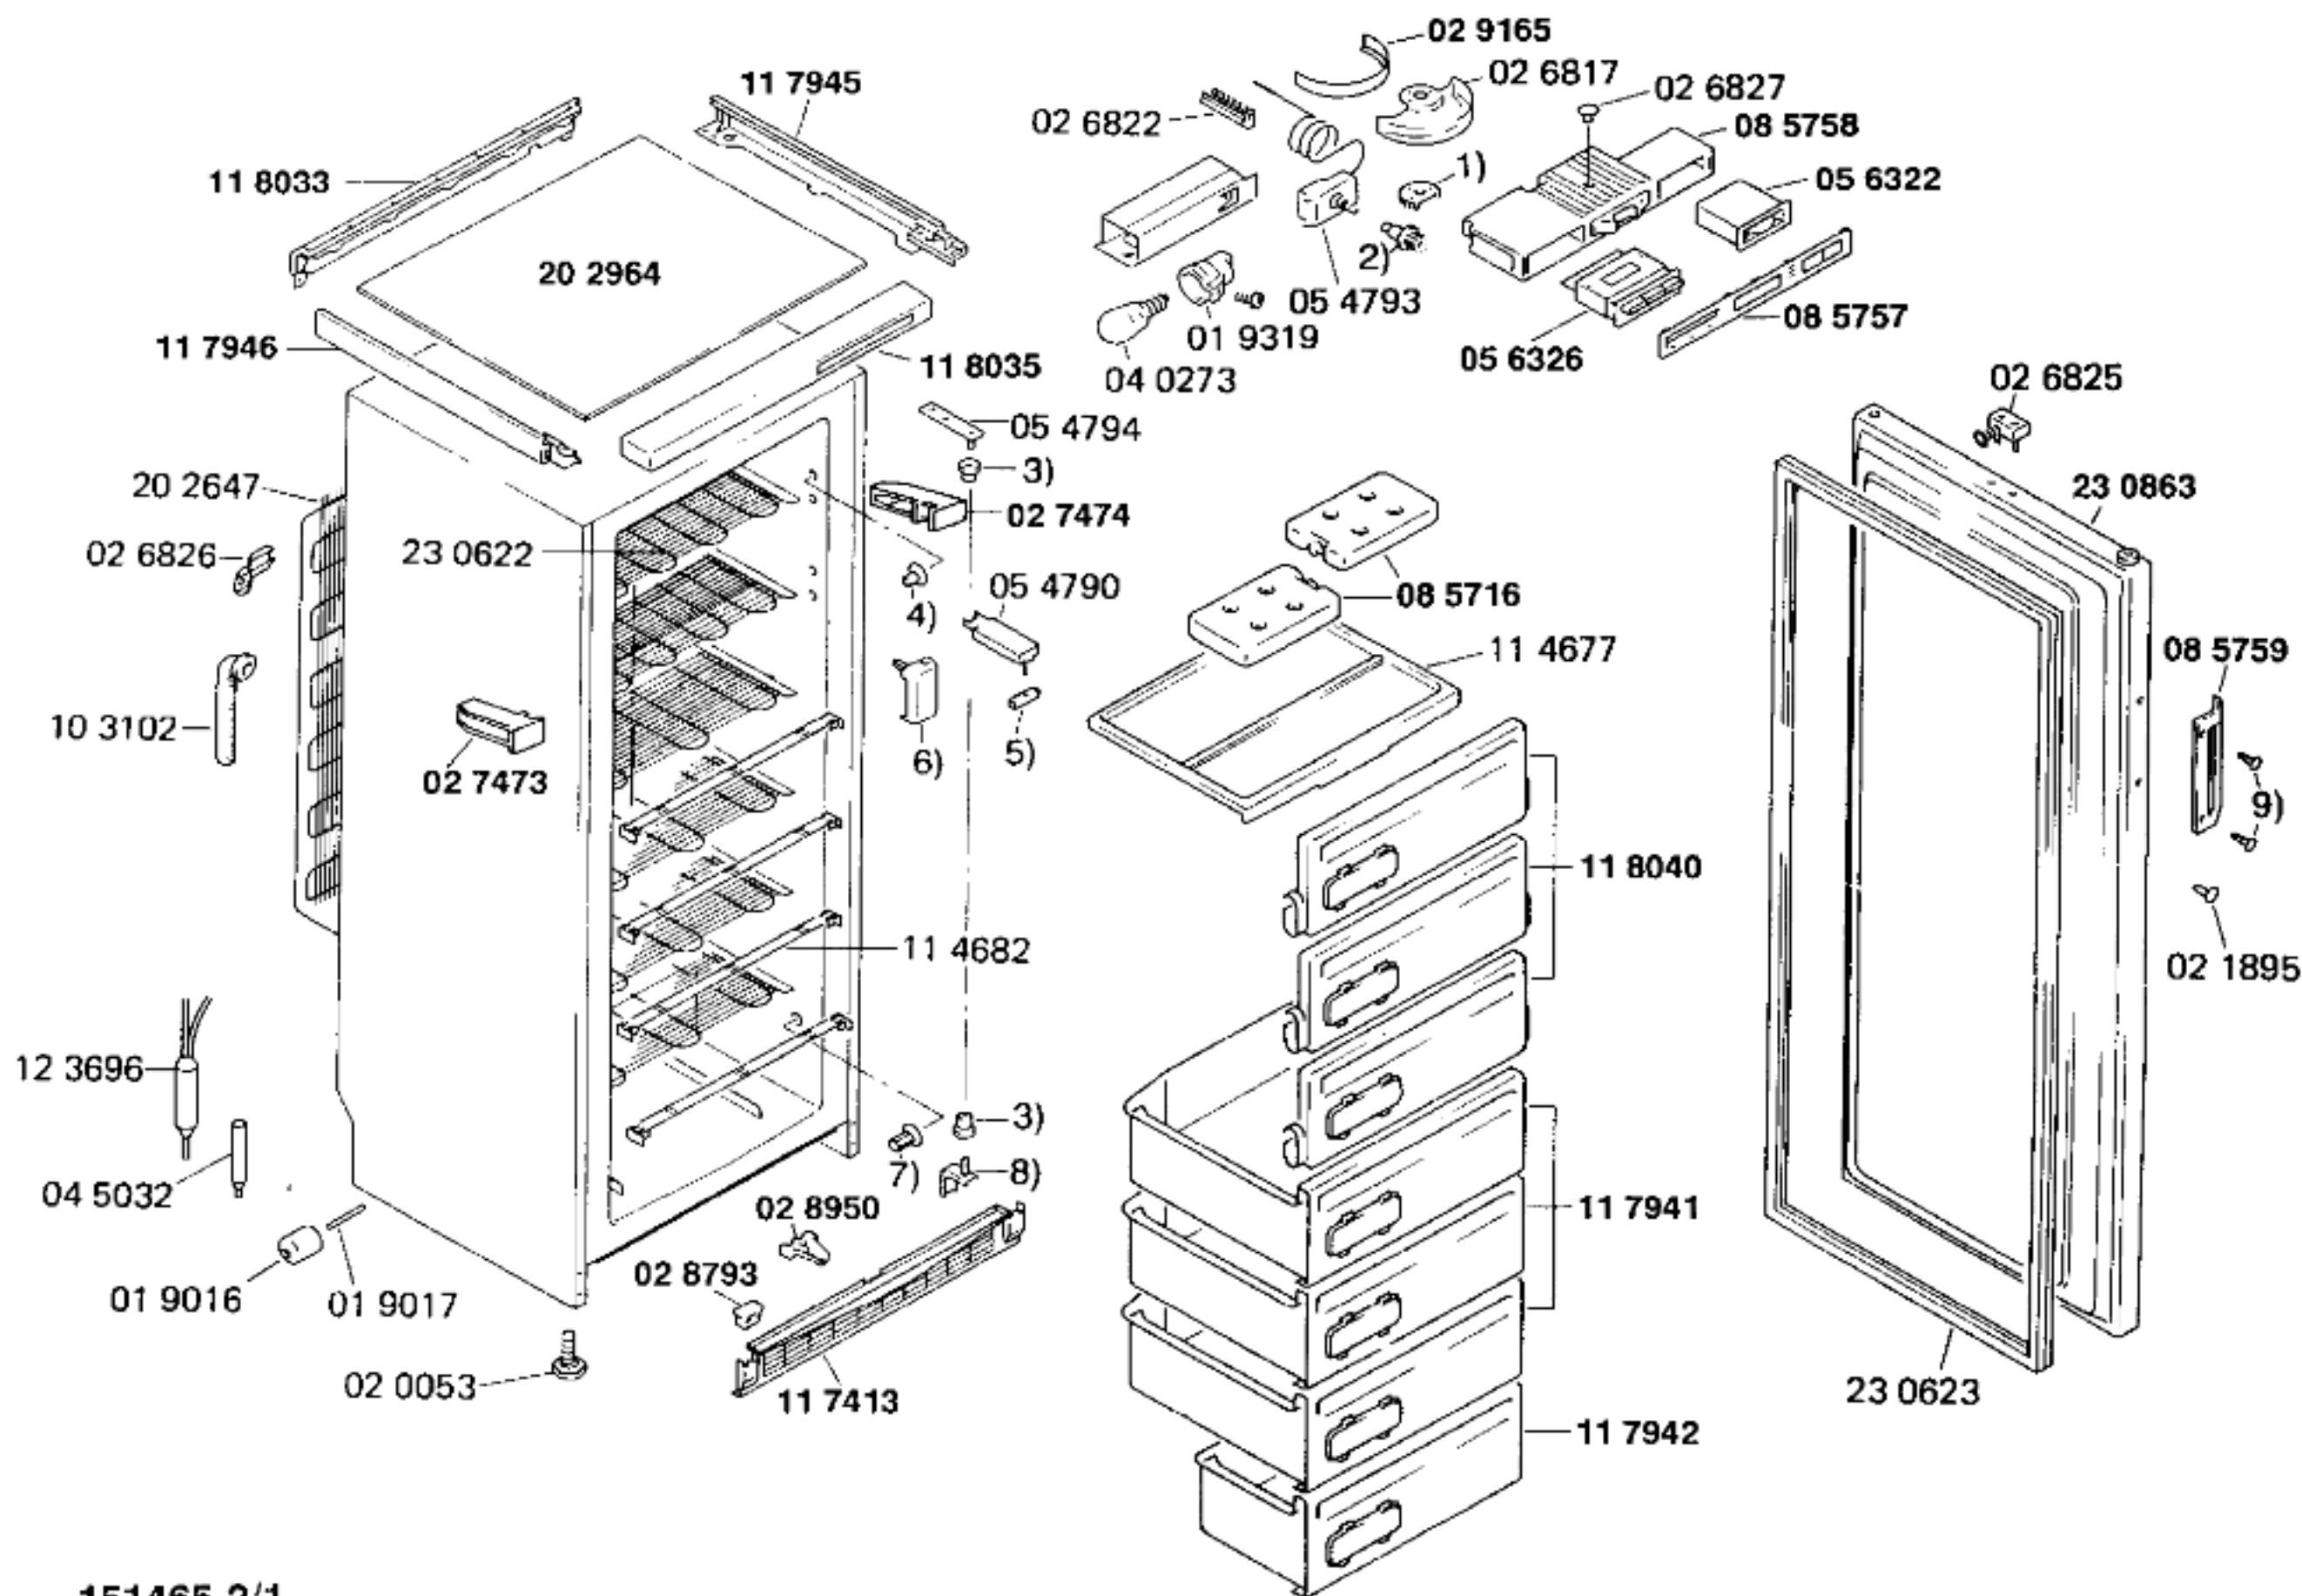

51 1941
Gebrauchsanweisung
(D,GB,F,I,NL,P,SF,DK,
E,S)

- 1) 02 6816
- 2) 02 6819
- 3) 02 7786
- 4) 02 6824
- 5) 02 6815
- 6) 02 6823
- 7) 01 8901
- 8) 05 4795
- 9) 01 9830

Ident.-Nummern-Konstante
3740 ...

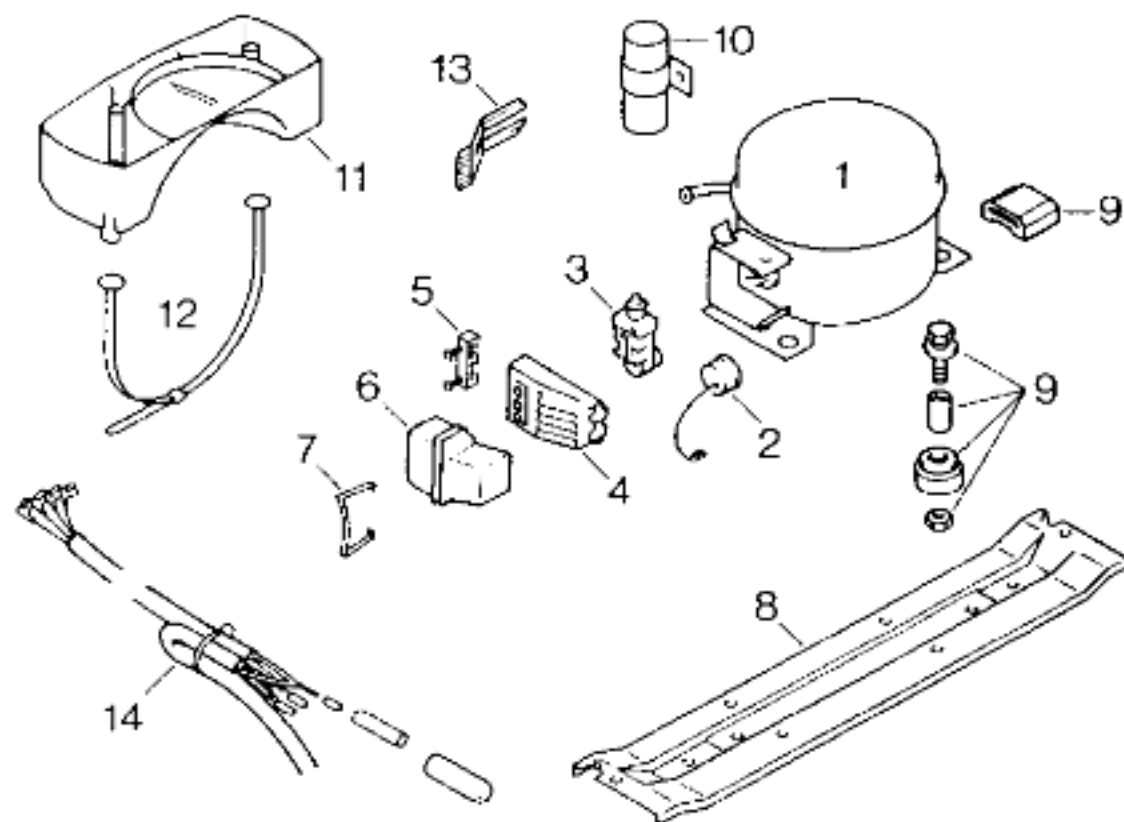

Pos.	EU1,F1	EU2,F2		
	Aspera	Danfoss		
1	14 0312	14 0157		
2	02 6559			
3	02 2342	02 0108		
4	05 1748			
5		02 1361		
6	05 1746	05 1413		
7	02 2339			
8				
9	05 0166			
10				
11				
12				
13				
14				

TECHNISCHE DATEN / TECHNICAL DATA / DONNEES TECHNIQUES				
Verdichter/Compressor/Compresseur		Aspera	Danfoss	
Typ/Type		BY 1116 A	FR 8,5 A	
Förderleistung/Delivery/Débit	l/h	1450	1430	
Anlaufstrom/Starting current/Cour. de démarrage	A	9,9	10,3	
Widerstand/Resistance/Résistance	Ha/main/prin.	11,7	12,2	
	Hi/aux	37,7	13,7	
Temp. Regler/Thermostat		Danfoss		
Typ/Type		077 B 2054		
Reglerstellung/Position		kalt	warm	
Schaltwerte/Switching values/	„ein“	- 24	- 16	
Valeurs de commutation	„aus“	- 34	- 24	
(„abtauen“ od.)	„alarm“	- 19	- 12	
Füllmenge/Fill.quantity/Charge	R12	g	195	
Anschlußwert/Conn.load/Puiss. connectée	W	170		
Heizung/Heater/Chauffage				
Widerstand/Resistance/Résistance	Ω			
Leistung/Power/Puissance	W			
Ventilator/Blower/Ventilateur				
Widerstand/Resistance/Résistance	Ω			
Magnetventil/Magnetic valve/Electrovanne				
Widerstand/Resistance/Résistance	Ω			
Spannung/Voltage/Tension	V			